

**TECHNICAL MANUAL**

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS**

**FOR**

**SWITCHBOARDS, TELEPHONE, MANUAL**

**SB-22/PT (NSN 5805-00-257-3602)**

**AND**

**SB-22A/PT (NSN 5805-00-715-6171)**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**MAY 1978**

TECHNICAL MANUAL }  
 No. 11-5805-262-20P }

HEADQUARTERS  
 DEPARTMENT OF THE ARMY  
 WASHINGTON, DC, 22 May 1978

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS**  
**FOR**  
**SWITCHBOARDS, TELEPHONE, MANUAL**  
**SB-22/PT (NSN 5805-00-257-3602)**  
**AND**  
**SB-22A/PT (NSN 5805-00-715-6171)**

*Current as of 17 November 1977*

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

**TABLE OF CONTENTS**

			Illus Figure
SECTION I.	Introduction _____	1	
	II. Repair parts list _____	5	
Group	00 Switchboards, Telephone, Manual SB-22/PT and SB-22A/PT _____	5	1,2
	01 Telephone Circuit, Operators TA-221/PT _____	9	3
	02 Telephone Circuit, Line Jack TA-222/PT _____	11	4
	03 Handset-Headset H-14( )/U (See TM 11-5965-206-14P for parts)		
	04 Accessory Kit MX-2915/PT (A Model only) _____	13	6
	0401 Telephone Circuit, Line Jack TA-222/PT (Same as group 02)		
	0402 Telephone Circuit, Trunk Jack TA-326/PT -----	15	6
	05 Accessory Kit MX-230/PT and MX-230A/PT (Plain Model only) -----	19	7
	0501 Telephone Circuit, Line Jack TA-222/PT (Same as group 02)		
SECTION III.	Special tools list (Not applicable)		
	IV. National stock number and part number index -----	20	

\* This manual supersedes TM 11-5805-262-20P, 1 December 1971.

## SECTION I INTRODUCTION

---

### 1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the SB-22/PT and SB-22A/PT. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

### 2. General

This Repair Parts and Special Tools List is divided into the following sections:

*a. Section II—Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

*b. Section III.—Special Tools List.* Not applicable.

*c. Section IV.—National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

### 3. Explanation of Columns

*a. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

*b. Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source

codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
C-Crew or operator maintenance performed within organizational maintenance.	
O-Support item is removed, replaced, used at the organizational level.	

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F-The lowest maintenance level capable of complete repair of the support item is the direct support level.	
Z-Nonreparable. No repair is authorized.	

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The re-