

**SAFARI™ HD**

# Action Camera | 2.0



Distributed in Canada by Gentec International • [gentec-intl.com](http://gentec-intl.com)

## WARNING

- 1 Safari HD Action Camera is a high-precision product, to ensure optimal operation do not drop.
- 2 Do not expose the unit to strong magnetic objects, such as a magnet or electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or damage recorded images and sound.
- 3 Never leave the products exposed to high temperatures and direct sunlight.
- 4 Please use a branded Micro SD card (ex: SanDisk). Neutral cards are not guaranteed to work normally.
- 5 Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6 In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 7 While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- 8 Keep the device in a cool, dry and dust-proof place.

## PRODUCT FEATURES

- A water-resistant casing that allows filming under water: water-resistant up to 30 meters
- High definition screen displays and replays recorded videos
- Detachable battery that is easy to replace and prolongs your camera's service life
- 12-megapixel(HD) wide-angle lens
- HDMI HD output
- Web camera functionality
- Supports MicroSD cards up to 32GB
- Multiple video recording formats: 1080P / 720P / WVGA
- Recorded in MOV format
- Video encryption enabled

## FRONT VIEW



## BACK VIEW



## BOTTOM VIEW



## WATERPROOF CASE



# ACCESSORIES



Waterproof Case



Bicycle Mount



Base #1



Base #2



Clip Mount



1/4" Tripod Mount



Mount Support #1



Mount Support #2



Mount Support #3



1/4" Camera Adapter



Surface Mounts



Velcro Strap



Plastic Ties



3M Adhesives



Wire Rope



MicroUSB Cable

 


Manual



Microfibre Cloth

## MOUNTING OPTIONS



# OPERATING INSTRUCTIONS

## 1. Inserting Micro SD Card

Note: Please choose branded Micro SD card and format it on a computer before use. Neutral cards are not guaranteed to work normally.

## 2. Installing And Removing Batteries

- A Press on battery latch to open it.
- B Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- C Battery Level: Refer to on screen indicator.
- D Remove Battery: Open latch to take battery out.

## 3. Charging

- A Charging can be done by either connecting camera to a computer or a power adapter.
- B Charge camera on vehicle by connecting it to a Micro USB car charger. (not included)
- C Camera can record video while charging (Switch into Vehicle-mounted Mode in "Menu")
- D Charging of the camera can be done even when it's powered off.


## 4. Switching Camera On And Off

Press and hold power switch for 3 to 5 seconds to turn it on/off.

## 5. Mode Switching

Switch between video recording/photo shooting/playback/menu by pressing "Power On-Off" button.

 Recording mode.




 Photo shooting mode.

 Video playback.


Symbols are displayed on top of screen. The last icon is system settings.

## 6. How To Record Videos And Configure Recording Setting

### 1. Video Recording

Switch to recording mode and there'll be an  icon in the upper left corner of the screen. Press the Top Button to start recording and the  icon in the upper left corner will start to flash. Press the Top Button again if you want to stop and the Top Button  icon will disappear.

### 2. Photo Shooting & Settings

Switch the camera on and press "Mode" to select "Photo Shooting Mode", there'll be an  icon in the upper left corner of display screen to indicate the camera is in photo shooting mode. Press the Top Button to take photos.

**Shooting Pattern:** Single shot / Self-timer (2s/5s/10s) / Continuous Shooting.

## OPERATING INSTRUCTIONS continued...

### 3. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.

Liquid Crystal Display (LCD)	2.0LTPS
Lens	170° A + HD wide-angle lens
Language Options	English / German / French / Spanish / Italian / Portuguese / Chinese Traditional / Chinese Simplified / Japanese / Russian
Resolution of Videos Recorded	1080P (1920*1080) 30FPS    720P (1280*720) 60FPS VGA (848*480) 60FPS    QVGA (640*480) 60FPS
Video Format	MOV
Compressed Format of Videos	H.264
Resolution of Photos	12M / 8M / 5M
Storage	Micro SD
Shooting Mode	Single Shot / Self-timer (2s / 5s / 10s / Continuous Shooting)
Frequency of Optical Source	50Hz / 60Hz
USB Interface	USB 2.0
Power Source Interface	5VIA
Battery Capacity	900mAh
Power Dissipation	400mA@4.2V
Recording Time	1080P/ About 70 minutes
Charging Time	About 3 hours
Operating System (OS)	Windows XP/Vista or Above/Win7/Mac OS
Dimension	59.27mm 41.13mm 29.28mm

**Note:** Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

For more information or service contact Customer Service Department  
Email: [info@gentec-intl.com](mailto:info@gentec-intl.com) or Phone: 905-513-7733