

Combi

All in One Activity Walker

Instruction Manual

Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.

Date Purchased: _____ Model Number: _____ - _____ Color _____

Parts List

Make sure you have all the parts listed below before using your Walker. If any parts are missing, call Consumer Affairs at 1-800-992-6624.



Toy Car Tray



Lower Base



Upper Plate



Support Legs
(x2)



Handrail Toy
Bar (x2)




Side Mirror
(x2)



Globe Wheels
(x4)

Name of Parts

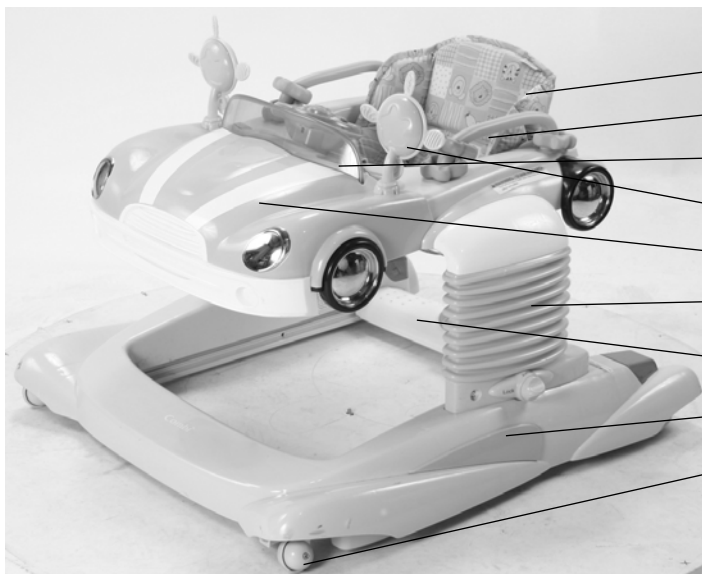

- 1 Seat
- 2 Handrail Toy Bar
- 3 Upper Plate
- 4 Side Mirror
- 5 Car Toy Tray
- 6 Support Legs
- 7 Lower Base Support
- 8 Lower Base
- 9 Globe Wheels

⚠ WARNINGS: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE WALKER. KEEP INSTRUCTIONS FOR FUTURE USE. ADULT ASSEMBLY REQUIRED. KEEP SMALL PARTS AWAY FROM CHILDREN.

In the event of damage or problems, discontinue use and contact Consumer Affairs for instructions: 1-800-992-6624.

⚠ NEVER LEAVE CHILD UNATTENDED.

⚠ Always keep child in view while in walker.

⚠ To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.

⚠ Discontinue use of this product once child can walk unassisted.

⚠ Do not use the walker if it is damaged or broken.

⚠ WARNING-STAIR HAZARD

Avoid serious injury or death
Block stairs/steps securely before using walker.

⚠ Use only on flat surfaces free of objects that could cause the walker to tip over.

⚠ Clean friction pads regularly to maintain stopping performance (figure a). See Routine Maintenance section for cleaning instructions.

⚠ Maximum weight capacity = 25 lbs.

⚠ This walker is only intended for use with children who can sit upright unassisted. Approximately 6 months old.



figure a

Assembling the Activity Walker

1. Line up the support leg with the upper plate and push to snap into place as shown in figure 1. Repeat the process for the other support leg.

Once assembled, pull on both support legs to ensure they are securely locked in position.

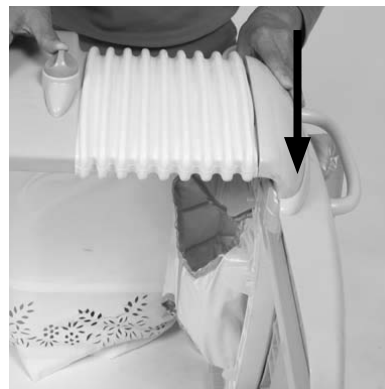


figure 1

2. Align the support legs, that are now attached to the upper plate, to the lower base and push to snap into place as shown in figure 2.



figure 2

3. Turn over the lower base and insert all four globe wheels. Press the screw side down into the hole until the wheel is fully inserted as shown in figure 3.



figure 3

4. Align the handrail toy bar with the holes in the top rear of the upper plate, and press into place as shown in figure 4. Repeat the process with the other handrail toy bar.

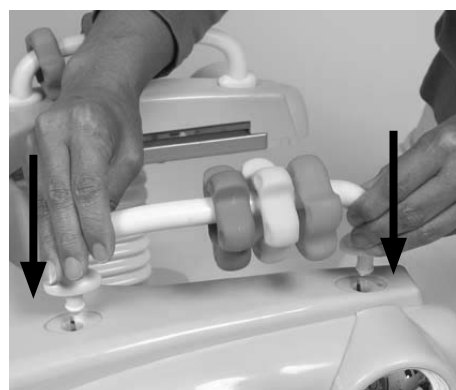


figure 4

Assembling the Activity Walker (continued)

WARNING - Remove plastic protective film from both mirrors before use.

5. Align the side mirror with the hole to the left and right of the steering wheel on the car toy tray and press into place as shown in figure 5.

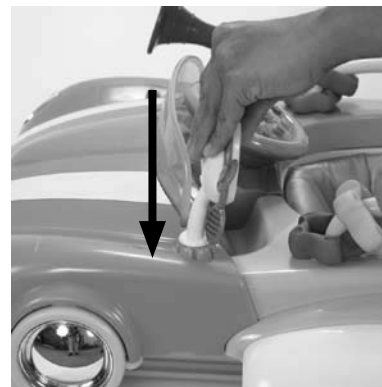


figure 5

Installing the Batteries

1. On the bottom of the car toy tray, loosen the battery lid screw and remove the battery lid. Insert 2 "AA" batteries, replace the battery lid and tighten the screw as shown in figure 6.

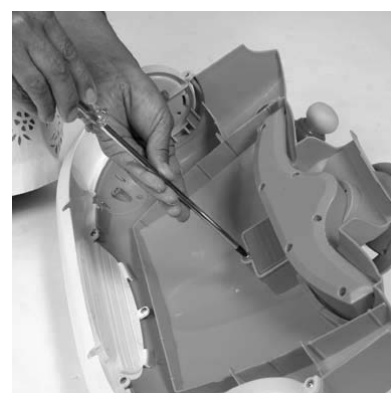


figure 6

Using the Steering Wheel

1. Turning the steering wheel from side to side will make the toys on the dashboard move from side to side as shown in figure 7.
2. Press the large button in the center of the steering wheel to sound the horn. Press any of the four other buttons on the steering wheel to play different musical tunes as shown in figure 7.

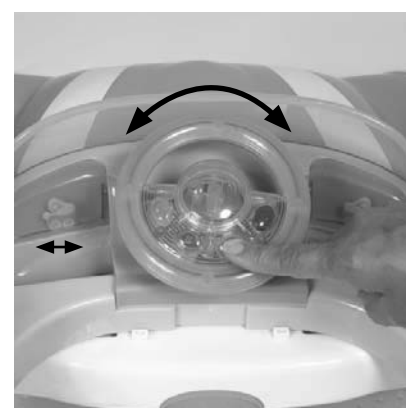


figure 7

Using the Toy Car Tray

Attaching the Tray

1. Align the toy car tray with the upper plate and snap tray near child to secure as shown in figure 8.



figure 8

Removing the Tray

1. Press in the release buttons on the inside of the wheels and pull out and up slightly to release the tray from the upper plate as shown in figure 9.



figure 9



Using the Height Adjustment / Bounce Feature

The support legs can be adjusted to three different heights to accommodate the growth of the child and the bouncing feature.

1. Turn the knob on both support legs to Jump to use the bounce feature.
2. To adjust the height of the walker and lock it into place, move the knob to jump and press down on the walker to the desired height and turn the lock as shown in figure 10. Repeat this process on the other side.



figure 10

Trouble Shooting

MUSIC AND SOUND EFFECTS ARE NOT WORKING

- Check that the battery is in the correct position as indicated inside the unit.
- Replace with a new battery, if necessary.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the Activity Walker in the trunk of a vehicle.

ALWAYS MAKE SURE FRICTION PADS ARE KEPT CLEAN , CLEAN WITH WATER ONLY.

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty service.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



All in One Activity Walker Instruction Manual

If you would like to place an order for the replacement parts, please fill out the form below and return to the following address:

Combi
Attn: Consumer Affairs Department
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or Fax this completed form to
803-548-3663

IMPORTANT: We must have this information to process your order:

Model Number: _____ - _____ Color & Pattern of Fabric: _____

Parts List for the All in One Activity Walker:

	Price	Quantity	Total
1. Seat Cushion	\$15.00		
2. Wheels (set of 4)	10.00		

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Amount of Order		
ADD Shipping & Handling		
Sales Tax (6%) (SC residents only)		
Total		

Charge to my credit card:

VISA MASTERCARD

DISCOVER

Card Number

Expiration Date _____ - _____ - _____

Cardholder's Signature 111108