




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BISSELL OXYPRO 7920. You'll find the answers to all your questions on the BISSELL OXYPRO 7920 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BISSELL OXYPRO 7920
User guide BISSELL OXYPRO 7920
Operating instructions BISSELL OXYPRO 7920
Instructions for use BISSELL OXYPRO 7920
Instruction manual BISSELL OXYPRO 7920

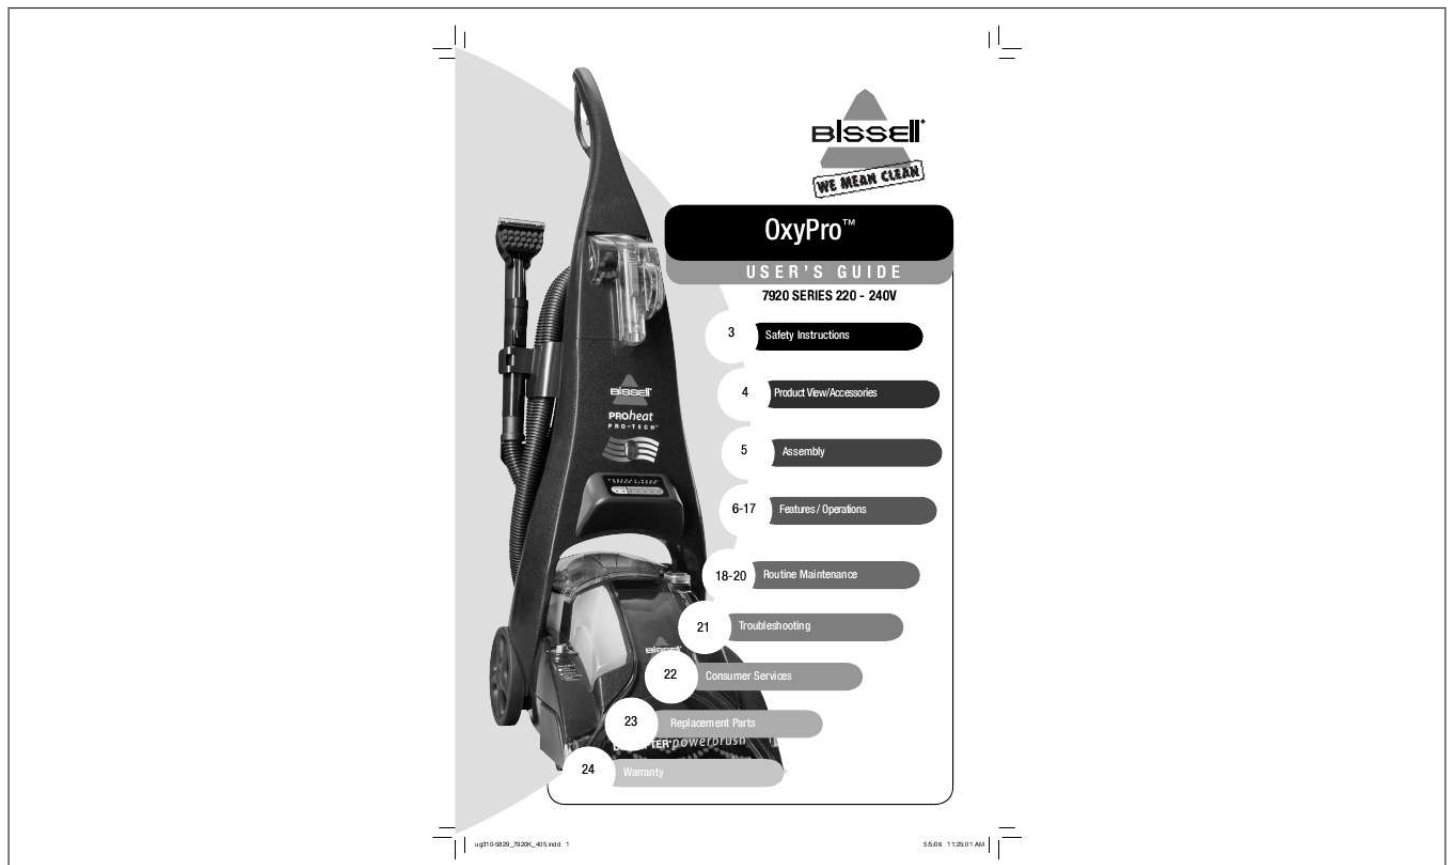

[You're reading an excerpt. Click here to read official BISSELL OXYPRO 7920 user guide](http://yourpdfguides.com/dref/567249)
<http://yourpdfguides.com/dref/567249>

Manual abstract:

Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your OxyPro. Thanks again, from all of us at BISSELL. Mark J. Bissell President and Chief Executive Officer 2 ug310-5829_7920K_405.indd 2 5/5/06 11:25:09 AM **IMPORTANT SAFETY INSTRUCTIONS** When using an electrical appliance, basic precautions should be observed, including the following: **READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT DEEP CLEANER.** Always connect to a properly Earthed Outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting. **WARNING: To reduce the risk of fire, electric shock, or injury: Use indoors only Do not immerse Use only on surfaces moistened by cleaning process Do not leave machine when it is plugged in Do not service machine when it is plugged in If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard Do not use machine if it has been dropped, damaged, left outdoors or dropped into water Do not expose to rain, store indoors Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces Do not carry the appliance while in use Do not unplug by pulling on cord. Unplug by grasping plug not the cord Do not handle plug or appliance with wet hands Do not put any object into appliance openings, use with blocked opening, or restrict air flow Do not expose hair, loose clothing, fingers or body parts to openings or moving parts Do not pick up hot or burning objects Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours Remove plug from electrical outlet before cleaning or maintaining the appliance Not intended for use by young children or infirm persons without supervision Young children should be supervised to ensure that they do not play with the appliance Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.**

) Do not modify the Earthed plug Do not allow to be used as a toy Do not use for any purpose other than described in this User's Guide Use only manufacturer's recommended attachments Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage Keep openings free of dust, lint, hair, etc. Keep appliance on a level surface Turn off all controls before unplugging Be extra careful when cleaning stairs Pay close attention when working around children **SAVE THESE INSTRUCTIONS. THIS MODEL IS FOR HOUSEHOLD USE ONLY. WARNING: This appliance must be earthed. IMPORTANT FOR OPERATION ON A 220/240 VOLT A.**

C. 50/60 Hz **POWER SUPPLY ONLY.** If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

3 ug310-5829_7920K_405.indd 3 5/5/06 11:25:09 AM Trigger Keep plenty of genuine BISSELL Advanced Deep Cleaning Formulas on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL Advanced Deep Cleaning Formulas. NonBISSELL cleaning solutions may harm the machine and void the warranty. Upper Handle 3. Power Switch Tank-in-Tank™ Crevice Tool Storage Belt Storage Tool Caddy Power Cord Quick Release Tough Stain Brush Storage 2. 4. Hex Nuts TurboBrush™ Storage Handle Release SmartTemp™ Ready Light SmartMix™ Switch SmartMix™ Bottle 5. 4" Upholstery Tool Storage 1. Flex Hose Lower Handle Perfect Pass™ Flow Indicator (Filter Inside) ReadyTools™ Dial Accessories *All items may not be included with your model.

More tools are available. To order replacement parts or tools please refer to page 23. 4" Upholstery Tool Tough Stain Brush PreTreat Wand Bare Floor Attachment DirtLifter PowerBrush™ Spraying Crevice Tool Belt Access Door Floor Nozzle Window ON CTI SU USH BR TurboBrush 4™ 16 oz.

BISSELL Fiber Cleansing Formula™ with Scotchgard™ Protector 950 ml BISSELL Hard Floor Solutions™ 14 oz. BISSELL OxyKIC™ Carpet Spot & Stain Remover ug310-5829_7920K_405.indd 4 5/5/06 11:25:10 AM How To Use This Guide This User's Guide has been designed to help you get the utmost satisfaction from your BISSELL OxyPro. You'll find assembly and operating instructions, safety precautions, as well as maintenance and troubleshooting instructions. Please read this User's Guide thoroughly before assembling your deep cleaner. Pay particular attention to the product diagram, assembly instructions, and part names. Locate and organize all parts before assembly.

Familiarize yourself with the parts and where they go. Following this User's Guide will greatly enhance your ability to get the most performance from your BISSELL OxyPro for many years. Your OxyPro comes in 3, easy to assemble components. Upper Handle Lower Handle Tool Caddy The only tool you will need to assemble your cleaner is a Phillips head screwdriver. **WARNING: cleaner Do not plug in your until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.**

How To Put It Together Refer to Assembly Diagram on page 4 Slide Upper Handle firmly onto Lower Handle until screwholes are completely aligned. Feed bundled Power Cord through Tool Caddy from Caddy's flat side. Align Upper Handle holes and Tool Caddy holes. 1. 2.

3. 4. 5. 6. 7. 8. Place hex nut into back of Tool Caddy and hold in place. Insert bolt from front to back turning into the hex nut until snug. Do not over tighten. Repeat for the second bolt and hex nut.

Insert 2 screws into lower 2 holes. Turn until snug. Snap tools into storage on the Tool Caddy as shown in figure 6. Wrap Power Cord and Flex Hose as shown in figure 7. Insert TurboBrush into storage on Upper Handle by tilting the top of the TurboBrush and snapping it into place. OxyPro assembly is now complete. 7 ON OFF 6 ON OFF 5 ug310-5829_7920K_405.indd 5 5/5/06 11:25:16 AM Special Features of your BISSELL OxyPro™ The BISSELL SmartClean™ System The OxyPro is a home cleaning system that automatically mixes hand hot tap water with BISSELL Advanced Deep Cleaning Formula and heats the solution as it is applied to the carpet. The combination of heated cleaning solution, powered brush and suction provide a safe and effective method of cleaning. SmartTemp™ Power Switch Temperature control automatically heats the cleaning solution as it is being applied to the carpet (*) to safely optimize cleaning effectiveness.



[You're reading an excerpt. Click here to read official BISSELL](http://yourpdfguides.com/dref/567249)

[OXYPRO 7920 user guide](http://yourpdfguides.com/dref/567249)

<http://yourpdfguides.com/dref/567249>

ON OFF ON OFF 1. The Power Switch controls power to the machine and the SmartTemp feature. *SmartTemp heats the cleaning solution for carpet and bare floor application only. It does not heat solution sprayed through the accessory tools. 2.

3. The SmartTemp Ready Light indicates the heater is ON. It is found on the front of the handle where it is easy to see while you clean. Wait two minutes for the heater to warm up before beginning to clean. SmartTemp increases the water temperature up to 25° and will not allow it to exceed 180°.

SmartTemp Ready Light SmartMix™ Provides custom control for each cleaning job. SmartMix Bottle 1. 2. 3. Lift the SmartMix Bottle up and out of the machine base. Turn the SmartMix Bottle over so that the Valve Cap is in an upward position. Unscrew the Valve Cap and fill the SmartMix Bottle to the mark with BISSELL Advanced Deep Cleaning Formula. Replace the Valve Cap, turning until snug. Valve Cap 6 ug310-5829_7920K_405.indd 6 5/5/06 11:25:17 AM SmartMix Continued 4.

Replace SmartMix Bottle. Note: If SmartMix Bottle leaks, check for proper positioning of o-ring and straw. O-ring Position 5. Choose the SmartMix setting that fits the cleaning job. Water Rinse- use for gentle cleaning or for the final rinse after cleaning. Normal- automatically provides the best mix of water and concentrate for most cleaning jobs. High Traffic- automatically mixes the right amount of water and cleaning solution to dissolve tough grime and heavy soil.

Note: Residual cleaning materials left in carpet from other products may cause excessive foaming when picked up. If foam is overflowing Tank, move SmartMix Dial to "Water Rinse" position until the condition stops. Note: Both the SmartMix Bottle and the clean water Tank must have liquid in them in order for the machine to spray.

If one is empty, the machine will temporarily lose its prime and will not spray cleaning solution or water. Important: If you are using the WATER RINSE setting, fill the SmartMix Bottle with water also! H TR IG AFH N WOR FIC AT M ER AL R IN SE SmartMix Dial Tip: Deep cleaning stairs and high traffic areas on a regular basis can prolong carpet life. DirtLifter PowerBrush The powered brush roll at the Floor Nozzle is designed to enhance cleaning performance. The bristle pattern lifts out the deep down dirt while gently grooming carpet fibres. The floating suspension self-adjusts to all carpet heights.

When the machine handle is in the fully upright position, Carpet Saver™ automatically raises the brush off the carpet and protects your carpet if you leave the Power Switch ON. TM WARNING: To reduce the risk of fire, use only BISSELL Advanced Deep Cleaning Formula for full size machines in your OxyPro.

Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent based soil removers should not be used. These products may react with the plastic materials used in your OxyPro, causing cracking or pitting.

7 ug310-5829_7920K_405.indd 7 5/5/06 11:25:18 AM Tank-in-Tank Our Tank-in-Tank system is designed with a Bladder inside for clean water. As you clean, the Bladder will empty. Dirty water collects in the tank outside the Bladder. Step on Handle Release to lay the machine handle down out of the way. 1

1. 2. 3. Lift the Tank-in-Tank handle. The handle locks the lid in place.

Handle Release Carry it like a bucket to fill at the sink. Note: Both the SmartMix Bottle and the clean water Tank must have liquid in them in order for the machine to spray. If one is empty, the machine will temporarily lose its prime and will not spray cleaning solution or water. Set the Tank down and rotate the handle forward to unlatch the lid. Lift off and set the lid aside. Find the mouth of the Bladder and fill to the bottom of the neck with clean hand hot tap water. Do not boil or microwave water as it can destroy the Bladder. Note: Fill the Bladder with clean hand hot tap water only. Replace the Tank Lid matching the lid and tank edges. Handle must be in the forward position to re-install.

Rotate the handle to the carrying position to re-latch the lid. Replace Tank in machine base, seating firmly in place. Lift and Carry 3 4. 5. 6.

7. 8. 9. 4 Rotate Handle to unlatch 5 Rotate handle back down to the latched position. Note: Both the SmartMix Bottle and the clean water Tank must have liquid in them in order for the machine to spray.

If one is empty, the machine will temporarily lose its prime and will not spray cleaning solution or water. Important: If you are using the WATER RINSE setting, fill the SmartMix Bottle with water also! 9 Fill Bladder only with clean hand hot tap water When It's Time to Empty Tank-in-Tanke several passes over the area to be cleaned. Caution: Do not overwet. Turn the machine Power Switch OFF and let BISSELL Advanced Deep Cleaning Formula dissolve the tough soil for 1-2 minutes before continuing. 5. ug310-5829_7920K_405.indd 10 5/5/06 11:25:20 AM Carpet Cleaning 1. 2. Plug into a proper outlet and turn the Power Switch ON. Wait two minutes for the heater to warm up before beginning to clean.

While pressing the trigger, make one slow forward wet pass and another one back. Let the SmartTemp heated formula and DirtLifter Powerbrush do the work for you. Caution: Do not overwet. Note: Take care not to run over loose objects or edges of area rugs. Stalling brush may result in premature belt failure. Release the trigger and make one slow forward and back pass over the same area to remove any residual dirty water. Repeat cleaning passes until solution being pulled up appears clean. Continue passes without pressing the trigger until you can't see any more water being pulled up. Note: Both the SmartMix Bottle and the clean water Tank must have liquid in them in order for the machine to spray. If one is empty, the machine will temporarily lose its prime and will not spray cleaning solution or water.

After cleaning, you may want to turn the SmartMix Dial to the Water Rinse setting to give your carpeting a final rinse. This will ensure thorough removal of embedded dirt loosened by the BISSELL Advanced Deep Cleaning Formula. BISSELL Advanced Deep Cleaning Formulas contain an anti-resoiling agent that helps your carpets repel dirt and keeps them looking good longer. When the cleaning job is complete refer to the Maintenance section for machine cleanup and storage instructions on pages 18-20. Note: You may notice hair and debris deposits on the carpet that were loosened by the brushing action (especially with newer carpets that have never been deep cleaned before).

This debris should be picked up and thrown away. Debris that deposits in the Brush Belt should be cleaned between uses to keep the Belts running free.

ATTENTION BERBER CARPET OWNERS: have a Some Berber Carpets tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition.



[You're reading an excerpt. Click here to read official BISSELL](http://yourpdfguides.com/dref/567249)

[OXYPRO 7920 user guide](http://yourpdfguides.com/dref/567249)

<http://yourpdfguides.com/dref/567249>

Please see Stain Removal instructions on page 12.

3. 4. 5. 6. 7. 11 ug310-5829_7920K_405.indd 11 5/5/06 11:25:21 AM Stain Removal Do Not Delay! Failure to attend to an accident soon after it occurs may cause it to set and become permanent. Before treating any stain, follow these pretreatment steps: Blot up liquids with an absorbent cloth or paper towels. White materials are recommended because certain dyes may bleed and make the stain worse. 1.

2. 3. 4. Gently scrape up semi-solids with a spoon or spatula. Do not use a knife or other utensil with sharp edges because it could damage the carpet or upholstery. If the area has dried, remove the remaining semi-solids and residue with a sweeper or vacuum. Be sure to pre-test any spot removal solutions or chemicals on an inconspicuous area first. This is extremely important; different dyes and materials could be damaged or discoloured by a cleaning solution. If such a change should occur, try a different solution or call a professional. If cleaning on Berber Carpet gently run your machine over a hidden area. If no fuzzing occurs, continue cleaning in soiled area. Use your BISSELL Deep Cleaner as a precleaner. With one of the tools attached to the Flex Hose, set the ReadyTools Dial to Tools/PreTreat and the Smart Mix Dial to the High Traffic setting. Spray the area with cleaning solution and allow the BISSELL Advanced Deep Cleaning Formula to penetrate for 3-5 minutes. Once the precleaning is complete, use the attached tool to gently scrub the stain with back and forth strokes.

Allow to dry. Some difficult stains may require a second treatment. 5. 6. 7.

12 ug310-5829_7920K_405.indd 12 5/5/06 11:25:21 AM Stain Removal In Between Deep Cleaning Do Not Delay! Failure to attend to an accident soon after it occurs may cause it to set and become permanent. Use OxyKICTM carpet spot & stain remover to permanently remove tough spots and stains like red wine, cola and fruit juice in between deep cleaning. @@@@Note: OxyKIC is not recommended for use on upholstery. @@@3. 4. 5. 6. @@@If colour is affected, do not use. Shake and bend tab under to release trigger.

@@Let OxyKIC settle into the spot or stain for 3 5 minutes. Blot spot or stain with a clean dry cloth. @@Apply smooth even strokes when deep cleaning your carpets. @@That is too fast for optimum cleaning results. @@@@Make certain tool is securely in place. 1. 2. 3. 4. Move the TurboBrush switch to the "BRUSH" position.

This activates the brush when the unit is running. Place the tool directly on the soiled surface. @@@@Vacuum the area until no more cleaning solution can be removed. Repeat steps 1-3 until no more dirt can be removed. @@@@Once removed from the flex hose, the TurboBrush can be cleaned.

@@@C) Check spray nozzle for dirt. If necessary, clean with a soft bristle brush. @@@@Check for colourfastness in an inconspicuous place. If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.

Plan activities to give upholstery time to dry. Vacuum thoroughly to pick up loose debris and pet hair. @@@3. 4. 5. Manufacturer's tag Machine Preparation 1.

2. 3. Set up the machine following instructions in the Features section on pages 6-9. Use only BISSELL Advanced Deep Cleaning Formula in SmartMix Bottle.

Set the ReadyTools Dial to Tools/PreTreat. Note: Flow Indicator does not spin when set to Tools/PreTreat setting. *SmartTemp heats the cleaning solution for carpet and bare floor application only. It does not heat solution sprayed through the accessory tools. Set SmartMix Dial to Normal. Tip: Deep cleaning carpeting and upholstery with BISSELL Multi-Allergen Removal FormulaTM with ScotchgardTM protector regularly can reduce dust and allergens in your home. 4. Cleaning Technique 1. 2. 3.

4. 5. ug310-5829_7920K_405.indd 15 Choose the 4" Small Area Tool, the Tough Stain Brush, or the Spraying Crevice Tool and connect to the Flex Hose. Plug into a proper outlet and turn Power Switch ON.

While pressing the trigger, slowly move the spraying tool back and forth over the soiled surface. Release the trigger to suction soiled water. Continue to clean soiled area, working in small sections, until no more dirt can be removed. Caution: Do not overwet. When the cleaning job is complete refer to the Maintenance section for machine cleanup and storage instructions on pages 18-20.

15 5/5/06 11:25:22 AM Cleaning Bare Floors The Bare Floor Tool provides effective cleaning for linoleum, vinyl, and tile floors. Caution: Do not use on hardwood floors. Use BISSELL Hard Floor Solutions in SmartMix Bottle. Tilt Handle Back 1. 2. 3. 4. 5. Vacuum or sweep thoroughly to pick up loose debris and pet hair. Remove easily moved furniture from the room (chairs, tables, etc).

Handle Release Carrying Plan your cleaning route to leave an exit path. Plan activities to allow 30 minutes for the floor to dry completely. Attach the Bare Floor Tool 1. 2. 3. 4. 5. 6. Step on the Handle Release to lay the machine handle down. Remove the Tank-in Tank from the machine base.

Lift the machine base to expose the underside of the Nozzle. Attach Bare Floor Tool to Nozzle with long tab to the right side (ReadyTools side) of the Nozzle. First attach left side (short tab) catching tab over Nozzle edge. Gently bend long tab (right side) outward to easily snap over edge of clear nozzle on left.

Bottom Front Edge of Machine Base Bare Floor Cleaning Tool Snap Together 16 ug310-5829_7920K_405.

indd 16 5/5/06 11:25:23 AM Machine Preparation 1. Set up machine following instructions in the Features section on pages 6-9. Be sure to thoroughly rinse out any remaining BISSELL Advanced Deep Cleaning Formula from the SmartMix Bottle to prevent slippery linoleum, vinyl, and tile floors. Use BISSELL Hard Floor Solutions in the SmartMix Bottle. Check ReadyTools Dial - it should be set on Floor Cleaning.

Choose the SmartMix setting to match the cleaning job. Plug into a proper outlet and turn Power Switch ON. The SmartTemp Ready Light illuminates and the OxyPro is ready to clean. 2. 3. 4. Bare Floor Cleaning Technique 1. 2. 3. 4.

5. 6. Slowly move the machine Nozzle with Bare Floor Tool forward and back over soiled surface one time while pressing the trigger. Caution: Do not overwet. Repeat the motion without pressing the trigger using the Bare Floor Tool to squeegee and suction up the dirty water. Repeat steps 1 and 2 backing along the exit path. Allow about 30 minutes for the floor to dry completely. When the cleaning job is complete refer to the Maintenance section on pages 18-20. To remove Bare Floor Tool gently bend long tab (right side) outward and pull tool down away from the Floor Nozzle. Rinse thoroughly, dry and store

WARNING: fire, To reduce the risk of electric shock or injury unplug from outlet before servicing.

Tip: SmartMix Bottle may be stored with cleaning solution ready for your next cleaning job. Make sure dial is turned to the Water Rinse setting when storing.



[You're reading an excerpt. Click here to read official BISSELL OXYPRO 7920 user guide](http://yourpdfguides.com/dref/567249)
<http://yourpdfguides.com/dref/567249>

Turn Power Switch OFF. Unplug power cord from the outlet and coil around Power Cord Quick Release. Remove and rinse tools in clean, running water. Dry and replace on tool caddy. Coil Flex Hose around storage brackets on Tool Caddy. Remove Tank-In-Tank, dispose of dirty water. Refer to the Features section on Pages 8-9. Rinse out Tank-In-Tank and replace on the machine; Clean out Lint Screen. Clean out the Flow Indicator Filter each time it is used to ensure best cleaning performance. Unscrew the Flow Indicator Cap, lift out the Red Rotor and White Filter.

Rinse all three parts in tap water. Replace the Filter and Rotor. Replace the Flow Indicator Cap; turn until snug, do not over-tighten. Wipe all exterior surface with a soft cloth. Store cleaner upright in a protected, dry area. Note: OxyPro uses water and must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty. When carpet is dry, vacuum again to remove hair and fuzz that the OxyPro may have loosened. ON OFF 8. 9.

Cap Rotor Filter 10. 18 ug310-5829_7920K_405.indd 18 5/5/06 11:25:24 AM Pump Belt Replacement 2 1. 2. 3.

4. Turn the Power Switch OFF and unplug from the wall outlet. Step on the Handle Release and recline the handle down onto floor (see illustration). 3a 3b Remove Tank-In-Tank and SmartMix Bottle. Set them aside (see illustration).

4 Remove Belt Access Door located near the Floor Cleaning/ Tools switch by inserting a flat head screwdriver into the slot nearest to the handle and gently prying the access door off (see illustration). 5. 6. Turn the machine onto its side so the belt access area is facing upward (see illustration). 5 On the bottom of the machine, near the belt access area, is a red retainer plate that holds the black brush arm and brush in place. Using a Phillips head screwdriver remove the screw that holds the red retainer plate in place. Set red retainer plate and Phillips head screw aside (see illustration). 6 7. 8. 9.

Remove the black brush arm that holds the brush in place. Set the black brush arm aside (see illustration). 7 Remove the "toothed" Brush Belt from the brush then from the red pump pulley. Set the "toothed" Brush Belt and brush aside. Locate and remove broken Pump Belt. 8 9 19 ug310-5829_7920K_405.indd 19 5/5/06 11:25:25 AM To Install the Replacement Pump Belt 1 1. With the unit still on its side, loop one end of the Replacement Pump Belt around the red pump pulley and then the other end around the silver motor shaft (see illustration). Do not twist the Replacement Pump Belt. 2.

3. 4. Re-install the "toothed" Brush Belt first onto the red pump pulley and then onto the "toothed" end of the brush (see illustration). Re-install the brush into the base of unit. 2 4 Place the black brush arm onto the brush and slide black brush arm into base of unit.

The black brush arm and brush should slide easily into original position (see illustration). 5. 6. Re-install the red retainer plate and Phillips head screw (see illustration). 5 6 Using your finger, gently spin the Replacement Pump Belt on the silver motor shaft.

If assembled correctly, the Replacement Pump Belt should rotate freely around the silver motor shaft and drive pulley without obstruction. The brush should also rotate freely when the silver motor shaft is turned. 7a 7b 7. Turn the machine right side up and replace the Tank-In-Tank, SmartMix Bottle and Belt Access Door (see illustration). 8. Assembly is now complete. If you have any questions, or are having trouble installing your Replacement Pump Belt, please call BISSELL Consumer Services in the UK at 0870-225-0109 or in Australia at 1-800-811-183. For all other countries call our USA Headquarters at 01-616-453-4451. Or visit the BISSELL website: www.bissell.com.

com. 20 ug310-5829_7920K_405.indd 20 5/5/06 11:25:26 AM Troubleshooting WARNING: To reduce the risk of fire, electric shock or injury unplug from outlet before servicing. SmartTemp Ready Light Does Not Illuminate. Possible Causes 1 Remedies 1 The Power Switch is not turned ON. Turn the Power Switch ON. Reduced Spray OR No Spray. Possible Causes 1 2 3 4 5 6 Remedies 1 2 3 4 5 6 Bladder may be empty. SmartMix Bottle may be empty. The Filter may be clogged.

Tanks may not be seated properly. Pump may have lost prime. The Pump Belt may be broken. Lift Here Insert Screwdriver Blade Here Refill Bladder with clean hand hot tap water. Fill with any BISSELL Advanced Deep Cleaning Formula for cleaning or water if rinsing.

Clean out Flow Indicator Filter, page 18. Turn Power Switch OFF; remove & reseal tanks. Inspect for presence of seals. Turn Power Switch OFF; after 1 minute turn ON and depress trigger. Turn Power Switch OFF and unplug from the outlet.

To check if a Pump Belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the Belt Access Door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. You should be able to see the Pump Belt looped around the motor shaft. If it is broken or missing, please refer to Replacement Parts on page 23 before calling BISSELL Consumer Services. Complete installation instructions will accompany the replacement Belt. DirtLifter PowerBrush Does Not Turn. Possible Causes 1 Remedies 1 The Brush Belt or Pump Belt is off or broken. Cleaner Not Picking Up Solution Possible Causes 1 Turn Power Switch OFF and unplug from the outlet.

To check if a Pump Belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the Belt Access Door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. If broken refer to pages 19-20. Remedies 1 ReadyTools Dial may be at the wrong setting for the cleaning job. Nozzle Window may not be properly attached. Set ReadyTools Dial to either Tools/PreTreat or Floor Cleaning. Press down firmly on the black oval gasket at the top Window to make sure the two tabs on the back of the Nozzle Window are snapped into the mating slots in the main housing. Re-install lid; refer to the Features section.

Tank-In-Tank must be firmly seated to function; remove and reseal Tank-in-Tank. Adjust angle; apply more downward pressure. @@ Poor tool position (Hand held attachments only). @@@@ For UK inquiries: Monday - Thursday 9 am -- 5 pm Friday 9 am -- 4 pm BISSELL Homecare (Overseas) Inc. The Boat Yard 105 Straight Road Old Windsor Berkshire, SL4 2SE United Kingdom Telephone: 0870-225-0109 For Australian inquiries: 24 hours a day 7, days a week E.

D. Oates Pty Ltd 76 - 82 Newlands Road Reservoir VIC 3073 Australia Telephone: 1-800-811-183 For all other inquiries: Monday - Friday 8 am -- 4 pm BISSELL Homecare, Inc.



[You're reading an excerpt. Click here to read official BISSELL](#)

[OXYPRO 7920 user guide](#)

<http://yourpdfguides.com/dref/567249>

PO Box 1888 Grand Rapids, MI 49501 USA Telephone: 01-616-453-4451 Fax: 01-616-453-1383 Or visit the BISSELL website - www.bissell.com When contacting BISSELL, have model number of unit available.

Please record your Model Number: _____ Please record your Purchase Date: _____ NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. See "About Your Warranty" on page 20 for details. Please do not return this product to the store. Please do not return this product to the store. 22 ug310-5829_7920K_405.indd 22 5/5/06 11:25:27 AM Replacement parts - BISSELL OxyPro™ Item Part No. 1* 2* 3* 4* 5* 6* 7* 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 210-9213 603-0910 210-9148 210-1197 214-9131 214-9142 215-9155 015-9043 015-4439 015-9041 210-1785 210-1795 555-6503 210-4052 214-9874 215-0628 015-0621 213-3501 484 482 710E 720E 730E 740E 750E 970 Part Name 4" Small Area Tool 6" Stair Tool Spraying Crevice Tool TurboBrush™ Bare Floor Tool PreTreat Wand Tough Stain Brush Tank Assembly Complete (Includes Lid Assembly) Tank Lid Assembly Tank Bottom (Assembly) SmartMix™ Bottle (Includes Cap Assembly) SmartMix™ Cap Assembly Flow Indicator Assembly Window Gasket Floor Nozzle Window Replacement Pump Belt (With Instructions) Replacement Brush Belt (With Instructions) Lint Screen Hard Floor Solutions Wood Floor Solutions 1.42 L Fibre Cleansing Formula™ 1.42 L Multi-Allergen Removal™ Formula 1.

42 L Pet Odor and Soil Removal™ Formula 1.42 L Natural Orange Extract Formula™ with Scotchgard™ protector 1.42 L Lavender Essence Formula™ with Scotchgard™ protector 14 oz. OxyKICTM Carpet Spot & Stain Remover *Not all parts are included with every model. 1 2 3 4 ON CTI SU USH BR 5 6 7 8 9 10 11 13 12 14 15 16 17 18 19 20 21 22 23 24 25 26 23 ug310-5829_7920K_405.indd 23 5/5/06 11:25:27 AM About Your Warranty This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by telephone, or regular post as described below, or contact your local in country distributor. Limited Two Year Warranty Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc., will replace (with new or remanufactured components), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part do to manufacturers defect. This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes.

Damage or malfunction caused by negligence, abuse, or use not in accordance with the User's Guide is not covered. For UK inquiries: Monday - Thursday 9 am -- 5 pm Friday 9 am -- 4 pm BISSELL Homecare (Overseas) Inc. The Boat Yard 105 Straight Road Old Windsor Berkshire, SL4 2SE United Kingdom Telephone: 0870-225-0109 For Australian inquiries: 24 hours a day 7, days a week E.D. Oates Pty Ltd 76 - 82 Newlands Road Reservoir VIC 3073 Australia Telephone: 1-800-811-183 For all other inquiries: Monday - Friday 8 am -- 4 pm BISSELL Homecare, Inc.

PO Box 1888 Grand Rapids, MI 49501 USA Telephone: 01-616-453-4451 Fax: 01-616-453-1383 BISSELL HOMECARE INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT. *EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

©2005 BISSELL Homecare, Inc Grand Rapids, Michigan USA All rights reserved. Printed in USA. Part Number 310-5829 Rev 04/05 Visit our website at: www.bissell.com Scotchgard is a trademark of 3M 24 ug310-5829_7920K_405.indd 24 5/5/06 11:25:43 AM .



[You're reading an excerpt. Click here to read official BISSELL OXYPRO 7920 user guide](http://yourpdfguides.com/dref/567249)
<http://yourpdfguides.com/dref/567249>