



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER P5260E. You'll find the answers to all your questions on the ACER P5260E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER P5260E
User guide ACER P5260E
Operating instructions ACER P5260E
Instructions for use ACER P5260E
Instruction manual ACER P5260E

Acer Projector

P5260E/P5260EP/P1165E/P1165EP Series
User's Guide



[You're reading an excerpt. Click here to read official ACER P5260E user guide](http://yourpdfguides.com/dref/309191)
<http://yourpdfguides.com/dref/309191>

Manual abstract:

All Rights Reserved. @@@@Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated. Acer Projector

P5260E/P5260EP/P1165E/P1165EP Series Model number: _____ Serial number: _____

_____ Date of purchase: _____ Place of purchase: _____

_____ Acer and the Acer logo are registered trademarks of Acer Incorporated. @@@Keep this document for future reference. @@Do not use liquid cleaners or aerosol cleaners. @@Unplug the power cord before removing the power supply unit from the computer. If the system has multiple sources of power, disconnect power from the system by unplugging all power cords from the power supplies.

Caution for Accessibility Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet. Warnings! ... Do not use this product near water. Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.

Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided. · Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

Never spill liquid of any kind onto or into iv the product. To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface. Never use it under sporting, exercising, or any vibrating environment which will probably cause unexpected short current or damage rotor devices, lamp. · · Using electrical power · · · This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company. Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating. Do not overload a power outlet, strip or receptacle by plugging in too many devices.

The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating. This product's AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details. · ·

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury. Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

· Use the product only with the supplied power supply cord set. If you need to replace the power cord set, make sure that the new power cord meets the following requirements: detachable type, UL listed/CSA certified, type SPT-2, rated 7A 125V minimum, VDE approved or its equivalent, 4.6 meters (15 feet) maximum length. v Product servicing Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when: · · · · · the power cord or plug is damaged, cut or frayed liquid was spilled into the product the product was exposed to rain or water the product has been dropped or the case has been damaged the product exhibits a distinct change in performance, indicating a need for service the product does not operate normally after following the operating instructions Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition. Warning! For safety reasons, do not use non-compliant parts when adding or changing components. Consult your reseller for purchase options. Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Additional safety information · · · Do not look into the projector's lens when the lamp is on. The bright may hurt your eyes. Turn on the projector first and then signal sources. Do not place the product in following environments: · · · · · Space that is poorly ventilated or confined. At least 50cm clearance from walls and free flow of air around the projector is necessary. Locations where temperatures may become excessively high, such as inside of a car with all windows rolled up. Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shortening the life span and darkening the image. Locations near fire alarms. Locations with an ambient temperature above 40 °C/104 °F. Locations where the altitudes are higher than 10000 feet.

· Unplug immediately if there is something wrong with your projector. Do not operate if smoke, strange noise or odor comes out of your projector. It vi might cause fire or electric shock. In this case, unplug immediately and contact your dealer. Do not keep using this projector if it is broken or you have dropped it.

In this case, contact your dealer for inspection.



You're reading an excerpt. Click here to read official ACER P5260E user guide
<http://yourpdfguides.com/dref/309191>

Do not face the projector lens to the sun. It can lead to fire. When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power. Do not turn off the main power abruptly or unplug the projector during operation.

It can lead to lamp breakage, fire, electric shock or other trouble. The best way is to wait for the fan to turn off before turning main power off. Do not touch air outlet grille and bottom plate which becomes hot. Clean the air filter frequently. The temperature inside may rise and cause damage when the filter/ventilation slots clogged with dirt or dust.

Do not look into the air outlet grille when projector is operating. It may hurt your eyes. Always open the lens shutter or remove the lens cap when the projector is on. Do not block the projector lens with any object when the projector is under operation as this could cause the object to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press HIDE on the projector or remote controller.

The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement. Do not operate lamps beyond the rated lamp life. It could cause it to break on rare occasions. Never replace the lamp assembly or any electronic components unless the projector is unplugged. The product will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning message. When changing the lamp, please allow unit to cool down, and follow all changing instructions. Reset the "Lamp Hour Reset" function from the onscreen display "Management" menu after replacing the lamp module. Do not attempt to disassemble this projector.

There are dangerous high voltages inside which may hurt you. The only user serviceable part is the lamp which has its own removable cover. Refer servicing only to suitable qualified professional service personnel. Do not stand the projector on end vertically. It may cause the projector to fall over, causing injury or damage. This product is capable of displaying inverted images for ceiling mount installation. Only use acer ceiling mount kit for mounting the projector and ensure it is securely installed. vii Operating environment for using wireless (optional) Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your machine under the following conditions. These devices may include, but are not limited to: wireless LAN (WLAN), Bluetooth and/or 3G. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger.

Use the device only in its normal operating positions. This device meets RF exposure guidelines when used normally, and it and its antenna are positioned at least 1.5 centimeters (5/8 inches) away from your body (refer to the figure below). It should not contain metal and you should position the device the above-stated distance from your body. To successfully transmit data files or messages, this device requires a good quality connection to the network.

In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with hearing aids should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment thaercury advisory For projectors or electronic products containing an LCD/CRT monitor or display: Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.

x First things first Usage Notes Do: . . . Turn off the product before cleaning. Use a soft cloth moistened with mild detergent to clean the display housing. Disconnect the power plug from AC outlet if the product is not being used for a long period of teystone correction delivers optimum presentations Multi-language onscreen display (OSD) menus Full-function remote control Manual focus projection lens zooms up to 1.1x 2x digital zoom and pan function Microsoft® Windows® 2000, XP, Vista OS compliant 2 English Contents This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing. Projector with lens cap Power cord VGA cable Composite video cable 2 x batteries Carrying case DVI-D cable (P5260E Series) Security card User's Guide Acer Projector Quick Start Guide Remote control Quick start guide 3 Projector Overview Projector Outlook Front / upper side 8 English 3 3 1 2 3 4 5 7 6 # 1 2 3 4 Zoom ring Focus ring Description # 5 6 7 8 Lens cap Description Elevator button Elevator foot Control panel Remote control receiver Zoom lens Rear side 12 13 3 4 12 5 6 7 8 10 9 11 # 1 2 3 4 5 6 7 Description USB connector RS232 connector PC analog signal/HDTV/Component video input connector (1) Monitor loop-through output connector (VGA-Out) DVI input connector (for digital signal with HDCP function) S-Video input connector Composite video input connector # 8 9 Description Audio input connector (1) Kensington lock port 10 Power socket Below items are for P5260E/P5260EP series only: 11 Audio input connector (2) 12 HDMI connector 13 PC analog signal/HDTV/Component video input connector (2) 4 English Control Panel 1 2 3 4 9 8 5 6 7 # 1 2 3 4 LAMP EMPOWERING KEY TEMP Keystone Function Description Lamp Indicator LED Unique Acer functions: eOpening, eView, eTimer Management. Temp Indicator LED Adjusts the image to compensate for distortion caused by tilting the projector (±40 degrees). Automatically synchronizes the projector to the input source. Use to select items or 5 6 RESYNC Four directional select keys make adjustments to your selection.



[You're reading an excerpt. Click here to read official ACER P5260E user guide](http://yourpdfguides.com/dref/309191)
<http://yourpdfguides.com/dref/309191>

7 8 POWER MENU See the contents in "Turning the Projector On/Off" section. · Press "MENU" to launch the onscreen display (OSD) menu, back to the previous step for the OSD menu operation or exit the OSD menu. Confirm your selection of items. · 9 SOURCE Press "SOURCE" to choose RGB, Component, S-Video, Composite, DVI, HDTV and HDMI sources. 5 Remote Control Layout 2 1 English POWER 7 FREEZE HIDE 8 ASPECT RATIO RESYNC SOURCE 3 4 5 6 11 9 ZOOM 10 12 13 RGB BRIGHTNESS COLOR CONTRAST 15 16 19 20 23 24 27 PgUp PgDn VGA COMPONENT VIDEO S-VIDEO DVI HDMI WIRELESS MUTE 14 17 18 21 22 25 26 # 1 2 3 4 5 6 7 8 9 10 Icon Function Infrared transmitter Laser pointer FREEZE HIDE RESYNC SOURCE POWER ASPECT RATIO ZOOM Laser button Description Sends signals to the projector.

Aim the remote at the viewing screen. To pause the screen image. Momentarily turns off the video. Press "HIDE" to hide the image; press again to display the image. Automatically synchronizes the projector to the input source.

Press "SOURCE" to choose from RGB, Component-p, Componenti, S-Video, Composite, DVI-D, Video and HDTV sources. Refer to the "Turning the Projector On/Off" section. To choose your desired aspect ratio (Auto/4:3/16:9). Zooms the projector display in or out. Aim the remote at the viewing screen, press and hold this button to activate the laser pointer. This function is not supported in Japanese market. Unique Acer functions: eOpening, eView, eTimer Management. 11 12 EMPOWERING KEY KEYSTONE Adjusts the image to compensate for distortion caused by tilting the projector (± 40 degrees). Four directional Use up, down, left, right buttons to select items or make select keys adjustments to your selection 6 # 13 English Icon Function MENU Description · Press "MENU" to launch the onscreen (OSD) menu, back to the previous step for the OSD menu operation or exit the OSD menu. Confirm your selection of items.

14 PAGE For computer mode only. Use this button to select the next or previous page. This function is only available when connected to a computer via a USB cable. Toggle "RGB" to adjust the red/green/blue color. Press "BRIGHTNESS" to adjust the brightness of the image. Use the "CONTRAST" option to control the difference between the lightest and darkest parts of the picture. Press "COLOR" to adjust the color temperature of image. Press "VGA" to change source to the VGA connector. This connector supports analog RGB, YPbPr (480p/576p/720p/ 1080i), YCbCr (480i/576i) and RGBsync. Press "COMPONENT" to change source to Component video.

This connection supports YPbPr (480p/576p/720p/1080i) and YCbCr (480i/576i). To change source to S-Video. To change source to COMPOSITE VIDEO. Press "DVI" to change source to DVI. This connection supports digital RGB, analog RGB, YPbPr (480p/576p/720p/1080i), YCbCr (480i/576i) and HDCP signals.

Change the video source to HDMITM. (for model if with the HDMITM connector) To turn on/off the volume. This function is not available for this model. @@Ensure that the power cord and signal cable are securely connected. The Power LED will flash red.

@@Turn on your source (computer, notebook, video player, etc.). The projector will detect your source automatically. @@@@The message below will display onscreen for 5 seconds. @@This is to ensure that the system cools correctly. @@@@Lamp will automatically turn off soon." 10 English Adjusting the Projected Image Adjusting the Height of Projected Image The projector is equipped with elevator feet for adjusting the height of image. To raise the image: 1 2 3 Press the elevator foot release. (Illustration #1) Raise the image to the desired height angle (Illustration #2), then release the button to lock the elevator foot into position. Use Tilt adjusting wheel (Illustration #3) to fine-tune the display angle.

To lower the image: 1 2 3 Press the elevator foot release. (Illustration #1) Lower the image to the desired height angle (Illustration #2), then release the button to lock the elevator foot into position. Use Tilt adjusting wheel (Illustration #3) to fine-tune the display angle. 1 Elevator foot release button 3 Tilt adjusting wheel 2 Elevator foot 11 How to Optimize Image Size and Distance Consult the table below to find the optimal image sizes achievable when the projector is positioned at a desired distance from the screen. Example: If the projector is 3 m from the screen, good image quality is possible for image sizes between 68" and 75". English Note: Remind as below figure, the space of 131 cm height is required when located at 3m distance. Figure: Fixed distance with different zoom and screen size. 12 English Minimum Screen Size (Min zoom) Maximum Screen Size (Max zoom) Desired Distance From base to From base to

Diagonal	Diagonal (m)	top of image (inch)	W (cm) x H (cm)	(inch) W (cm) x H (cm)	<A> (cm)	(cm)			<C>	<C>
1.5	2	2.5	3	3						
5	4	4.5	5	6	7	8	9	10	11	12
34	46	57	68	80	91	103	114	137	159	182
205	228	251	273	69	x	52	93	x	69	116
x	87	139	x	104	162	x	122	185	x	139
208	x	156	231	x	174	278	x	208	324	x
243	370	x	278	417	x	313	463	x	347	509
x	382	556	x	417	60	80	100	120	140	160
180	200	240	280	319	359	399	439	479	37	50
62	75	87	100	112	125	150	175	200	225	250
275	300	76	x	57	102	x	76	127	x	95
152	x	114	178	x	133	203	x	152	228	x
171	254	x	190	305	x	228	355	x	266	406
x	305	457	x	343	508	x	381	558	x	419
609	x	457	66	88	109	131	153	175	197	219
263	306	350	394	438	482	525	Zoom Ratio: 1.1x 13 How to Get a Preferred Image Size by Adjusting Distance and Zoom English The table below shows how to achieve a desired image size by adjusting either the position or the zoom ring.			

@@@@"Acer eView Management" is for display mode selection. @@@@to increase the contrast. Adjusts the color temperature. Video: For playing video in a bright environment. @@User 1: Memorize user's settings. @@@@to increase the contrast. Adjusts the color temperature. @@Effects the representation of dark scenery.

With greater gamma value, dark scenery will look brighter. Adjusts the red color. Adjusts the green color. Adjusts the blue color. @@@@4:3: The image will be scaled to fit the screen and displayed using a 4:3 ratio. · 16:9: The image will be scaled to fit the width of the screen and the height adjusted to display image using a 16:9 ratio. Front-Desktop Projection · The factory default setting. Front-Ceiling · When you select this function, the projector inverts the image for ceiling-mounted projection. 19 English Rear-Desktop · · H. Position (Horizontal Position) V.

Position (Vertical Position) Frequency When you select this function, the projector reverses the image so you can project behind a translucent screen.



[You're reading an excerpt. Click here to read official ACER P5260E user guide](http://yourpdfguides.com/dref/309191)
<http://yourpdfguides.com/dref/309191>

When you select this function, the projector reverses and inverts the image at same time. You can project from behind a translucent screen with ceiling mounted projection. Press Press Press Press to move the image left. to to move the image right. to move the image down. to move the image up. Rear-Ceiling . . . "Frequency" changes the projector's refresh rate to match the frequency of your computer's graphic card. If you can see a vertical flickering bar in the projected image, use this function to make an adjustment. Synchronizes the signal timing of the display with the graphic card.

If you experience an unstable or flickering image, use this function to correct it. Adjusts the sharpness of the image. Tracking Sharpness . . Press Press to decrease the sharpness. to increase the sharpness. Note: "H. Position", "V. Position", "Frequency" and "Tracking" functions are not supported under DVI and Video mode. Note: "Sharpness" functions is not supported under DVI and Computer mode. 20 English Management Setting ECO Mode Choose "On" to dim the projector lamp which will lower power consumption, extend the lamp life and reduce noise. Choose "Off" to return normal mode.

The projector will auto shutdown while there is no signal input after the allocated time. (in minutes) When source lock is turned "Off", the projector will search for other signals if the current input signal is lost. When source lock is turned "On", it will "Lock" the current source channel unless you press "SOURCE" button on the remote control for next channel. Choose the Menu location on the display screen Use this function to select your desired startup screen. @ @ @ @ @ @ @ @ @ @ Press "Screen Capture" to customize the startup screen. A dialog box appears to confirm the action. @ @ The capture range is the red rectangular area. @ @ A message appears, stating that the screen capture is in progress. @ @ @ @ @ @ @ @ Lamp Hour Elapse Lamp Reminding Lamp Hour Reset Security Displays the lamp's elapsed operating time (in hours). Activate this function to display a reminder to change the lamp 30 hours before its expected end-of-life.

Press after choosing "Yes" to turn the lamp hour counter to 0 . Security This projector provides an excellent security function for the administrator to manage usage of the projector. Press to change the "Security" setting. If the security function is enabled, you must enter "Administrator Password" first before changing the security settings. . . Select "On" to enable the security function. The user has to enter a password to operate the projector. Please refer to "User Password" section for details. If "Off" is selected, then the user can turn on the projector without password. Timeout(Min.) Once "Security" is activated to "On", the administrator can set timeout function.

. . . . Press or to select timeout interval. The range is from 10 minutes to 990 minutes. When the time is up, the projector will prompt the user to enter the password again. The factory default setting of "Timeout(Min.)" is "Off".

Once the security function is enabled, the projector will request user to enter password when switch on the projector . Both "User Password" and "Administrator Password" can be accepted for this dialogue. 22 User Password English Press to setup or change the "User Password". Press number keys to set your password on the remote control and press "MENU" to confirm. Press to delete character.

Enter the password when you see "Confirm Password" displayed. The password should be between 4 and 8 characters long. If you select "Request password only after plugging power cord", the projector will prompt the user to enter the password every time the power cord is plugged. If you select "Always request password while projector turns on", the user has to enter the password every time when the projector is turned on. Administrator Password The "Administrator Password" can be used by both "Enter Administrator Password" and "Enter Password" dialog boxes. . . . Press to change the "Administrator Password". The factory default of "Administrator Password" is "1234". If you forgot your administrator password, do the following to retrieve the administrator Password: An unique 6-digit "Universal Password" which is printed on the Security Card (please check accessory in the box). This unique password is the number which will be accepted by projector anytime no matter what the Administrator Password is. If losing this security card and number, please contact with an Acer service center.

Default Lock User Startup Screen is "Off". If lock user startup screen is "On", users cannot change the startup screen anymore and avoid the other users change that arbitrarily. Choose "Off" to unlock startup screen. Press after choosing "Yes" to return the parameters on . . Lock User Startup Screen Reset . all menus to the factory default settings. 23 Audio Setting English Volume Press Press to decrease the volume. to increase the volume. Mute Power On/Off Volume Alarm Volume Choose "On" to mute the volume. Choose "Off" to restore the volume. Select this function to adjust the notification volume when turning the projector on/off. Select this function to adjust volume of any warning notifications.

24 English Timer Setting Timer Start Timer Period Timer Volume Timer Display Press Press to start or stop the timer. or to adjust the timer period. Select this function to adjust notification volume when the timer function is enabled and time is up. Press screen. or to which timer mode to display on the Timer Location Choose the location of the timer on the screen.

Language Setting Language Choose the multilingual OSD menu . Use your preferred menu language. to select . Press to confirm the selection. 25 Appendices Troubleshooting If you experience a problem with your Acer projector, refer to the following troubleshooting guide. If the problem persists, please contact your local reseller or service center.

English Image Problems and Solutions # 1 Problem No image appears onscreen Solution Connected as described in the "Installation" section.



You're reading an excerpt. Click here to read official ACER P5260E user guide
<http://yourpdfguides.com/dref/309191>

Ensure none of the connector pins are bent or broken. Check if the projection lamp has been securely installed. Please refer to the "Replacing the Lamp" section. Make sure you have slid on the lens door and the projector is turned on. Press "RESYNC" on the remote control or control panel. 2 Partial, scrolling or incorrectly displayed image (For PC (Windows 95/98/ 2000/XP)) · · For an incorrectly displayed image: · Open "My Computer", open the "Control Panel", and then double-click the "Display" icon. · Select the "Settings" tab. · Verify that your display resolution setting is lower than or equal to UXGA (1680 x 1050) (P5260E/P5260EP series) or WXGA+ (1400 x 900) (P1165E/P1165EP series). · Click the "Advanced Properties" button.

If the problem still appears, change the monitor display you are using and follow the steps below: · Verify that the resolution setting is lower than or equal to UXGA (1680 x 1050) (P5260E/ P5260EP series) or WXGA+ (1400 x 900) (P1165E/P1165EP series). · Click the "Change" button under the "Monitor" tab. · Click "Show all devices". Next, select "Standard monitor types" under the SP box, and choose the resolution mode you need under the "Models" box. · Verify that the resolution setting of the monitor display is lower than or equal to UXGA (1680 x 1050) (P5260E/P5260EP series) or WXGA+ (1400 x 900) (P1165E/P1165EP series). 26 English 3 Partial, scrolling or incorrectly displayed image (For notebooks) · · Press "RESYNC" on the remote control or control panel. For an incorrectly displayed image: · Follow the steps for item 2 (above) to adjust the resolution of your computer. · Press the respective button to toggle output settings. Example: [Fn]+[F4], Compaq [Fn]+[F4], Dell [Fn]+[F8], Gateway [Fn]+[F4], IBM [Fn]+[F7], HP [Fn]+[F4], NEC [Fn]+[F3], Toshiba [Fn]+[F5] If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector. If you are using a Microsoft® Windows® based notebook: Some notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's manual for detailed information. If you are using an Apple® Mac® OS based notebook: In System Preferences, open Display and select Video Mirroring "On". Use "Tracking" to correct it. Refer to the "Image Setting" section for more information.

Change the display color depth settings on your computer. Use "Frequency" to make an adjustment. Refer to the "Image Setting" section for more information. Check and reconfigure the display mode of your graphics card to make it compatible with the projector. Make sure the lens door is slid on. Adjusts the focus ring on the projector lens. Make sure the projection screen is within the required distance of 3.3 to 39.4 feet (1.0 to 12.0 meters) from the projector. Refer to the "How to Get a Preferred Image Size by Adjusting Distance and Zoom" section for more information. · 4 The screen of the notebook computer is not displaying your presentation · · 5 Image is unstable or flickering · · 6 Image has vertical flickering bar · · 7 Image is out of focus · · 27 8 Image is stretched when displaying a "widescreen" DVD title When you play a DVD encoded in anamorphic or 16:9 aspect ratio you may need to adjust the following settings: · If you play an Letterbox(LBX) format DVD title, please change the format to Letterbox(LBX) in the projector OSD. English · · If you play a 4:3 format DVD title, please change the format to 4:3 in the projector OSD. If the image is still stretched, you will also need to adjust the aspect ratio.

Set up the display format to 16:9 (wide) aspect ratio on your DVD player. Adjust the zoom lever on the top of the projector. Move the projector closer to or further from the screen. Press "MENU" on the remote control or no the control panel. Go to "Image setting --> Aspect Ratio" and try different settings. If possible, reposition the projector so that it is centered on the screen. Press the "Keystone / " button on the control panel or the remote control until the sides are vertical. Select "Image --> Projection" on the OSD and adjust the projection direction. 9 Image is too small or too large · · · 10 Image has slanted sides · · · 11 Image is reversed · Problems with the Projector # 1 Condition The projector stops responding to all controls Solution If possible, turn off the projector, then unplug the power cord and wait at least 30 seconds before reconnecting power. When the lamp reaches the end of its useful life, it will burn out and may make a loud popping sound.

If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp" section. 2 Lamp burns out or makes a popping sound 28 English OSD Messages # 1 Condition Message Message Reminder Fan Fail - the system fan is not working. Projector Overheated - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it may be used. Replace the lamp - the lamp is about to reach its maximum lifetime.

Prepare to replace it soon. 29 LED & Alarm Definition Listing LED Messages Message Lamp LED Red Standby (power cord plugged in) Lamp retry -Temp LED Red -Red V Power LED Blue -- English -- -- -- Quick flashing -- Turning off (cooling state) Turning off (cooling completed) Error (thermal failure) Error (fan lock failure) -- -- -- Quick flashing V -- -- -- -- -Quick flashing --- --- V V Error (lamp breakdown) Error (color Wheel fail) V Quick flashing --- V V 30 English Replacing the Lamp Use a screwdriver to remove the screw(s) from the cover, and then pull out the lamp. The projector will detect the lamp life. It will be shown you a warning message "Lamp is approaching the end of its useful life in full power operation. Replacement Suggested!" When you see this message, change the lamp as soon as possible.

Make sure the projector has been cooling down for at least 30 minutes before changing the lamp. Warning: Lamp compartment is hot! Allow it to cool down before changing lamp! a b 1 2 a 4 3 To change the Lamp 1 2 3 4 5 6 7 8 Turn off the projector by pressing the "Power" button. Allow the projector at least 30 minutes to cool down.



[You're reading an excerpt. Click here to read official ACER P5260E user guide](http://yourpdfguides.com/dref/309191)
<http://yourpdfguides.com/dref/309191>

Disconnect the power cord. Place your hands on the top cover. Find the "OPEN" buttons on both sides of the projector and push it at the same time. (Illustration #1) Gently push the top cover out slightly and slide it away to open the top cover. (Illustration #2) Remove the two screws that secure the lamp module and pull up the lamp bar. (Illustration #3) Pull out the lamp module by force. @@@@Please obtain the appropriate screws for your type of ceiling.

@@Use two washers for extra support, if deemed necessary. @@3 mm diameter screws are enclosed in the screw pack. Models P5260E/P5260EP P1165E/P1165EP 3 3 Screw Type B Diameter (mm) Length (mm) 20 20 Large V V Washer Type Small V V 34 English Specifications The specifications below are subject to change without notice. For final specs, please refer to Acer's marketing documentation. Projection system Resolution DLPTM P5260E/P5260EP: Native: XGA (1024 x 768) Maximum: UXGA (1680 x 1050) P1165E/P1165EP: Native: SVGA (800 x 600) Maximum: WXGA+ (1440 x 900) P5260E/P5260EP: 2700/2800 ANSI Lumens P1165E/P1165EP: 2400/2500 ANSI Lumens IBM PC and compatibles, Apple Macintosh, iMac and VESA standards: SXGA, SVGA, VGA (resizing) NTSC (3.58/4.43), PAL (B/D/G/H/I/M/N), SECAM (B/D/G/ K/K1/L), HDTV (720p, 1080i), EDTV (480p, 576p), SDTV (480i, 576i) 4:3 (native), 16:9 2100:1 16.7 million colors P5260E/P5260EP: 32 dBA (standard), 30 dBA (ECO) P1165E/P1165EP: 30 dBA (standard), 28 dBA (ECO) F / 2.51 - 2.69, f = 21. 95 mm - 24.18 mm with 1.1x manual zoom lens 23" (0.58 m) - 300" (7.62 m) 3. 3' m (1.0 m) - 39.4' m (12.0 m) 50" @ 2 m (1.97 - 2. 16:1) 31.5 - 100 kHz 56 - 85 Hz P5260E/P5260EP: 230 W user-replaceable lamp P1165E/P1165EP: 200 W user-replaceable lamp P5260E/P5260EP: 3000 hours (standard), 5000 hours (economy) P1165E/P1165EP: 3000 hours (standard), 4000 hours (economy) +/- 40 degrees Internal speaker with 2 W output 2.8 kg (6.17 lbs.) 300 x 228 x 100 mm (11.81 x 8.98 x 3.94 inches) Laser pointer function 2x AC input 100 - 240 V, 50/60 Hz P5260E/P5260EP: 280 W P1165E/P1165EP: 250 W 5°C to 35°C / 41°F to 95°F 85% Brightness Computer compatibility Video compatibility Aspect ratio Contrast ratio Displayable colors Noise level Projection lens Projection screen size (diagonal) Projection distance Throw ratio Horizontal scan rate Vertical refresh scan rate Lamp type Lamp life Keystone correction Audio Weight Dimensions (W x D x H) Remote control Digital zoom Power supply Power consumption Operating temperature Uniformity 35 I/O connectors Power socket x 1 VGA input x 1 Composite video x 1 S-video x 1 VGA output x 1 DVI-D x 1: with HDCP support 3.5 mm audio jack input x 1 RS232 x 1 USB x 1: for remote computer control HDMI x 1 VGA input x 2 3.5 mm audio jack input x 2 AC power cord x 1 VGA cable x 1 Composite video cable x 1 DVI-D cable x 1 (P5260E/P5260EP series) Remote control x 1 Batteries x 2 (for remote control) User's guide (CD-ROM) x 1 Quick start guide x 1 Security card x 1 Carrying case x 1 English Below items are for P5260E/P5260EP series only: Standard package contents * Design and specifications are subject to change without notice.

36 English Compatibility Modes A. VGA Analog 1 VGA Analog - PC Signal Modes VGA Resolution 640x480 640x480 640x480 640x480 720x400 720x400 SVGA 800x600 800x600 800x600 800x600 832x624 XGA 1024x768 1024x768 1024x768 1024x768 SXGA 1152x864 1152x864 1280x1024 V.Frequency [Hz] 60 72 75 85 70 85 56 60 72 75 85 75 60 70 75 85 70 75 60 H.Frequency [KHz] 31.50 37.90 37.50 43.30 31.50 37.90 35. 20 37.90 48.10 46.90 53.70 49. 725 48.40 56.50 60.00 68.70 63.

80 67.50 63.98 Note: "*" Only for P5260E/ P5260EP series 37 *1280x1024 *1280x1024 QuadVGA 1280x960 *1280x960 SXGA+ UXGA Power Mac G4 *1400x1050 *1600x1200 640x480 800x600 1024x768 1152x870 1280x960 1280x1024 PowerBook G4 640x480 640x480 800x600 1024x768 1152x870 1280x960 1280x1024 i Mac DV (G3) 1024x768 75 85 60 75 60 60 66.6(67) 60 60 75 75 60 60 66.6(67) 60 60 75 75 60 75 79.98 91.10 59.70 75.23 63.98 75. 00 34.93 37.90 48.40 68.68 75.00 63.98 31.35 34.93 37.90 48.

40 68.68 75.00 63.98 60.00 English 2 VGA Analog - Extended Wide timing Modes WXGA Resolution 1280x768 1280x768 *1280x768 V. Frequency [Hz] 60 75 85 H.Frequency [KHz] 48.36 57.60 68.630 Note: "*" Only for P5260E/ P5260EP series 38 English 1280x720 1280x800 1360x768 *1440x900 60 60 60 60 45. 00 49.702 47.72 55.935 B. DVI Digital 1 DVI - PC Signal Modes VGA Resolution 640x480 640x480 640x480 640x480 SVGA 800x600 800x600 800x600 800x600 832x624 XGA 1024x768 1024x768 1024x768 1024x768 SVGA 1152x864 1152x864 V.Frequency [Hz] 60 72 75 85 56 60 72 75 85 75 60 70 75 85 70 75 H.Frequency [KHz] 31.50 37.90 37.50 43.

30 35.20 37.90 48.10 46.90 53.70 49.725 48.40 56.50 60.00 68. 70 63.80 67.50 Note: "*" Only for P5260E/ P5260EP series 39 1152x864 1280x1024 *1280x1024 *1280x1024 QuadVGA 1280x960 *1280x960 SVGA+ UXGA Power Mac G4 *1400x1050 *1600x1200 640x480 800x600 1024x768 1152x870 1280x960 1280x1024 PowerBook G4 640x480 640x480 800x600 1024x768 1152x870 1280x960 1280x1024 i Mac DV (G3) 1024x768 85 60 72 75 85 60 75 60 60 66.6(67) 60 60 75 75 60 60 66.6(67) 60 60 75 75 60 75 75 77. 10 63.98 76.97 79.98 91.10 59. 70 75.23 63.98 75.00 34.93 37.90 48.40 68.68 75.00 63.98 31.

35 34.93 37.90 48.40 68.68 75.00 63.98 60.00 English 2 DVI - Extended Wide timing Modes WXGA Resolution 1280x768 V.Frequency [Hz] 60 H.Frequency [KHz] 48. 36 Note: "*" Only for P5260E/ P5260EP series 40 English 1280x768 *1280x768 1280x720 1280x800 1360x768 1440x900 75 85 60 60 60 57.60 68.630 45.00 49.702 47.

72 55.935 3 DVI - Video Signal Modes 480i (NTSC) 480p (NTSC) 576i (PAL) 576p (PAL) 720p (NTSC) 720p (PAL) 1080i (NTSC) 1080i (PAL) 1080p (NTSC) 1080p (PAL) Resolution 720x480(1440x480) 720x480 720x576(1440x576) 720x576 1280x720 1280x720 1920x1080 1920x1080 *1920x1080 V.Frequency [Hz] 59.94(29.97) 59. 94 50(25) 50 60 50 60(30) 50(25) 60 50 H.Frequency [KHz] 27.00 31.47 27.00 31.25 45.00 37.50 28.13 33.75 67.

50 56.25 Note: "*" Only for P5260E/ P5260EP series 41 FCC Notice This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. @@@@Increase the separation between the device and receiver. Connect the device into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/television technician for help. Notice: Shielded cables All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations. Notice: Peripheral devices Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment.

[You're reading an excerpt. Click here to read official ACER P5260E](#)



[user guide](#)

<http://yourpdfguides.com/dref/309191>

Operation with non-certified peripherals is likely to result in interference to radio and TV reception. Caution Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this device. Operation conditions This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Notice: Canadian users This Class B digital apparatus complies with Canadian ICES-003. English Regulations and Safety Notices English 42 English Remarque à l'intention des utilisateurs canadiens Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Canada -- Low-power license-exempt radio communication devices (RSS-210) a Common information Operation is subject to the following two conditions: 1.

This device may not cause interference, and 2. This device must accept any interference, including interference that may cause undesired operation of the device. Operation in 2.4 GHz band To prevent radio interference to the licensed service, this device is intended to be operated indoors and installation outdoors is subject to licensing. b Declaration of Conformity for EU countries Acer hereby declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

(Please visit <http://global.acer.com/support/certificate.htm> for complete documents.) Compliant with Russian regulatory certification Radio device regulatory notice Note: Below regulatory information is for models with wireless LAN and/or Bluetooth only. General This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules). Below information is for products with such devices. 43 R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard: · Article 3.1(a) Health and Safety · · EN60950-1:2001 EN50371:2002 EN301 489-1 V1.

4.1:2002 EN301 489-17 V1.2.1:2002 EN300 328 V1.5.1:2004 Article 3.1(b) EMC · · · Article 3.2 Spectrum Usages · List of applicable countries EU member states as of May 2004 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, United Kingdom Estonia, Latvia, Lithuania, Poland, Hungary, Czech Republic, Slovak Republic, Slovenia, Cyprus and Malta. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use.

For further information, please contact a local office in the country of use. English European Union (EU) English 44 English Acer America Corporation 333 West San Carlos St., San Jose CA 95110, U. S. A.

Tel : 254-298-4000 Fax : 254-298-4147 www.acer.com Federal Communications Commission Declaration of Conformity This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The following local Manufacturer / Importer is responsible for this declaration: Product: Model Number: Machine Type: Name of Responsible Party: Address of Responsible Party: DLP Projector PNX0709/PSV0710 P5260E, P5260EP/P1165E, P1165EP Acer America Corporation 333 West San Carlos St.

San Jose, CA 95110 U. S. A. Acer Representative 254-298-4000 254-298-4147 Contact Person: Phone No.: Fax No.: 45 Declaration of Conformity We, Acer Computer (Shanghai) Limited 3F, No. 168 Xizang medium road, Huangpu District, Shanghai, China Contact Person: Mr. Easy Lai Tel: 886-2-8691-3089

Fax: 886-2-8691-3120 E-mail: easy_lai@acer.com.tw Hereby declare that: Product: Trade Name: Model Number: SKU Number: DLP Projector Acer PNX0709/ PSV0710 P5260E, P5260EP/P1165E, P1165EP Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

EMC Directive 89/336/EEC, amended by 92/31/EEC and 93/68/EEC as attested by conformity with the following harmonized standards: -. EN55022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B -. EN55024:1998 + A1:2001 + A2:2003 -. EN61000-3-2:2000, Class D -. EN61000-3-3:1995 + A1:2001 Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standard: -. EN60950-1:2001 RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment English English .



[You're reading an excerpt. Click here to read official ACER P5260E user guide](http://yourpdfguides.com/dref/309191)
<http://yourpdfguides.com/dref/309191>