

Maintenance Schedule (Normal Conditions)

Service at the indicated distance or time -- whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120	
	km x 1,000	24	48	72	96	120	144	168	192	
	months	12	24	36	48	60	72	84	96	
Replace engine oil	Replace every 7,500 miles (12,000 km) or 12 months									
Replace engine oil filter	•	•	•	•	•	•	•	•	•	
Check engine oil and coolant	Check oil and coolant at each fuel stop									
Replace air cleaner element		•		•		•		•		
Inspect valve clearance		Adjust only if noisy							•	
Replace spark plugs	For 4-cylinder models		•		•		•		•	
	For V6 models							•		
Replace timing belt, balancer belt ¹ , and inspect water pump								•		
Inspect and adjust drive belts		•			•		•		•	
Inspect idle speed								•		
Replace engine coolant				•		•		•		
Replace transmission fluid							•			
Inspect front and rear brakes	•	•	•	•	•	•	•	•	•	
Replace brake fluid				•			•			
Check parking brake adjustment	•	•	•	•	•	•	•	•	•	
Replace air conditioning filter		•			•		•		•	
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)									
Visually inspect the following items:										
Tie rod ends, steering gear box, and boots										
Suspension components, driveshaft boots										
Brake hoses and lines (including ABS)	•	•	•	•	•	•	•	•	•	
All fluid levels and condition of fluids										
Cooling system hoses and connections										
[†] Exhaust system, [‡] fuel lines and connections										

* 1: Balancer belt applies to 4-cylinder models only.

: See information on maintenance and emissions warranty, last column, page 197.

Follow the Normal Conditions Maintenance Schedule if the severe driving conditions specified in the Severe Conditions Maintenance Schedule do not apply.

NOTE: If you only *OCCASIONALLY* drive under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule.

Maintenance Schedule for Normal Conditions (listed by distance/time)

Service at the indicated distance or time, whichever comes first. Do the items in **A, B, C** as required for each distance/time interval. Follow this schedule if the severe driving conditions described in the Severe Conditions Schedule on the next page do not apply.

Canadian owners: Follow the schedule for Severe Conditions.

7,500 mi/12,000 km/-	Do items in A.
15,000 mi/24,000 km/1 yr	Do items in A, B.
22,500 mi/36,000 km/-	Do items in A.
30,000 mi/48,000 km/2 yrs	Do items in A, B, C.
37,500 mi/60,000 km/-	Do items in A.
45,000 mi/72,000 km/3 yrs	<input type="checkbox"/> Replace coolant. <input type="checkbox"/> Replace brake fluid. Do items in A, B.
52,500 mi/84,000 km/-	Do items in A.
60,000 mi/96,000 km/4 yrs	Do items in A, B, C.
67,500 mi/108,000 km/-	Do items in A.
75,000 mi/120,000 km/5 yrs	<input type="checkbox"/> Replace coolant. Do items in A, B.
82,500 mi/132,000 km/-	Do items in A.
90,000 mi/144,000 km/6 yrs	<input type="checkbox"/> Replace brake fluid. <input type="checkbox"/> Replace transmission fluid. Do items in A, B, C.
97,500 mi/156,000 km/-	Do items in A.
105,000 mi/168,000 km/7 yrs	<input type="checkbox"/> ¹ Replace timing belt* ¹ , balancer belt* ² , inspect water pump* ¹ . <input type="checkbox"/> Replace coolant. <input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Check idle speed. <input type="checkbox"/> Replace spark plugs (V6 models). Do items in A, B.
112,500 mi/180,000 km/-	Do items in A.
120,000 mi/192,000 km/8 yrs	Do items in A, B, C.

- | | |
|----------|---|
| A | <input type="checkbox"/> Replace engine oil.
<input type="checkbox"/> Rotate tires (follow pattern on page 244).
<input type="checkbox"/> Adjust valves if noisy. |
| B | <input type="checkbox"/> Replace engine oil filter.
<input type="checkbox"/> Inspect front and rear brakes.
<input type="checkbox"/> Check parking brake adjustment.
<input type="checkbox"/> Inspect tie rod ends, steering gear box and boots.
<input type="checkbox"/> Inspect suspension components.
<input type="checkbox"/> Inspect driveshaft boots.
<input type="checkbox"/> Inspect brake hoses and lines (including ABS).
<input type="checkbox"/> Check all fluid levels, condition of fluids, and check for leaks.
<input type="checkbox"/> Inspect cooling system hoses and connections.
<input type="checkbox"/> ² Inspect exhaust system.
<input type="checkbox"/> ² Inspect fuel lines and connections. |
| C | <input type="checkbox"/> Replace air cleaner element.
<input type="checkbox"/> Replace spark plugs (4-cylinder models).
<input type="checkbox"/> Inspect and adjust drive belts.
<input type="checkbox"/> Replace air conditioning filter. |

* : See information on maintenance and emissions warranty, last column, page 197.

*1 : See Timing Belt on page 240 to determine need for replacement.

*2 : Balancer belt applies to 4-cylinder models only.

Maintenance Schedule (Severe Conditions)

Service at the indicated distance or time whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120
	km x 1,000	24	48	72	96	120	144	168	192
	months	12	24	36	48	60	72	84	96
Replace engine oil and oil filter	Replace every 3,750 miles (6,000 km) or 6 months								
Check engine oil and coolant	Check oil and coolant at each fuel stop								
Clean (○) or replace (●) air cleaner element Use normal schedule except in dusty conditions	○	●	○	●	○	●	○	●	●
Inspect valve clearance	Adjust only if noisy							●	●
Replace spark plugs For 4-cylinder models For V6 models		●		●		●		●	●
*Replace timing belt ¹ , balancer belt ¹ , and inspect water pump								●	
Inspect and adjust drive belts		●		●		●		●	●
Inspect idle speed								●	●
Replace engine coolant			●		●		●	●	
Replace transmission fluid		●		●		●		●	●
Inspect front and rear brakes	Inspect every 7,500 miles (12,000 km) or 6 months								
Replace brake fluid			●		●		●		●
Check parking brake adjustment	●	●	●	●	●	●	●	●	●
Replace air conditioning filter ¹		●		●		●		●	●
Lubricate all hinges, locks and latches	●	●	●	●	●	●	●	●	●
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)								
Visually inspect the following items:									
Tie rod ends, steering gear box, and boots Suspension components, driveshaft boots	Every 7,500 miles (12,000 km) or 6 months								
Brake hoses and lines (including ABS) All fluid levels and conditions of fluids Cooling system hoses and connections ² Exhaust system, ³ fuel lines and connections Lights and controls, vehicle underbody	●	●	●	●	●	●	●	●	●

U.S. Owners

Follow the Severe Conditions Maintenance Schedule if you drive your vehicle *MAINLY* under one or more of the following conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot [over 90°F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a roof top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

For Canadian Owners

Follow the Maintenance Schedule for Severe Conditions.

- *1 : Balancer belt applies to 4-cylinder models only.
- *2: Refer to page 240 for replacement information under special driving conditions.
- *3: Refer to page 239 for replacement information under special driving conditions.