

⚠ WARNING

- Read and follow all instructions carefully.
- Disconnect and lock-out power before installation and maintenance. Working on or near energized equipment can result in severe injury or death.
- Do not operate equipment without guards in place. Exposed equipment can result in severe injury or death.

⚠ CAUTION

- Periodic inspections should be performed. Failure to perform proper maintenance can result in premature product failure and personal injury.

Detailed Single Point Kit Parts and Assembly Procedure

REF NO.	PART NO.	DESCRIPTION	QTY
1	710623	SPL-HP250-V	N/A
2	710733	SPL-3/8F X 1/8M ADP	1
3	710729	SPL-MTBKT	1
4	710737	SPL-WASHER	1
5	710735	SPL-1/8F X 1/8F SCKT	1
6	710739	SPL-PC8-PT 1/8F TUBE FIT	2
7	710738	SPL-SCREW	3
8	710727	SPL-5/16OD TUBE 3	3ft

ASSEMBLY PROCEDURE

1. Install mounting bracket (3) in the proper location using the screws (7) or bolts. It is good practice to mount the lubricator in close proximity to the bearing to keep feed lines as short as possible. (3' maximum.)
2. Install GOLDPLEX®-SPL (1) using adaptor (2), washer (4), and socket (5) on the mounting bracket (3). Be sure to position it correctly to allow easy mode adjustments.
3. Measure and cut tube (8) to the required length. Use the push-in, self-seal tube fitting connector (6) for leak-tight connections. Be sure tube (8) ends are cut perpendicular (free of burrs) and no damage is present to the outside surface.
4. Set Mode and make sure to use the waterproof cap.

Comments:

1. All parts should be assembled tightly with sealing tape.
2. SEALMASTER® brand housings may require 1/4-28NF (51942 Adaptor) or 1/4NPT (45120/315901 Adaptor). Use only approved SEALMASTER® brand adaptors.
3. Based on variability of installation, expect to have extra adaptors.
4. For additional part requirements, contact SEALMASTER Customer Service at (219) 465-2211. Use SEALMASTER approved parts.

