

Paramount

Jetson Mini Stove

Owner's Manual

Item number: ES-312

Model Number: FX3



Crystals may become loose in shipping. This will not affect the function of the heater.

READ & SAVE THESE INSTRUCTIONS

Carefully read and review before assembling, installing, operating or maintaining this product. Observe all safety instructions and information.

FAILURE TO FOLLOW WARNINGS & OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.



****IMPORTANT NOTICE****

Please contact :

customercare@jrhome.com

For customer service & warranty issues

QUICK REFERENCE GUIDE

- 1/ Prior to plugging your heater into an electrical outlet, verify that the house circuit breakers for the outlet are on.
- 2/ The heater may emit a slight smoke, harmless odor when first used. This odor is normal and it is caused by the initial heating of internal heater elements and will not occur again.
- 3/ If your heater does not emit heat, consult the operation section of this manual for further information.
- 4/ Use with a CSA or UL certified surge protector.



SA1965

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
NO USER-SERVICEABLE PARTS INSIDE
HIGH TEMPERATURE
KEEP ELECTRICAL CORDS



SA1965

**KEEP DRAPERY AND OTHER FURNISHINGS AT
LEAST 3 FEET (0.9m) FROM THE FRONT AND
SIDES OF THE HEATER.**

⚠ CAUTION: High temperature, risk of fire. Keep electrical cords, drapery, furnishings, and other combustibles at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

⚠ WARNING: Servicing should be done only while the heater is disconnected from the power supply circuit.

Contents

Important Safety Instructions.....	3
Specifications.....	5
Grounding Instructions.....	6
Operating Instruction.....	7
Cleaning	8
Warranty.	10

Important Safety Instructions



WARNING: Any other use not recommended or described in your Owner's Manual may cause fire, burns, electric shock and/or other serious injuries or death.

IMPORTANT INSTRUCTIONS

When using electric appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1/ Read all instructions before using this heater.
- 2/ This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- 3/ Extreme caution is necessary when this heater is used by or near children and whenever the heater is left operating and unattended.
- 4/ Always unplug heater when not in use.
- 5/ Do not operate this heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- 6/ Do not use outdoors.

Important Safety Instructions

- 7/ This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8/ Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- 9/ To disconnect heater, turn controls to off, then remove plug from outlet.
- 10/ Connect to properly grounded outlets only.
- 11/ Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12/ To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13/ A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14/ Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15/ Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.14 AWG minimum size and rated not less than 1875 watts.

SAVE THESE INSTRUCTIONS!

Specifications

Specifications:

◆ Model #: FX3

◆ Power Supply: 120V AC

◆ Frequency: 60Hz

◆ Heater Power: Max1500W

◆ Unit Dimensions: 12.60" W x 7.09" D x 14.80" H

◆ Carton Dimensions: 15.55" W x 1 004" D x 18.70" H

◆ Net Weight: 15.42 lbs / 7 kg

◆ Gross Weight: 17.62 lbs/ 8 kg


Grounding Instructions

This stove is for use on 120 Volts. The cord has a plug as shown in (A) of Figure 1 given below. An adapter as shown in (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

To disconnect heater, turn controls to off, then remove plug from outlet.

Figure 1

Grounding methods

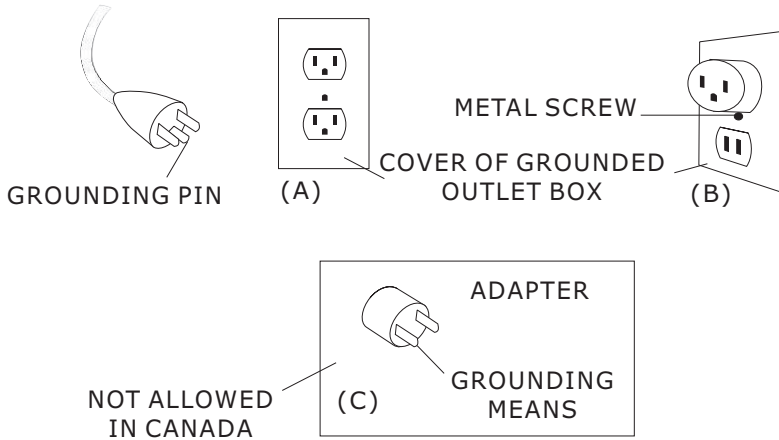

Operating Instruction


Once the unit has been properly connected to a grounded electrical outlet, it is ready to operate.

Note: ensure the house circuit breakers for the power supply are turned on.

Operation from the Control Panel

The controls are located on the back of the unit near the top. Figure 2 illustrates the location of the controls.

- 1/ Plug in your electric fireplace
- 2/ For the flame effect, turn on switch 1
- 3/ For low level of heat (750W) turn on switch 2
- 4/ For high level of heat (1500W) turn on switch 2 and 3

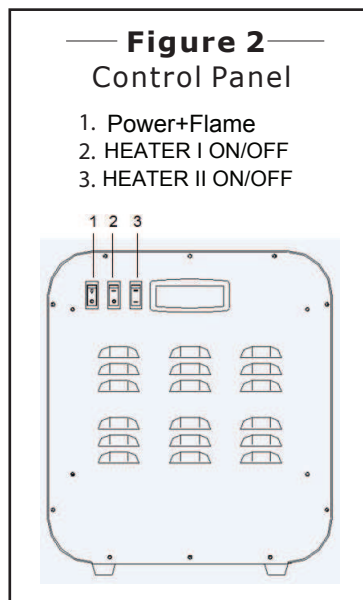

Cleaning front glass

⚠ WARNING: When cleaning the unit, the power supply to the unit should be disconnected and the unit must be cool.

Cleaning: Over time the front glass panel may become dirty or dusty. Dust can be removed by lightly wiping the glass surface with a clean, lint free cloth or paper towel. To remove fingerprints or other marks, use a damp cloth with a good quality household glass cleaner. The front glass should be completely dried with a clean, lint free cloth or paper towel.

Caution: Do not use abrasive cleaners on the glass panel. Do not spray liquids directly onto any surface of the unit.

Storage: When not in use, unplug the unit from the power supply and store in DRY, DUST FREE location.

Troubleshooting



WARNING: Turn off the fireplace completely and let it cool down before servicing. Only a qualified service person should service and repair this electric fireplace.

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Flame is not moving	Flame motor defective	Contact Customer Service to replace flame motor
Heater turns off and will not turn on	Heater has overheated and the safety device has caused thermal switch to disconnect	Reset switch by turning main power switch off and waiting 30 minutes for heater to cool down, then turning it back on.

IMPORTANT

For questions, concerns or problems with our product please
email our customer service department:
customercare@jrhome.com or call 1-800-561-5550.
DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

WARRANTY

This product is inspected, tested and carefully packaged to minimize the chance of damage during shipment. If a part (excluding light bulbs and fuses*) within one year from the date of purchase proves to be defective in material or fabrication under normal use, the part will be repaired or replaced. The Company's obligation under the warranty is to replace or repair defective parts at our discretion. Any expenses or damage resulting from the installation, removal or transportation of the product will be the responsibility of the owner and are not covered by this warranty. The owner assumes all other risks arising from the use or misuse of the product. The warranty will be void if the product damage or failure is deemed by the Company to be caused by accident, alteration, misuse, abuse, incorrect installation or removal, or connection to an incorrect power source by the owner. The Company neither assumes, nor authorizes any person or entity to assume for it any obligation or liability associated with its products. Light bulbs and fuses are not covered under this warranty. If you have any questions regarding the warranty or service, please call our toll free number: 1-800-561-5550.

Customer Service
JR Home Products
Unit 1 - 5628 Riverbend Drive, Burnaby BC, V3N 0C1
Toll Free: 1-800-561-5550
E-mail: customercare@jrhome.com

You MUST register your product to receive warranty service.
Registration can be completed online at www.jrhome.com or by mailing this form.

Warranty Registration Information Form / Formulaire d'enregistrement de la garantie

Name / Nom: _____

Street / Address: _____

City / Ville: _____

Province / Province: _____

Postal Code / Code postal: _____

Daytime Phone # / No téléphone jour: _____

Evening Phone # / No téléphone soir: _____

E-Mail Address / Courriel: _____

Product/Produit: _____

Place of Purchase / Lieu de l'achat: _____

Date of Purchase / Date de l'achat: _____

Model # / No de modèle: _____

Serial # / Numéro de série: _____

You MUST register your product to receive warranty service.

For warranty service, contact J&R Home Products at the address, phone numbers listed below within 30 days of purchase. Be sure to have your sales receipt and original date of purchase. All warranty service will be coordinated by J&R Home Products service center.

Vous DEVEZ enregistrer votre produit pour vous prévaloir de la garantie.

Afin de faire valoir la garantie, communiquez avec J&R Home Products à l'adresse et aux numéros indiqués ci-dessous dans les 30 jours suivant la date d'achat. Ayez en main votre reçu et la date d'achat. Toutes les demandes liées aux garanties seront traitées par le centre de service de J&R Home Products.