


DIRECT-FLO™ GOLD INSTRUCTION MANUAL 1 INTRODUCTION AND INSTALLATION




1.8 GATES: PART LIST


CT

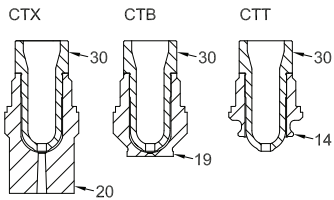


ST

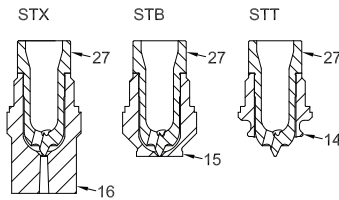


HT

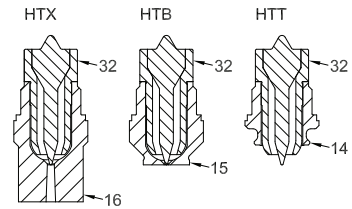


VT

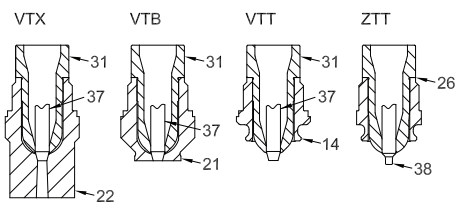


SR/CR

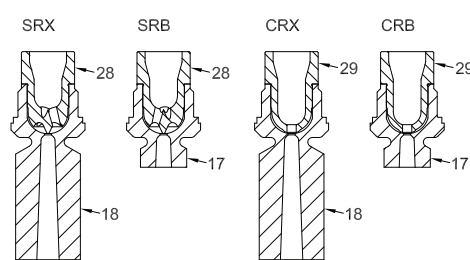


SL

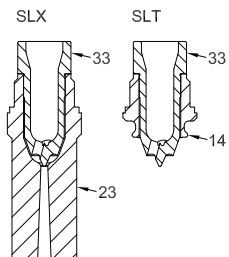


CL

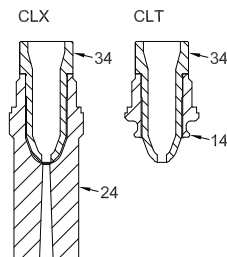

HL

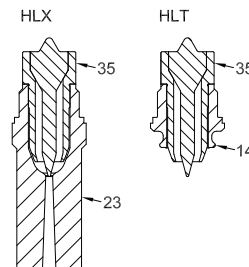

VL

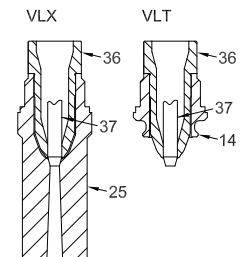

Pos. Description

14	TCap	Cap Topless	29	CR	Tip
15	STB/HTB	Cap Standard	30	CT	Tip
16	STX/HTX	Cap Extra Stock	31	VT	Tip
17	SRB/CRB	Cap Standard	32	HT	Tip
18	SRX/CRX	Cap Extra Stock	33	SL	Tip
19	CTB	Cap Standard	34	CL	Tip
20	CTX	Cap Extra Stock	35	HL	Tip
21	VTB	Cap Standard	36	VL	Tip
22	VTX	Cap Extra Stock	37	VP	Valve Pin
23	SLX/HLX	Cap Extra Stock	38	VPZ	Cylindrical Valve Pin
24	CLX	Cap Extra Stock			
25	VLX	Cap Extra Stock			
26	ZTT	Cap Topless/Tip Assembly			
27	ST	Tip			
28	SR	Tip			

ORDER

Please specify: Pos., Description,
Nozzle Order Number, System Number.