



Please refer to part numbers when reordering
For questions or comments about product:
Email: CustomerService@PacificCasual.com or Call toll-free: (888) 445 - 4533

Made in / Hecho en CHINA for Kmart Corporation, Hoffman Estates, IL 60179
SHOP kmart.com

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com

OWNER'S MANUAL

GARDEN POP UP GAZEBO

KSN: 04003265-8

UPC code: 843045011545

Date of purchase: ___/___/___

Owner's Manual


Description: Garden Pop Up Gazebo

Style Number: 5JGZ0121901

Warning:

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**
This Tent is Made With Fabric That Meets CPAI-84 Specification For Flame Resistance. It is Not Fire Proof. The Fabric Will Burn If Left In Continuous Contact With Any Flame Source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- Always read and follow the instructions before use. Be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The gazebo is designed to provide shade only. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others.

Extra Reminder: This gazebo is for sun shade only, not water proof and not intended to use in the rain. The water will sit easily at the canopy fabric as indicated in below diagram and severely damage the gazebo. Please take a minute to take down the gazebo before rain!

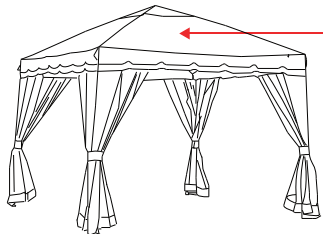


Danger: Water may accumulate here!

- **Always stake or weight down your gazebo at any time once set up.**
This gazebo is NOT a permanent structure. Do not permanently anchor unit to wood deck or concrete surface. Do not leave the gazebo unattended.
Take down and store it away after use.
To erect this gazebo requires a minimum of two persons.
Keep all children away from the assembly area.

Care and Maintenance

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

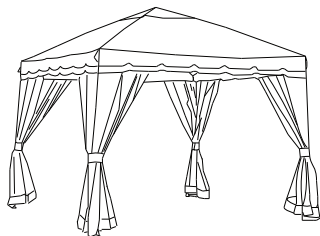


SET-UP INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

NOTE: First Time Attachment is Required


Canopy Top and frame are shipped unattached to avoid damage. A first time set up requires that top be attached on to the frame with velcro. Once canopy top is permanently attached, set up and take down are easily accomplished within seconds.

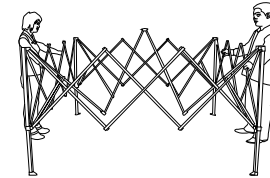


1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

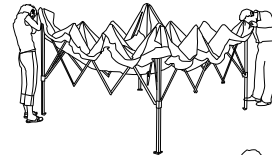


2. Unfold the fabric canopy pack, place the fabric top over the top frame. Use the velcro pads to secure each corner of the cover to the frame under the plastic caps

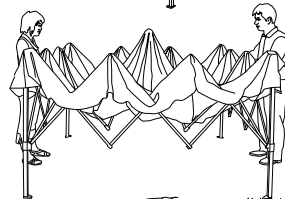


3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. **Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.**

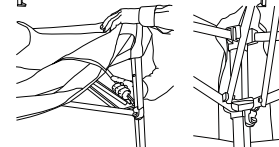

 
4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this operation at remaining corners.




5. To secure the fabric top to the frame, please wrap the velcro loop straps around roof tubes and cross beams.

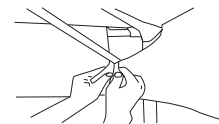


6. Pull down the Inside valances to cover the beam tubes. velcro the adjacent valances together for clean look.

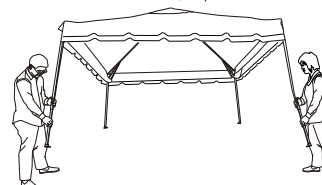

7. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the remaining legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the snap button at knuckle and slowly pull out the inner leg until the snap button pops in next position. Repeat on the other legs.

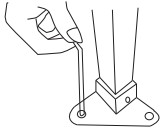


8. Stake down the gazebo by driving the 4 small anchors through the hole on each base foot. This will keep the leg from moving sideways in mild weather conditions.

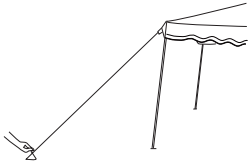


9. Measure out from the leg to a proper distance and secure the four big anchors to ground at 45 degree angle. Tie up one end of each guy rope to triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.

THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES. GUY ROPES AND ANCHORS ARE USED TO STABLE UNIT ONLY. DO NOT PERMANENTLY ANCHOR UNIT TO WOOD DECK OR CONCRETE SURFACE.

 
SCREEN & CORNER CURTAIN ASSEMBLY



 1. Unpack the screen and corner curtain combo kit, locate the zipper end of the screen panel, position it in the middle of two legs. Place the combo out around the frame.



 2. Lift the inside valance, match the combo up to frame. Attach the combo panels to cross tubes by velcro straps.



3. Tuck the upper corner of screen up into the corner of outside valance. Secure to the upper corner frame with velcro straps.




4. Further secure combo to legs with velcro straps.



5. You may zip the screen all around to keep insects out. Or leave one side unzipped as entrance. By adjusting the attachment location of combo panels at cross beams, you may hold back the combo panels with tiebacks for drapery look.

SUGGESTED SCREEN USAGES

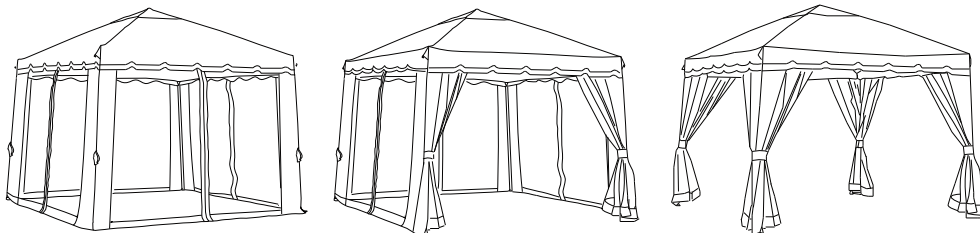


TAKE-DOWN INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN




1. Please reverse the screen assembly procedures to remove the screen. **Warning:** to keep the crotchets on velcro from catching your screen, please press firmly together the male and female strips of velcro and form the loop right after undo the velcro from tubes.

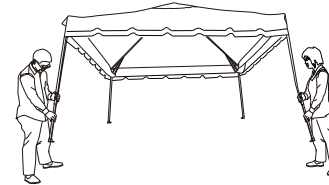


2. With the partner, lift two adjacent outer legs slightly, depress snap button and telescope inner legs up into outer legs. Undo the velcro straps of the fabric top from around the roof tubes and cross beams. **Failure to do so may result in the tear of fabric during take-down.**

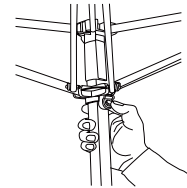

3. **CRITICAL STEP TO AVOID FRAME DAMAGE!** Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit.

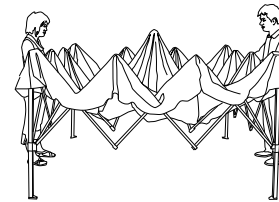





4. With partner on the opposite side, grasp the upper portion of outer legs and slightly lift up. Shake the frame slightly and step towards partner until the canopy is 3/4 closed. **Please do not push too hard!**

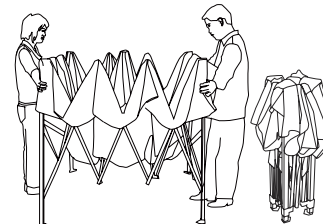

5. Grasp the adjacent outer legs and push the unit together until fully closed. **Be careful not to pinch your fingers!** Make sure the fabric canopy is completely dry and then returns your folded pop up gazebo to the carry bag for storage.

If you have any questions or comments about this product, please contact us at CustomerService@PacificCasual.com or Customer Service Line: (888) 445 - 4533

REPLACEMENT PARTS FOR CUSTOMER SERVICE

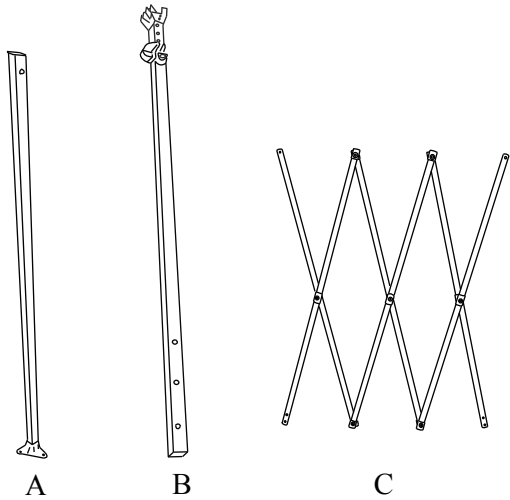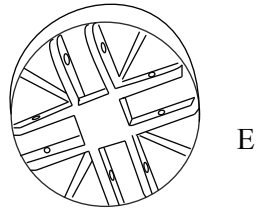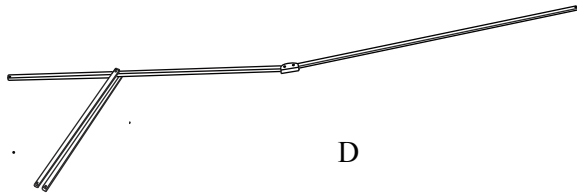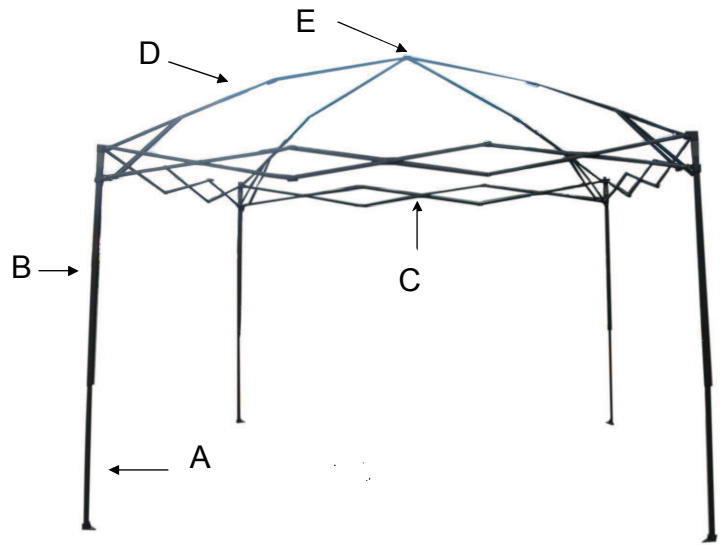

Ref #	Part Name
A	Inner Leg
B	Outer Leg
C	Cross Beam
D	Corner Rib
E	Roof Hub