



**ZIP MDB
INSTALLATION AND
QUICK SETUP PROGRAMMING GUIDE**




Release 1.3 - October 2007

[INSTALLING YOUR ZIP MDB UNIT \(code 959883 or 959884\)](#)


Important Note: ALWAYS power off your machine before installing Zip or connecting the coin mech or note loader.

1). Locate the Zip power harness included with two MDB plugs on one side and two plugs on the other end. Plug the multi color 4-wire and red wire power harness into the Zip CPU.

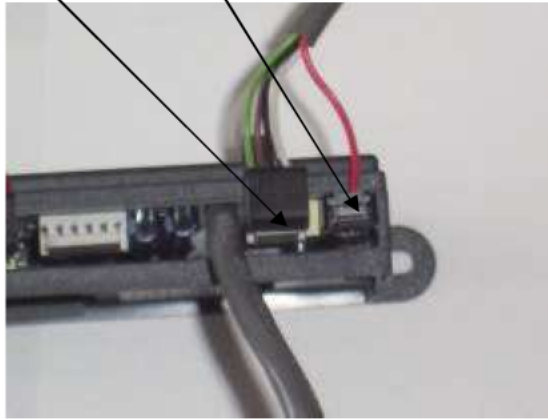


2). Mount the reader onto the front of the machine. A 1 3/8" and two small holes for the mounting studs will need to be drilled to mount the reader (If are using the key/card reader, use supplied template to cut opening). Position the reader with room to spare away from any electronics, harnesses or note loader.

3). Plug the reader harness into the Zip CPU.

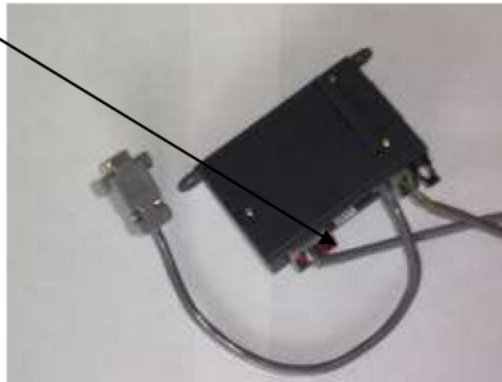

4). Locate the machines MDB harness and disconnect the coin mech/note loader harness from the machines MDB harness.

5). Plug coin mech/note loader “Y” harness to Zip CPU harness. Then plug the Zip MDB plug into the machine MDB harness.

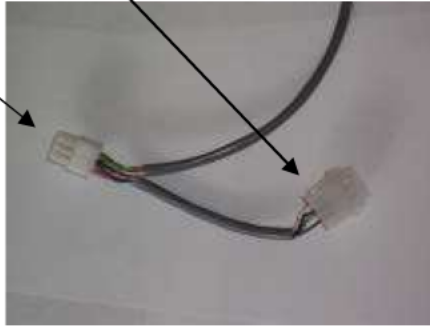

6). Your Zip hardware is installed and ready to program.

Configuring Crane National Vendors Machines:

- 1). Enter into the National “Machine Configuration” and turn “Card Reader” to MDB Card.
- 2). Go to “Revalue” and turn setting to “On” if you want to revalue keys in the machine.
- 3). If machine has “Sure Vend” turn “Failed Vend” to cash. This allows the failed vend credit to get written back to the key/card.


Follow the Zip “MDB Quick Setup Guide” to program your Zip unit. If are using advanced features refer to the Zip Owner’s Manual.

Important Note: When programming is complete, make sure you shut the machine off then back on before using it.


[INSTALLING YOUR ZIP MDB UNIT \(code 959883 or 959884\) WITH THE MDB PLUS MODULE \(code 959886\)](#)

Important Note: ALWAYS power off your machine before installing Zip or connecting the coin mech or note loader.

- 1). Install the RAM expansion (code 958934) on the special plinth, located on the Zip CPU module, following the instructions provided with the article.
- 2). Mount the Zip CPU module and the MDB Plus module together. Once connected together, they will look like the photo below.
- 3). Locate the Zip power harness included with two MDB plugs on one side and two plugs on the other end. Plug the multi color 4-wire into the Zip CPU. DO NOT plug in the red wire.

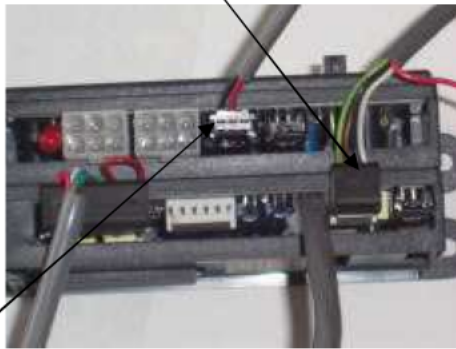


- 4). Plug the power harness that came with the MDB Plus module into the Plus module.
- 5). Plug the reader harness into the Zip CPU

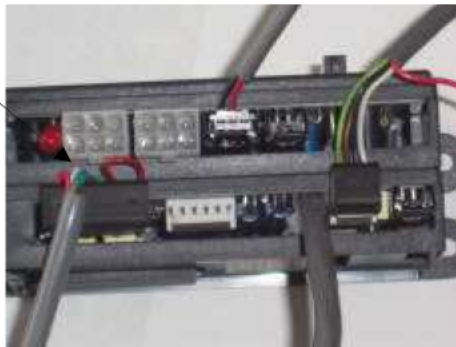


- 6). Locate the machine MDB harness and disconnect the coin mech/note loader harness from the machine MDB harness. Remove the "Y" harness that connects the coin mech and the note loader together. You will not be using this harness.

7). Plug the harness from the MDB Plus module to the Zip CPU harness. Then plug the Zip MDB plug into the machines MDB harness.

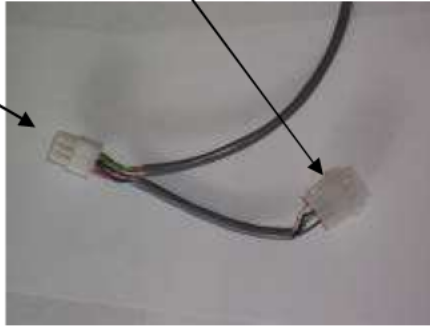

8). Plug your coin mech and note loader into the MDB Plus module. Either plug can be used; they are universal and can be reversed.

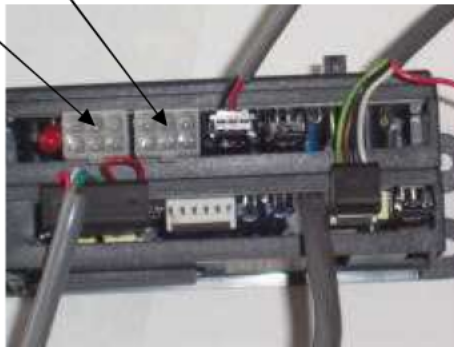

9). Your Zip hardware is installed and ready to program.

Follow the Zip “MDB Quick Setup Guide” to program your Zip unit. If using advanced features, refer to the Zip User Manual.


Important Note: When programming is complete, make sure you shut the machine off then back on before using it.

ZIP “MDB QUICK SETUP” PROGRAMMING GUIDE

While there are many features of the Zip, most applications only need a few changes to the Zip programming to get your new system up and running. By following these quick and easy steps you can have your system running in a few short minutes. Using the programmer is quite easy.

Important Note: *The programmer must always be connected and disconnected with the machine turned on.*

There are three buttons on the programmer you use to navigate through the menus:

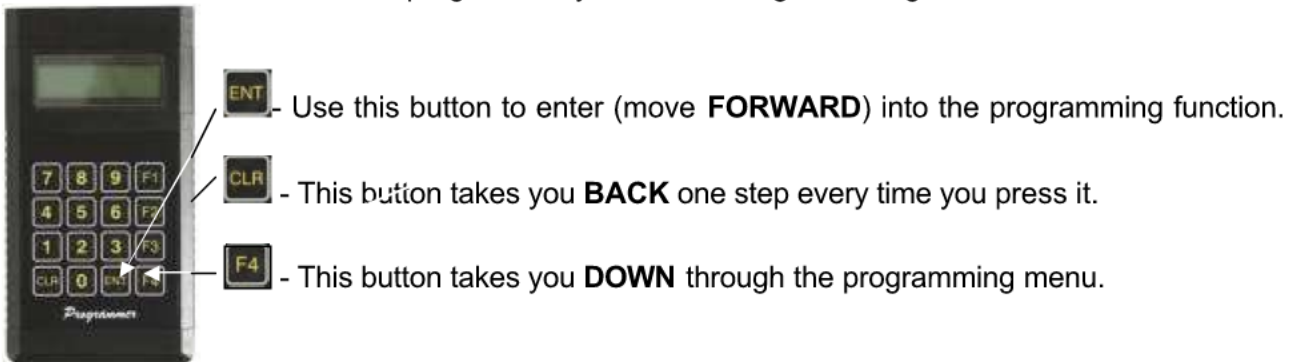

When you first plug the programmer in you will see a screen that shows the Zip software version installed in the module for a few seconds, then it displays “Programming” on the screen. This is always your Starting position. *Whenever you make a change by pressing ENT the system will ask you to confirm your choice. Pressing ENT a second time confirms your choice. If you decide not to make the change you can press CLR to discard your change.*

In the directions below whenever you see a button within a box **ENT** simply press that button on the programmer.

If you are installing the RAM (code 958934) into the Zip module or removing the RAM (code 958934) from the Zip module or have updated the Zip software, you must initialize the system and collect data using the Maxi Key or other devices.

If you have not installed/removed the ram, or not just completed a software update, these steps are not necessary. Start at Step 1 if you installed/removed Ram or updated the system software. If you are not using the Ram, or did not just update the software, skip to step 10.

Important Note: *With the Initialization, all parameters of the ZIP are initialized to the default values; However, language, customer code, department code, user groups, machine code, reader code and coin mech code will remain programmed as before.*

If these codes are “out of range” (when you update an old software or for other reasons) these codes are initalised to the default values: language = italian, customer code = 00001, department code = 001, user groups = 01, machine code = ZIP001, reader code = 000000 and coin mech code = 000000.

The operator code is always initalized to the default value (00000001), therefore, do not forget to program this code as before.

- 1). **ENT** then press **F4** until you see the “Other Parameters” screen.
- 2). **ENT** then **F4** to “Initialization”.
- 3). **ENT** once to enter, and **ENT** again to confirm. If you are not using Z252T5, but you are using a previous software versions, the system defaults to Italian language. The next steps will walk you through setting the system to English UK. If you are using Z252T5, skip to step 7.

- 4). **CLR** several times to get back to the menu that shows “Programming”.
- 5). **F4** to “Language”
- 6). **ENT** then **F4** to “English UK”. **ENT ENT** to enter and confirm.
- 7). **F4** to “Ram Setup”.
- 8). **ENT ENT** Set the date and time for your area.
- 9). **CLR** all the way back to where the display shows the Zip software version (Z252T5) then displays “Programming”

If you have not installed the RAM, this is where you begin programming your Zip system.

- 10). **ENT** to enter programming.
- 11). At Sale Prices **ENT** **Note:** *The next changes do **not** change prices in the machine, but allow the machine to take up to the amount entered in coins for cash sales. **If you skip these steps, your machine may stop taking pennies once it has reached £0.50.***
- 12). **ENT** to “Cash”
- 13). **F4** to Price Line 10
- 14). **ENT** Change price from default of 50 to 300 (£3.00) **ENT ENT** to enter and confirm. (**Note:** Set this amount to at least £3.00. If selling items higher than £3, set this amount to £1 above highest cost item).
- 15). **CLR** to Cash
- 16). **F4** to Key **ENT**
- 17). **F4** to Price Line 10
- 18). **ENT** Change price from default of 50 to 300 (£3.00) **ENT ENT** to enter and confirm. (**Note:** Set this amount to at least £3.00. If selling items higher than £3, set this amount to £1 above highest cost item).
- 19). **CLR** to Sale Prices

If you are using different key prices for the same item (key discount levels) or you want to collect sales info by price line, go to step 20. If not, then skip to step 32.

- 20). **ENT** to “Cash”.
- 21). **ENT** to “Price Line 1”. **ENT** and set the price for Price Line 1. **Note: display shows values without decimal point. (£1.00 reads on the display as 100).** **ENT ENT** to enter and confirm.
- 22). **F4** to “Price Line 2”. Continue as above for each price line.
- 23). **CLR** back to “Cash”, then **F4** to “Key”.

- 24). **ENT** to “Price Line 1”. **ENT** and set the price for Price Line 1. **Note: display shows values without decimal point. (£1.00 reads on the display as 100).**) **ENT ENT** to enter and confirm.
- 25). **F4** to “Price Line 2”. Continue as above for each price line.
- 26). **CLR** back to “Key”, then **F4** to “Discount Level 1”.
- 27). **ENT ENT** and then **F4** to turn the discount level 1 “On”. **ENT ENT** to enter and confirm.
- 28). **F4** to “Price Line 1”. **ENT** and set the price for Price Line 1. **Note: display shows values without decimal point. (£1.00 reads on the display as 100).**) **ENT ENT** to enter and confirm.
- 29). **F4** to “Price Line 2”. Continue as above for each price line.
- 30). **CLR** back to “Discount Level 1”.
- 31). **F4** to “Discount Level 2”. Continue as above for each discount level.

Important Note: Do not forget to program the keys with the discount levels using the PC Interface! If the keys are not programmed with the discount levels, the reader will NOT accept the keys.

If you are using the MDB Plus module (code 959886), go to step 32. If not, then skip to step 48.

- 32). **CLR** then **F4** to “Coins” (**F4** to “Coins” if you skipped step 20). Here you will tell the system what coins you accept, and how many tubes the coin mech has.
- 33). **ENT** to “Validator” **ENT** then **F4** to “Recharge and Sale”. **ENT ENT** to enter and confirm.
- 34). **F4** to “Validator Type”. **ENT** then **F4** to “Coin Mech MDB”. **ENT ENT** to enter and confirm.
- 35). **F4** to “Coins Enabled”. Next you set how many tubes the mech has. Coins 1, 2 and 3 for a three tubes mech, 1, 2, 3, & 4 for a four tubes and 1 through 5 for a five tubes. (**Tip:** If you are currently using a 3 tube mech but may replace it with a 4 or 5 tube mech in the future, you can turn all 5 tubes on now so that you will not have to reprogram the Zip system if you exchange the mech)
- 36). **ENT** then **ENT** to “Coin 1”. **F4** to turn it “On” then **ENT ENT** to enter and confirm. **F4** to “Coin 2” and continue this process for however many tubes you have. Once all your tubes are turned on **CLR** once back to “Coins Enabled”.
- 37). **F4** to “Escrow Lever”. **ENT** and then **F4** to turn this “On”. **ENT ENT** to enter and confirm.
- 38). **F4** to “Maximum Change”. **ENT** and set this amount to the highest denomination banknote you take. 500 for a £5 banknote to 2000 if you take £20 banknote. **ENT ENT** to enter and confirm.
- 39). **CLR** back to “Coins”, then **F4** to “Banknotes”
- 40). **ENT** at “Note Loader”. **ENT** then **F4** to “Recharge and Sale”. **ENT ENT** to enter and confirm.
- 41). **F4** to “Note Loader Type”. **ENT** then **F4** to “MDB”. **ENT ENT** to enter and confirm.
- 42). **F4** to “Banknotes Enabled”. **ENT** to set how many different banknotes your note loader accepts. Banknote 1 is for £1, 5 is for £5, etc.

- 43). **ENT** at "Banknote 1". **ENT** then **F4** to turn on. **ENT ENT** to enter and confirm.
- 44). **F4** to "Banknote 2". Continue as above for each banknote you accept.
- 45). **CLR** and **F4** to "Security Level". This section is for the note loader's security level of accepting banknotes. In most locations you will want this level set to "Low", but this is your choice. Your note loader will accept more banknotes in the "Low" setting.
- 46). Once you are at "Security Level" **ENT** at "Banknote 1". **ENT** then **F4** to turn this to "Low". **ENT ENT** to enter and confirm. **F4** to "Banknote 2" and continue as above for each banknote you accept.
- 47). **CLR** to "Banknotes".

You have now completed the MDB Plus module settings that control the coin mech and note loader. You will now proceed to the Zip module setup.

- 48). **F4** to "Machines".
- 49). **ENT** to "System Type". **ENT** and **F4** to "MDB New". **DO NOT use "MDB"; you must select "MDB New"**. **ENT ENT** to enter and confirm.
- 50). **F4** to "Vend Type". **ENT** then **F4** to "Single Vend" or "Multi Vend" . **ENT ENT** to enter and confirm.
- 51). **F4** to "Country Code". **ENT** and type in 0044 for UK. **ENT ENT** to enter and confirm.
- 52). **CLR** to "Machines" and **F4** to "Codes".

Important Note: These codes must match the codes you entered in the PC Interface and used to program your keys! If these codes do not match your keys, the reader will NOT accept the keys.

- 53). **ENT** to "Department Code". (OPTIONAL) Here you can enter a 3 digit code (**Max 255**). **ENT** Enter your code. **ENT ENT** to enter and confirm. **Optional but if set, this code must match your keys!**
- 54). **ENT** then **F4** to "Customer Code". (OPTIONAL) Here you can enter a 5 digit code (**Max 65535**) for this location. **ENT** Enter your code. **ENT ENT** to enter and confirm. **Optional but if set, this code must match your keys!**
- 55). **F4** to "Operator Code". **You MUST enter your companies 8 digit code here.** **ENT** Enter your code. **ENT ENT** to enter and confirm.
- 56). **F4** to "Machine Code". (OPTIONAL) Here you can enter a 6 digit code for each machine to identify this machine in your reports. (Normally an asset number or part of the serial number is used here) **ENT** Enter your first digit **F4** to second character enter second digit and continue until your 6 digit code is entered. **ENT ENT** to enter and confirm.
- 57). **CLR** and **F4** to "Other Parameters".
- 58). **ENT** to "Max Charge Credit". **ENT** and type in the maximum amount of credit your users can store on their key. **Note: display shows values without decimal point. (£100.00 reads on the display as 10000).** **ENT ENT** to enter and confirm.

- 59). **F4** to “Maximum Credit”. **ENT** and type in the same amount entered above. **ENT ENT** to enter and confirm. **Note: display shows values without decimal point. (£100.00 reads on the display as 10000).**
- 60). **F4** to “Failed Vend Ref”. If your machine has a guaranteed delivery system, you will want this turned “On”. **ENT** and then **F4** to “On”. **ENT ENT** to enter and confirm.
- 61). **F4** to “Audit mode”. **ENT** then **ENT** then **F4** to Maxi Key if you want the historical data and the coin mech data in your reports. **ENT ENT** to enter and confirm. **CLR** once to Audit Mode.
- 62). **F4** to “Maxi Box”. If you want the payment system to continue recording transactions even after 4.000 have been stored, turn this to “On” by pressing **ENT** and **F4** to “On”. **ENT ENT** to enter and confirm.
- 63). **F4** to “Charge Key”. If using the Red Charge Key, turn this to “On” by pressing **ENT** and **F4** to “On”. **ENT ENT** to enter and confirm.
- 64). **F4** to “Free Sales Key”. If using a sale key as a “Free Vend” key turn this on by pressing **ENT** then **F4** to “On” and **ENT ENT** to enter and confirm.
- 65). **F4** to “High Security”. This feature prevents a key user from inserting, removing and reinserting their key right immediately in order to “try” to confuse the machine. Turning High Security to the ON position means that after a key is removed the customer has to wait 2 or 3 seconds before the next key will be registered in the machine. **It is recommended that this be set to “On”**. To turn on, **ENT** then **F4** to “On”. **ENT ENT** to enter and confirm.
- 66). **CLR** button several times to exit completely out of the programming. **Always** press the **CLR** button until you see the display that shows the Zip software version.

The programmer should now be disconnected, and the machine turned off, then back on.

Congratulations. Your Zip system is now programmed and ready to go!!