 




# Owners Manual



for demonstration video see [www.oztrail.com.au](http://www.oztrail.com.au)

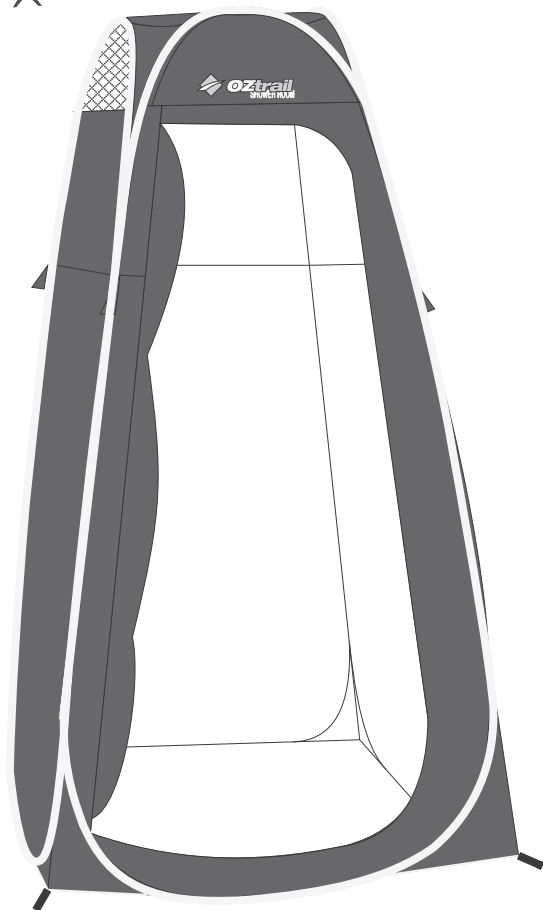

## ENSUITE PRIVACY DOME

[www.oztrail.com.au](http://www.oztrail.com.au)

DTMENSPU-B

## Product Code ~ DTMENSPU-B

**Thank you for purchasing a quality OZtrail product.  
Please keep this Owners Manual in a safe and dry place, it  
contains important and helpful information.**

 
### **IMPORTANT**

We recommend that you set up this product before you leave for your trip. Check that all parts are present and that you familiarise yourself with the assembly and disassembly of the product. If you have any questions, your OZtrail dealer will be happy to help you.

### **The following parts are included for Product Code - DTMENSPU-B**

#### **Part Description**

<input checked="" type="checkbox"/>	1 x Ensuite
<input checked="" type="checkbox"/>	8 x pegs
<input checked="" type="checkbox"/>	4 x guy ropes
<input checked="" type="checkbox"/>	1 x Storage Bag

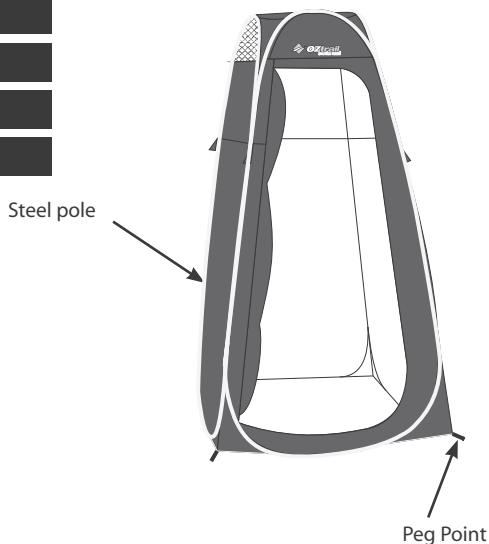

**PLEASE NOTE - Due to our continual product development, specifications and features of the product may vary from details within this Owners Manual**  
**WARNING: The centre shower hose hook in the centre of the roof has a weight limit of 2.5kg. It is designed to direct the shower rose only. The water bladder should be supported from outside the Ensuite.**



## Assembly Instructions

**Do not force the sprung steel frame, follow instructions carefully**

### ***Step 1 Choosing the Site***

 
Select a sheltered camp site protected from the wind that will not allow water to pond under the tent floor. Clear a level area of all stones, twigs, etc.

### ***Step 2 Standing the tent up***

Remove pegs from carry bag. Remove the tent from the carry bag and carefully release elastic strap, gently allow the tent to unfold and open fully. All four walls should be apart and all inside corners open to 90 degrees.

### ***Step 3 Peg down the tent***

Position the tent facing the desired direction. Peg the four corners of the tent to the ground by inserting the pegs through the loops around the base of the tent at an angle of 45 degrees. Firm but not tight.

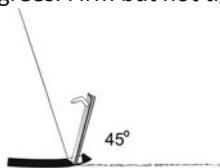

### ***Step 4 Install guy ropes***

Use all the guy ropes attached to the tent. Make a loop (about 30 – 50cm long) with the slider on the end of the rope and peg out as far as possible from the tent. Ensure all peg down points are utilised and all guy ropes are attached firmly and remain firm.





## Disassembly Instructions

**While the unit is standing up.**

### ***Step 1***

Release guy ropes and remove pegs with a claw hammer or peg puller. Do not remove pegs from the ground by pulling on tent base as this may cause damage to the tent. Now push any corner in towards the opposite corner to reduce four walls into two double panels

### ***Step 2***

Fold the two double panels together to form one flat level structure and lay it on the ground.

### ***Step 3***

While standing with your feet at the wide base, with your hands about 20cm up each side of the unit, lift the base to your lap. Lift your hands gradually so the unit slumps and curves about half way down between the base and top. Bring your hands together in front of you so that each side touches. You should notice that coils are already forming in the frame

### ***Step 4***

While still holding the frame pass your left hand under your right hand to tuck one coil section inside the other. Your arms will cross during this step.

### ***Step 5***

 
Place the unit on the ground and even up the size of the coils so the unit can fit into the carry bag.

### ***Step 6***

Slide the Ensuite into the carry bag for storage. Also place pegs into carry bag.

**WARNING:** At no stage is it necessary to apply any excessive force to achieve any of the above steps. The steel frame is sprung loaded and if the correct action is applied the beach dome will pack up with little or no force required. Excessive force will result in damage to the frame and this is not covered by warranty.

## Disassembly Instructions

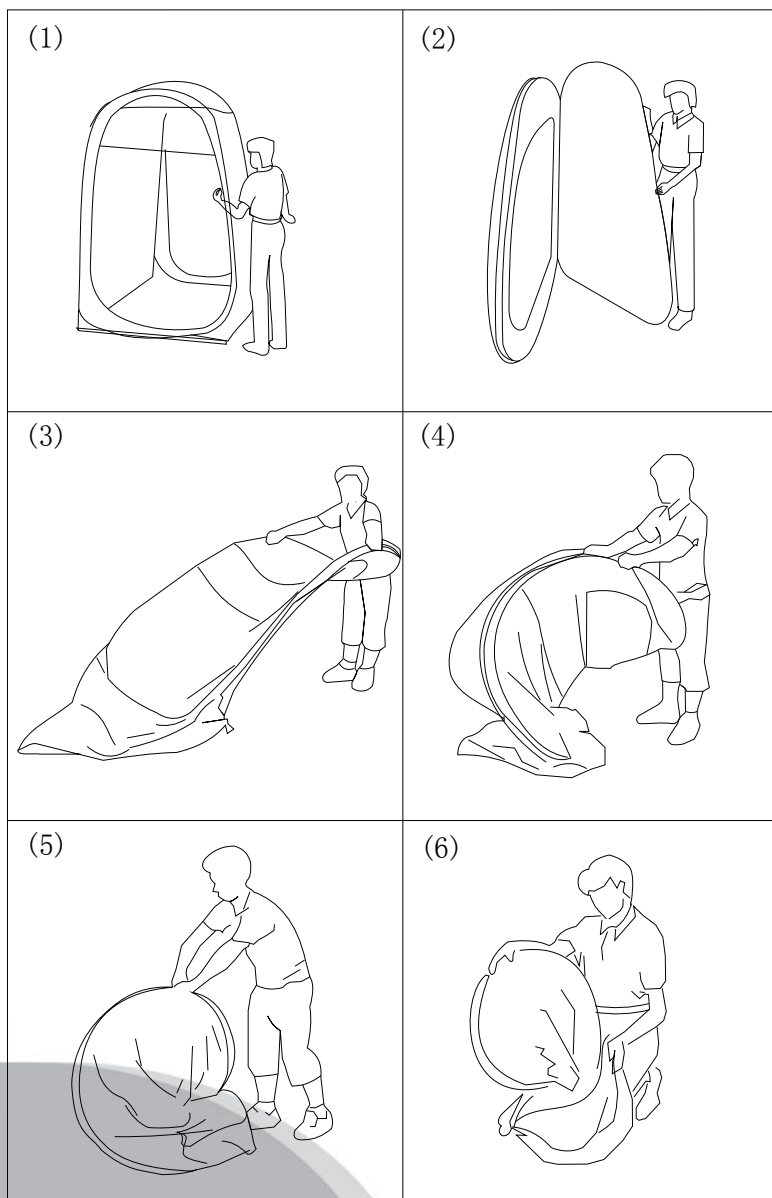



## Warranty

OZtrail warrants this product against defects for a period of one year from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase. You may also contact OZtrail Leisure Products, by phone: 07 3279 1800, or in writing: PO Box 1, Sumner Park DC, 4074, QLD, by email: [warranty@oztrail.com.au](mailto:warranty@oztrail.com.au). The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see [www.oztrail.com.au/warranty](http://www.oztrail.com.au/warranty)

**Important** – OZtrail advises to read your owner's manual fully and assemble your tent before going camping to ensure all parts are present and to become familiar with the assembly of your tent.

**Please Note** – Accessories shown may be for display purposes only and not included with the product. Due to our policy of continual product development, specifications and features of this product may vary from what is stated.

**Important:** This tent is to be assembled once before going camping to ensure that all parts are present and to become familiar with the assembly of the tent.

Your product is valuable and should be insured against loss or damage. During strong winds and storms collapse the tent flat onto the ground and seek refuge. Damage caused by storms and strong winds is not covered by warranty.

**EXTREME CAUTION - Gas, fumes or lack of oxygen within the tent/shelter could result in unconsciousness, brain damage and even death**



## Important Safety And Care Information

### PLEASE READ BEFORE SETTING UP YOUR TENT/SHELTER

#### CAMP SAFE - SAFETY HABITS

The fabric may burn if left in continuous contact with a flame from any source. Also, the application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

#### To prevent injury caused by gas poisoning or suffocation -

- Do not use fuel burning, oxygen consuming devices inside the tent. This includes candles, gas lanterns, kerosene lamps, stoves, cooking and heating appliances
- Do not use gas appliances of any kind inside the tent/shelter

#### To prevent injury caused by fire -

- Do not pitch the tent/shelter near a camp fire or any other flame source
- Do not use candles, matches or any other flame source in or near the tent (this includes stoves, cooking equipment, lighting and heating appliances)
- Only use recommended water repellent compounds on the tent/shelter fly
- Do not spray tent fabrics with insecticides

#### To prevent injury caused by electricity -

- Always exercise care when using electricity and electric lighting in and near tents/shelters. Only use 12 volt lighting.

#### To prevent injury caused by your camping environment -



- Do not pitch your tent/shelter on an area that could get flooded



- Do not pitch your tent/shelter near cliffs in case of collapse or rock fall



- Do not leave your tent/shelter erected in strong winds - collapse the tent onto the ground and seek refuge in your vehicle



- Do not pitch your tent/shelter under trees with dead branches or under trees known to drop branches



## Prolonging The Life Of Your Tent/Shelter

- Temporary use only. Although our fabrics are treated for extra UV resistance, continuous exposure to sun light will break the fabric down. Fading of colour is an early warning sign. OZtrail products are not designed as permanent dwellings or structures.
- During rain always lower awnings to avoid water ponding.
- Never store a wet and/or soiled tent/shelter; as mildew and corrosion can form within a few days. This condition is not covered by the warranty. Always allow the tent to dry completely before packing and stowing. If mildew occurs, use a soft bristle brush or sponge with mild detergent to clean it off. After beach use or wet weather treat all zips, poles and pegs with silicon spray
- The elastic shock cord within the poles is provided for easy assembly of the poles. The shock cord is not required for any structural reason. The poles and tent perform perfectly well without the shock cord. Age, over stretching and mishandling may cause failure. Shock cord is not covered by warranty. It's easy to replace, see following instructions.
- Sometimes the zipper coil bursts open or does not close. This could be due to wear or metal fatigue. The problem can be easily fixed, see instructions that follow.
- Always carry a roll of heavy duty tape for simple repairs to small rips, cuts and ash burns. This not only blocks the hole, it will prevent further tearing. Heavy Duty tape is also helpful for emergency pole repairs and many other uses around the camp site.
- When removing pegs, do not use the webbing or corner of the tent as your handle. Either use another peg, a peg remover or the claw of a hammer hooked under the peg to remove them.

### IMPORTANT - CONDITIONING YOUR NEW TENT

Once you get your new tent home, it is important to condition the tent. Simply pitch your tent and wet it down with your garden hose. Pay particular attention to the seams - the thread swells when wet and blocks the needle holes. The needle holes also shrink around the thread. The fabric also benefits from this because the fibre swells into the weave and the waterproof treatment settles within the fabric. Let the tent dry completely before doing it a second time. Always pack your tent away dry.



## Understanding Waterproofness

### What is not covered by warranty!

---

**OZtrail tents use waterproof and water repellent fabrics. However, with the addition of seams, zips and other desirable features a recreational tent will not be as waterproof as a car, house or other solid structures. The following are common examples of how water can enter a tent: -**

**Condensation** - When warm moist air meets cooler air, condensation occurs. The tent/shelter fly forms an impermeable layer between the inside and outside conditions. The moisture inside the tent/shelter condenses on the fabric. Sometimes in cold conditions it appears that the fabric is leaking when in fact the cause is condensation. Condensation can be reduced if the tent/shelter is well ventilated.

**Zips** - All care is taken in the design to cover zips with rain flaps. At times wind driven rain could force water under the rain flaps and through the zips. To minimise this, make sure all doors and windows are closed with the rain flaps covering the zips.

**Floor** - If the ground is very wet or water pools under the floor, downward pressure of standing or kneeling on the floor could force water through the floor fabric. To prevent this, do not pitch the tent over hollows and make sure water drains away from the tent.

**Structural Integrity** - A perfectly pitched tent on perfectly flat ground is structurally strong and most waterproof. During prolonged periods of rain and wind it may be necessary to tighten guy lines and reset the tent pegs and attend to drainage around the tent. Sagging and incorrect pitching weakens the tent structure and could allow water to pool on the fly placing undue forces on the tent causing leaking and breakages.

# Zips

## Reducing the risk of jamming fabric in the zip ~

- When using the zip, hold the pull-tab between your thumb and forefinger with your thumb facing you.
- As you are closing the zip clear the way in front and under the zip slider using the back of your hand, and cup the zip slider underneath with your remaining 3 fingers.

Use this action for opening or closing. Keep the fabric clear of the zip slider - zip and unzip slowly.

 
 
## What to do if the zipper gets caught ~

- Pull the fabric bit by bit out of the slider. Do not try and pull all the fabric in one go. Do not force the slider or the fabric.

## If the slider does not close the zipper properly ~

- With use, the jaws of the zip slider can open ever so slightly. When this occurs the slider does not compress the zip teeth or coil together tightly enough and the zip bursts open or does not close.
- Undo the zip and with the slider at the end of the zip lightly crimp the jaws of the slider together. Try top to bottom axis first and then side to side axis.

## Crimping A Zip-Slider

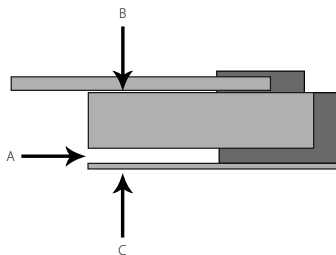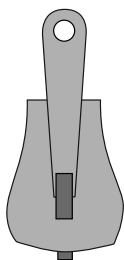


The most common reason why zips burst open is that the zip slider does not close the coil tightly enough. Wear and tear may cause the gap marked A to open up.

By simply ‘crimping’ the slider together at points B & C with a pair of pliers, this solves the problem most of the time. Crimping in other planes is worth a try if B & C does not work. This is to be done when the zip slider is still attached to the zip in the open position.



## Notes



For other OZtrail products to choose from, see our website or  [facebook.com/OZtrailAustralia](https://facebook.com/OZtrailAustralia).



**Designed & Imported by:**  
OZtrail Leisure Products  
45 Limestone Street, Darra QLD 4076  
[www.oztrail.com.au](http://www.oztrail.com.au)  
Made in China