

ONIDA G9

User Manual

NOTE: User Manual is just to guide the user about the functionality of the phone. This does not deem to be a certificate of technology. Some functions may vary due to modifications or Up-gradations of software or due to printing mistakes

Table of Contents

1. Security	4
2. Getting Started.....	8
2.1. Batteries.....	8
2.1.1. Installing and uninstalling the battery	8
2.1.2. Charging the battery	8
2.1.3. Using the battery	8
2.1.4. Battery level indicator	9
2.2. Connecting to the Network	9
2.2.1. SIM card	9
2.2.2. Installing and uninstalling the SIM card	9
2.2.3. Unlock the SIM card	9
2.2.4. Connecting to the network	10
2.3. Text Input Method	10
3. Phonebook	10
4. Messages.....	11
4.1. Write message	11
4.2. Inbox	11
4.3. Drafts.....	12
4.4. Outbox	12
4.5. Sent Messages	13
4.6. Broadcast Messages.....	Error! Bookmark not defined.
4.7. SMS settings	13
4.8. SMS schedule	14
5. History.....	14
5.1. History	14
6. Settings.....	14
6.1. Dual SIM settings	14
6.2. call setup	15
6.2.1. Advance settings.....	15
6.2. Phone settings.....	15
6.3. Network settings.....	15
6.4. Security settings	16

6.4.1.	SIM1 security.....	16
6.4.2.	Phone security	16
6.4.3.	Auto Keypad Lock	16
6.4.4.	Privacy protection	16
6.4.5.	Mobile tracker.....	17
6.5.	Bluetooth	17
6.6.	Restore factory settings.....	17
7.	Games	Error! Bookmark not defined.
8.	Multimedia	17
8.1.	Camera	17
8.2.	Photos.....	18
8.3.	Video recorder.....	18
8.4.	Video player	18
8.5.	Audio Player	19
8.6.	Sound Recorder	19
8.7.	FM radio	20
9.	Organizer.....	20
9.1.	Torch	20
9.2.	Calendar	20
9.3.	Alarm	22
9.4.	World clock	22
9.5.	Calculator	21
9.6.	Ebook Reader	21
10.	Services.....	21
11.	File Manager	21
12.	Appendix	22
12.1.	FAQ	22
12.2.	Error Message	22
12.3.	Care and maintenance.....	23

General Information

Thank you for selecting our Onida G9 mobile phone. This user guide will provide you with the general information and operation instructions.

The package includes a chargeable battery, a charger and other accessories. Please refer to the Accessory section for details.

Note:

Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set.
We reserved the rights to change the mechanisms of the phone without notice.
This user guide is subject to change without notice.

1. Security

Emergency call

In any country, you can dial 112 (or other emergency call number) for emergency help.

Note:

Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

For your safety

Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
Your phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call *#06# to look up your IMEI number. Copy this number and save it for future need.
To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data lost.
When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.

Keep the phone, battery or charger out of reach of children.

Notices for your phone use

Do not keep the phone near magnetic cards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.

Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.

Keep the phone dry, all kinds of liquid can erode the electronic circuit.

Keep the phone away from extreme temperatures.

Keep the phone away from hot places where the temperature may exceed 60°C, such as the dash board, windowsill, near fire or a lighted cigarette.

Do not paint the phone.

Do not drop the phone or violently crush or shake the phone.

Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.

Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.

The phone will become warm under normal use and while in battery charging.

Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.

The metal parts of the phone may irritate your skin depending on your health condition.

Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.

When the vibrate mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.

Notice for batteries use

Do not disassemble or modify your batteries, otherwise it can cause leakage, over heat, fire or explosion.

Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not dispose the battery as household waste.

Do not short the circuit of the battery with wires, needles or other metal objects, or store the batteries with necklace or other metal objects, otherwise it can cause leakage, over heat, fire or explosion.

There is a risk of blinding if the liquid of the batteries gets into your eyes. In case of this, do not rub your eyes, you should rinse your eyes well with fresh water and go to the hospital immediately.

If the leaked liquid of the battery touches the skin, it can burn the skin. Please wash your skin with fresh water and go to the hospital immediately.

Never put the battery in your mouth. The liquid of the battery can be toxic.

Stop using the battery when you find it became hotter, and change color and shape abnormally during use, charging or storing.

Keep the batteries dry.

Do not use or store batteries near fire, heater and other place with high temperature, otherwise it can result in leakage, over heat, fire or explosion. Store the battery in a cool and ventilated place without direct sun light.

Do not charge the battery for more than 24 hours.

The battery can be charged and discharged for hundreds of times but it will eventually wear out. The battery life is shortened with each charging.

When replacing the battery, use only the batteries approved by the phone manufacturer. Damage resulting from using un-authorized batteries will not be covered by warranty.

Traffic safety

Do not use your phone when driving a vehicle. Give full attention to driving and to the road. Provided there is an emergency, stop your vehicle in a safe place and then use your phone. Please obey all the local traffic laws and regulations.

Normally the electronic systems in the vehicle should not be affected by the RF (Radio Frequency) signals from your wireless phone. However if you suspect any damage is resulting from the RF of your phone, contact your car dealer. Stop using your phone in the car until a qualified technician clears the problem.

Turn off your phone when in the gas station or any place where using wireless equipment is prohibited. Do not place or transport your phone with inflammables or explosives, the internal sparkle may cause fire.

Airplane safety

Power off your phone before boarding, the use of a wireless phone in an airplane will be dangerous to the operation of the airplane and disrupt the wireless telephone network and maybe illegal. Failure to observe these instructions may lead to law suit or denial of GSM cellular network service to the offender.

Should there be an emergency situation, contact crew member.

Phone Registration

In order to register the details of the customer, the software embedded in the phone has the facility to send an sms automatically to MIRC Electronics Ltd upon insertion of the SIM card. It is in the interest of the user to register its details with the company for any future services, as may be needed. The user agrees to pay the SMS charges in respect of the automated SMS sent to the company upon insertion of the SIM card

Introduction

1 Phone Display



Key	Function
Dial Key	Dial and receive calls via SIM1 or SIM2 card. View call history of SIM1 or SIM2 in idle mode.
Call End Key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Go to main Menu.
Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
OK Key	Confirm a selection/Enter for shortcut Key.
Numeric key	Enter numbers, letters or characters. Select a submenu item with the corresponding number.
*	Press and hold to toggle between *, +, P and W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to activate or deactivate the Meeting mode in idle mode.
Navigation Key	Press to access four functions in idle mode

2. Getting Started

2.1. Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. Your battery will reach its optimal state after three cycles of charge and discharge.

2.1.1. Installing and uninstalling the battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.

To uninstall the battery, flip the battery out from the bottom of the battery.

2.1.2. Charging the battery

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished.

During charging, the phone and charger will feel warm to the touch. This is normal.

Warning:

The operating ambient temperature of the charger is 0°C-50°C. Do not use it when the temperature exceeds this limit.

Use only chargers approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.

2.1.3. Using the battery

The waiting time and calling time capacities specified by the phone manufacturer are obtained under the ideal operating environment. The actual values will vary with the network condition, operating environment and operation method.

Please comply with the local regulations of disposing the battery (such as recycling). Do not dispose it as household waste.

2.1.4. Battery level indicator

When the phone is on, the battery level indicator is located at the upper right corner of the screen.

2.2. Connecting to the Network

2.2.1. SIM card

Please insert available Subscriber Identity Module (SIM) card into your phone before using it. SIM card is supplied by your network carrier.

All the information related to network connection is recorded on the SIM card, so are the contact information such as names, phone numbers and SMS that you set to store on the SIM. You can take out the SIM card from the phone and insert it into another GSM phone to use it. Most new phones will recognize the SIM card automatically.

Do not touch the golden contacts of the SIM card and place it away from electricity and magnetism to avoid damage. You will not be able to use the phone if the SIM card is damaged.

Note:

Before inserting and taking out the SIM card, always make sure that the phone is switched off and disconnected from any external power source; otherwise both the phone and the SIM card may be damaged.

2.2.2. Installing and uninstalling the SIM card

The SIM card usually comes attached to a special card. The metal contacts of SIM card is easily damaged by scratching, so take it out carefully before assembling it into the phone.

Switch off the phone; remove the back cover, battery and other external power source. Fit the SIM card into the SIM card slot. Align the angled corner of the SIM card with the slot. Slide in the SIM card, make sure it is in place, install the battery, and restore the back cover.

Likewise, to remove the SIM card, switch off the phone, remove the battery and then take out the SIM card.

2.2.3. Unlock the SIM card

PIN code

Your Personal Identification Number (PIN) code protects the SIM card against unauthorized use. Your PIN code is usually supplied with the SIM card. If this security function is enabled, you need to enter the PIN code every time you turn on the phone. You can also disable this function.

To unlock the SIM card, press and hold the power button to turn on the phone. Enter the PIN code. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it.

PUK code

This code is required to change a locked PIN code. If the code is not supplied with the SIM card, contact your service provider. After ten consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card. You cannot edit PUK code. If it is lost, Please contact your service provider.

2.2.4. Connecting to the network

After the SIM card is unlocked, you phone will automatically search for the registered network or other local available network. Once connected, the name of the network carrier will appear on the top of the screen.

You phone is now in Standby mode, ready for making and receiving calls

2.3. Text Input Method

This phone provides various text input methods that allow you to use less key strokes to input and search for text:

ABC/abc input method

Hi input method

Numbers 123 input

3. Phonebook

You can save a phone number in the memories of SIM cards or phone.

Press **RSK Key** under the standby mode and then select Phonebook if you desire to enter in the function.

Select a contact in the contact list window and press **OK Key** to perform:

View: Display the current number.

Send SMS: Directly input the SMS and send it to the searched phone number.

Call: Call the current contact.

Edit: Edit the current contact.

Delete: Delete the current contact.

Copy: Copy the current contact.

Send vCard: Through the SMS, MMS, Bluetooth to send VCard.

Add to Blacklist: Will the current contact added to the blacklist list.

Mark several: Mark the contact, and then send SMS or delete marked.

Caller groups: In order to facilitate the address book managements, you can contact will be added to the different groups respectively. Can set for each group alone group the bell

Phonebook settings: You can manage the phonebook with this function.

Preferred storage: You can select preferred storage in SIM1, SIM2, phone or all.

Speed dial: You can assign the quick dial numbers (2-9) to the 8 frequently-used phone numbers.

Extra number: You can choose the Fixed、Barred dial and service numbers、SOS number。

Memory status: View the quantity of phone saved in the SIM cards or phone memories.

4. Messages

You can send and receive the SMS as well as use Cell Location Display with this function.

This chapter introduces the message services provided by the GSM network. Some services may not be supported by the local network.

4.1. Write message

Send to: Input number and then send SMS to the input number.

Input method: Change the input method.

Advanced: Insert pictures, melody, phone number and bookmark.

Insert Number: Insert the number of the contacts.

Insert Name: Insert the phone book name.

Save to Draft: Save the SMS in the Draft box.

Select [send to] to enter in the sending window after finishing the creation of the SMS. Select [Enter number] or [Add from phonebook] to search a phone number of the receiver and finally press **Left Soft Key**:

Send: Send the SMS to sender

Edit Recipient: Edit the recipient number.

Remove Recipient: Delete the selected recipient.

Remove All Recipients: Delete all recipients.

Save to Draft: Save the SMS in the Draft box.

Press **OK Key** to send the SMS.

4.2. Inbox

The Inbox lists the received SMS and MMS.

You can view the received SMS with this function. Select an entry of SMS and press <Option> under the inbox SMS list window to perform:

View: View the selected message.

Reply: Reply the SMS to the sender;

Call sender: Call the sender of the selected message.

Forward: Forward the SMS to other via SIM card 1/ 2;

Delete: Delete the selected entry of the message;

Delete all: Delete all messages

Save to phonebook: Will the sender saved to the phonebook.

Sort by: Sort the sender、subject、unread/read、message size.

Filter by: filter SIM1、SIM2、all messages.

Mark Several: Delete the marked messages at the same time.

Advanced: Press **OK Key** under this window to perform:

Copy to phone: current information copy to the phone.

Move to phone: current information to move to the phone.

4.3. Drafts

Saved messages and unsent message are saved here.

Press **OK Key** to enter SIM1 drafts. And press **Left Soft Key** under the Drafts list window to perform:

View: View the selected message.

Send: Send the selected message.

Edit: Edit the selected message.

Delete: Delete the selected entry of the message;

Delete All: Delete all messages

Sort by: Sort the recipient、subject、message size

Mark several: Mark several messages to delete at the same time.

Advanced: Press [OK] under this window to perform:

Copy to phone: current information copy to the phone.

Move to phone: current information to move to the phone.

4.4. Outbox

The out-going messages are listed here.

Your options include:

View: View the selected message.

Resend: Send the selected message.

Edit: Edit the selected message.

Delete: Delete the selected entry of the message;

Delete all: Delete all messages

Sort by: Sort the recipient、subject、message size

Mark several: Mark several messages to delete at the same time.

Advanced:

Copy to phone: current information copy to the phone.

Move to phone: current information to move to the phone.

4.5. Sent Messages

Sent messages are saved here. Your options include:

View: View the selected message.

Forward: Forward the SMS to other via SIM card 1/ 2;

Delete: Delete the selected entry of the message;

Delete all: Delete all messages

Sort by: Sort the recipient、subject、message size

Mark several: Mark several messages to delete at the same time.

Advanced:

Copy to phone: current information copy to the phone.

Move to phone: current information to move to the phone.

4.6. Cell Location Display

Look up the broadcast messages. Your options include:

Receive Mode: Turn on or turn off cell broadcasting.

Channels settings: You can add, edit channel and can delete the current channel and cancel the read.

Languages: set the cell broadcast language.

Read Messages: Save read cell broadcast information.

4.7. SMS settings

Select the Text message card (SIM1) SMS settings, enter the setup menu, you can do the following:

Memory status: View the quantity of MMS saved in the phone memories.

Save sent message: Select to keep sending SMS on/off.

Preferred storage: Select to save the MMS in phone or memory card.

4.8. SMS schedule

you can set the timing to send a text message.

5. Call History

With this function, you can view the information of Call History、Call settings、Funny Accent Switch、Funny Accent Settings.

Press **OK Key** and select Call Logs under the standby mode if you are desired to enter in this function.

5.1. Call history

In the call history, you can carry out the following operations: view the call history, edit the call history, save the call history to phonebook, add the call history to the blacklist, delete the call history, you can also view the call time and call cost.

Select any a log, Press **Left Soft Key** to enter the Option list:

View: View the detail of the current call.

Call: Call the current number.

Send SMS : Directly input the SMS and send it to the current number.

Save To Phonebook: save to phonebook.

Add To Blacklist: Add the number to black list and block the same number to call you.

Edit Before Call: Call to edit the number before the call record contacts.

Delete: Delete the current logs.

6. Settings

You can set up various functions for the phone with this function.

6.1. Dual SIM settings

You can set up two SIM cards with this function.

Flight mode: You can set up two SIM card flight mode.

6.2. call setup

Call waiting: The network will inform you for a newly incoming call during the call. Please contact with your network operator to launch or close the function because the function requires the network support.

Call divert: Divert an incoming call to a designated phone number under the presetting condition. This function can be launched or closed.

Call barring: Set up the right of calling and answering. This function requires the network support. You can launch or close the function.

Line switching: Switch the line between line 1 and line 2.

6.2.1. Advance settings

Blacklist: blacklist open the blacklist contact could not be called a native.

Auto redial: Set up whether the phone is tempted to redial when the call fails in connection.

Call time reminder: Select to release prompt tone during the call in each integral minute time.

Auto Call Record: Open automatically replay, dial-up connection failed to automatically replay.

Reject by SMS: Turn on or turn off this feature.

Answer mode: You can select Any key or Auto answer when headset mode.

6.3. Phone settings

You can customize your favorite phone functions based on your interest with this function.

Time and Date: You can set home city, set time and date, set format for your phone.

Language: Set the current system language.

Pref. input method: Select the default input method.

Display

Wallpaper: Select your favorite picture as the wallpaper of the standby window.

Screen Saver: Select waiting time and picture for the screen protection. You can open or close this function.

Show date and time: On or off display time.

Shortcuts: You can set the direction key designated menu.

Dedicated Key: You can set the direction key designated menu.

Misc. Settings

LCD Backlight: here are set LCD brightness and time.

6.4. Network settings

You can set up the phone network with this function.

SIM1/SIM2 network settings

Network selection: choice the modes of searching the phone network, including Auto and Manual modes.

6.5. Security setup

You can manage your phone safely with this function.

The phone lock password, SIM card password and PIN2 support 4-8digit numbers, do not support other characters. The original password of the phone when leaving the factory is 0000. The password and PIN2 and SIM card are provided by the network operator. When the PIN/PIN2 is input wrongly in successively three times, the SIM card will be locked.

The PUK /PUK2 are required to input if you want to unlock the SIM card. The PUK/PUK2 is provided by the network operator. If the PUK is input wrongly in successively 10 times, the SIM card will be locked and discarded permanently.

6.5.1. SIM1 security

PIN lock: open or close the PIN lock function. When PIN lock is launched, the PIN shall be input upon each power-on.

Change PIN: PIN lock must be enabled, Just can be change.

Change PIN2: input the correct PIN 2. Just can be change.

The SIM2 security setup is same to the SIM1 security setup.

6.5.2. Phone security

Phone lock

Open or close the phone lock function. When the phone lock is launched, the phone lock password shall be input upon each power-on.

NOTE: Default password "0000"

Change password

You can change the phone password.

6.5.3. Auto Keypad Lock

Set to lock the keypad.

6.5.4. Privacy protection

Input the correct password into the interface of Data security in first.

Setting: Set the modules of the privacy protection. These modules include Contacts, Messages, Call history, Image viewer, Video player, File manager, Keypad lock, etc.

If you select this modules for Data security, you must input the correct password when you want to view this modules .

Change password: Change the password of the Data security;

6.5.5. Mobile tracker

You can track your phone when the phone lost;

6.6. Bluetooth

Your options include:

Power: Open or close the Bluetooth

Visibility: Open or close the visibility.

My device: Show the device which is connected

Search audio device: Search for the audio device.

My name: Show off the name of Bluetooth.

Advanced: set up Audio path, Sharing permission and view the address of Bluetooth.

Audio path: You can select leave in phone or forward to Bluetooth headset.

Storage: You can select Storage phone or memory card.

My address: View Bluetooth address.

6.7. Restore factory settings

You can recover the phone into the initial setting with this function, Default password is 1122 .

7. Games

UFO : Game of UFO race.

Games settings

With the game setting menu, you can set the Background music, Sound effect, Vibration and Volume.
can check your mobile phone function description and after-sales address.

8. Multimedia

8.1. Camera

With this function, you can snap. Press **OK Key** to snap under the view-finding window.

Enter Camera Option, Your options include:

Switch to video recorder: Switch to video interface.

Photos: Enter in the album folder.

Camera Settings: Set up the camera.

Image Settings: Set up the photo parameters.

White Balance: Adjust the color balance of the photo.

Scene Mode: Set up the scene mode.

Restore Default: Recover all settings into the initial values.

8.2. Photos

You can view the photos snapped with the camera through this function.

Select a photo file and press < **Option** > under the photo list window

View: View the selected image.

Details: Show some information of image.

Browse Style: You can select list style or matrix style.

Send: Send the selected image to MMS or Bluetooth.

Use as: Send the selected image file to the wallpaper, to screen saver or to phonebook.

Rename: Change the name of the image.

Delete: Delete the selected image.

Storage: Select the photos storage.

8.3. Video recorder

In video recorder, your options include:

Switch to camera: Switch to the camera interface.

Camcorder Settings: Set up the video recorder.

Video Settings: Set up the video parameters.

8.4. Video player

You can play the video with this function. Select a video and press [OK] Key under the video list window and begin to play. You can use the following keys during the play.

Key	Function
Left key	Press to go backwards. Press and hold to continuously go backwards.
Right key	Press to go forwards. Press and hold to continuously go forwards.
OK Key	Press to play/pause the video.
Left soft key	Press to go to Options.

Right soft key	Press to stop the video and go back
UP key	Press to enter/exit full screen.
Down key	Press to pause the video.
* and # key	Press to volume down and up.

8.5. Audio Player

You can enjoy the music with this function. You can use the following keys during the play.

Key	Function
Left Key	Press to switch to a previous song with cursor. Press and hold: go backwards
Right Key	Press to switch to a next song with cursor. Press and hold: go forwards
UP Key	press to the change music playback modes.
Down Key	press to the change music broadcast order.

Press **Left Soft Key** to view Play list, Your options include:

Play: Play the currently-selected song.

Details: View the detailed information of the currently-selected song.

Refresh list: Refresh the list of current list

Settings: Set up the music player.

List auto gen.: set up to on/off the function.

Repeat: Set up to open/close the function. If you open the function, you can select repeat Once or repeat All.

Shuffle: Set up to open/close the function.

Background play: Set up to open/close the function.

8.6. Sound Recorder

You can take a recorder in this function.

After record, access Options:

New record: Select this option to record the sound.

Play: Play the selected sound.

Append: Continuously record after the previous record file and append it after the record file.

Rename: Rename the selected sound.

Delete: Delete the selected sound.

List: View the currently-selected sound files.

Settings: Entering this option you can set audio quality.

Use as: Set as SIM1/SIM2 user profiles.

Send: Send sound file to Bluetooth.

8.7. FM radio

You can choose to radYour options include:

Channel List: Play, edit or delete the saved channels.

Manual Input: Manually input the channel to search.

Auto Search: Automatically search the channel.

Settings: Set up to receive the FM broadcast at the backstage or receive the FM broadcast with the speaker as well as set up the record format and voice quality.

Record: Record the currently-hearing FM.

File List: List all recorded files.

9. Organizer

9.1. Torch

Turn on or turn off the torch here.

Long press Centre Navigation Key can able to Turn ON/ OFF Torch.

9.2. Calendar

The screen will highlight the date of today after displays the monthly calendar when you enter in the calendar function.

Press **Left Key** or **Right Key** to move by day.

Press **up Key** or **Down Key** to move by week.

Options will include

Jump to Date: jump to the date you wish for.

Go to today: return to the present day

Go to weekly view: set your week to be started from Monday or Sunday

9.3. Alarm

You can set up that the alarm clock will ring at a specific time with this function.

Setup of Alarm Clock

Select an alarm clock and enter into alarm clock setup window.

Set up the alarm clock with the following options:

- Set the alarm clock status as opened or closed.

- Set the alarm clock time.

- Set the repeat, once, Everyday, Days.

- Select the snooze time.

- Set the Alert type.

After setting please save the change.

9.4. World clock

You can view the current local time of various countries.

9.5. Calculator

You can conduct the basic arithmetic operations with this function.

- Input the first number.

- Press one of directional keys to select the arithmetic operation sign.

- Input the second number.

Press **OK Key** to view the calculation results.

9.6. STK

With this function, you can perform the network-based service.

10. USER PROFILES

Enter in the function; display the profile mode list including **General, Silent, Meeting, Outdoor, Earphone**

Select one mode and enter the option menu:

- Activate:** Activate the profile mode.

- Customize:** Customize the profile mode as following:

 - Alert Type:** Set the alert type such as Ring only, Vib only, Vib. And ring, Vib. Then ring.

 - Ring Type:** Set the ring type such as Repeat, Ascending, Beep once.

SIM1/2 Incoming Call: Set the ringtone for the SIM1/2 incoming call. You can also select ringtone from T card.

Ringtone Volume: Set the ringtone volume of the incoming call.

SIM1/2 message: Select the ringtone for the SIM1/2 message. You can also select the ringtone from T card.

Message Volume: Set the volume for message ringtone.

Keypad: Select the ringtone for keypad.

Keystone Volume: Set the volume for the keypad.

Power On: Select the ringtone for the power on.

Power Off: Select the ringtone for the power on.

System Alert: On /off the system alert.

Reset: Reset the setting to the default.

After plugging in the headset, ringtone will output from the headset as well as the phone, when there is incoming call or message.

11. File Manager

The File Manager lists the all the files stored in your memory card.

12. Appendix

12.1. FAQ

The phone cannot be turned on

When the battery is very low, the phone may not be turned on properly. Please charge the battery.

Cannot make certain calls

Check if Call Barring is set. If it is set, you may not be able to make calls or only certain calls are allowed.

My call is picked up by another phone

Check if call divert is set. If it is set, your incoming calls may be diverted to other numbers or devices.

12.2. Error Message

Please insert SIM card

Make sure you have inserted SIM card. If you have installed it but it cannot be detected, please try clean the golden contacts of the SIM card by using a dry cloth.

If it still is not working, please contact your network carrier.

No service

If you are in an area not covered by your network, or if a physical obstacle is present, such as in an enclosed area, the message “No service” will be displayed on your Standby screen and you will not be able to make or receive calls. You can try move closer to a window for better reception.

For emergency only

When you are outside your network but inside other network, you can only make emergency call.

No Valid SIM card

Your SIM card is locked or it has an error. Please insert the right SIM card or contact your service provider.

Enter PUK code

After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it. Contact your service provider. After seven consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card.

12.3. Care and maintenance

Thank you for choosing our phone. Should you encounter any problem with the phone, please contact our dealer or qualified service provider.

Your phone is a finely designed and crafted product. Please use it with care. The following instructions will help you comply with the terms of the warranty and enjoy this product for many years:

Keep the phone and all its parts and accessories out of the reach of children.

Keep the phone dry, all kinds of liquid will erode the electronic circuit.

Do not use or store the phone in a dusty place to avoid damaging the removable parts.

Keep the phone away from hot places, high temperature can shorten the life of electronic device, warp or melt certain plastic and damage batteries.

Do not attempt to open or disassemble the phone, non-expert handling may damage it.

Do not drop, crush or shake the phone to avoid damaging the internal circuit board.

Do not use harsh chemicals, cleaning solvents or strong detergent to clean the phone.

Do not paint the phone or the paint may obstruct the removable parts and affect operation.

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone. Do not hold the external antenna when the phone is in use. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

The above instructions apply to your phone, battery, charger and other accessories. If any of them does not work properly, please send it to a qualified service provider.

Specific Absorption Rate(SAR) certification information

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines and the guidelines issued by Department of Telecommunication (DoT). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit for mobile devices is 1.6 W/kg. Tests for SAR are conducted using standardIt is declared that the SAR Value of the operating position with the device transmitting at its highest certified power level in all tested frequency bands.

Mobile Handset is certified by ILAC and is in conformity with the SAR values of 1.6 W/kg as recommended in the guidelines issued by DOT

The highest SAR values under the ICNIRP guidelines for this device model are:

SAR for this model and conditions under which it was recorded

900 HEAD: 0.656W/kg	BODY: 0.631W/kg
1800 HEAD: 0.432W/Kg	BODY: 0.398W/kg

During use, the actual values for this device are usually well below the values stated above. This is because, for purpose of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power output of the device, the lower SAR value. If people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the body during use, or reduce the amount of time spent using the device.

6. Appendix :List of Accessories in Giftbox

One mobile phone
One battery
One charger
One headset
One data cable
One user manual

7. Service Center List

Maharashtra:

Mumbai-Andheri 32945199/26878136 / 8137/ 4879/ 26874891/ 9324102119

Mumbai-Chembur 32937984/25241984/ 9323786625 Mumbai-Borivali 9867643695/ 28697754 / 28697802 /9867643695 / 9323724415

Mumbai-Goregaon 9324721942 / 28764605 / 28791499/9892530953

Mumbai-Lalbaug 9869230643/ 24714300 / 64517177 / 9869230643

Thane 25470806 / 9322192400 / 25421948 / 9323724463

Kalyan3209470/ 2327060/ 9324451953

Vasai2334089 / 90/9323698399

Vashi27827503/27827583 / 9821716724

Vasai6451455/ 9967905543

Kalyan3212075/ 9323294772

Nagpur 3248461/65 / 9373599205

Nagpur – South 2222366 / 6460366/ 9372425958

Amravati 3297767/ 9326280099

Chandrapur277166 / 9372277166

Akola 6418348 / 9326450488

Pune32931959/ 2605 4770/ 40078356 / 9372497877
AhmedNagar2425877/ 9325606919
Pune NEW Wanawadi40052177 / 40090377 / 9371205077 Pune-Kothrud 25461876 / 9371205077
Solapur3294758 /2723711 / 9370454570
Pimpri / Chinchwad27485173/ 9890968052
Panaji - North Goa 222 2736 / 222 1099 / 222 8295/ 9325551233
Madgaon-South Goa3259391 / 9326797265
Kolhapur 2462325/ 9371225633
Sangli3298587 / 2322 242 / 9370820104
Ratnagiri321683
Satara284351 / 9370820104
Aurangabad 3252656 / 9372369399
Aurangabad 6992444 / 9922681232
Nasik 3200775/ 6524123 / 578524 9372422890
Jalgaon3206670 / 3204257/ 232368 / 9370730985
Nanded325025 / 321253 /9325084880
Karnataka:
Bangalore- Indiranagar 32928265/ 9341033739
Bangalore - Rajaji Nagar 23122672 / 23125245 9916908103 Bangalore – Jaynagar 26577409 / 26576274 / 9916908046 Bangalore Radial CRC 25438796
/ 25438795 9902732891 Mysore CRC 3206473 / 2463437 / 9341255959
Kolar 401445 / 9844405543
Mangalore 3255339 / 2411210 / 9341880107
Mangalore 2414924 / 2415445
Hassan 266606
Udupi 2532810/ 2532830
Shimoga 277391/ 226846
Hubli 3298808 / 2214814 / 2288712 / 9341680104
Gulbarga 324327 / 275816 / 9886628723
Raichur 231311 / 9886628723
Davangere 325765 / 233982 / 253585 / 9449629481
Bellary 277826 / 9449629481
Belgaum 3295249 / 2424095 / 2469139 / 9342306934
Bijapur 2255278 / 9342306934

Tamil Nadu:

Chennai 32961651 / 28330220 / 9381144102

Chennai – Adyar 24525067

Chennai - Tambaram 22413334

Chennai – Avadi 26558118

Chennai – Tondairpet 25913350

Chennai – Valasarawakam 24865500

Chennai – Kilkattalai 22475300

Pondicherry 3296177 / 2342467/ 2348856 / 2222368 / 9344444112

Cuddalore 324566 /236677 / 223105 /9345344108 /

Vellore 2235946/ 2235964/ 4203946 / 9894600218

Chennai – Radials 32973243 / 32973244 / 9381144118 Kanchipuram 67270964

Tiruvannamalai 250761 / 254167

Madurai 3259062 / 2533 033/ 6543001/ 6543002 / 9360044103 Tirunelveli 3291831/ 2331731/ 2331831/ 2331901/ 9367944111 Nagercoil 234362 / 234372 / 9381251696

Trichy 2775133 / 2770433 / 9345144120

Dindigul 2433747 / 9344678809

Thanjavur 271729 / 271297 9360318839

Madurai 2604340 / 2600529 / 9360044116

Karaikudi 227939/ 40 / 9360009802

Pududukotai 320441

Coimbatore 3258032/ 252 7314 / 3250431/ 243 3340 / 244 3482/ 93448 44117 / 93448 44104

Salem 3048090 /244 9525 / 244 3237 93444 44113

Erode CRC 222 7211 / 222 7201 / 93622 27201

Karur 259 295 / 234 295 / 9367155286

Pollachi 325756/ 231796

Tiruppur 223 4526 / 223 0407 93443 44110

Andhra Pradesh:

Hyderabad 32935964

Secunderabad 27840126 / 9885579039

Kukatpally 23161296 / 9885569764

Malakpet 24547649/ 9885578329

Kurnool 278510 / 9393840105

Tirupathi 2286867/ 6563377 /9391724389
Karimangar 2230947 / 9290077307
Nizamabad 550115 / 9347240104 /
Godavri Khani 932444204
Ameerpet 32495566 / 62615566/ 9246509614
Nellore 9393667793
Godavari Khani 243123 / 9849262806
Warrangal 2454951 / 9885850002
Mahabub Nagar 253475/ 9849412435
Ananthapur 227801/ 9346235756
Proddatur 248844 / 9849655619
Vijaywada 3299410 / 2438681 / 6536040 / 9397840107
Vizag 3296423 / 2598 463/ 6533825 / 9394240111
Rajahmundry 6663873 / 2443873 / 9393940112
Guntur 3252223 /2233006/ 9396402716
Vizianagaram 9246492177
Eluru 9246492177
Bhimavaram 9246492177
Ongole 9246492177
Tenali 9246492177
Khammam 9246492177
Kakinada 9290624383
Kerala:
Cochin 3259353/ 3988900 / 2357 536 / 2357 440 / 9388648410 Calicut 3942114 / 2740 858 / 2743 502 / 9349748417
Vadagara 2522502 / 9947033220
Malapuram 3298228/ 2730125 /9947033228
Kannur 3292681 /2766 581 / 2711733 / 9349748416
Payannur 325456/ 201/742/209/511/ 9446005231
Thalaserry 3205179/ 2322152 / 9446005225
Trivandrum 2465 426 / 2462 924 / 9349348418
Balarampuram 2409010 / 2409238 / 9947030083
Attingal 2629368/ 9947030088
Kottayam 3292651 / 2575 446 / 2575 336 / 9947031631 / 9349948420

Kattappana 273255 / 9947031643
Thodupuzha 220355 / 9947031644
Trichur 3296725 / 3249666/ 2337667 / 9349848419
Kollam 3963666 / 2765 721 / 2743 701/ 9387008421 Pathanamthitta 2231450 / 9349996332
Alleppy 3255001 / 2267065 / 9388899449
Perumbavur 2520099 / 2590099/ 9388405846
Aluva 6520208/ 2620208/ 9387171000
Palakkad 938883883
Mavelikara 3290222 / 9995154512
Tirur 9847425151
Irinjalakuda 3291515 / 2830796 9387301515
Gujarat:
Ahmedabad 32942148 / 26422176/ 26422174/ 26440505/ 26422175 / 30028232 / 9925236541 / 9998082070
Gandhinagar 32900501/ 23243747 / 9925236511
Bhavnagar 2522523 / 9925236555
Rajkot 3204919/ 2454783
Gandhidham 323070 / 9327314443
Mehsana 254573 / 9825477439
Jamnagar 9924047076
Baroda 3253267 / 2786041/42/43/45
Surat 3018652 / 2465633 / 34 / 9825979998
Surat 9824172114
Madhya Pradesh:
Indore 3249000/ 3241043 / 2530 146 / 679 / 126 / 9302473112 Gwalior 3240900/ 2428513 / 9300773115
Ujjain 3240900 / 2525921 / 9301508801
Ratlam 324490 / 230235 / 9329435055
Bhopal 3240900 / 2558192 / 9301373113
Jabalpur 3240900 / 2450621 / 9303373114
Rewa 256491 / 9893974910
Balaghat 247652 / 9425139552
Itarsi 235222 / 9981207108
Dewas 220005 / 9893064949
Sagar 329951/ 2392086 / 9329414144

Rajasthan:

Jaipur 3206300 / 3245484 / 5101951/ 5116601 / 5116602 / 5116603 /9314914110

Ajmer 3291084 / 2632548 / 9352214113

Kota 5100137 / 9314412303

Jodhpur 3253809/ 2440413 / 2622366 / 2633449 / 9314714116 Pali 320900 / 256370 / 9352916107

Udaipur 3297675 / 2411548 / 2417182 / 9314414112

Bikaner 3295324 / 2525425 / 2201958 / 9351658717

Ganganagar 2476195 / 9252524717/ 9784866246

Bhilwara 307054 / 9214966006/ 9829142360

Sikar 253645 / 9214177130

Alwar 5120630 / 9351372508

Punjab & Himachal Pradesh:

Ludhiana 9316404203 / 9317617216 / 98888904201

Chandigarh 2714614/ 2703248

Bhatinda 2254265/ 5012075

Patiala 3255432 / 2205603

Jalandhar 3245432 / 2225891 / 2235488

Amritsar 3245432 / 2530349

Hoshiarpur 245508

Pathankot 2254182

Kangra 9816944028 / 9218922881

Shimla 2655136 / 9816046016

Bhota 9817109838

Jammu & Kashmir:

Jammu 2562258 / 9906037727 / 9906026170 / 9906020854 Srinagar 2481083 / 9419006964 / 9906303093

Haryana: Karnal 3295237 / 3293794 2220525 / 2220725 / 2220825 / 9354717310 / 9355956700

Ambala 3296270 / 4006270 / 93158-59018

Rohtak 250335 / 9315430724

Faridabad 3297290 4050637

Gurgaon 3240134 /4202835 / 93135-95193 / 9313940390

Panipat 4006498 / 9315430718

Hisar 9896111603

Hisar 9896111603

Bhiwani 9812244146
Fatehabad 220668 / 9812114637
Sonipat 9815900579
Kurukshetra 652172 / 92541017528
Jind 9812175001
Delhi:
South Delhi 32449736/ 2694 48 - 26 / 34 / 43 / 24 / 42 / 8822 / 3843 / 46028228 / 9350852821 / 9350852822 / 9313572659/9350414121
East Delhi 65656240 / 41 / 9350595643/ 9350595658 / 9810841314
West Delhi 65656239 / 9313363012 / 9350852813
North Delhi 2745 5617 / 2663 / 9350593596 / 9350852822
Uttar Pradesh:
Lucknow 3252284/ 3225340/232 3306/ 232 3044/ 2335764/ 9336848973/ 336848974
Kanpur 3265005/ 3264550/2540581/9935769322
Faizabad 320808/ 241314 9415061089/ 9335029940/
Nirala 2786530 /4066249 / 9839173503
Kanpur / 9336337575 /9919237575 / 9415062345/ 9336866999 Kanpur 9415062345/ 9336866999
Lucknow 9335030333/ 9305461689
Jhansi 9415502608, 9936674704
Raibareilly 9335671666/9415082635
Varanasi 3298538/ 2224560 / 2227704 09336847755
Gorakhpur 3293222/2346126/9335029936
Allahabad 3296888/ 2260768/ 9336847754
Allahabad 2427080/ 9450542506
Mahmoorganj 2225135/9935758360
Ghaziabad 3263207/3223868/4104981/9313171608
Bareilly 3256600/ 2302688/ 9837554885
Meerut 3254424/ 2640296 /9385312016 / 9319604400/ 9319604400/ 9319604400/9319604400
Noida3229094/ 3228483/ 4267157/ 9313171607
Saharanpur 9760363770
MuzafferNagar897363001/ 9897363001
BulandShahar9358713434/ 9358713434
Bijnor9335348707/ 9335348707
Bareilly Moradabad 9319963000/ 9319963000

Agra 3256033 / 3202045/2523067/ 9336847763

Agra 205995/ 9336847761

Etah 309527/9358085588

Mathura 3298208/9319338400

Kasaganj 9319878333/ 9219986444

Uttaranchal:

Dehradun 3250544/ 2650916/ 9336618068

Haldawani 326300/ 282462/ 9336847756

Chattisgarh:

Raipur 3240900/ 4074325/ 9329570731/ 4074326/ 3203435/ 4069176

Korba 320090/245857/9301321361

Bhilai 3940900/ 4050700 / 9301321362

Rajnandgaon 9329551000

West Bengal:

Kolkata South - New Alipore 32426424/ 24007951/ 24007952 / 24007953/24009999/8322/09330913133/09830537820/09433460983/09836038804

Kolkata North – Saltlake 2426425/6431/22896221/22896192/22896193/ 9339733104/ 9433522575/ 9339310761

Asansol 2280978/9433522574

Siliguri 2525722/ 2525721/ 9434130296/ 9338078401/ 9434178876

Barrackpore (24PG North) 9332066199

Garia (24 PG South)/ 24367528/ 9339772596

Murshidabad 274691/ 9232473594/ 9333194352/ 9434743675 Nadia 9332656601

Burdwan 2542387/ 9332100554/ 9332233901

Durgapore 3290954/ 3208585/ 9332800271

Assam:

Guwahati 2413138 / 2413158/09435044420/9954890168 /9864116390

Jorhat 2309008/ 9435091567

Guwahati 09864408750/

Tinsukia 2337512/ 09864052167

Orissa:

Bhubaneshwar 0674-3299315/2530449/ 2573439/09338167410 / 9338167416/ 9338167411

Rourkela 3295442/2507092/ 9337467417

Cuttack 3254442/ 2331122/ 9337167412

Sambalpur 3295442/ 2404871/ 9338967419

Behrampur / 3295442/ 2221574/ 9338967414
Balasore 329442 / 241348/9338367415
Bihar: Patna 3252513 / 3259715 / 16/2261 071/09334461210 / 9234611210/
Muzaffarpur 2247221/ 9334061211
Gaya 2432863/9334140303
Bhagalpur 2409473/ 9431383711
Arrah 2409473/ 9304386630
Jharkhand:
Ranchi 3299585/2341049/9334465110
Jamshedpur 3205008/2432464/ 9334173951/ 9334133359 Hazaribagh 9431366644
Dhanabdi 9234411586



Customer's Warranty Card

Details

Customer's Name: _____

Address: _____

Dealer's Name: _____

Dealer Address & Stamp:

Model: _____

Date of Purchase: _____

Date of Expiry of Warranty: _____

Please paste the IMEI sticker in the space provided below, the Warranty of your handset is based on the same, so keep the form in a safe place

MIRC ELECTRONICS LTD provides this Limited Warranty to person who has purchased the ONIDA mobile phone and original accessory delivered with your mobile phone.

- 1.The warranty period for the transceiver for 1 year, battery & charger for 6 months is from the date of purchase of the product.
 - 2.The warranty does not cover external housing and cosmetic parts.
 - 3.MIRC ELECTRONICS LTD warrants to you that during the warranty period MIRC ELECTRONICS LTD or a MIRC ELECTRONICS LTD authorized service network will repair or replace, at MIRC ELECTRONICS LTD option, any defective product, or parts thereof, with new or factory rebuilt replacement items, and return the product to the consumer in working condition. No charge will be made to the consumer for either parts or labour in repairing or replacing the product. All replaced boards or equipment shall become property of MIRC ELECTRONICS LTD.
 - 4.The warranty in respect of a repaired or replaced product/part shall extend for the remaining warranty period of the repaired product or replacement thereof to the consumer
 - 5.Upon request from MIRC ELECTRONICS LTD or its authorized service center, the consumer must provide the purchase receipt or other documentation or information in respect of the date and place of purchase.
 - 6.The consumer shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable.
 - The Product has been subject to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive moisture or dampness, exposure to excessive temperatures, unauthorized modifications, unauthorized repair including but not limited to use of unauthorized spare parts in repairs abuse, accident, Acts of God, spills of food or liquids, maladjustment of customer control and breakage or damage to antenna.
 - MIRC ELECTRONICS LTD has not been notified by the consumer of the defect in the product during the applicable warranty period.
 - The product serial number or the accessory date code has been removed, defaced or altered.
 - The defect or damage caused by defective function of the cellular system or by inadequate signal reception by the external antenna.
 - The product has been used with or connected to an accessory not supplied by MIRC ELECTRONIC LTD, not fit for use with ONIDA mobile phones or used in other than its intended use.
 - The seals of the product's battery enclosure have been broken or show evidence of tampering or the product's battery has been used in equipment other than for which it has been specified.
- In order to derive the benefits of this warranty, the consumer should follow the following procedure.
- The consumer shall return the product to place of purchase for repair or replacement.
 - The consumer may contact local MIRC ELECTRONICS LTD office for the nearest authorized service center.
 - The consumer shall arrange for the product to be delivered to the authorized service center.
 - The consumer will be billed for any parts or labor charges not covered by this warranty. The consumer shall be responsible for expenses related to reinstallation of the product.
-