
€

M

⋖

## MOUNTING BRACKET KIT KIT# 523175-5 INSTALLATION INSTRUCTIONS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

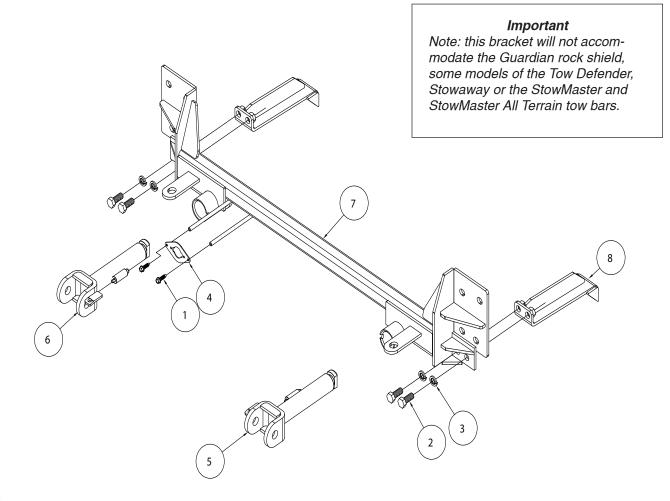

ITEM QTY	NAME	PART #
12	SELF TAPPING SCREW	350247-35
24	1/2" x 1 1/4" BOLT	305094-00
3 4	1/2" LOCK WASHER	350309-00
4 1	WIRE MOUNTING PLATE	A-003801
5 1	DRIVER SIDE ARM	C-002383
6 1	PASSENGER SIDE ARM	C-002384
7 1	MAIN RECEIVER	C-002573
82	BRACE	C-002574
9 1	ZIP TIE	300140-10



KIT# 523175-5

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407 fax 360-735-9300

www.roadmasterinc.com

his is one of our EZ5 Twistlock series brackets, which allows the visible front portion of the bracket to be easily removed from the front of the vehicle (Fig.A and Fig.B). The bracket consists of a main receiver brace, two braces, two removable front braces, and a hardware pack.

The main receiver brace mounts to the frame rails: the braces mount to the main receiver brace and the subframe, and the removable front braces install in the main receiver brace.

Before starting the installation, lay out the kit components in order, as they will be used. This will give you a visual idea of how the components work, and will also confirm that everything is present and accounted for.





IMPORTANT: All brackets must be assembled with all the bolts left loose for final adjustment and positioning (before tightening) unless otherwise instructed. All bolts *must* be torqued for proper strength. If more than one bolt is used per fastening point, the diagram may only show one.

Use flat washers over all slotted holes

· Use lock washers on all fasteners

ROADMASTER Limited Warranty, including One-Year Conditional Warranty Text and Product Registration Card, in Carton.



Failure to follow these instructions WARNING can result in property damage, personal injury or even death.

- · Installation of most mounting brackets requires moderate mechanical aptitude and skills. We strongly recommend professional installation by an experienced installer.
- · The installer must read the instructions and use all bolts and parts supplied. Failure to do so could result in loss of the towed vehicle.
- · Use Loctite® Red on all bolts used for mounting this bracket.
- Every 3,000 miles, the owner must inspect the fasteners for proper torque, according to the bolt torque requirements chart on the last page of these instructions. The owner must also inspect all mounts and brackets for cracks or other signs of fatigue every 3,000 miles. Failure to do so could result in loss of the towed vehicle
- · The owner must check the vehicle manufacturer's instructions for the proper procedure(s) to prepare the vehicle for towing. Some vehicles must be equipped with a transmission lube pump, an axle disconnect, driveline disconnect or free-wheeling hubs before they can be towed. Failure to properly equip the vehicle will cause severe damage to the transmission.
- If running changes were made by the vehicle manufacturer after this bracket was designed, some bolts or other fasteners in the hardware pack may no longer be the correct size. It is the installer's responsibility to verify that the bracket is securely fastened to the vehicle and fitted with the correct hardware to account for these changes. Failure to securely fasten the bracket could result in loss of the towed vehicle.
- · If the towed vehicle has been in an accident, it must be properly repaired before attaching the bracket. Do not install the bracket if any structural frame damage is found. Failure to repair the damage could result in the loss of the towed vehicle.

- · Roadmaster manufactures many styles of brackets. If your bracket has removable arms, they must be removed before driving the vehicle, unless the arms can be pinned or padlocked in place. If not secured, the arms could vibrate out, resulting in non-warranty damage or personal injury.
- Some motorhome chassis have such a tight turning radius that you can damage your motorhome, towed vehicle, tow bar or bracket while turning sharply. Before getting on the road, test your turning radius in an empty parking lot. Turning too sharply could result in non-warranty damage to towing system, motorhome and/or towed vehicle.
- Do not back up with the towed vehicle attached or non-warranty damage will occur to your towing system, motorhome and/or towed vehicle
- The safety cables must connect the towing vehicle to the towed vehicle frame to frame, with the cables crossed, with enough slack for sharp turns. Refer to the cable instructions for proper routing. Failure to leave enough slack in the safety cables, or failure to connect the safety cables frame to frame, will result in the loss of the towed vehicle.
- This bracket is designed for use with ROADMASTER tow bars and ROADMASTER adaptors only. Using this bracket with other brands, without an approved ROADMASTER adaptor, may result in nonwarranty damage or injury.
- · Do not use this document for custom fabrication, as it may not show all parts or structural components. Custom fabrication or an attempt to copy this bracket design could result in loss of the towed vehicle.
- Upon final installation, the installer must inspect the bracket to ensure adequate clearance, particularly around hoses, air conditioner lines, radiators, etc., or non-warranty damage to the towed vehicle
- This bracket is only warranteed for the original installation. Installing a used bracket on another vehicle is not recommended and will void the warranty.



KIT# 523175-5

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407 fax 360-735-9300

www.roadmasterinc.com






- 1. Important: please use all supplied bolts and parts and read all instructions carefully before beginning this installation. The majority of questions you may have can be answered within the text, and proper installation will ensure safe and secure travel. Now, begin the installation. Remove 10 plastic fasteners attaching the radiator cover to the top of the fascia (Fig.C).
- 2. On each side, pull out on the corner of the weather stripping to release the fastener from the radiator cover (Fig.D).





- 3. Remove seven T20 Torx screws attaching the upper fascia to the core support (Fig.E).
- 4. On each side, remove two T20 Torx screws and one 7mm (head) bolt attaching the fender liner to the fascia (Fig.F).
- 5. On each side, remove two T20 Torx screws and one 10mm (head) bolt attaching the fascia to the subframe and fender liner (Fig.G).

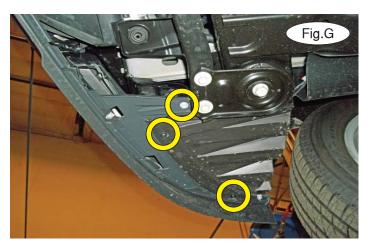



KIT# 523175-5

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682


360-896-0407 fax 360-735-9300

www.roadmasterinc.com





- 6. Pull out and forward on the corners of the fascia to remove it (Fig.H). Disconnect the fog lights and side marker lights, if the vehicle is so equipped.
- 7. On the driver's side, remove two plastic fasteners attaching the air deflector to the bumper core (Fig.I). On the passenger side, there is only one fastener.

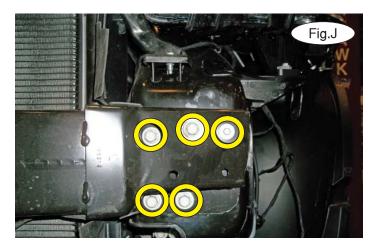



- 8. On each side, remove four 15mm (head) bolts and one 10mm (head) bolt attaching the bumper core to the frame rails (Fig.J). Disconnect the ambient temperature sensor from the bottom of the bumper core (Fig.K) and let it hang down for now. The bumper core will not be replaced. Note: retain the bumper core for replacement in case the bracket is ever removed.
- 9. On each side, remove two 15mm (head) bolts attaching the subframe to the frame rail (Fig.L).






KIT# 523175-5


ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682 360-896-0407 fax 360-735-9300

www.roadmasterinc.com

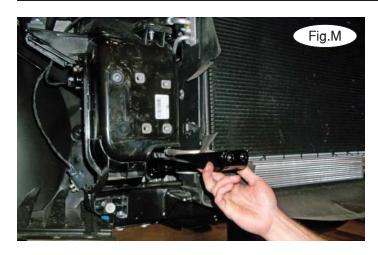

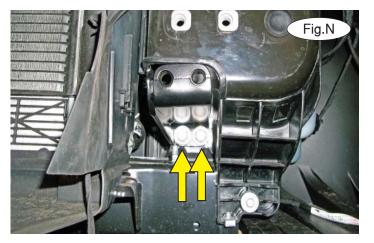


10. Position the brace so the weld nuts are facing forward (Fig.M). Using the bolts you removed in step 9, bolt the brace to the subframe (Fig.N). Note: ensure proper alignment, as the bolts will receive Loctite® Red and will be torqued at the end of these instructions.





- 11. Place the main receiver brace over the ends of the frame rails and replace the bumper core bolts you removed in step 8 (Fig.O).
- 12. On each side, use two of the supplied ½" x 1¼" bolts and ½" lock washers to bolt the brace to the main receiver brace (Fig.P).
- 13. Use a zip tie to attach the ambient temperature sensor to the main receiver brace (Fig.Q).

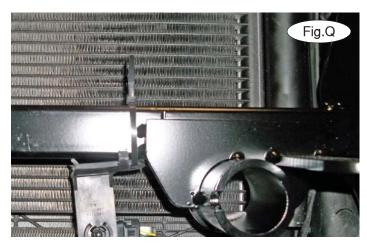



KIT# 523175-5 11/5/13

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

fax 360-735-9300

www.roadmasterinc.com





- 14. Hold the fascia in place over the main receiver brace and mark it for trimming. Then, trim the fascia to allow for clearance of the main receiver brace. Use the yellow lines in Figure R as a reference for trimming.
- 15. Reinstall the fascia, reversing steps 1 through 5 and tighten all bolts to the bolt torque requirements found at the end of these instructions. *Note:* use Loctite® Red on all nuts and bolts.






# 16. Note: the following four images are for illustration purposes only, as your specific application may be slightly different.

The spring-loaded pin on the removable arm snaps into a notch on the receiver, locking the removable arm into its final towing position. Before inserting each arm into the receiver, verify that the spring is working by ensuring that the spring-loaded pin moves easily back and forth within the barrel when pulled and that it can be pulled flush with the face of the barrel (Fig.S and Fig.T).

17. On each side, insert the removable front bracket arm into the front receiver 90 degrees from its final towing position, depressing the spring-loaded pin against the receiver (Fig.U). Now, twist back 90 degrees until the

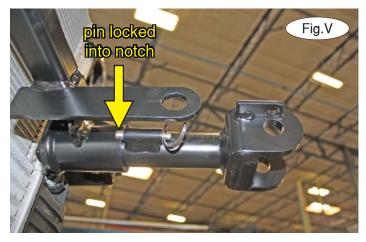

spring-loaded pin snaps into place in the notch on the receiver, locking the arm into place in its final towing position (Fig.V).

Please note: it is the owner's responsibility to ensure the locking of the pins before towing. Otherwise, failure of the towing system will result.



KIT# 523175-5

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407 fax 360-735-9300

www.roadmasterinc.com

18. Install the tow bar to the mounting bracket according to the manufacturer's instructions.

#### **IMPORTANT!**

Safety cables are required by law. When towing, connect safety cables to the safety cable tabs shown in Figure W. Make certain there is adequate slack in the cables to allow a full turning radius; otherwise, damage will result. If necessary, longer cables or cable extensions are available.

Note: if the bracket is so equipped, the holes in the alignment tabs which are welded to the arms and main receiver braces are for padlocks only. Under no




circumstances should you bolt the alignment tabs together. Bolting the alignment tabs together may result in non-warranty damage to the bracket.

### Three options for attaching the wiring plug to the main receiver brace

For six-wire plugs: use the two supplied 3/4" self-tapping screws to attach the electrical plug directly to the rods on the front of the main receiver brace.

For four-wire round plugs: attach to the plug mounting plate and then use the two supplied 3/4" self-tapping screws to attach the mounting plate to the rods on the front of the main receiver brace.

For four-wire flat plugs: place the plug through the mounting plug plate, and then secure it using the supplied zip tie on the front of the plug (Fig.X). Use the two supplied 3/4" self-tapping screws to attach the mounting plate to the rods on the front of the main receiver brace.

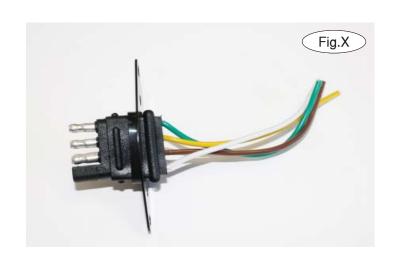

#### **BOLT TORQUE REQUIREMENTS**

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

STANDARD BOLTS			METRIC BOLTS			METRIC BOLTS		
Thread Size	Grade	Torque	Thread Size	Grade	Plated / Unplated	Thread Size	Grade	Plated / Unplated
5/16	5	13 ft./lb.	8mm-1.0	8.8	20 ft./lb. 18 ft./lb.	12mm-1.25	8.8	70 ft./lb. 65 ft./lb.
3/8	5	23 ft./lb.	8mm-1.25	8.8	19 ft./lb. 18 ft./lb.	12mm-1.5	8.8	66 ft./lb. 61 ft./lb.
7/16	5	37 ft./lb.	10mm-1.25	8.8	38 ft./lb. 36 ft./lb.	12mm-1.75	8.8	65 ft./lb. 60 ft./lb.
1/2	5	56 ft./lb.	10mm-1.5	8.8	37 ft./lb. 35 ft./lb.	14mm-2.0	8.8	104 ft./lb. 97 ft./lb.
5/8	5	150 ft./lb.						