




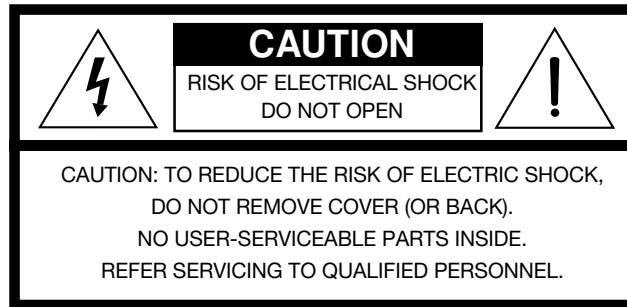
***The Bose® Lifestyle® 12 System***

***Owner's Guide***

***December 20, 2001***

*AM191409\_01\_V.pdf*

 **WARNING:** To reduce the risk of fire or electric shock, do not expose the system to rain or moisture.



These CAUTION marks are located on the back panel and bottom of your Lifestyle® music center and the bottom panel of your Acoustimass® module:



 
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

 **CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, insert fully.

### **Class 1 laser product**



This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bottom of the unit.

 **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The compact disc player should not be adjusted or repaired by anyone except properly qualified service personnel.

### **Class B emissions limits**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### **Batteries**

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

### **Additional safety information**

See the additional instructions on the *Important Safety Information* page enclosed with this owner's guide.

### **Please read this owner's guide**

Please take the time to follow this owner's guide carefully. It will help you set up and operate your system properly, and enjoy all of its advanced features. Save your owner's guide for future reference.

## Important Safety Instructions

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth** – and as directed by Bose® Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.**
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
13. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
14. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
15. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
16. **Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
17. **See product enclosure for safety related markings.**

## Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** *Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.*

This product complies with the Canadian ICES-003 Class B specifications.




## Important Safety Instructions

- 18. Use proper power sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- 19. Avoid power lines** – Use extreme care when installing an outside antenna system to keep from touching power lines or circuits, as contact with them may be fatal. Do not install external antennas near overhead power lines or other electric light or power circuits, nor where an antenna can fall into such circuits or power lines.
- 20. Ground all outdoor antennas** – If an external antenna or cable system is connected to this product, be sure the antenna or cable system is grounded. This will provide some protection against voltage surges and built-up static charges.  
Section 810 of the National Electrical Code ANSI/NFPA No. 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the ground electrode. Refer to the antenna grounding illustration on this page.

## Antenna grounding

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70.

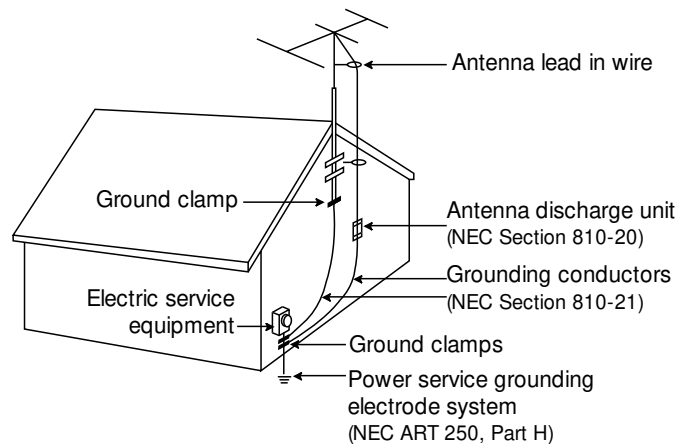

## Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC (of USA) that provides guidelines for proper grounding. In particular, it specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as is practical.

**Where to find...**

Setting Up

- Before you begin ..... 4
- Unpacking the carton ..... 5
- Select the locations for your Lifestyle® 12 system ..... 6
- Connect the speakers and Lifestyle® music center ..... 9
- Connecting your home theater components to the Lifestyle® 12 system ..... 12
- Connect the antennas ..... 16
- Attach the wire cover ..... 16
- Set up the remote control ..... 17
- Set radio channel spacing for dual voltage and 120V systems ..... 17
- Turn on the music center ..... 17

Operating Your Lifestyle® 12 System

- The music center display ..... 18
- The system controls ..... 18
- The music center controls ..... 19
- The Lifestyle® remote control ..... 19
- Listening to your Lifestyle® 12 system ..... 20
- Listening to video sound ..... 20
- Listening to the radio ..... 21
- Listening to a CD ..... 22
- Using the system with an external component ..... 22

Maintaining Your Lifestyle® 12 System

- Fine-tuning your system ..... 23
- Changing the house code settings ..... 24
- Adding speakers ..... 25
- Troubleshooting ..... 26
- Warranty period ..... 27
- Customer service ..... 27
- Cleaning the Lifestyle® 12 system ..... 28

Product Information

- Technical information ..... 29
- Accessories ..... 29

Index ..... 30

Bose® Corporation ..... inside back cover

**For your records**

Serial numbers are located on the bottom of the music center and the bottom panel of the Acoustimass® module.

Music center serial number: \_\_\_\_\_

Acoustimass module serial number: \_\_\_\_\_

Dealer name: \_\_\_\_\_

Dealer phone: \_\_\_\_\_ Purchase date: \_\_\_\_\_

We suggest you keep your sales slip and warranty card together with this owner's guide.


### Before you begin

Thank you for purchasing the Bose® Lifestyle® 12 system. This complete audio home entertainment system offers superb sound, elegance, technology, and simplicity for music and home theater.

Your system includes:


- A Lifestyle® music center with built-in AM/FM radio and compact disc (CD) player
- Inputs for a video sound source, an auxiliary source, and a tape deck
- Powered Acoustimass® speakers with a hide-away Acoustimass module
- An easy-to-use remote control

Bose Videostage® decoder technology enables the Lifestyle® 12 system to reproduce the realism of movie sound especially for a home environment. When a movie soundtrack or CD is produced in a surround sound format, specially encoded sound is sent to any or all of the available speakers. Dialogue is usually sent to the front speakers. Sounds from the left or right side of the picture are sent to left or right front speakers. Ambient sounds or special effects may be sent to the surround (rear) speakers. Bose Videostage circuitry automatically directs the sound to the correct speakers.

To select surround-encoded material, look for any of the terms Surround, Dolby Surround, and the double-D symbol  **DOLBY SURROUND** \* on tapes and discs, and the word "surround" preceding a TV broadcast.

When sound is recorded in stereo, but not surround-encoded, Videostage decoder technology directs it to the most appropriate speakers based on the signals received. When viewing older movies or listening to other monaural programs on your Lifestyle® 12 system, Videostage circuitry directs sound so it appears to come from the center of the TV screen.

You can listen to any program material in SURROUND (5-speaker) mode, whether the program is surround-encoded, stereo, or monaural. You will not hear sound from all five speakers all of the time. Even with surround-encoded material there are times when no sounds are directed to the surround speakers. You can select the speaker mode that sounds best to you for each particular program.

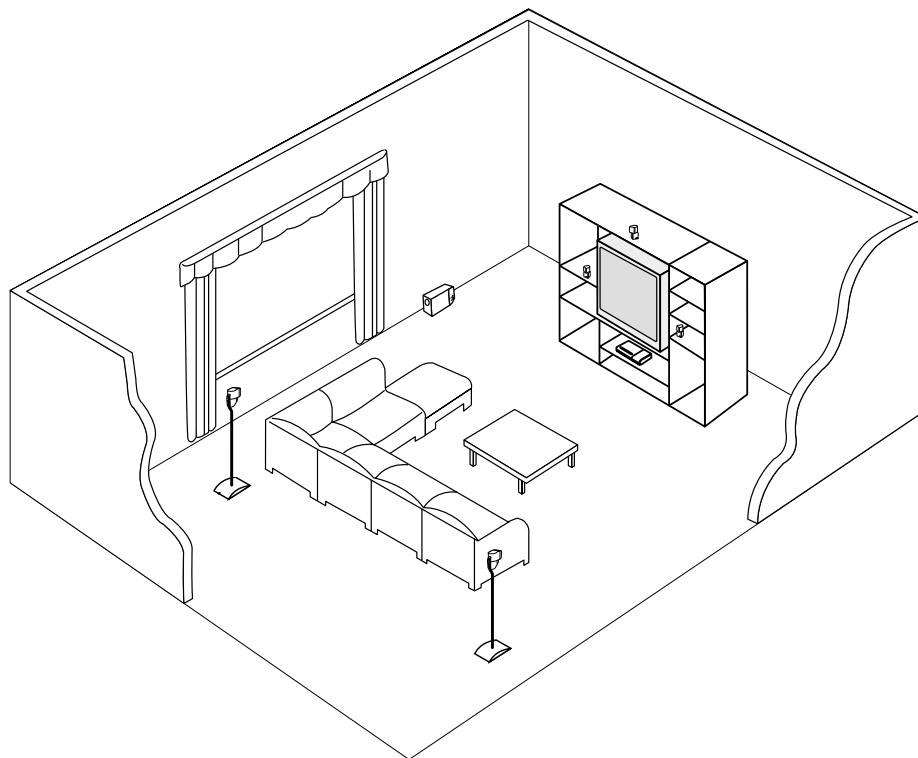

\* Dolby and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

## Unpacking the carton

Carefully unpack your system. Save all packing materials for possible future use. The original packing materials provide the safest way to transport your Lifestyle® 12 system. If any part of the product appears damaged, do not attempt to use the system. Notify Bose® or your authorized Bose dealer immediately.

Check to be sure your Lifestyle® 12 system contains the parts identified in Figure 1.

**Note:** Find the serial numbers on the bottom panel of the Acoustimass® module and the bottom of the music center. Then write them on your warranty card and in the spaces provided on page 3.


**WARNING:** The Acoustimass module weighs 33 pounds (15 kg). Use good lifting practice to avoid injury.

**WARNING:** To avoid danger of suffocation, keep the plastic bags out of the reach of children.


**Figure 1**

What comes with your Lifestyle® 12 system:

- Lifestyle® music center
- AC power (mains) pack\*
- Wire cover
- FM antenna
- AM loop antenna
- AM antenna base
- Remote control
- 3 AA batteries
- Acoustimass module
- 5 cube speaker arrays
- AC power (mains) cord\*
- Audio input cable
- 5 speaker cables (2 surround and 3 front)
- 4 self-adhesive rubber feet (for the Acoustimass module)
- Stereo cable
- Lifestyle® system CD
- Test CD

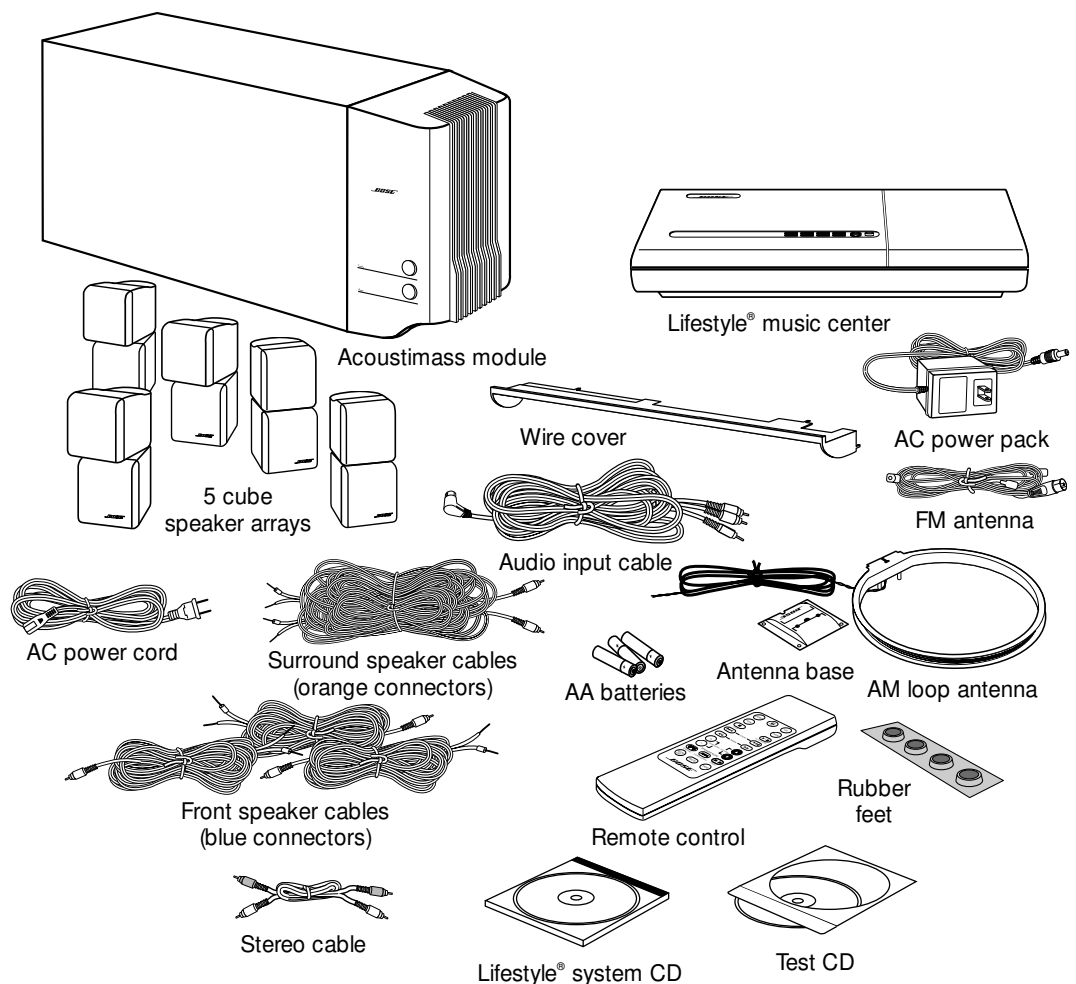

\* Power cord and pack shown above are USA/Canada versions. Dual voltage systems include 1 power cord, 1 adapter, and 2 power packs. The power cords and packs for Europe, UK/Singapore, and Australia are shown below.

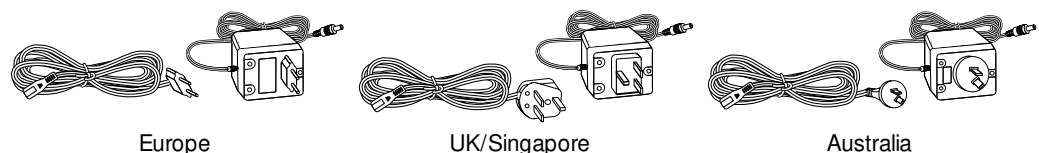

## Select the locations for your Lifestyle® 12 system

When you place your speakers according to the guidelines below, a combination of reflected and direct sound provides the audio atmosphere of a home theater. You may experiment with the placement and orientation of the cubes to produce the sound most pleasing to you. For the best surround effect, adjust the speakers so you cannot pinpoint where the sound comes from. It is preferable not to aim the cubes directly at the listener. For more discussion of speaker placement and room acoustics, see “Fine-tuning your system” on page 23.

### Speaker locations

Follow these guidelines to select locations that provide the maximum home theater effect from your Lifestyle® 12 system (Figures 2 and 3).



**CAUTION:** Choose a stable and level surface for your speakers. Vibration can cause the speakers to move, particularly on smooth surfaces like marble, glass, or highly polished wood. For additional stability, you can add rubber feet to your speakers. You may obtain rubber feet (part no. 178321), free of charge, from Bose®. Contact Bose Customer Service (see listings on the inside back cover).

### Left and right front speakers

The sound from the left and right front speakers should seem to appear at the edge of the picture, so that the acoustic image is close to the size of the visual image (Figure 2). The front speaker cables allow up to 20 feet (6.1 m) distance from the Acoustimass® module.

1. Place the cubes on line with the horizontal center of the TV screen.
2. Place them up to 3 feet (1 m) from the edge of the TV screen.

We recommend a maximum distance of 3 feet (1 m) so that the sound does not become too separated from the picture. You may wish to vary this distance based on room conditions and personal preference.

3. Direct one cube of each array forward. Direct the other cube toward the wall or in a different direction to create reflected sound. (See the illustration of reflected sound patterns in Figure 3.)



**Note:** The cube speakers are magnetically shielded so you can place them close to the TV without affecting picture quality.



### Center speaker


The sound from the center speaker should appear to come directly from the center of the picture (Figure 2). The center speaker cable allows up to 20 feet (6.1 m) distance from the Acoustimass® module.

1. Place the speaker on line with the vertical center of the screen, above or below (whichever is closer to the screen), or the closest convenient location.
2. Place the speaker in line with the front of the screen (not pushed to the back of the TV).
3. Direct each of the cubes slightly away from center, to create a wider area of direct sound (Figure 3).

**Note:** If you put the speakers in a bookcase unit, be sure to place each one at the front edge of the shelf. Placing speakers in an enclosed space can change the tonal quality of the sound. This effect is minimized if the shelves are filled with books.

**Figure 2**

Recommended front speaker locations

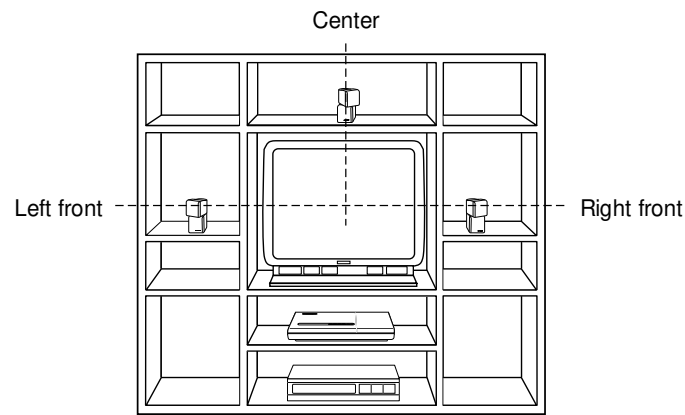


### Surround speakers

The surround (rear) speakers create an area of sound around the listener. Place them in the back half of your room. Direct the cubes so that you do not pinpoint the exact location of the sound source (Figure 3). The surround cables allow up to 50 feet (15.2 m) distance from the Acoustimass module.

**Figure 3**

Speaker placement

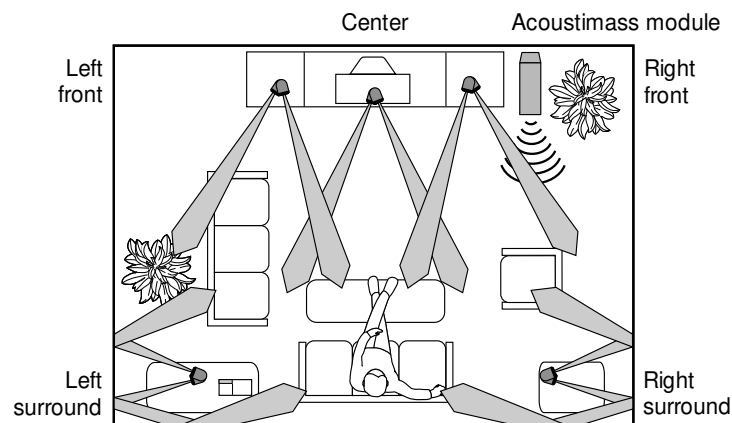

1. Place the speakers at ear height or higher, if possible.
2. Direct the cubes to reflect sound off one or more surfaces.
3. Do not direct the sound straight at the listener.

### Acoustimass® module


Follow these guidelines to select a location for the Acoustimass module.

**Note:** To avoid interference with the TV picture, place the Acoustimass module at least 18 inches (45 cm) from the TV.

1. Place the Acoustimass module along the same the wall as the TV, or close to the same end of the room as the front speakers (see the example along the front wall in Figure 3).
2. Select a convenient location – under a table, behind a sofa. Do not allow furniture or drapes to block the ventilation openings of the module.
3. Place the Acoustimass module within reach of the audio input cable, speaker cables, and an AC power (mains) outlet.
4. Select a position for the Acoustimass module (Figure 4). For proper ventilation, place it on the long edge, with the connectors facing the floor. An alternate position is on its largest side, with the bass and treble controls facing up. Do not place the module on either end, as shown by the last two views in Figure 4.

**Figure 4**

Acoustimass module positions

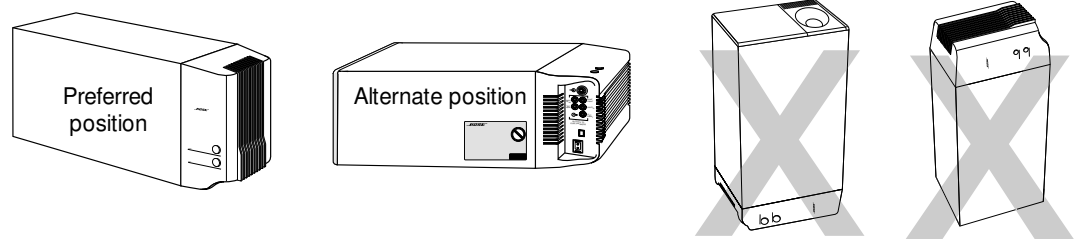

5. Once you have selected a position for the module, place the four self-adhesive rubber feet near the corners of the bottom surface. The rubber feet provide increased stability and protection from scratches.
6. Aim the port (the round opening) into the room or along the wall to avoid blocking the port or creating too much bass.
7. For best bass performance, do not place the port at equal distances from any two walls or from a wall and the ceiling.



**CAUTION:** Do not cover the ventilation openings of the Acoustimass module. The slots on the end provide ventilation for the built-in electronic circuitry, and should not be blocked.

### Music center

Select a location for the music center.

1. Allow enough room to open the CD player cover.
2. Place the music center close enough to the sound sources (TV, VCR, etc.) to allow for cable length. If you need additional audio and/or video cables to connect all of your components, see your dealer or call Bose®.
3. Place the music center within 30 feet (9.1 m) of the Acoustimass module (the length of the audio input cable).

## Connect the speakers and Lifestyle® music center

Once you have selected locations for your music system, connect the speakers.

- ⚠ CAUTION:** Make sure all components are unplugged from the power outlet before you begin hooking up the system.

### Connecting the cube speaker arrays to the Acoustimass® module


Each speaker cable contains two wires. The wire marked with a red collar is positive (+) and the plain one is negative (-). These wires match the positive (red) and negative (black) terminals on the back of each speaker. To lengthen the cable, use standard RCA extension cables or splice in 18-gauge or thicker cord (connecting + to + and - to -). To purchase cables, see your dealer, electronics store, or call Bose® customer service.

- 🎵 Note:** The surround cables are joined together for your convenience, providing an easy-to-use cable for connecting the surround speakers. To run the cables in different directions from the Acoustimass module, simply pull apart the cables as needed.

1. Match the correct cable to the corresponding speaker location.
  - Front speaker cables have blue connectors at one end, with L, R, and C molded into the connectors. The red collars on the + wire are labeled LEFT, RIGHT, and CENTER.
  - Surround speaker cables have orange connectors at one end, with L and R molded into the connectors. The red collars on the + wire are labeled LEFT and RIGHT.
2. Connect the wire end of one speaker cable to the terminals on the rear of the matching cube speaker array.
  - a. Push each terminal tab down, then insert the end of the appropriate wire into the exposed hole. Release the tab to secure the wire. Connect each wire to its corresponding terminal positive to positive (+ to +) and negative to negative (- to -).
  - b. Repeat this step for each of the five cube speaker arrays. (See Figure 5.)

**Figure 5**

Speaker cable connections to the cube speaker array

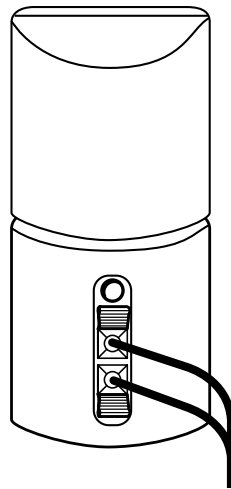

- ⚠ CAUTION:** Make sure no strands of wire from any terminal touch any other terminal. Bridged wires create short circuits that affect proper operation of your system.

3. Connect each cable to the corresponding jack on the Acoustimass module.
  - a. Plug the blue connectors into the matching left front, center, and right front jacks.
  - b. Plug the orange connectors into the matching left surround and right surround jacks.

### Connecting the Acoustimass® module to the Lifestyle® music center

Connect the Acoustimass module to the music center with the audio input cable (Figure 6).

1. Insert the three connectors at one end of the audio input cable into the jacks on the rear panel of the music center:
  - Black connector into the SYSTEM CONTROL 1 jack
  - Red connector into the R (right) FIXED OUTPUT jack
  - White connector into the L (left) FIXED OUTPUT jack


🎵 **Note:** Be sure the connectors are fully inserted into each of the jacks. If the black connector is not inserted fully into the SYSTEM CONTROL jack, you will hear no sound.

🎵 **Note:** Do **not** connect the audio input cable to the SPEAKERS A or SPEAKERS B outputs (Figure 6). The speakers in your Lifestyle® 12 system are designed to work properly with the fixed level audio output available from the FIXED OUTPUT jacks.

2. Insert the single right-angle multi-pin connector on the other end of the audio input cable into the AUDIO INPUT jack on the Acoustimass module. Align the connector at the angle shown in Figure 6.
3. Extend the audio input cable as much as possible, since it includes an antenna for the remote control.

**Figure 6**

Music center and speaker connections

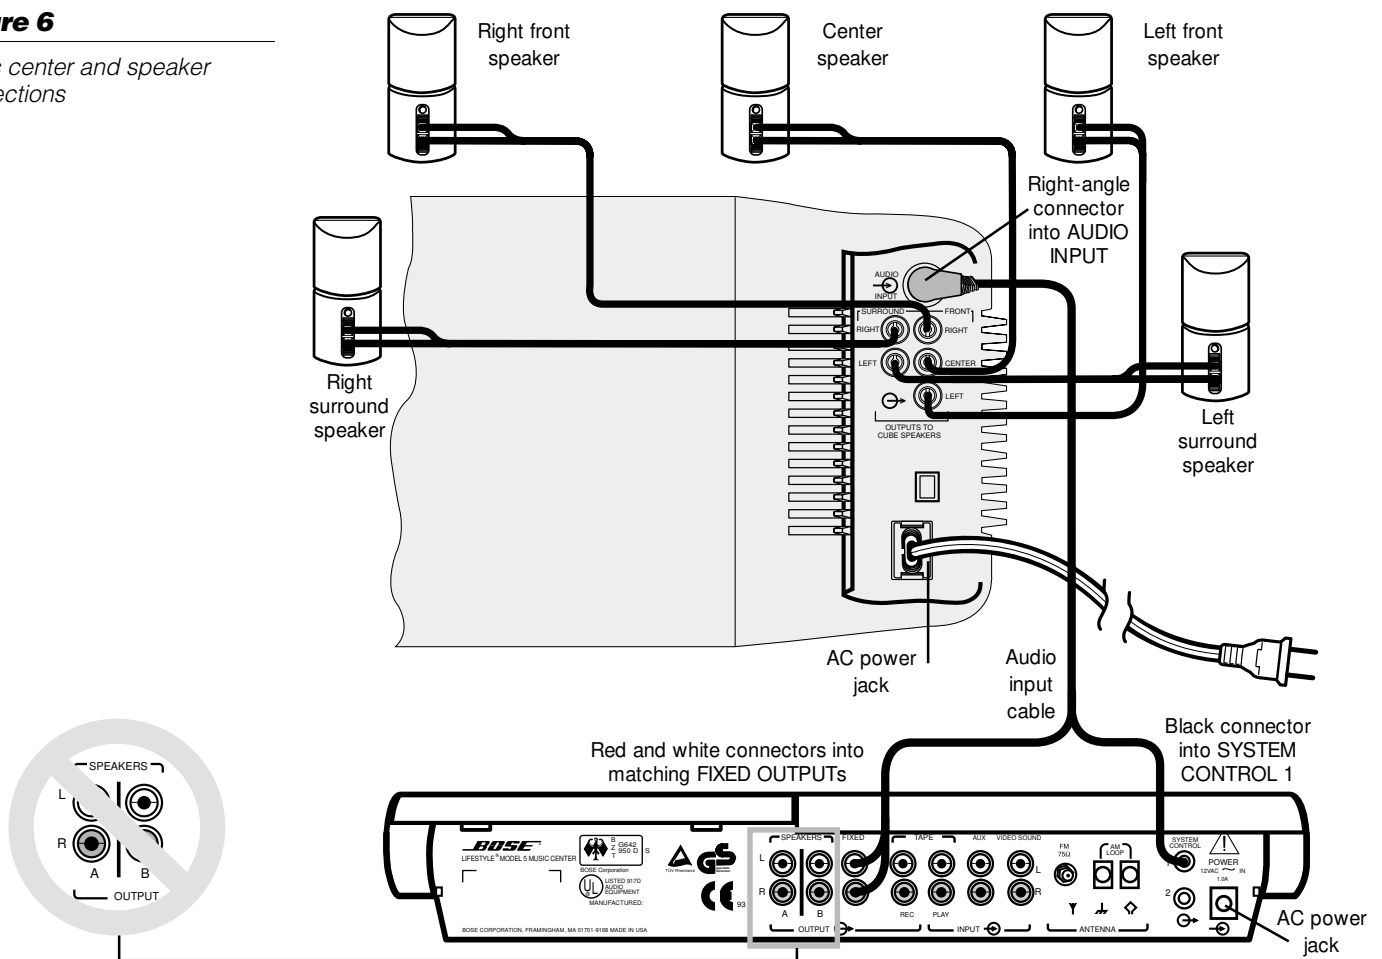


**Connecting the Acoustimass® module power (mains) cord**

1. On a dual voltage system, the voltage selector switch is preset at the factory to be correct for your area. Check to be sure it is set for the proper voltage (Figure 7). Use 115V for North America; 230V for Europe and Australia. In Europe, use the adapter plug provided. If you are in doubt, contact your local electric utility for the appropriate voltage setting.

**Figure 7**

Dual voltage Acoustimass module: voltage selector switch settings

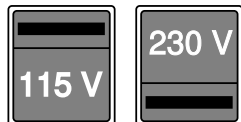

**CAUTION:** Make sure the voltage selector switch is set correctly.

2. Plug the small end of the power (mains) cord into the Acoustimass module AC power jack.



**Note:** Do **not** plug the AC power cord into a power outlet until all component connections are complete.

**Connecting the music center AC (mains) power pack**

The Lifestyle® music center comes with a 120V AC (mains) power pack for use in the USA and Canada or an appropriate 230V or 240V power pack for international use. (See Figures 1 and 8.) Dual voltage models include both 120V and 230V power packs.




**CAUTION:** Be sure to use the correct power pack for your area. Using the wrong one may damage your power pack or your music center.

- Model PS71, 120V in North America
- Model PS72, 230V in Europe
- Model PS74, 230V in UK or Singapore
- Model PS77, 240V in Australia

**Figure 8**

The AC power pack (model PS71 shown)

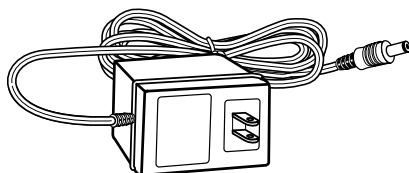

1. Firmly insert the small connector on the end of the AC (mains) power pack cable into the AC POWER jack on the back of the Lifestyle® music center.
2. Make sure that the power pack reaches an AC (mains) outlet.



**Note:** Do **not** plug the AC power pack into a power outlet until all component connections are complete.

## Connecting your home theater components to the Lifestyle® 12 system

There are many variations of equipment in a home theater. A basic home theater system might include a stereo or mono TV and stereo VCR with the Lifestyle® 12 system. Your home theater can include many other combinations of equipment, including cable TV, laserdisc players, DVD players, CDI players, additional VCRs, and satellite decoder.

♪ **Note:** A mono TV only serves as a display for the video, not as a source for the audio.

In order for the Lifestyle® 12 system to provide home theater effects, the program material must be in stereo or surround-encoded, and the device playing the material must be stereo. Look for the word “surround” on the tape, CD, or preceding the TV broadcast. To hear stereo or surround sound from encoded video tapes, you must have a stereo (HiFi) VCR. While not all VCRs are stereo devices, all CD, DVD, and CDI players and nearly all laserdisc players are stereo.


♪ **Note:** Line level outputs from most VCRs or laserdisc players are fixed. If your VCR, laserdisc player, or other video sound source has fixed and variable outputs, use the fixed outputs.

### Setting up the primary video sound source

The Lifestyle® 12 system has one set of video inputs for the primary source (Figure 9).

**Figure 9**

Music center connectors

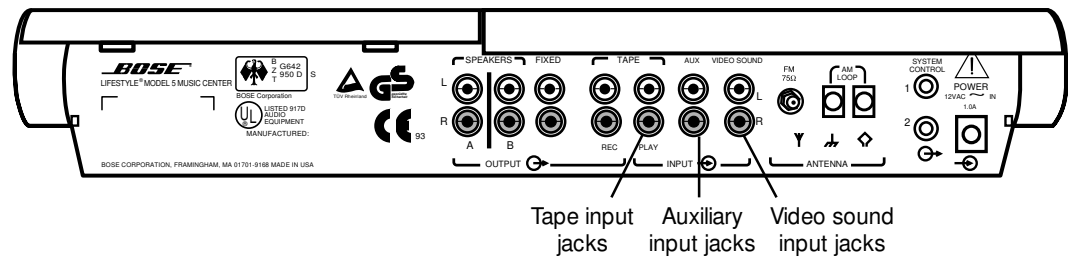


♪ **Note:** Your Lifestyle® 12 system includes one 6-foot (1.8 m) stereo cable to connect the right (R) and left (L) audio outputs from a component to the music center inputs. Cables may also be supplied with your components. If needed, audio cables are available at many electronics stores, or call Bose®. Most audio cables are color coded. Match red connectors to right (R) jacks and black or white connectors to left (L) jacks.

There are three basic methods for setting up your home theater. It is easiest to use a stereo TV as the switching center to select the sound source. The next easiest option is to use a stereo VCR as the switching center. The third option is to connect components directly to the Lifestyle® 12 music center, and select the source from the Lifestyle® 12 remote or control panel.

**Figure 10**

Connecting components through your TV

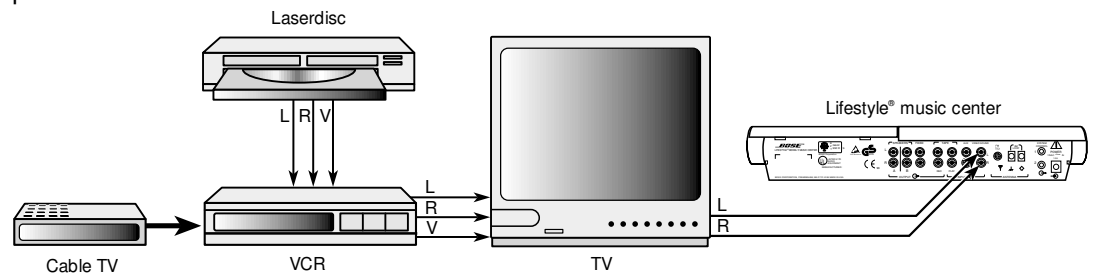

**(1) To direct your video sound sources through your TV**


If your stereo TV has fixed audio outputs (the audio signal level doesn't change), and it allows you to select the source of the signal (VCR, laserdisc, cable, etc.):

- Connect your home theater components (VCR, cable box, laserdisc player, etc.) to the appropriate TV inputs. (See Figure 10.)
- Connect the fixed audio outputs to the VIDEO SOUND INPUTs of the music center.
- Turn the TV speakers off or the volume all the way down.  
(If there is an internal/external speakers switch, select external speakers. Do not connect any speakers to the TV.)
- Set the TV balance control to the center of the dial or range.
- Set tone controls to flat or the middle position (neutral).
- Set TV to the stereo position.

**Note:** If necessary, as a second choice, you can use variable audio outputs from your stereo TV. Turn off or disconnect the TV's speakers and leave the volume control up – close to the maximum setting.

**Figure 11**

Connecting components through your VCR

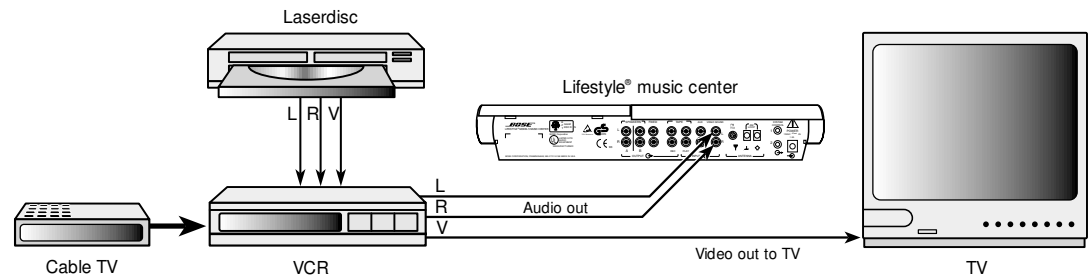**(2) To direct your video sound sources through your VCR**


If your TV is not a stereo model, or does not have the appropriate outputs, connect your stereo VCR to the music center. Use the VCR as a tuner and to select other connected sound sources. (See Figure 11.)

- Connect your home theater components to the appropriate VCR inputs.
- Connect the VCR video signal to the TV through VIDEO IN or composite video input. You can also use the RF or antenna input.
- Turn the TV speakers off or the volume all the way down.  
(If there is an internal/external speakers switch, select external speakers. Do not connect any speakers to the TV.)
- Connect the VCR fixed audio outputs to the VIDEO SOUND INPUTs of the music center.

**Note:** To ensure proper stereo or surround sound, connect the L and R audio outputs from your stereo VCR directly to your music center L and R VIDEO SOUND inputs, as shown in Figure 11. If you prefer to connect the audio outputs from your TV to the music center, be sure to use the L and R audio outputs from the VCR to the TV, instead of using coaxial cable. If the audio signal passes through two coaxial cable connections (like the connection from a cable TV box), in some cases the stereo or surround encoding may be lost.

**Figure 12**

Connecting components to the Lifestyle® 12 system inputs

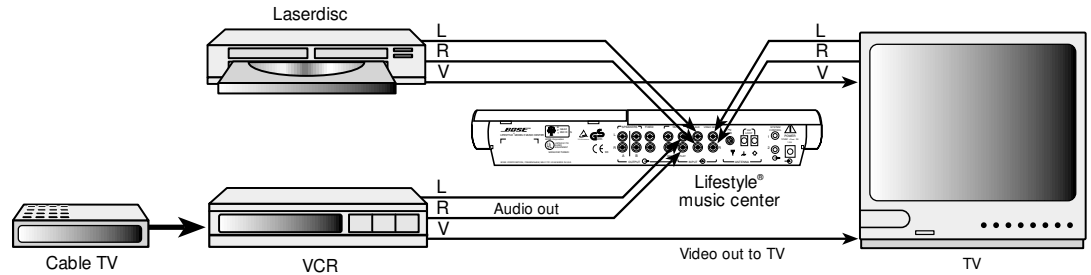

### (3) To connect components directly to the Lifestyle® 12 system

If you cannot (or do not choose to) use your TV or VCR to select the sound sources, connect up to three sound sources directly to the Lifestyle® 12 system. For example, connect a VCR into TAPE PLAY IN, a laserdisc to AUX IN, and a TV's fixed audio outputs to VIDEO SOUND IN on the music center. (See Figure 12.) By pressing one of these keys (TAPE, AUX, or VIDEO) on the music center control panel or remote control, you choose which sound source to hear. Select between TAPE, AUX, or VIDEO for the most pleasing sound quality for each particular program.

- ♪ **Note:** Selecting VIDEO on your Lifestyle® 12 system automatically selects SURROUND (5-speaker) mode, and selecting AUX or TAPE automatically selects STEREO (2-speaker) mode. If you wish, you can change the speaker mode after you select the source.

### About the video source

Your TV is the display for the video (picture) signal. Therefore, the video signal must be connected directly to the TV. The video signal should not be connected to the Lifestyle® 12 system.

- ♪ **Note:** For assistance with video connections, see your video components manuals.
- ♪ **Note:** There is no video signal input (usually a yellow-coded jack) on the music center. The VIDEO SOUND INPUT jacks are for audio from a video source.



## **Other connections**

### **Tape deck**

To use an external tape recorder (analog audio cassette, analog open reel, digital audio tape, Digital Compact Cassette, or MiniDisc), connect the inputs (REC) from the tape deck to the music center TAPE REC jacks. Connect the outputs (PLAY) from the tape deck to the music center TAPE PLAY INPUT jacks, matching the red plug to R (right) and black or white plug to L (left).

### **CD changer, DVD player, or laserdisc player**

To use one of these components, connect its audio outputs to the music center AUX INPUT jacks, matching the red plug to R (right) and black or white plug to L (left).

### **Turntable**

To connect a turntable, you need a phono preamplifier (with RIAA equalization). Consult your dealer for the appropriate model. Connect the audio outputs of the phono preamplifier to the music center AUX INPUT jacks, matching the red plug to R (right) and black or white plug to L (left).


 **Note:** *The Lifestyle® 12 system cannot turn a connected component on or off.*

## Connect the antennas

The rear panel of your Lifestyle® music center provides connections for AM and FM antennas (Figure 13). Unwind each antenna's wires. Antennas provide better reception when their wires are not bundled.


**Figure 13**

The antenna connections

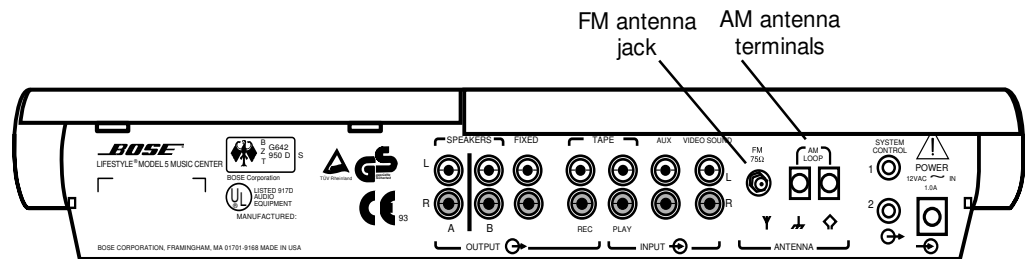

**Figure 14**

 The FM dipole antenna



### FM antenna connections

1. Plug the antenna connector into the FM ANTENNA jack on the back of the Lifestyle® music center.
2. Spread out the antenna arms. Experiment with both the placement and the angle of this antenna to provide optimum FM reception.

### AM antenna connections

**Note:** To install the AM antenna on a wall, follow the instructions enclosed with the antenna.

1. Loosen the AM ANTENNA screw terminals on the back of the Lifestyle® music center.
2. Slide the wire connectors around the screw terminals. Tighten the screws over the connectors.
3. Stand the loop antenna on the base, following the instructions enclosed with the antenna.
4. Move the loop part of the antenna at least 20 inches (50 cm) from the music center. Experiment with the orientation of the loop for optimum AM reception.

**Note:** Outdoor antennas may be used with the music center antenna connections. To install an outdoor antenna, consult a qualified installer. Follow all safety instructions.

### Connecting to a cable radio signal

To connect your system to the FM signal available from some cable TV companies, contact your cable provider for assistance. The connection is made to the FM 75Ω EXTERNAL antenna connector on the back of the system.


**CAUTION:** Be certain that the installation includes a signal splitter so that only the FM band, not the cable TV band, is transmitted to the system. It is necessary to use a splitter that filters the signal to prevent any re-emissions of the TV spectrum through the system.

## Attach the wire cover

To hide the wires and jacks from view, after all the connections are completed, attach the wire cover to the music center. The five tabs on the wire cover snap into matching slots on the music center back panel.

**Figure 16**

The wire cover

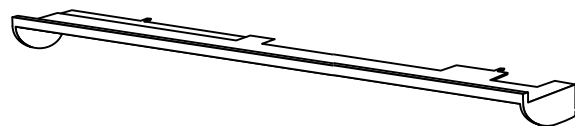

## Set up the remote control

### Install the batteries


1. Slide open the battery compartment on the back of the remote (Figure 17).
2. Insert 3 AA or IEC-R6 1.5V batteries, or the equivalent, as shown. Match the + and – symbols on the batteries with the + and – markings inside the compartment.
3. Slide the battery compartment cover back into place.

Replace the batteries when the remote control stops operating or its range seems reduced. Alkaline batteries are recommended.

🎵 **Note:** Do not change the settings of the factory-preset miniature switches. See “Changing the house code settings” on page 24 for information on how to prevent conflicts with other Lifestyle® music systems.

**Figure 17**

Installing the remote control batteries

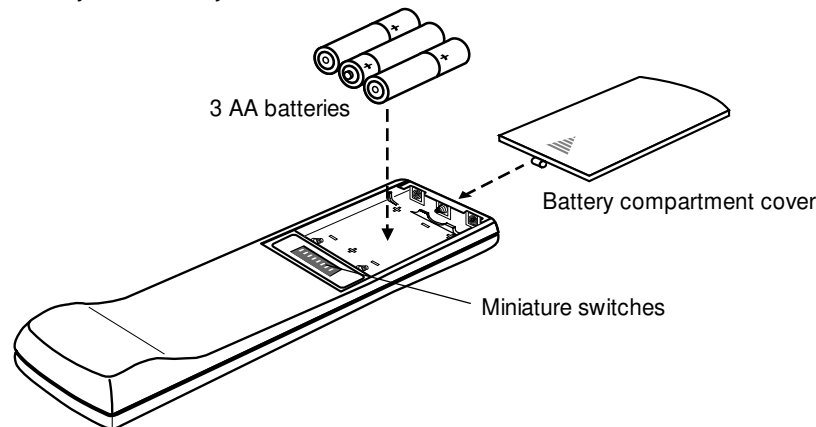

## Set radio channel spacing for dual voltage and 120V systems

Dual voltage music centers (which include both 120V and 230V power packs) and 120V music centers can be set for two types of AM and FM channel spacing.

- Channel spacing for North America is 10 kHz for AM and 200 kHz for FM.
- Channel spacing for Europe is 9 kHz for AM and 50 kHz for FM.

Your dual voltage or 120V music center is factory preset for North American spacing. Select the channel spacing most appropriate for your area.

To change AM and FM channel spacing:

1. Press OFF to turn off the music system.
2. Press and release the ERASE key under the CD cover. (See Figure 19 on page 19.)

The display indicates US for North American spacing and EU for European spacing.

## Turn on the music center

Plug the Acoustimass® module power cord into an AC (mains) outlet. Then plug in the music center power pack.

🎵 **Note:** Your speakers will not operate unless you complete all cable and power connections before turning on the music center.

🎵 **Note:** If your system will be unattended for a few days, you may want to unplug your music center to prevent a neighbor's Lifestyle® remote control or your pets from accidentally turning it on. In addition, see “Changing the house code settings” on page 24.

You are ready to enjoy your new Lifestyle® system. Refer to the following pages for information on operating the music center controls and the Lifestyle® remote control.


Play the Test CD, following the instructions on page 22. Listen to the instructions on the CD to verify your system setup.

## The music center display

This music center display (Figure 18) provides information on the music center functions.

**Figure 18**

The music center display

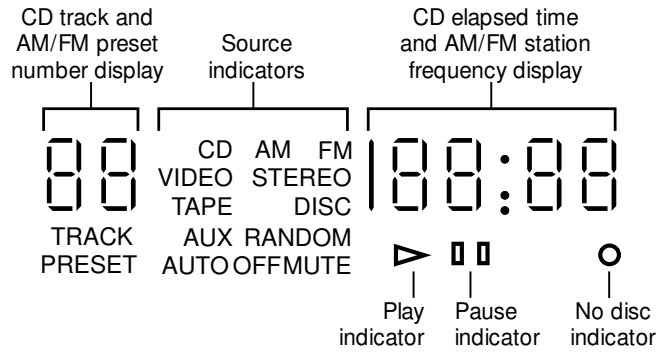

## The system controls

### Function


### Remote Control

### Music Center

<b>VIDEO</b> - Selects a video sound source connected to the VIDEO inputs, and turns the system on (in SURROUND speaker mode and enhanced bass).		
<b>AM/FM</b> - Selects the radio and turns the system on (in STEREO speaker mode). When the radio is on, switches between AM and FM.		
<b>CD</b> - Selects the built-in CD player and turns the system on (in STEREO speaker mode).		
<b>AUX</b> - Selects a CD changer or other component connected to the AUX inputs, and turns the system on (in STEREO speaker mode).		
<b>TAPE</b> - Selects a tape deck or component connected to the TAPE inputs, and turns the system on (in STEREO speaker mode).		
<b>■ STOP</b> - Stops the CD player.		
<b>▶/   PLAY/PAUSE</b> - Begins or pauses play of the CD. When held down for two seconds, stops play of a CD.		
<b>◀◀ SKIP</b> - Selects the previous or next CD track, or the previous or next preset radio station.		
<b>▶▶ SKIP</b> - Press and hold to scan a CD. When these two keys on the music center are pressed simultaneously, plays CD tracks in random order.		
<b>◀▶ SEEK</b> - Searches backward or forward through a CD. Seeks the previous or next strong AM or FM station.		
<b>VOLUME ▲ \ ▼</b> - Raises or lowers the system volume.		
<b>AUTO OFF</b> - Sets a 15-minute delay before the system shuts off. Each additional key press increases the time until shutoff by 15 minutes (up to 75 minutes).		
<b>MUTE</b> - Silences the speakers. Also restores volume to muted speakers.		
<b>OFF</b> - Turns the system off.		

**Figure 19**

The music center controls

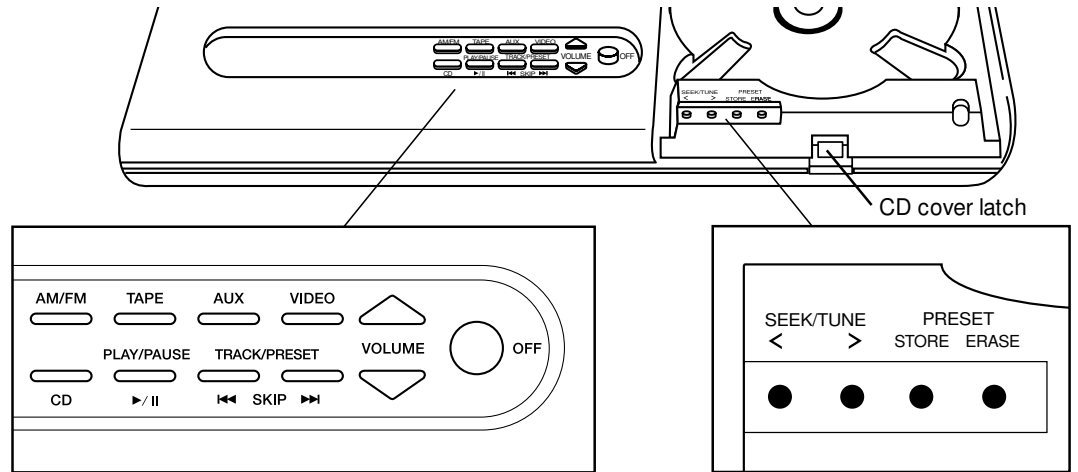

### The music center controls

Use the special keys on the music center to manually tune the radio and set station presets. The CD cover latch opens the CD cover for loading and unloading a CD.


**SEEK/TUNE < / >** - Lowers or raises the frequency setting of the radio (stations).

**PRESET STORE/ERASE** - Adds or removes radio station presets.

### The Lifestyle® remote control

**Figure 20**

The remote control

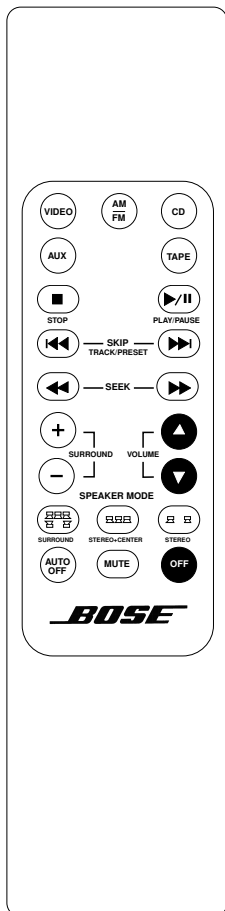

For most types of home construction, your advanced radio-frequency remote control works from anywhere in your home. Its radio wave signals pass through walls and floors to reach the music center. To operate, simply press the desired key. You don't need to aim the remote at the music center.

**Note:** Some types of buildings create "dead spots" where the remote will not operate. Simply move the remote a foot or two and try again. You can also move the music center a few feet to a location with better remote response.

Special keys on the remote control select the speaker mode (2, 3, or 5 speakers), and adjust the surround (rear) volume and the center speaker volume.

**SPEAKER MODE** - Selects SURROUND (5-speaker), STEREO+CENTER (3-speaker), or STEREO (2-speaker) mode.

- When you press VIDEO, the system automatically selects SURROUND mode.
- For other sound sources (AM/FM, CD, AUX, TAPE), the system selects STEREO mode.
- Each time you change to another sound source, the system selects the factory-set speaker mode for that source (SURROUND for VIDEO, STEREO for all others).
- While the system is playing, you can change to any other speaker mode (SURROUND, STEREO+CENTER, STEREO).

**SURROUND + / -** - In SURROUND mode, raises or lowers the volume of the surround speakers. In STEREO+CENTER mode, raises or lowers the volume of the center speaker.

- Each time you select SURROUND mode, the surround and center speaker volumes return to the last settings used. Each time you select STEREO+CENTER mode, the center speaker volume returns to the last setting used.
- To return to the factory-set SURROUND or STEREO+CENTER volume, hold the SURROUND or STEREO+CENTER key for 10 seconds.
- While in STEREO (2-speaker) mode, pressing SURROUND + selects SURROUND (5-speaker) mode.

## Listening to your Lifestyle® 12 system

Your Lifestyle® 12 system offers the option of listening in 2, 3, or 5-speaker mode. The system turns on in SURROUND (5-speaker) mode when VIDEO is selected and in STEREO (2-speaker) mode for AM/FM, CD, TAPE, or AUX. You can change to the speaker mode that sounds best to you for each particular program.

You can listen to any program material in SURROUND mode, whether the program is surround-encoded, stereo, or monaural. You will not hear sound from all 5 speakers all of the time. Even with surround-encoded material there are times when no sounds are directed to the surround speakers. For most video material (mono, stereo, or surround), listening in 3 or 5-speaker mode helps anchor the dialogue to the picture while providing a fuller sound. See additional discussion about selecting program material on page 4.

The system's Videostage® decoding technology directs the sound from surround-encoded program material to the appropriate speakers to create the home theater effects. Monaural program material is directed to the front speakers, primarily the center. For stereo material, sounds encoded as left are directed to the left front, right to the right front, and both left and right directed primarily to the center. Some sounds which are not specifically left or right may also be directed to the surround speakers. Decide if the particular material sounds better to you in 3 or 5-speaker mode.

### Adjusting the volume

- Use the VOLUME ▲ (up) or ▼ (down) keys to raise or lower the volume.
- For SURROUND mode, use the SURROUND + or – keys to raise or lower the sound level directed to the surround speakers.
- For STEREO+CENTER mode, use the SURROUND + or – keys to raise or lower the sound level directed to the center speaker.

### Turning the system off

- Press the OFF key on the remote or the console.
- To turn off your music system automatically after 15 minutes, press the AUTO OFF key on the remote. Each additional press of AUTO OFF increases the time until shutoff by 15 minutes (up to 75 minutes). The display indicates AUTO OFF is set and flashes the amount of time set.

## Listening to video sound

### Turning the video components on

Turn on the TV, VCR, laserdisc, DVD, or CDI player, or other video source. If you are viewing video from a VCR, laserdisc, DVD, or CDI player, load a tape or disc.

### Turning the system on and choosing video sound


Press the VIDEO key on the remote or the console to turn your music system on to play video sound. The system turns on in SURROUND mode.

If your video component is connected to the music center AUX or TAPE jacks, press AUX or TAPE to select the source. The system turns on in STEREO mode. Select SURROUND or STEREO+CENTER mode, if desired.

### Using enhanced bass for movie soundtracks

Pressing VIDEO turns the system on in enhanced bass mode, a bass level specially designed for proper playback of movie soundtracks. Press VIDEO again to alternate between enhanced bass for movies and standard bass for other listening.

Pressing AUX or TAPE turns the system on in standard bass mode. Press AUX or TAPE again to alternate between standard bass for other listening and enhanced bass for movies.

 **Note:** You may not hear a difference between enhanced and standard bass when listening to movie soundtracks that do not have much very low bass content.

## Listening to the radio

### Turning the system on and choosing the radio

Press the AM/FM key on the remote or the console to turn your music system on to the most recently heard AM or FM station. The system turns on in STEREO mode. Select another speaker mode, if desired.

**Note:** *If the system is on and the radio is already selected, this key switches between the AM and FM bands.*

### Tuning

#### Seeking the strongest stations

- Press and release the SEEK ►► (forward) or ◄◄ (reverse) key on the remote to seek and stop at the next strong signal. If you hold these keys down, the radio continues to seek without stopping at any station.
- Or, press SEEK/TUNE > or < (under the CD cover) on the music center.
- To stop seeking in one direction, briefly press the opposite direction key.

#### Switching between AM and FM

Press the AM/FM key to switch to the other band.

#### Manual tuning

If you want to tune the radio to a distant or weak station that the radio cannot seek, use the SEEK/TUNE keys, located under the CD cover.

1. Hold down the > or < key to scan through the stations.
2. Release the > or < key to stop at a selected station.
3. As soon as the scan stops, tap the > or < key to tune one channel at a time.

#### Setting a station preset

Your Lifestyle® music center can store up to 20 AM and FM stations in any combination.

1. Select a radio station you wish to store as a preset.
2. Press the STORE key (located under the CD cover). The station is stored in the lowest available preset location.
3. If you decide not to store the displayed station in the displayed preset location:
  - a. Press and hold the STORE key.
  - b. Press the SKIP ►► (forward) or ◄◄ (reverse) key to select a different preset number for this station.
  - c. Release the STORE key. The frequency of the preset station flashes.

**Note:** *You cannot store a station in an already-occupied preset location without erasing that preset station first (see "Erasing a preset station" below). If you attempt to store more than 20 stations, the preset display will flash '— —'.*

#### Selecting a preset station

Once you set one or more station presets, press the SKIP ►► (forward) or ◄◄ (reverse) key to select the next or the previous preset station.

#### Erasing a preset station

1. Use the SKIP ►► (forward) or ◄◄ (reverse) keys to select the preset station you wish to erase.
2. Press the ERASE key (located under the CD cover). The preset number is no longer lit.




## Listening to a CD

### Loading a CD into the music center

Press the latch on the CD cover, and place a CD onto the spindle, label-side up. Close the CD cover.



 



 
 
 

 
 
### Turning the system on and choosing the CD player

Press the CD key on the remote or the console. If the music system is already on, pressing one of these keys selects the CD player and the CD indicator lights. The system turns on in STEREO mode. Select another speaker mode, if desired.

If a CD has been loaded, it begins to play. If no CD is loaded, the No Disc  indicator lights.


### Using the CD player

The following operations apply to keys on both the remote control and the music center, except where noted:

- To play a stopped or paused CD, press  PLAY/PAUSE.
- To pause a CD, press .
- To stop a CD, hold the  key on the music center for two seconds, press the  STOP key on the remote, or open the CD cover.
- To skip tracks, press SKIP  (forward) to go to the next track or SKIP  (reverse) to go to the beginning of the current or previous track.
- To move through a track, on the remote control press SEEK  (forward) to move forward or SEEK  (reverse) to move back, on the music center press and hold SKIP  or SKIP .
- To play tracks in random order, (using the music center controls only) press the SKIP  and  keys simultaneously. To continue playing the tracks in their regular order, press these keys again.

## Using the system with an external component

Follow the instructions for connecting a component before proceeding. To begin, make sure the component is turned on and a tape, CD, DVD, laserdisc, etc. is loaded.



 **Note:** The Lifestyle® 12 system cannot turn a connected component on or off.

### Turning the system on and selecting the component


Press the TAPE, AUX, or VIDEO key on either the remote or the console to turn the system on and select the component connected to that input. If the system is already on, press one of these keys to select the component. Pressing TAPE or AUX plays it in STEREO mode; pressing VIDEO plays it in SURROUND mode. Choose another speaker mode, if desired.

The appropriate display indicator lights when the system is on and the component is selected.

### Using a tape deck, CD changer, or other connected component

Turn on your component directly or by using its remote control. Use the VOLUME  (up) or  (down) key to raise or lower the volume. Control all other functions at the source, referring to its owner's manual if necessary. To record to a connected tape deck, play the source (AM/FM, CD, AUX, VIDEO) you wish to tape. Set the tape unit to record.

### Using headphones


For headphone listening, use the stereo mini headphones  jack on the left side of the music center. While this jack accepts most headphone models, you can get an adapter at Bose® dealers and most electronics stores, if needed. Connecting headphones automatically shuts off speakers connected to the FIXED OUTPUTs and SPEAKERS A.



## Fine-tuning your system

**Figure 21**

Bass and treble controls

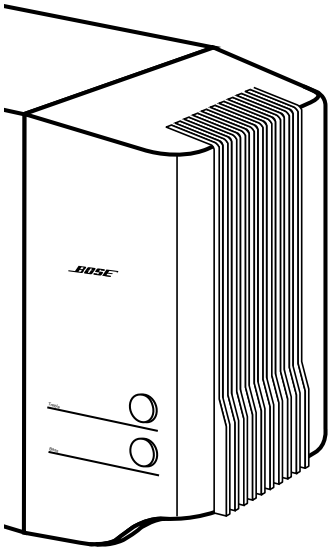

In most situations, you only need to follow the speaker placement guidelines (see “Setting Up” on pages 6-8) for your system to provide excellent sound quality.

You do not need to adjust tone settings for changes in volume, since Bose® patented signal processing technology provides a natural tonal balance over the full range of volume settings.

If desired, you can further fine-tune your system as described here.

### Adjusting speaker controls

The Lifestyle® 12 system TREBLE and BASS controls are located on the Acoustimass® module (Figure 21). They allow you to adjust the treble (high frequencies) and bass (low frequencies). In the normal setting, the dots on each control are in the 12 o’clock position. You can also locate the normal setting by feeling when the control settles into the notch at this position. Turn the controls clockwise to increase, and counterclockwise to decrease, the amount of treble or bass.

### Compensating for room acoustics

The acoustics (sound qualities) of your room can affect the overall sound quality of any speaker system. In general, you can reduce many problems with acoustics by the cautious use of the TREBLE and BASS controls.

#### Too much or too little treble

Rooms with too few sound-absorbing furnishings, especially those with bare floors and walls, may sound overly shrill or “bright.” Turning down the treble control (toward –) decreases treble sound.

Rooms with a lot of sound-absorbing furnishings, such as upholstered furniture, wall-to-wall carpet, or heavy drapes, may reduce the treble sound of your system. Moving speakers further away from soft furnishings increases treble. You can increase treble sound by slightly turning up the treble control (toward +).

#### Too much or too little bass

You can decrease bass sound by turning down the bass control (toward –). To increase bass, turn up the bass control (toward +).

Acoustimass module placement affects the amount of bass you hear. Placing the module closer to the corner of the room increases bass. Moving the module away from the corner decreases bass.

### Compensating for movie soundtracks

When a movie soundtrack is played in a motion picture theater, its bass is restored to the full level intended by the movie’s sound designer. To perform the same way in your home, your Lifestyle® 12 system restores the bass to this level when you select VIDEO. In VIDEO, AUX, or TAPE mode, you can choose between standard and enhanced bass.

In VIDEO mode, the system turns on enhanced bass for movies. Press VIDEO again to change to standard bass.

In AUX or TAPE mode, the system turns on in standard bass. Press AUX or TAPE again to change to enhanced bass for movies.

## Changing the house code settings

Each Lifestyle® remote control uses a system of matching house codes to communicate with its corresponding music center. If your remote's commands ever conflict with those of another nearby Lifestyle® system, you can easily set a new house code for your system and its remote control(s) by following the procedures below.

1. Open the remote control battery cover.
2. Locate the miniature switches (Figure 22). Change the position of switch 2, 3, or 4 by moving it in the opposite direction from its current setting.

♪ **Note:** Do not change any other switches at this time.


3. Replace the battery cover on the remote control.
4. Press the OFF key on the console.
5. Open the CD cover.
6. Press the STORE key. The display will begin to flash '— —'.
7. Within two seconds while the display is flashing, press any key on the remote control.

The display stops flashing and momentarily shows '— —' to confirm recognition of the house code. The system will remain off.

8. If you have additional remote controls, open the battery cover of each one and change the switches to match those of the first remote control. It is not necessary to repeat steps 4–7.

**Figure 22**

Miniature switches for setting house codes and speakers

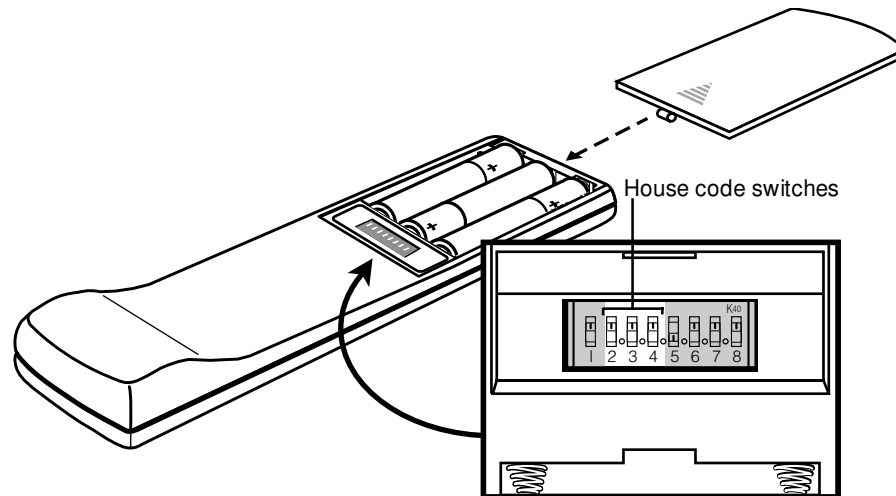

## Adding speakers

Your Lifestyle® 12 system provides high quality audio for a single listening area. However, your music center also provides connections (SPEAKERS A or SPEAKERS B) for adding a pair of powered speakers in a second room. In the second room, you can listen to the sound source that is playing in the main room.

You can purchase an additional remote control to keep in the second room.

Keep the following considerations in mind if you choose to connect secondary speakers.

*Using speakers connected to the B outputs:*

- You must use a second remote control, set to B (see instructions below), to turn on the B speakers.
- Adjusting volume with this second remote adjusts volume for only the B speakers.
- Using the mute key on the second remote mutes or unmutes the second room speakers.

*Using speakers connected to the A outputs:*

- The music center controls operate speakers connected to FIXED and A outputs.
- Adjusting volume from the music center control panel or with the remote control that came with the system adjusts volume for speakers connected to FIXED and A outputs.
- Using the mute key on the main remote mutes or unmutes speakers connected to FIXED and A outputs.

### Setting a second remote for additional speakers

You need a second remote control, set to B, to operate speakers connected to the SPEAKERS B outputs. When you purchase a second remote control, it is shipped set to A, to control your main speakers. It will also control secondary speakers connected to SPEAKERS A.

To set your second remote to control speakers connected to B, follow these steps:

1. Open the remote control battery cover.
2. Locate miniature switch 5. Slide the switch down (Figure 23).
3. Locate miniature switch 6. Slide the switch up (Figure 23).
4. Make sure that the house code switches match those on your first remote (see page 20).
5. Replace the battery cover on the remote control.


**Note:** Switches 7 and 8 are not for current system use.

**Figure 23**

Speaker code switch settings



 Set to SPEAKERS A



Set to SPEAKERS B

## Troubleshooting

<b>Problem</b>	<b>What to do</b>
System does not function at all	<ul style="list-style-type: none"> <li>• Make sure the power connector is plugged securely into the music center, the Acoustimass® module power cord is plugged securely into the module, and the power pack and power cord are plugged into operating AC wall outlets.</li> <li>• Be sure to select a source (CD, AM/FM, etc.).</li> <li>• Unplug the music center power pack for a minute, then reconnect it. This allows the unit to reset itself after a power surge or power interruption.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Make sure the audio input cable is connected to the music center FIXED outputs, the black connector is fully seated in the music center SYSTEM CONTROL 1 jack, and the multi-pin connector is firmly seated in the Acoustimass module jack.</li> <li>• Turn the music center off for ten seconds, then on again, to reestablish communication between the music center and the speakers.</li> <li>• Check the connections for any external components. Make sure to select the correct source for the desired input.</li> <li>• Check the speaker connections.</li> <li>• Be sure the CD is placed correctly, label-side up, in the music center, and the cover is closed.</li> <li>• Increase the volume.</li> <li>• Check to see if MUTE is lit in the display. Press the MUTE button on the remote to unmute the sound.</li> <li>• Disconnect any headphones.</li> <li>• Connect the FM and AM antennas.</li> </ul>
No sound from center speaker	<ul style="list-style-type: none"> <li>• Make sure that the center cube cable is connected at both ends.</li> <li>• Select STEREO+CENTER (3-speaker) or SURROUND (5-speaker) mode.</li> </ul>
Too much sound from center speaker	<ul style="list-style-type: none"> <li>• In STEREO+CENTER mode, press SURROUND <b>—</b>, to decrease center speaker volume.</li> <li>• Press and hold the STEREO+CENTER (3-speaker) mode key for 10 seconds to restore the factory preset center volume setting.</li> </ul>
No sound from surround speakers	<ul style="list-style-type: none"> <li>• Select SURROUND (5-speaker) mode.</li> <li>• Press SURROUND <b>+</b>.</li> <li>• Make sure the video sound source is stereo and surround-encoded, and the component used (TV, VCR, DVD or laserdisc player) is stereo.</li> </ul>
Surround speakers are too loud	<ul style="list-style-type: none"> <li>• In SURROUND mode, press SURROUND <b>—</b>.</li> <li>• Make sure that the left and right front speakers are connected to the front speaker jacks and the left and right surround speakers are connected to the surround speaker jacks.</li> <li>• Press and hold the SURROUND (5-speaker) mode key for 10 seconds to restore the factory preset surround volume setting.</li> </ul>
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> <li>• Check batteries and their polarity (+ and -).</li> <li>• Operate the remote control closer to the music center.</li> <li>• Make sure the remote control house code matches the music center code. Follow steps 4-7 on page 24 to match the house code settings.</li> </ul>
Unit turns on and off by itself, or acts erratically	<ul style="list-style-type: none"> <li>• Change the house code setting to prevent signals from conflicting with another nearby Lifestyle® system. See page 24 for instructions on setting the house code.</li> </ul>

<b>Problem</b>	<b>What to do</b>
CD does not play	<ul style="list-style-type: none"> <li>• Make sure the music center CD cover is closed.</li> <li>• Check to see if the play symbol ► in the display is lit.</li> <li>• After pressing the CD key, wait a few seconds before pressing PLAY.</li> <li>• Check to see if there is a disc in the player, label-side up.</li> <li>• The disc may be damaged. Try another disc.</li> <li>• There may be dirt or dust on the laser pickup or on the CD. Clean the CD. Do not touch the laser pickup.</li> <li>• The music center cannot play a DVD disc.</li> </ul>
Radio does not work	<ul style="list-style-type: none"> <li>• Make sure antennas are connected properly.</li> <li>• Adjust antenna position to improve reception.</li> <li>• You may be in an area of weak signal coverage.</li> </ul>
FM sound is distorted	<ul style="list-style-type: none"> <li>• Adjust antenna position to reduce interference.</li> </ul>
Sound is distorted	<ul style="list-style-type: none"> <li>• Make sure speaker cables are not damaged and the connections are secure.</li> <li>• Reduce the output level from any external components connected to the music center.</li> </ul>
Volume control is too sensitive	<ul style="list-style-type: none"> <li>• Check to be sure the audio input cable is connected to the music center FIXED OUTPUTS, not to SPEAKERS A or B.</li> </ul>
No tape, CD, VCR, or TV sound	<ul style="list-style-type: none"> <li>• Check the connections.</li> <li>• Refer to the component owner's manual.</li> </ul>

## **Warranty period**

The Bose® Lifestyle® 12 system is covered by a limited 1-year transferable warranty. Details of the warranty are provided on the warranty card that came with your system. Please fill out the information section on the card and mail it to Bose.

## **Customer service**

For additional help in solving problems, contact Bose customer service. See the inside back cover for Bose customer service offices and phone numbers.

## **Cleaning the Lifestyle® 12 system**

The only maintenance needed is cleaning the system and replacing batteries for the remote control.

For information on replacing the remote control batteries, see “Install the batteries” on page 17.


### **Cleaning the music center**

Use only a soft cloth to clean the outside of the Lifestyle® music center.

Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives. Do not allow liquids to spill into any openings. Do not use any sprays near the system.

### **Cleaning the CD player lens**


Clean the CD player lens carefully, and only if necessary. If the lens is dusty, blow the dust away using a cold blower or camera lens brush. To remove fingerprints from the lens, wipe it gently with a lens tissue moistened with lens cleaning solution. Make sure no solution enters the unit; it may cause damage.

 **Note:** Do **not** apply excessive pressure on the lens, which could be damaged.

### **Cleaning the speakers and Acoustimass® module**

Clean the surface of your speakers with a soft damp cloth. Do not use any sprays near the system. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives. Do not allow liquids to spill into any openings.

The speaker grille panels require no special care, although you may vacuum them carefully with a soft-bristled attachment, if necessary.

 **CAUTION:** If liquids get into the product, turn the system off and allow it to air dry. Then turn it on again. If you notice any problems with its functioning, turn it off and contact Bose® customer service.

## Technical information

### **Powered Acoustimass® 25 speaker system**

#### **Power rating**

USA/Canada: 120V~ 50/60 Hz 350W

Europe/Australia: 220-240V~ 50/60 Hz 350W

Dual Voltage: 115/230V~ 50/60 Hz 350W

### **Model 5 music center**

#### **Power pack power rating**

USA/Canada: 120V~ 60 Hz 25VA

Europe: 230V~ 50 Hz 25VA

Australia: 240V~ 50 Hz 25VA

Dual Voltage: 120V~ 60 Hz 25VA and  
230V~ 50 Hz 25VA

#### **Inputs**

TAPE: 3V maximum

AUX, VIDEO SOUND: 4V maximum

FM antenna: 75Ω

AM antenna: 12 μH

POWER: 12V~, 1.0 A

#### **Outputs**

Variable audio: SPEAKERS A and B

Fixed audio: FIXED, TAPE

Headphone: 32Ω minimum impedance

SYSTEM CONTROL: for use with Bose®  
powered speakers and accessories

### **RC-9 remote control**

Range: 65 feet (20 m)

### **Dimensions**

Music center

15.0" W x 7.8" D x 2.5" H  
(38.1 cm x 19.8 cm x 6.4 cm)

Cube speakers

3.0" W x 4.8" D x 6.0" H  
(7.6 cm x 12.2 cm x 15.2 cm)

Acoustimass module

23.3" W x 7.5" D x 14.0" H  
(59.0 cm x 19.0 cm x 35.5 cm)

### **Weights**

Music center

4.0 lb (1.7 kg)

Cube speakers

2.0 lb (1.0 kg)

Acoustimass module

33 lb (15.0 kg)

Total shipping weight

61 lb (27.7 kg)

### **Finish**

Music center

Simulated aluminum, Polymer

Cube speakers

Polymer, painted

Acoustimass module

Vinyl veneer, Polymer

## Accessories

To find out about mounting brackets, stands, and additional remote controls, contact your Bose dealer. Or call Bose directly (see inside back cover for phone numbers).

**A**

Acoustimass® module 2-11, 17, 23, 28, 29  
 AM antenna 5, 16, 26, 29  
 AM/FM 4, 18-22, 26  
 ANTENNA 16  
 antenna 5, 13, 16, 26, 27, 29  
 audio input cable 5, 8, 10, 26  
 AUTO OFF 18, 20  
 AUX 14, 18, 19, 22, 29  
 auxiliary 4

**B**

BASS control 23  
 batteries 5, 17, 26, 28

**C**

cable 5-13, 26, 27  
 cable box 13  
 cable radio signal 16  
 cable TV 12  
 CD 4, 8, 12, 18, 19, 21, 22, 24, 26-28  
 CD player cover 8  
 CDI player 12, 20  
 center speaker 7, 26  
 compact disc 17  
 connections 9-11, 14-16, 25-27  
 controls 2, 8, 13, 18, 19, 23, 24, 29  
 cube speakers 6, 29  
 customer service 6, 9, 27

**D**

display 12, 14, 18, 20-22, 24, 27  
 DVD 12, 15, 20, 22, 27

**E**

enhanced bass 20, 23  
 external antenna 16

**F**

FM 75Ω EXTERNAL antenna connector 16  
 FM antenna 5, 16, 29  
 front speakers 4, 6, 8, 26

**H**

headphones 22, 26  
 house codes 17, 24, 25, 26

**L**

laserdisc 12-14, 26

**M**

moisture 2  
 movie soundtracks 20, 23  
 music center 2-5, 8-19, 21, 22, 24-29  
 MUTE 17

**P**

placement 6, 7, 16, 23  
 PLAY 17  
 port 8  
 power cord 5, 11, 17, 26  
 power pack 5, 11, 17, 26, 29  
 PRESET 19  
 preset radio station 18, 19, 21

**R**

radio 4, 18, 19, 21, 27  
 radio channel spacing 17  
 RCA extension cables 9  
 red collar 9  
 remote control 3-5, 14, 17, 19, 22, 24-29  
 room compensation controls 23

**S**

safety Information 2  
 serial numbers 5  
 signal splitter 16  
 speaker cable 5-9, 27  
 SURROUND 4, 14, 19, 20, 26  
 surround 4-7, 9, 10, 12, 19, 20, 26  
 surround (rear) speakers 7  
 surround cables 9  
 surround speakers 4, 7, 9, 20, 26  
 switches 17, 18, 21, 24, 25

**T**

TAPE jack 14, 15, 18, 19, 22, 29  
 tape 4  
 tape deck 4, 15, 18, 22  
 terminals 9  
 TREBLE control 23  
 troubleshooting 26  
 tuning 6, 21, 23  
 turntable 15  
 TV 4, 6-8, 12-14, 16, 26, 27

**U**

unpack 3, 5

**V**

VCR 8, 12-14, 26, 27  
 ventilation 8  
 VIDEO SOUND jack 13, 14, 17-19, 22, 29  
 Videostage® 4  
 voltage 2, 5, 11, 29  
 VOLUME 18  
 volume 13, 18, 19, 20, 22, 23, 25, 26

**W**

warranty 27  
 wire cover 5, 16



## **USA**

Bose Corporation, The Mountain  
Framingham, MA 01701-9168  
1-800-288-BOSE (1-800-288-2673)  
Phone hours - ET (eastern time):  
Weekdays 9 a.m. to 8 p.m.  
Saturdays 9 a.m. to 3 p.m.

## **Canada**

Bose Ltd., 8-35 East Beaver Creek Road  
Richmond Hill, Ontario L4B 1B3  
1-800-444-BOSE (1-800-444-2673)  
Phone hours - ET (eastern time):  
Weekdays 9 a.m. to 5 p.m.

## **European Office**

Bose B.V., Nijverheidstraat 8  
1135 GE Edam, Nederland  
TEL 0299-390190 FAX 0299-390109

## **Australia**

Bose Australia, Inc., 1 Sorrell Street  
Parramatta, N.S.W. 2150  
TEL 02 204-6111 FAX 02 204-6122

## **Belgique/België**

Bose N.V., Limesweg 2, B-3700 Tongeren  
TEL 012-390800 FAX 012-390840

## **Danmark**

Bose A/S, Industrivej 7, 2605 Brøndby  
TEL 4343-7777 FAX 4343-7818

## **Deutschland**

Bose GmbH, Max-Planck-Straße 36d  
D-61381 Friedrichsdorf  
TEL 06172-71040 FAX 06172-710419

## **France**

Bose S.A., 6, rue Saint Vincent  
78100 Saint Germain en Laye  
TEL 01-30616363 FAX 01-30614105

## **India**

Bose Corporation India Private Limited  
W-16, Greater Kailash-II  
New Delhi 110 048  
TEL (011) 648 4462 FAX (011) 648 4463

## **Ireland**

Bose Corporation  
Carrickmacross, Co Monaghan  
TEL 042-61988 FAX 042-61998

## **Italia**

Bose S.p.A., Via Luigi Capucci, 12  
00147 Roma  
TEL 06-5127641 FAX 06-5115438

## **Japan**

Bose K.K., Shibuya YT Building  
28-3 Maruyama-cho  
Shibuya-ku, Tokyo 150  
TEL 3-5489-1054 FAX 3-5489-0591

## **Nederland**

Bose B.V., Nijverheidstraat 8  
1135 GE Edam  
TEL 0299-390111 FAX 0299-390109

## **Norge**

Bose A/S, Solheimsgate 11  
N-2001, Lillestrøm  
TEL 63-817380 FAX 63-810819

## **Österreich**

Bose Ges.m.b.H., Vienna Business Park  
Wienerbergstrasse 7 (10.OG)  
A-1100 Vienna  
TEL 01-60404340 FAX 01-604043423

## **Schweiz**

Bose AG, Rünenbergerstrasse 13  
4460-Gelterkinden  
TEL 061-9815544 FAX 061-9815502

## **Sverige**

Bose A/S, Blandsädsgratan 2D  
S-43146 Mölndal  
TEL 31-878850 FAX 31-274891

## **United Kingdom**

Bose Limited, Unit G2  
Trinity Trading Estate  
Sittingbourne, Kent ME10 2PD  
TEL 01795-475341 FAX 01795-427227

## **From other locations**

Bose Customer Service, 1 New York Ave.  
Framingham, MA 01701-9168 USA  
TEL (508) 766-1900 FAX (508) 766-1919

## **World Wide Web**

[www.bose.com](http://www.bose.com)

***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

©1998 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
JN97870 PN191409 Rev.01 AM191409 Rev.01