US9456702 (04-08)

Compression Sprayers: 454, 456, 456 SW, 457,





If you are missing parts, instructions or have questions, DO NOT take this unit back to the store. Call 1-800-SOLO-INC. Solo will send the missing parts/information to you promptly.

WARRANTY:

Solo model 454, 456, 456 SW & 457 sprayers are covered by Solo's 5-YEAR LIMITED WARRANTY. Solo manufactured parts which fail due to defective material or workmanship will be repaired or replaced without charge. See page 6 for full details.

SAFETY PRECAUTIONS:

- Do not exceed 45 psi pressure.
- Do not fill with, use or spray flammable materials.
- Do not use gasoline, acid, caustic or potentially injurious chemicals.
- At the time of manufacture of this sprayer, we are not aware of any approved plant protection chemicals which would adversely affect this sprayer when applied in their usual concentration.
- Observe the recommendations of the chemical manufacturer.
- Prior to removing any part of the sprayer pull the pressure relief valve to release any pressure in the tank.
- Wear rubber gloves, safety goggles and appropriate protective clothing.
- After pumping be sure handle is in the locked down position.
- Individuals should be trained in the proper use of this sprayer. Where training is not available, individuals should study and follow the procedures detailed in this manual.
- Do not use acetone based chemicals.

WARNING:

Chemicals can be harmful to individuals and the environment if improperly used. In addition, some chemicals are caustic, corrosive, or poisonous and should be avoided. Read warnings and chemical manufacturer's instructions. Solo high density polyethylene sprayers are fitted with Viton® seals which are resistant to a wide variety of agricultural, industrial and household chemicals; however, care should be exercised to ensure that sprayer components are clean, functioning properly, and in a good state of repair before and during use. If in doubt about a particular chemical, check with manufacturer. If you suspect or observe indications that the material may be unsafe in a Solo sprayer... STOP! Do Not Use or Apply Chemical. ALWAYS WEAR RUBBER GLOVES, SAFETY GOGGLES AND APPROPRIATE PROTECTIVE CLOTHING.

- Read and follow operating instructions.
- Do not fill sprayer over maximum fill mark. Releasing pressure in an overfill condition can cause harmful venting of sprayer contents. •
- Relieve pressure only with sprayer upright and while standing on the side of the sprayer opposite the pressure relief valve. Venting
- of sprayer contents can occur if liquid is over bottom of relief valve.
- CAUTION: To prevent injury from ejected pump assembly and/or solution, never stand with face or body over the top of the tank when pumping, or loosening pump.
- Do not modify sprayer or pressure relief valve.
- Never spray in the direction of humans, animals or property which might be injured or damaged by spray formula.
- Do not use disinfectants, solvents or impregnating agents unless first tested to ensure they are not harmful to the environment and sprayer.
- Do not use liquids with a temperature above 120°F (45°C).
- Remember that a sprayer with liquid is a significant amount of weight (8 lbs. per gallon). Use caution when bending, leaning or walking. Bend only at the knees and support yourself as required to ensure personal safety.
- Do not inflate sprayer without liquid in the tank.
- Do not climb on ladders, trees or other unsteady or potentially unsafe structures.

ASSEMBLY INSTRUCTIONS FOR WAND

- 1. Ensure that the O-ring is on the non-threaded end of the wand.
- 2. Insert the non-threaded end of the wand into the O-ring into the open end of the shutoff valve.
- 3. Tighten the screw cap.

CUSTOMER SERVICE COMMITMENT FROM SOLO'S SERVICE DEPARTMENT

In the event the sprayer you have purchased has missing or damaged parts, please call 1-800-765-6462, 9:00 AM-5:00 PM EST. In order to assist your service representative, please have the following information available: sprayer model number, part description and part number. A parts list is included in your operator's manual.

Solo is committed to your satisfaction and is continuing its efforts to earn your future business.

Screw Cap Wand Install Wand Here O-Ring **Optional Pressure** Gauge Mounts Here Shut-Off Valve


Visit us on the web at www.solousa.com Troubleshooting and parts ordering available online.



USING THE ADJUSTABLE NOZZLE

To change the spraying pattern, first make sure the retaining nut (2) is screwed tight to the elbow (5). If it is not tight, the nozzle

cap (1) and nozzle body (3) will rotate inside the retaining nut and the nozzle will not adjust. For a straight stream pattern, rotate the nozzle cap outward. For a hollow cone pattern, rotate the nozzle cap inward towards the retaining nut. If it becomes difficult to rotate the nozzle cap, remove the nozzle cap from the nozzle body and lubricate the O-ring on the nozzle body with a non-water soluble grease*.

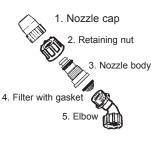

REMOVING ADJUSTABLE NOZZLE

Unscrew the nozzle cap (1) from the nozzle body (3). This is best accomplished while the retaining nut (2) is securely fastened to the elbow (5). Next, unscrew the retaining nut (2). Push the nozzle body (3) out of the retaining nut (2). The filter (4) will come out with the body. To re-install the nozzle, reverse the above instructions.

OPERATION:

- Before using sprayer with chemicals, fill sprayer with fresh water to assure that you have it properly assembled; pressurize and then practice spraying. When thoroughly familiar with sprayer operation, follow normal operating procedures.
- Turn pump handle counter clockwise to remove pump.
- Fill tank with premixed formula up to desired level. (Do not exceed maximum fill mark.) Observe recommendations of chemical manufacturer.
- Tighten cap and pump assembly for a good seal.
- Pump to a maximum 45 psi or 3 bar pressure. The valve stem on the pressure relief valve will rise up to vent excess pressure over 45 psi.
- Start or stop spraying by squeezing or releasing the lever on the shut-off valve (3). The spray pressure can be monitored with an optional pressure gauge.
- Prior to every removal of pump (1), release pressure first by pulling up on the pressure relief valve stem (2).



CLEANING:

- Carefully clean sprayer after every use.
- · Pour or spray all remaining chemical out of sprayer.
- Pour a small amount of water for water soluble chemicals, or mineral spirits for oil-based chemicals, into the tank.
- Pressurize and spray through system until all liquid is gone.
- Repeat process with warm soapy water.
- · Repeat process with warm clear water.
- Use an absorbent cloth to dry all internal surfaces.
- Follow the recommendations of the chemical manufacturer for disposing of waste water and chemicals.
- Do not use aggressive or abrasive cleaning agents.


MAINTENANCE:

- Prior to storage, empty, clean and dry sprayer.
- Always store the sprayer in a dry area, protected from freezing, heat and sunlight.
- Lubricate O-ring in pressure relief valve with non-water soluble grease* on a regular basis.

Disassembly: Unscrew pressure relief valve from tank and pull the valve body out of the screw cap. Clean, lubricate, and replace.

Pump Maintenance: Pump pressure sealing is accomplished with an O-ring (5) on the pump piston (4) which moves within the cylinder (3). Periodically this O-ring should be greased with a non-water soluble grease*. If worn, it should be replaced. A small umbrella valve at the bottom of the cylinder prevents the formula from entering the cylinder. Keep these parts clean and replace if worn.


> Disassembly: Unscrew pump assembly from tank. Carefully remove umbrella valve (6) from the bottom of cylinder (3). While holding cylinder firmly with one hand and the handle of the pump piston (4) firmly in the other, with the piston fully inserted in the cylinder, pull back on the piston quickly and forcefully. To re-assemble, place the piston assembly back into cylinder, place heel of hands on opposite sides of the tank cap, while keeping cylinder in place with fingers, tap bottom of cylinder against a flat padded surface. Assembly will lock into place.

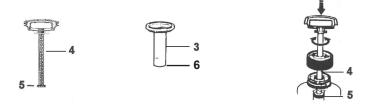

- Tank Cap: A small amount of non-water soluble grease* on tank cap threads and both sides of the gasket eases tightening and loosening.
- Regular Inspection: Inspect and replace worn or damaged parts promptly. Pay particular attention to tank cap gasket, pressure relief valve and seal, inflation valve (if fitted), umbrella valve O-rings and seals throughout sprayer. Regular lubrication of O-rings and seals is recommended.

OPERATING FEATURES:

Nozzles - Your Solo sprayer is standard with nozzle arrangements which provide a variety of spray patterns.

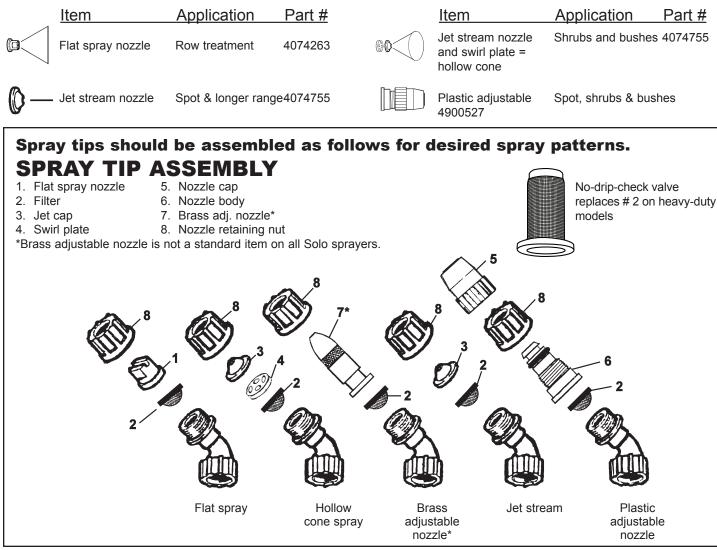

In the best interest of continued technological progress, we reserve the right to change design and configuration of any product without prior or other notice. Therefore, please note that text and illustrations of this manual are not to be considered binding and do not constitute a basis for legal or other claims.

WILL THE PLASTIC MATERIAL LAST?

Only high-grade polyethylene is used. The material is chosen for high molecular weight, high-impact strength, and excellent resistance to chemicals and stress. Ultraviolet inhibitors are used in the material to reduce deterioration caused by sunlight.

HOW HEAVY IS THE UNIT?

Compression sprayers weigh approximately 5 1/2 lbs.

CAN I USE WEED KILLER AND INSECTICIDE IN THE SAME SPRAYER?

In theory you can, if the sprayer is thoroughly cleaned out with a bleach water solution of 1:25. In practice, the use of both types of chemicals in the same unit is not recommended as the risk to plants can be high. Use caution when handling any type of chemicals and when cleaning your sprayer. Do not mix cleaning agents.

WHAT SPRAY NOZZLE SHOULD I USE?

A flat spray nozzle is supplied for spraying paths, garden beds, and general area spraying. A cone nozzle is also supplied for spot spraying and for the treatment of bushes and small trees. For spot spraying, simply remove swirl plate from behind nozzle tip. Save the swirl plate for future use. Available as an option is a reflux filter with a built-in check valve (27 00 316) which opens at 5 psi and closes at 4 psi. This virtually eliminates the dripping of fluid still contained in the spray wand. A wide selection of nozzles such as deflector, adjustable, and anti-drift nozzles are available.

CAN I DO SPOT SPRAYING?

The shut-off valve on the Solo sprayer is well suited for spot spraying. It's almost effortless! The shut-off valve handle incorporates a clip which holds the valve open for area spraying without tiring the operator's hand. A pressure gauge may be added with increments from 0 to 6 Bar (0-90 psi). Note: Always wear rubber gloves, safety goggles and appropriate protective clothing when repairing a sprayer. Once a repair is completed, fill the unit with clean water, pressurize, and check for leaks. If the sprayer leaks, DO NOT USE. Repair leaks and re-check.

SERVICE AND REPAIR SECTION HANDHELD SPRAYER TROUBLE SHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION		
Difficulty in moving pump handle	dirty cylinder wallO-ring on piston swollen (not cleaned properly)	remove piston, clean, grease and replacereplace O-ring, grease		
Low pressure & resistance during pumping	 No lube on piston/cylinder Chemical in cylinder Damaged O-ring in pressure relief valve worm or damaged O-ring in shut-off valve tank cap not tight 	 lubricate with heavy grease Replace umbrella valve replace O-ring replace O-ring tighten cap 		
Leaks from end of spray wand Leaks from inside cylinder Leaks under cap	 worn or damaged O-ring in shut-off valve no lube on piston cylinder worn or damaged umbrella valve 	 rebuild shut-off valve lubricate piston, O-ring and cylinder replace umbrella valve at bottom of cylinder 		
Leaks from shut-off valve Leaks from hose Pressure relief valve sticks	 damaged or missing gasket screw cap not tight worn, damaged or loose fittings, lack of lubrication 	 replace gasket tighten tank cap tighten fittings and replace worn parts, disassemble and lubricate O-rings 		
Air leak - air coming out between halves of the pump support	 worn, damaged or loose fittings lack of lubrication or contaminated relief valve relief valve assembly tank cap not tight gasket twisted or lacking lubrication tank lip damaged 	 tighten fittings and the two replace worn parts clean and lubricate pressure tighten tank cap straighten gasket and lubricate with grease repair or replace tank 		

ACCESSORIES:

The following accessories are not standard. Order them from your Solo dealer.



Pressure control gauge (#49 00 322): displays spraying pressure so operator can maintain desired pressure level.



Pressure limiting valve (#49 00 183): limits pressure to 5 psi, 10 psi or 15 psi as needed for low pressure applications.



Brass adjustable spray nozzle (#06 10 410-P): affords operator a full range of sprays from fine to jet stream.



Drift guard (#49 00 430): helps control application of formula under breezy conditions.



2-nozzle spray boom (#49 00 514): handheld spray boom mounts on end of spray wand (total width 33"; distance between nozzles 24"). Includes 2 flat spray nozzles.





Brass spray wand (#49 00 528): The 2 pcs spray wand is 60" (150 cm) long and replaces the standard spray tube for treating trees up to heights of 16 ft. (5 meters). Additional extension tube available in 20" length (#49 00 513).




Controlled Flow Valve (CFValve™): Provides constant pressure and flow to the spray nozzle and can be used in various applications.

Nozzle Tip Specifications

Description	Order number		oray ume			Pressure		Angle	Applications
		1/min	US gal /min	at atm	psi				
Flat Spray nozzle	4074263	0.88 1.25 1.53	.23 .33 .40	1.0 2.0 3.0	15 29 44	120° 120° 120°	area and row treatment		
Flat spray nozzle -brass -plastic with stainless steel insert	0065210 0065132	0.46 0.64 0.78	.12 .17 .21	1.0 2.0 3.0	15 29 44	80° 80° 80°			
Adjustable nozzle -brass -plastic	4900207 4900527	1.53 0.76	.40 .20	2.8 2.8	40 40	Straight stream Hollow cone	tree spraying (adjustable spraying pattern)		
Full cone nozzle	0065212			_		30°-50°	game repellents of high viscosity		
			ļ						
Full cone nozzle	0065213			30°-50°	game repellents of low viscosity				
Full cone nozzle	0065214				game repellents				
Hollow cone nozzle 1 mm orifice	4900209	0.4 0.55	.10 .15	1.0 2.0	15 29		shrubs, bushes		
Hollow cone nozzle 1.4 mm orifice	4900252	0.64 0.91 1.11	.17 .24 .29	1.0 2.0 3.0	15 29 44	50° 65° 65°			
Hollow cone nozzle 1.8 mm orifice	4900322*	0.88 1.25 1.53	.23 .33 .40	1.0 2.0 3.0	15 29 44	55° 70° 72°			
No-drift nozzle AN 0.5	4074383	0.23	.06	1.0	15	90°	mainly for herbicides at low pressure		
No-drift nozzle AN 1.0	4074385	0.28 0.38 0.46	.07 .10 .12	0.4 0.7 1.0	6 10 15	100° 100° 100°			
No-drift nozzle AN 2.0	4074386	0.55 0.76 0.91	.15 .20 .24	0.4 0.7 1.0	6 10 15	100° 100° 100°	R		
Non-drift nozzle AN 2.5	4074514	0.72 0.95 1.14	.19 .25 .30	0.4 0.7 1.0	6 10 15	110° 110° 110°			
No-drift nozzle AN 5.0	4074513	1.80 1.90 2.28	.48 .50 .60	0.4 0.7 1.0	6 10 15	120° 120° 120°			
Foam nozzle	4900397	0.76 0.90 1.01 1.10	.20 .23 .26 .29	3.0 4.0 5.0 6.0	45 60 75 90		The XAN 2 nozzle is suited for low drift and water saving application of herbicides which tend to foam		



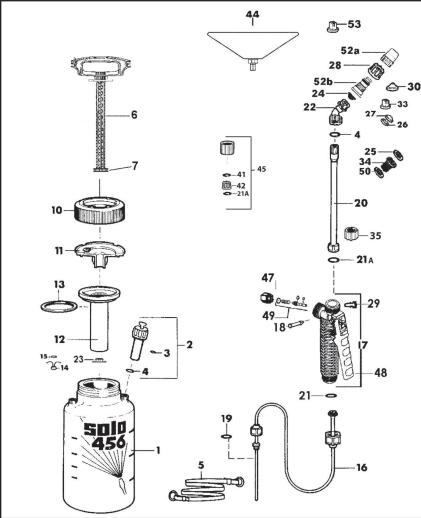

Dee	Ordor	For	Description			
Pos.	Order No.	For	Description			
No.	NO.	Model				
1	4071262	456	Tank, 2 gallon			
-	4071267	454	Tank, 1 gallon Tank, 3 gallon			
2	4071263 4800185	457	Tank, 3 gallon Pressure relief valve assy.			
2	0062166	*	O-ring			
3 4	0062115	*	O-ring			
5	4300245		Carrying strap			
6	4073835		Pump piston, solid			
7	0062264	*	O-ring			
10	4073528		Tank cap, red			
- 11	4073111 4074387	HD	Tank cap, black Cylinder support (need 2)			
12	4073834		Cylinder			
-	4073834		Cylinder (use with 0094308)			
13	4061345	*	Gasket			
14	4074656	*	Valve cone			
15	0062165	*	O-ring			
16 17	4900515 4800170		Pressure hose, assy. Shut-off valve, assy.			
18	4074295		Pin retaining			
19	0062144	*	O-ring			
20	4900230		Wand, assy. (inc. 35 & 21A)			
	4900645	456SW	Stainless Wand			
21	0062271		O-ring			
21A	0062258		O-ring			
22 23	4074527 0094308	*	Elbow Umbrella valve			
23	4074283		Filter			
25	0062106		O-ring			
26	4074756		Swirl plate			
27	4074755		Jet cap tip			
28 29	4074148 4074329		Retaining nut			
29 33	4074329		Lock clip Flat spray nozzle			
47	4074336		Retaining nut			
48	4074335		Lever			
49	0610402-K		Shut-off valve repair kit			
52	4900527	4500144	Plastic adj. nozzle (incl. a & b)			
	4900207	456SW	Brass adj. nozzle			
	Α	cces	sories			
Pos.	Order	For	Description			
No.	No.	Model				
	4900405-K		Pump repair kit			
25	0062106	HD	O-ring			
30	4074726	**	Hollow cone nozzle			
34	2700316	HD	No drip check valve			
35	4074337		Retaining nut			
41	0062249		O-ring			
42	4074338		Retaining nut			
43 44	4065189 4900430		Pressure gauge guard Drift guard			
44	4900430		Pressure gauge assy.			
50	0062115	HD	O-ring			
53	0065210	HD	Brass flat spray nozzle			
	* Pump repair kit ** Organic liquid spray kit					
**	***Cut pick-up tube to fit for models 454 and 456					

Prices and technical specifications are subject to change without notice.

SOLO LIMITED WARRANTY

Solo Incorporated guarantees the original purchaser of Solo equipment, that any failure of Solo manufactured parts due to defects in material and workmanship occurring during the applicable warranty period will be repaired or replaced without charge for parts or labor, except for those items not covered by warranty.

CONSUMER LIMITED WARRANTY: Solo equipment purchased for consumer use is covered by this Limited Warranty for a period of FIVE (5) YEARS.

COMMERCIAL LIMITED WARRANTY: Solo equipment purchased for commercial use is covered by this Limited Warranty for a period of ONE (1) YEAR.

OPERATOR'S OBLIGATION AND RESPONSIBILITY: proof of purchase must be provided by the owner in order to obtain warranty service. Should any failure covered by this Limited Warranty occur, deliver or ship the Solo products or parts to an authorized Solo service center. Freight, packing and insurance costs, if any, will be borne by the owner. Follow normal maintenance service to include applicable lubrication, operation and storage of the product as explained in the owner's manual.

ITEMS NOT COVERED BY WARRANTY: provisions of the Limited Warranty will not apply to the following: Any indirect or consequential damages that may result from the failure or malfunction of the Solo product. Normal service requirements arising during the warranty period, such as cleaning, normal wear, lubrication, filter, spray tips, etc. Normal service work over and above the repair or replacement of defective parts. Any failure that results from an accident, customer abuse, normal wear, neglect or failure to operate the product in accordance with the instructions provided in the operator's manual or provided with the product. When an alteration or modification has been performed on a Solo product, Solo is responsible only for products as originally furnished by Solo, provided the alterations or modifications do not adversely affect the product's operation, performance or durability. Parts or accessories that are incomplete with the product are not approved by Solo.

Full disclosure of Solo's Limited Warranty is available from your local Solo dealer or Solo Incorporated, 5100 Chestnut Avenue, Newport News, Virginia 23605.


This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

SOIO ORDER FORM

Order parts and accessories from your Solo dealer. If there is no local dealer, use this form to order from Solo.

	Item Names/Description	Part No.	Retail Price	Qty.	Total
Nozzles	Flat spray nozzle - surface area & row treatment	40 74 263	2.00		
S	Jet cap	40 74 203	1.50		
Ofe	Swirl plate	40 74 756	1.50		
	Filter - standard	40 74 283	2.56		
	Sprayer elbow and nozzle assortment	06 10 408-P	14.95		
	No-drift wide angle flat nozzles60 GPM	40 74 513	2.50		
	mainly for spraying herbicides at low pressure	40 74 514	2.50		
	At 15 psi they deliver:	40 74 386	2.50		1
	.12 GPM	40 74 385	2.50		
	Elbow nozzle assembly	49 00 258N	6.35		
	Double spray nozzle - for double row application	49 00 477	24.95		
	spraying in two directions simultaneously.				
	Brass adjustable spray nozzle kit - with O-ring and screw	06 10 410-P	8.75		
	cap for tree spraying (from fine misting to a jet stream).				
	Brass adjustable spray nozzle (same nozzle as kit above)	49 00 207	6.25		1
	Plastic adjustable nozzle	49 00 527	4.25		
	Hollow cone nozzles - for shrubs & bushes: 1.4 mm	49 00 252	2.85		
	1.8 mm	49 00 322	2.85		
	Jet stream nozzle	40 74 758	1.50		
-	Foam spray nozzle - for low drift & water saving	49 00 397	9.95		
	application of herbicides which tend to foam.				
	No drip check valve - prevents spray tip from leaking	27 00 316	4.95		
22	when not in use.				
	Nozzle assortment - includes flat, hollow cone, no drift,	06 10 456-P	12.95		
	and plastic adjustable nozzles.				
Extension	<u>tubes and spray wands</u>				
	6" bendable spray wand	49 00 450	18.95		
	20" spray wand	49 00 230	9.95		
	20" extension tube	49 00 513	13.50		
	21" stainless steel wand	49 00 645-P	11.95		
	20" brass spray wand	49 00 421	12.95		
	27" spray wand	49 00 319	13.50		
	40" brass telescoping wand	49 00 478	29.95		
	48" carbon fiber wand	49 00 449	35.95		
	60" brass spray wand	49 00 528	29.95		
	4' to 8' Carbon Fiber Wand	49 00 445	69.95		
	Note: extension tubes attach to wands to extend length.				
	Spray wands attach to shut-off valve only.				
Spray boo	oms				
	Spray booms - spray 2 or 4 rows at once with:		a		
-	2-nozzle spray boom - handheld (total width 33")	49 00 514	31.95		
5	distance between nozzles 24". Includes 2 flat spray nozzles	10.00.000			
•	4-nozzle spray boom - mounts on rear of sprayer	49 00 298	79.95		
	(total width 49 3/4"; distance between nozzles 16").				
	Includes 4 hollow cone nozzles.				
Specialty					
	Solo Superior grease	9850	2.95		
	Pressure gauge kits - indicates spray pressure.	49 00 622	17.75		ļ
	Use with shut-off valve 4800170. Fits all models.	+0 00 022			
@- • ()					1
	Pressure limiting valve - for no-drift spraying of herbicides.	40.00.400	10.0-		
	Helps operator maintain pressure below 15 psi.	49 00 183	18.95		
	Interchangeable springs are color coded for 5, 10 and 15 psi.				
_	Drift guard - complete control for herbicide applications in	49 00 430	16.95		
	berry, flower, vegetable, cotton & other applications.				
Ŧ	Shut-off valve	48 00 170	14.75		
COOCHER			-		
	Shut-off valve, wand & elbow nozzle assy.	49 00 170N	19.95		
	Pump repair kit - contains original equipment O-rings to renew	49 00 405-K	5.95		1
$\left(\begin{array}{c} \\ \\ \\ \end{array} \right)$	all sealing surfaces on 454, 456, 457 sprayers				
ເດັ		0610411 1/	0.05		
	Shut-off and pump repair kit	0610411-K	9.95		
	Sprayer service video	998SPVID	9.95		1
	454/456/457 Operator's Manual, Spare Parts List	US9456702	NC		NC
	ten tes ter eperater e manaan epare i alto hiot				L
					ļ

PARTS BREAKDOWN

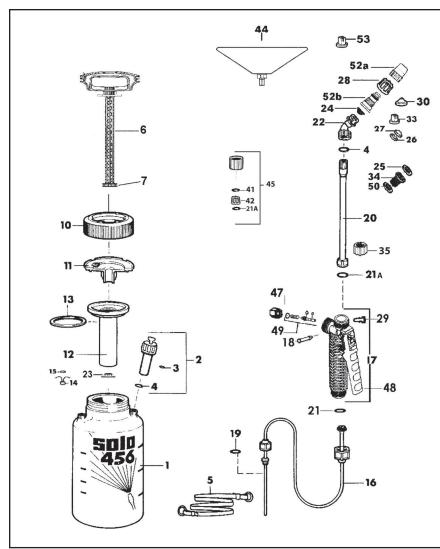

Pos.	Order	For	Description
No.	No.	Model	
1	4071262	456	Tank, 2 gallon
-	4071267	454	Tank, 2 gallon Tank, 1 gallon Tank, 3 gallon
-	4071263 4800185	457	Tank, 3 gallon Pressure relief valve assy.
2 3 4 5 6	0062166	*	O-ring
4	0062115	*	O-ring
5	4300245		Carrying strap
67	4073835 0062264	*	Pump piston, solid O-ring
10	4073528		Tank cap, red
-	4073111	HD	Tank cap, black
11	4074387		Cylinder support (need 2)
12	4073834 4073834		Cylinder Cylinder (use with 0094308)
13	4061345	*	Gasket
14	4074656	*	Valve cone
15	0062165	*	O-ring
16	4900515		Pressure hose, assy.
17 18	4800170 4074295		Shut-off valve, assy. Pin retaining
19	0062144	*	O-ring
20	4900230		Wand, assy. (inc. 35 & 21A)
21	4900645	456SW	Stainless Wand
21A	0062271 0062258		O-ring O-ring
22	4074527		Elbow
23	0094308	*	Umbrella valve
24	4074283		Filter
25 26	0062106 4074756		O-ring Swirl plate
27	4074755		Jet cap tip
28	4074148		Retaining nut
29	4074329		Lock clip
33 47	4074263 4074336		Flat spray nozzle Retaining nut
48	4074335		Lever
49	0610402-K		Shut-off valve repair kit
52	4900527	4500144	Plastic adj. nozzle (incl. a & b)
	4900207	456SW	Brass adj. nozzle
	A	cces	sories
Pos.	Order	For	Description
No.	No.	Model	
-	4900405-K	1	Pump repair kit
25	0062106	HD	O-ring
30	4074726		Hollow cone nozzle
34 35	2700316 4074337	HD	No drip check valve
35 41	0062249		Retaining nut O-ring
42	4074338		Retaining nut
43	4065189		Pressure gauge guard
44	4900430		Drift guard
45 50	4900622 0062115	HD	Pressure gauge assy. O-ring
50 53	0065210	HD	Brass flat spray nozzle
* Dump rangis kit			
* Pump repair kit ***Cut pick-up tube to fit for models 454 and 456			

Prices and technical specifications are subject to change without notice.

Mail or Fax to: Solo • 5100 Chestnut Avenue Newport News, VA 23605 • Phone: (757) 245-4228 • Fax: (757) 245-0800 Order Online: www.solousa.com E-mail: solo@solousa.com Please do not send cash with this order. Make check or money order payable to Solo Incorporated. You may request C.O.D. shipment. Please call for current C.O.D. charges. Form of Payment:

- Credit Card
 - Check or Money Order
 - **C**.O.D.

Credit Card Number

Expiration Date Signature and Phone Number

We cannot process your credit card purchase without a signature and expiration date.


PLEASE PRINT:

Name

Address_

City ____

_____ State_____ Zip _____

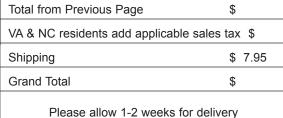

SOIO 5100 Chestnut Avenue Newport News, VA 23605