

ProTalk

CV3

Installation & Operation Manual

January 2011
Rev. 2.0

 BARNETT ENGINEERING LTD.

215, 7710 5th St. S.E.
Calgary, Alberta, Canada
T2H 2L9

Phone: (403) 255-9544
Fax: (403) 259-2343
www.barnett-engg.com
e-mail: sales@barnett-engg.com

TABLE OF CONTENTS

1. INTRODUCTION	1
2. BEFORE YOU BEGIN	2
3. POWER REQUIREMENTS	3
4. INSTALLATION	4
WIRING YOUR INPUTS	5
WIRING YOUR OUTPUTS	7
5. PROGRAMMING	8
PROGRAMMING WITH A PC.....	8
PROGRAMMING WITH A HANDSET	9
HANDSET PROGRAMMING CODES	10
6. TESTING THE INSTALLATION	31
7. OPERATIONS	32
8. SPECIFICATIONS	37
9. TECHNICAL DRAWINGS	39
UNIT DIMENSIONS	39
WIRING INPUTS.....	40
10. GLOSSARY	42
11. PRODUCT SUPPORT	45
12. WARRANTY STATEMENT	46

1. INTRODUCTION

The ProTalk Cv3, model B1277, is a device used to monitor alarms at an unattended site and report alarm conditions over a cellular network and/or a two-way radio or public address system. It is compatible with many temperature, humidity, and fluid level sensors as well as smoke, fire, intrusion, and other discrete sensors. The device also has four relay outputs that can be operated automatically, or by using a remote telephone for control of external equipment.

Configuration of the ProTalk Cv3 can be accomplished using the dedicated PC application, using a local programming telephone, or by remotely calling in to the unit. When using either the local or a remote telephone to program the unit, the unit prompts you step-by-step for database parameters using spoken phrases and speaks back all the values you have entered.

The sections in this manual show the installation and operation of the ProTalk Cv3 as well as instruction for programming the unit using the keypad on your telephone or by downloading a database from an attached computer.

2. BEFORE YOU BEGIN

The Cv3 is an alarm reporting unit with an embedded CDMA transceiver. Included with this device are the following:

- 16 pin terminal block for wiring alarm inputs
- 16 pin terminal block for wiring alarm outputs/radio/power
- USB cable for PC programming
- Dipole Antenna
- Programming software CD-ROM
- SMA to TNC Antenna Adapter
- This manual

System Requirements

The Cv3 is designed to operate on a CDMA network. In order to operate on a wireless network, you will require an account with a local wireless provider as well as a Mobile Identification Number (MIN) or Mobile Directory Number (MDN).

Additionally, to program the Cv3 and the embedded transceiver, one of the following is required:

- Standard telephone set with DTMF keypad, or
- Personal Computer with CD Drive and USB port running Windows 2000/XP/7/Vista

Registering the Cellular Transceiver

To program the embedded cellular transceiver for use on the CDMA network, you will need to obtain a MIN (or MDN) from your wireless provider. You will need to give your wireless provider the following information:

- Electronic Serial Number (ESN) – printed on the side of the Cv3
- Installed “home” location – establishes the local calling region
- A billing contact name and address

ESN (11 digits) _____

MIN (10 digits) _____

MDN* (10 digits) _____

*may be required

3. POWER REQUIREMENTS

The Cv3 requires a DC power supply voltage between +12 to +24 Volts. This supply should be capable of delivering up to 1 Amp of current. Connect your DC power source to the Ground (GND) and Positive (PWR) terminals on the terminal block.

Optional Internal Battery Backup

When the Cv3 is equipped with the optional internal battery backup, it will continue to function without primary power. The life of the battery is dependant on unit operations and call outs during the power outage. Should the battery voltage drop below +9 Volts, the Cv3 will disconnect and shutdown. The internal battery backup is intended as a fail safe during power outages and should only be used as a temporary means to provide power to the unit.

The internal battery charger operates with input voltages between +8 and +30 volts DC. The internal battery is limited to 1.4Ahr; if you require a larger battery capacity, please contact our sales office for alternative battery options.

Since a Cv3 equipped with an internal battery will continue to function in the absence of primary power, a means of manually shutting the system off has been provided. This feature is used when servicing or relocating the unit. The shutdown switch is located next to the DB9 programming connector. A forced shutdown can only be done when the primary power is absent. Press and hold the shutdown switch for five seconds to force the Cv3 into shutdown mode. After five seconds, the internal battery will be disconnected and the unit will not be operational. The Cv3 will return to the operational state when the primary power is applied again.

The internal battery option is not recommended for applications requiring low power consumption.

4. INSTALLATION

The B1277 Cv3 should be installed in a clean, dry location suitable for electronic equipment.

Caution: Power and antenna cables should be connected only after the installation is complete.

In order to communicate with neighbouring cellphone towers, you will need to attach an antenna to the Cv3. The air interface for this phone is an SMA connector on the side of case.

A dipole antenna was included in the purchase of this product. This antenna is suitable for indoor use only and is limited in its range. Please contact our sales office if your needs exceed the limits of this antenna, as we may be able to supply or recommend an appropriate substitute.

Installation using a two-way radio or public address system

The radio port provides the interface to a customer supplied mobile radio base station. It can also be connected to a public address system. This port supports outgoing (TX) audio, incoming (RX) audio, a push-to-talk (PTT) line to control the transmitter and a carrier operated switch (COS) line to monitor if the radio system is busy. Both audio lines are single ended and have independent level controls. The PTT line is an open collector driver. The COS line uses a ground closure to sense activity and can be programmed for either normally open or normally grounded operation.

Wiring Your Inputs

Connections

The Cv3 has ten inputs for connection to customer alarm signals. Each input can be independently programmed to accept either a digital or analog signal. Refer to Figure 1 for details of the connector pinouts.

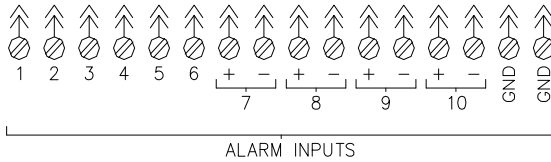


Figure 1 Alarm Input Connections

Contacts and Other Digital Alarm Inputs

When programmed for digital operation, the high (or open) state is provided by a switched internal pullup resistor connected to a +5 volt source. The low state is when the input voltage is below +2 volts. For most applications, this is done by a closure to ground using either a relay contact or an open collector/drain transistor. A voltage source can be used for a digital alarm provided it can go below the +2 volt threshold and sink 1 mA. A voltage signal of up to +36 volts can be used without damaging the input. Do not connect AC voltage sources of any type to the inputs. For digital operation, connect the signal to the single terminal for inputs 1 through 6 and either the + or – terminal for inputs 7 through 10. Technical drawings have been provided on page 41 for your reference.

In addition to the standard detection of an alarm state at the input, a digitally formatted input can also be configured as a watchdog type of alarm, or as non-alarm types: totalizer, accumulator or pulse width. A watchdog alarm type requires a periodic refresh signal to prevent an alarm condition; a totalizer type counts the changes at the input; an accumulator stores the total time that the input is active and a pulse width measures the duration of an active input. These three formats do not generate alarms and must be interrogated to recover the reading.

Each change to a totalizer or accumulator count is stored in non-volatile memory. If a power loss or system restart occurs, the stored count will be recovered from memory and the count will continue without interruption. Note that, in the event of a power loss, any activity that occurred during the outage will not be recorded.

A digital input can also be alternatively programmed to perform one of the three Special Purpose functions: local acknowledge, shift select or shift

advance. Shift select is used with a two position switch that selects one of two shifts. Shift advance is used with a pushbutton switch that advances the shift with each activation.

Temperature and Other Analog Alarm Inputs

All ten inputs can be programmed for monitoring analog voltage signals. Two programmable ranges are available: 0 to +5 volts DC and 0 to +30 volts DC. For analog voltage operation, connect the signal to the single terminal for inputs 1 through 6 and either the + or – terminal for inputs 7 through 10.

Inputs 7 through 10 are also capable of accepting 4-20 mA analog signals. When programmed for analog current operation, the + side of the loop is connected to the + terminal and the negative side to the – terminal. Technical drawings have been provided on pages 41 & 42 for your reference.

Internal Monitoring

The incoming DC power supply is monitored as alarm 11. It has a full scale range of 30 volts.

Wiring Your Outputs

Refer to Figure 2 for details of output pinouts

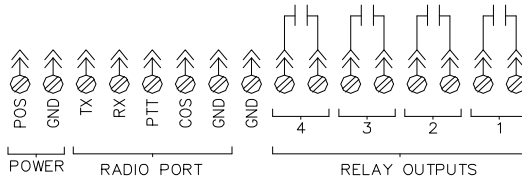


Figure 2 Output Connections

The four output relays can be programmed for either remote control or to indicate internal status of the Cv3. Internal status can be programmed as ‘new alarm present’, ‘any alarm present’, a pulsed output when an acknowledgement is received or as a system alarm. When used for status indicators, specific relays are assigned as follows:

- Relay 1 New Alarm
- Relay 2 Any Alarm
- Relay 3 Acknowledge Received
- Relay 4 System Error

Two contacts from each relay are brought to the terminal block. The idle state of the contacts (either normally open or normally closed) is set in programming.

5. PROGRAMMING

Programming With A PC

In order to program your Cv3 using a PC, you will need to install the appropriate programming software. A complimentary copy of our Windows-based software was included in the purchase of the product. Simply insert the disk into your CD/DVD ROM drive and follow the InstallShield instructions. Be sure to keep the disk in the drive until your initial programming is complete.

Once the installation of the programming software is complete, you will need to connect your Cv3 to your PC. Two data connectors are provided for programming and monitoring the Cv3: an RS232 port using a DB9 male connector and a USB type B connector. Do not use both at the same time.

If you are using the USB connection, you will need to install the drivers found on the installation CD. The Found New Hardware Wizard will ask you if you want Windows Update to search for software; select *“No, not at this time”*. You will then be prompted for an installation CD. This is the software that was provided to you and should still be in your drive. Select *“Install the software automatically”*. Confirm the hardware selected is CP2101 USB Composite Device. Select *“Next”*. Finally, Windows may ask for authorization to continue without Logo testing. Select *“Continue Anyway”*. You will need to go through this process twice to install the drivers.

Now that your software and drivers are installed, you are ready to program your unit.

Simply double click the BE shortcut on your desktop or follow your start menu to All Programs and select Barnett Engineering. This will open up a generic folder containing information for all of our products. You will find the Cv3 Configuration Software in the B1277 Cv3 folder. Select this executable and it will open the programming software. All information pertaining to the software can be found within the Help files of the Cv3 Configuration Software.

Programming With A Handset

The B1277 is capable of recording voice messages and limited programming using a TouchTone telephone; either locally through the programming port or remotely by calling in to the unit.

Local Programming

A standard RJ11 Telephone jack has been provided. This port accepts a standard TouchTone telephone set and is used to record voices or perform basic, programming tasks. **DO NOT PLUG A TELEPHONE LINE INTO THIS PORT.**

To begin a local programming session, lift the handset to your ear.

The B1277 has stored voice prompts to guide you through the programming session. The first message you will hear is "Enter Command Code" followed by a pause, and then, "Enter Program Code". Refer to the Handset Programming Codes on Page 10 for a list of Program Codes and the subsequent pages for instructions on programming each section.

Remote Programming

For a remote session, call in to the B1277 from your TouchTone telephone set.

When answering an incoming call, this unit responds depending on the previously programmed Security Level setting:

- Level 1: The call will be answered with a message containing the Site ID, any Groups that have alarms, followed by the prompt "Enter Command Code". An Access Code is not required.
- Level 2: The call will be answered with a message containing only the Site ID. To advance any further the caller must enter the Access Code within 10 seconds.
- Level 3: The call will be answered with the device emitting short beeps. To advance any further the caller must enter the Access Code within 10 seconds.

If the unit's security level is set to Level 1, or the Access Code was successfully entered, the B1277 will say "Enter Command Code" and then pause for several seconds. If the Access Code is entered again, or the Access Code is blank, the unit will enter the programming mode and speak "Enter Program Code". At this time you can enter your program codes using the Program Summary on Page 10.

Handset Programming Codes

The codes used in the main programming menu are given as a summary below. If no keys are pressed for five seconds, the Cv3 will announce the menu choices.

- ① * * Voices (page 11)
- ② * * Directories (page 12)
- ③ * * General Site Configuration (page 14)
- ④ * * Input Configuration (page 16)
- ⑤ * * Output Configuration (page 22)
- ⑥ * * Group and Shift Configuration (page 25)
- ⑦ * * Radio Configuration (page 26)
- ⑧ * * Reset Database (page 27)
- ⑨ * * Cellphone Status (page 28)
- ⑩ * * Cellphone Programming (page 29)
- # * * Query Version (page 30)

1 Voices**

Cv3: "Program Voice"

Cv3: "Enter Voice Code"

You: **1**** Playback or record voices for Site Name (then
Groups 1 to 6, if used)

2** Playback or record voices for Alarm inputs

3** Playback or record voices for Relay outputs

5** Erase all voices

#** Exit to Main Menu

****** Exit to Main Menu

Playback or Record Voices

Cv3: "Site is" *"Ajax Compressor Station"*

or "Input 1 is" *"Low Temperature"*

or "Output 1 is" *"Yard Lights"*

You: **2**** Record new voice

#** Exit to voice menu

****** Accept current recording and advance to next
voice

Recording:

Cv3: "beep"

You: *"Acme Lift Station"* (Recording stops with silence)

Cv3: "Site is" *"Acme Lift Station"*

Erase All Voices:

Cv3: "Alert, Enter Octo Three One Star Star"

You: **#31****

Cv3: "Voices are empty"

2 Directories**

Cv3: "Program Directory"

Cv3: "Directory Line 1 is..."

or "Enter Group Number"

You: **1**** Group 1
2** Group 2
 ...
6** Group 6
#** Exit to Main Menu
****** Exit to Main Menu

Directory Line

Refer to the command list that follows for the available directory entries.

Cv3: "Directory Group 1 Shift 1 Line 1 is..."

or "Directory, Line 1 is DIAL 2559544 VOICE"

You: **2**** Edit current line
3** Erase current line
4** Insert line
****** Next line
#** Exit to Directory Menu

Edit current line

Cv3: "beep"

You: **#01234567#8****
 (new line is DIAL 1234567 VOICE)
or **1234567****
 (new line is DIAL 1234567 VOICE)

Insert new line

Cv3: "beep"

You: **#1#8****
 (new line is RADIO VOICE)

Directory Commands

Directory programming requires you to enter a sequence of digits that corresponds to a directory line in the PC programming. All of the commands that would appear on that line have to be entered with one string ending in **[*][*]**. Each command consists of a **[#]** digit followed by the digit representing the command followed by digits representing the value (if needed). The list below shows the sequence of digits used to enter the commands and values; the value portion is shown as a single **[X]** and will vary depending on the command it is following.

Quick Commands

[X][*][*]	DIAL & VOICE	[X] is the telephone number.
[#][1][*][*]	RADIO, ALERT & VOICE	
[#][2][X][*][*]	WAIT	[X] is the time in seconds (< 255)
[#][9][X][*][*]	SMS TEXT	[X] is the data phone number.

Custom Sequences

Custom sequences are created by selecting a prefix to define the port, followed by one or more commands and ending in a **[*][*]** suffix.

Prefix Options

[#][0][X]	DIAL	[X] is the phone number.
[#][1]	RADIO	

Command Options

[#][3]	ALERT	
[#][4][X]	2 TONE	[X] is the paging frequencies with an assumed decimal before the last digit with a [*] separating them. [1][2][3][4][5][*][6][7][8][9] will give the A/B paging tones 1234.5/678.9.
[#][5][X]	5 TONE	[X] is the 5 tone paging code with a [*] used to separate the preamble from the code. [1][*][2][3][4][5][6] will give the code 23456 with preamble.
[#][7][X]	DTMF	[X] is the string of DTMF digits.
[#][8]	VOICE	

Example: **[#][1][#][5][1][*][2][3][4][5][6][#][3][#][8][*][*]** would transmit 5 TONE paging tones over the RADIO, then generate an ALERT and speak VOICES.

3** General Configuration

Cv3: "Program Site"

Cv3: "Dial Control is . . ."

You: **X**** Enter new value (0 = off, 1 = on)
#** Exit to Main Menu
****** Next setting

Cv3: "Acknowledge Request is . . ."

You: **X**** Enter new value (0 = off, 1 = on)
#** Exit to Main Menu
****** Next setting

Cv3: "Acknowledge Timer is . . ."

You: **X**** Enter new value (0 = off, 1 = 30 min, 2 = 60 min,
 3 = 120 min, 4 = 240 min)
#** Exit to Main Menu
****** Next setting

Cv3: "Relay voices are . . ."

You: **X**** Enter new value (0 = off, 1 = on)
#** Exit to Main Menu
****** Next setting

Cv3: "Security Level is . . ."

You: **X**** Enter new value (1, 2 or 3)
#** Exit to Main Menu
****** Next setting

Cv3: "Access Code is . . ."

You: **X**** Enter new DTMF code
#** Exit to Main Menu
****** Next setting

Cv3: "Modem Code is . . ."

You: **X**** Enter new DTMF code
#** Exit to Main Menu
****** Next setting

Cv3: "Auto Report is . . ."

You: **X**** Enter new value (0=disable, 1=enable)
#** Exit to Main Menu
****** Next setting

Cv3: "Start Auto Report at . . ."

You: Enter hour and minute of first auto report time
 0 = not used
 4 digit time (eg. 0830)
 hours = 01 to 23
 minutes = 00, 15, 30. or 45

Exit to Main Menu

Next setting

Cv3: "Report Every . . ."

You: Enter time between reports
 0 + digits = hours (01, 02, 04, 06, 08 or 012 hours)
 1 to 7 digits = days (1 = Monday, 2 = Tuesday...)

Exit to Main Menu

Next setting

Cv3: "Auto Report Radio is . . ."

You: Enter new value (0 = off, 1 = on)

Exit to Main Menu

Next setting

Cv3: "Auto Report Phone Number is . . ."

You: Enter new phone number

Erase phone number (disabled)

Exit to Main Menu

Next setting

Cv3: "Auto Report Text Message Number is . . ."

You: Enter new destination phone number

Erase phone number (disabled)

Exit to Main Menu

Next setting

4** Input Configuration

Cv3: "Program Input"

Cv3: "Enter Input Number"

You: 1** Select Input 1

•••

12** Select Input 12

#** Exit to Main Menu

** Select Next Input

Cv3: "Input N Sensor is . . ."

You: 1** 1, Digital input

2** 2, Watchdog input

3** 3, Interval input

4** 4, Totalizer input

5** 5, Accumulator input

6** 6, Intrusion input

7** 7, 5 volt analog input

8** 8, 30 volt analog input

9** 9, Current input

10** 10, System – Acknowledge input

11** 11, System – Shift select input

#** Exit to Main Menu

** Next setting for this input

Menu items for Digital Inputs are:

Cv3: "Input N Is . . ."

You: X** Enter new value

0 = disabled

1 = enabled

1 to 6 = new group member

#** Exit to Main Menu

** Next setting

Cv3: "Input Level is . . ."

You: X** Enter new value

1 = normally high or transition to low

2 = normally low or transition to high

3 = either transition

#** Exit to Main Menu

** Next setting

Cv3: "Alarm Format is . . ."
 You: (X)(*)(*) Enter new value
 0 = non latching
 1 = latched
 #(*)(*) Exit to Main Menu
 * (*) Next setting

Menu items for Accumulator Inputs are:

Cv3: "Input N Is . . ."
 You: (X)(*)(*) Enter new value
 0 = disabled
 1 = enabled
 1 to 6 = new group member
 #(*)(*) Exit to Main Menu
 * (*) Next setting

Cv3: "Input Level is . . ."
 You: (X)(*)(*) Enter new value
 1 = normally high or transition to low
 2 = normally low or transition to high
 3 = either transition
 #(*)(*) Exit to Main Menu
 * (*) Next setting

Cv3: "Time Scale is . . ."
 You: (X)(*)(*) Enter new value
 1 = seconds
 2 = minutes
 3 = 0.1 hours
 4 = hours
 #(*)(*) Exit to Main Menu
 * (*) Next setting

Cv3: "DTMF OFF Code is . . ."
 You: (X)(*)(*) Enter new reset code
 #(*)(*) Exit to Main Menu
 * (*) Next setting

Menu items for Interval Inputs are:

Cv3: "Input N Is . . ."
 You: (X)(*)(*) Enter new value

0 = disabled
 1 = enabled
 1 to 6 = new group member

#* * Exit to Main Menu
 * * Next setting

Cv3: "Input Level is . . ."

You: (X) * * Enter new value
 1 = normally high or transition to low
 2 = normally low or transition to high
 3 = either transition

#* * Exit to Main Menu
 * * Next setting

Cv3: "Time Scale is . . ."

You: (X) * * Enter new value
 1 = seconds
 2 = minutes

#* * Exit to Main Menu
 * * Next setting

Menu items for Totalizer Inputs are:

Cv3: "Input N Is. . ."

You: (X) * * Enter new value
 0 = disabled
 1 = enabled
 1 to 6 = new group member

#* * Exit to Main Menu
 * * Next setting

Cv3: "Input Level is . . ."

You: (X) * * Enter new value
 1 = normally high or transition to low
 2 = normally low or transition to high
 3 = either transition

#* * Exit to Main Menu
 * * Next setting

Cv3: "Input Scale is . . ."

You: (X) * * Enter new value
 0 = xxxxx. (speaks five point zero)
 1 = xxxx.y (speaks four point one)
 2 = xxx.yy (speaks three point two)

3 = xx.yyy (speaks two point three)

4 = x.yyyy (speaks one point four)

* *

Exit to Main Menu

* *

Next setting

Cv3: "DTMF OFF Code is . . ."

You: (X) * * Enter new reset code

* *

Exit to Main Menu

* *

Next setting

Menu items for Watchdog Inputs are:

Cv3: "Input N Is . . ."

You: (X) * * Enter new value

0 = disabled

1 = enabled

1 to 6 = new group member

* *

Exit to Main Menu

* *

Next setting

Cv3: "Input Level is . . ."

You: (X) * * Enter new value

1 = normally high or transition to low

2 = normally low or transition to high

3 = either transition

* *

Exit to Main Menu

* *

Next setting

Cv3: "Timeout Scale is . . ."

You: (X) * * Enter new value

1 = normally seconds

2 = normally minutes

3 = either transition

* *

Exit to Main Menu

* *

Next setting

Cv3: "Timeout Interval is . . ."

You: (X) * * Enter new value

1 to 65535

* *

Exit to Main Menu

* *

Next setting

Cv3: "Alarm Format is . . . "
 You: Enter new value
 0 = non latching
 1 = latched
 Exit to Main Menu
 Next setting

Menu items for Intruder Inputs are:

Cv3: "Input N Is . . . "
 You: Enter new value
 0 = disabled
 1 = enabled
 1 to 6 = new group member
 Exit to Main Menu
 Next setting

Cv3: "Input Level is . . . "
 You: Enter new value
 1 = normally high or transition to low
 2 = normally low or transition to high
 3 = either transition
 Exit to Main Menu
 Next setting

Cv3: "Timeout Interval is . . . "
 You: Enter new value
 1 to 250
 Exit to Main Menu
 Next setting

Cv3: "DTMF Code is . . . "
 You: Enter new string of DTMF digits
 Exit to Main Menu
 Next setting

Cv3: "Alarm Format is . . . "
 You: Enter new value
 0 = non latching
 1 = latched
 Exit to Main Menu
 Next setting

Menu items for 5 Volt, 30 Volt, and Current Analog Input Sensors are:

Cv3: "Input N Is . . ."

You: Enter new value
 0 = disabled
 1 = enabled

1 to 6 = new group member

Exit to Main Menu
 Next setting

Cv3: "Setpoint High is . . ."

You: Enter new value
 Enter the new setpoint as a 1 to 4 digit value, the decimal point will automatically be placed according to current program settings (use for minus). A high setpoint must be within the Decimal Minimum and Maximum and must not be less than the Low Setpoint + Hysteresis value.

Exit to Main Menu
 Next setting

Cv3: "Setpoint Low is . . ."

You: Enter new value
 Enter the new setpoint as a 1 to 4 digit value, the decimal point will automatically be placed according to current program settings (use for minus). A low setpoint must be within Decimal Minimum and Maximum and must not be more than the High Setpoint - Hysteresis value.

Exit to Main Menu
 Next setting

Cv3: "Alarm Format is . . ."

You: Enter new value
 0 = non latching
 1 = latched

Exit to Main Menu
 Next setting

5** Output Configuration

Cv3: "Program Output"

Cv3: "Output N Type is . . ."

You: **1**** Manual On/Off Relay
2** Manual Timed Relay
3** Automatic Relay
 Relay 1 = New Alarm Indicator
 Relay 2 = Any Alarm indicator
 Relay 3 = Acknowledge Received Indicator
 Relay 4 = Error Condition Indicator

#** Exit to Main Menu
****** Next setting for this input

Menu items for Manual On/Off Outputs are:

Cv3: "Output One Type is On Off"

Cv3: "Output Format is . . ."

You: **X**** Enter a new value
 0 = NO contacts
 1 = NC contacts

#** Exit to Main Menu
****** Next setting

Cv3: "DTMF On Code is . . ."

You: **X**** Enter new code
#** Erase On Code
#** Exit to Main Menu
****** Next setting

Cv3: "DTMF Off Code is . . ."

You: **X**** Enter new code
#** Erase Off Code
#** Exit to Main Menu
****** Next setting

Menu items for Timed On/Off Outputs are:

Cv3: "Output One Type is Timed"

Cv3: "Output Format is . . ."

You: **X**** Enter a new value
 0 = NO contacts
 1 = NC contacts

#* * Exit to Main Menu
 * * Next setting

Cv3: "DTMF On Code is . . ."

You: X* * Enter new code
 #* * Erase On Code
 #* * Exit to Main Menu
 * * Next setting

Cv3: "DTMF Off Code is . . ."

You: X* * Enter new code
 #* * Erase Off Code
 #* * Exit to Main Menu
 * * Next setting

Cv3: "Output Scale is . . ."

You: X* * Enter new value
 1 = seconds
 2 = minutes
 #* * Exit to I/O Configurations
 * * Next Setting

Cv3: "Output Time is . . ."

You: X* * Enter new value
 1 to 65535
 #* * Exit to Main Menu
 * * Next Setting

Menu items for Automatic On/Off Outputs (Relays 1,2, or 4) are:

Cv3: "Output One Type is Module Control"

Cv3: "Format is . . ."

You: X* * Enter a new value
 0 = NO contacts
 1 = NC contacts
 #* * Exit to Main Menu
 * * Next setting

Menu items for the Automatic Timed Output (Relay 3 only) are:

Cv3: Output Three Type is Module Control"

Cv3: "Format is . . ."

You: Enter a new value
0 = NO contacts
1 = NC contacts

Exit to Main Menu
 Next setting

Cv3: "Output Scale is . . ."

You: Enter new value
1 = seconds
2 = minutes

Exit to I/O Configuration
 Next Setting

Cv3: "Output Time is . . ."

You: Enter new value
1 to 65535

Exit to Main Menu
 Next Setting

6 Group Configuration**

Cv3: "Program Group"

Cv3: "Group Count is . . ."

You: **X**** Enter new value (0 or 1 to 6)
#** Exit to Main Menu
****** Next Setting

Cv3: "Group N"

Cv3: "Acknowledge Code is . . ."

You: **X**** Enter a new DTMF code
#** Exit to Main Menu
****** Next setting

Cv3: "Interrogate Code is . . ."

You: **X**** Enter a new DTMF code
#** Exit to Main Menu
****** Next setting

Cv3: "Directory Timer is . . ."

You: **X**** Enter new value (1 to 255 min.)
#** Exit to Main Menu
****** Next setting

Cv3: "Acknowledge Request is . . ."

You: **X**** Enter new value (0 = off, 1 = on)
#** Exit to Main Menu
****** Next setting

Cv3: "Shift Count is . . ."

You: **X**** Enter new value 1 to 4
#** Exit to Main Menu
****** Next group setting

Cv3: "Shift Code is . . ."

You: **X**** Enter a new DTMF code
#** Exit to Main Menu
****** Exit to Main Menu

7 Radio Configuration**

Cv3: "Program Radio"

Cv3: "Radio Squelch Code is . . ."

You: X** Enter a new value (1 = busy open, 2 = busy when grounded, 0 = disabled)

#** Exit to Main Menu

** Next setting

Cv3: "Radio Warmup is . . . seconds"

You: X** Enter a new value (0 to 65535, 10 msec steps)

#** Exit to Main Menu

** Next setting

Cv3: "Radio Volume One is minus . . ." (TX Tone)

You: X** Enter a new value (0 to 20)

#** Exit to Main Menu

** Next setting

Cv3: "Radio Volume Two is minus . . ." (TX DTMF)

You: X** Enter a new value (0 to 20)

#** Exit to Main Menu

** Next setting

Cv3: "Radio Volume Three is minus . . ." (TX Voice)

You: X** Enter a new value (0 to 20)

#** Exit to Main Menu

** Next setting

Cv3: "Radio Volume Four is minus . . ." (Receive)

You: X** Enter a new value (0 to 20)

#** Exit to Main Menu

** Exit to Main Menu

8 * * Reset Database

Cv3: "Empty Program"

Cv3: "Alert, Enter Octo Three One Star Star "

You: **# 3 1 * *** Confirm
* * Exit to Main Menu.
*** *** Exit to Main Menu.

Cv3: "Program is Empty"

9** Cellular Module Status

Cv3: "Interrogate Phone"

Cv3: "Signal Strength is . . ."

0 to 15; 3=poor, 6=good

You: **#**** Exit to Main Menu.
****** Next item.

Cv3: "PRL is . . ."

+ PRL

You: **#**** Exit to Main Menu.
****** Next item.

Cv3: "SID is . . ."

+ SID

You: **#**** Exit to Main Menu.
****** Next item.

Cv3: "Roaming status is . . ."

+ On / Off

You: **#**** Exit to Main Menu.
****** Exit to Main Menu.

0** Cellphone Programming

The B1277 contains a CDMA based module that is pre-configured at the factory except for the assigned Mobile Number. This program code will allow reading the Serial Number (ESN) from the device and then writing the Mobile Identification Number (MIN) and Mobile Directory Number (MDN) to it as assigned it by the carrier. When not specified, the MIN and MDN are the same. The Phone Control is a parameter predefined by the cellular service provider and is automatically programmed into the module. Contact Barnett Technical Support prior to changing this parameter.

Cv3: "Program Phone"

Cv3: "ESN is . . ."

+ 11 digit serial number

You: **#**** Exit to Main Menu
****** Next item.

Cv3: "Mobile Number is . . ."

+ 10 digit phone number

You: **X**** Enter a new 10 digit number
#** Exit to Main Menu.
****** Next setting.

Cv3: "Mobile Directory is . . ."

+ 10 digit phone number

You: **X**** Enter a new 10 digit number
#** Exit to Main Menu.
****** Next Setting.

Cv3: "Phone Control is . . ."

0-7; 3=Default, 5=Verizon

You: **X**** Enter a new value (0 to 7)
#** Exit to Main Menu.
****** Exit to Main Menu.

* * Query Version

Cv3: "Serial Number is ..."

You: # * * Exit to Main Menu

You: * * Next

Cv3: "Hardware version is ..."

You: # * * Exit to Main Menu

You: * * Next

Cv3: "Firmware version is ..."

You: # * * Exit to Main Menu

You: * * Next

Cv3: "Options are ..."

You: # * * Exit to Main Menu

You: * * Exit to Main Menu

6. TESTING THE INSTALLATION

It is advisable to test the strength of the cellular network signal as well as the operation of the directories when installing the Cv3. If the signal strength is low, additional measures may be required to ensure reliable operation.

Checking the Received Signal Strength (RSSI)

The Cv3 has been outfitted with LED indicators on the top of the unit. The Phone LED and Signal LEDs are used to determine the operation of the phone and signal strength of the connection.

<u>STATE</u>	<u>PHONE LED</u>	<u>SIGNAL LEDs</u>
Dead Phone	Solid Red	1 Rolling Red
No Service	Solid Red	<i>(see RSSI = 0)</i>
RSSI = 0	<i>(see No Service)</i>	4 Flashing Red
Invalid MIN and no service	Flashing Red	4 Flashing Red
Invalid MIN and service	Flashing Green	1 to 4 Solid Green
Invalid MIN and roaming	Flashing Yellow	1 to 4 Solid Green
Roaming	Solid Yellow	1 to 4 Solid Green
Everything Good	Solid Green	1 to 4 Solid Green
Starting A Call	Flashing Red/Green	1 to 4 Solid Green
Ringing	Flashing Red/Green	1 to 4 Solid Green
Call in progress	Flashing Red/Green	1 to 4 Solid Green

Verifying the Telephone Numbers

All of the telephone numbers that are entered into a directory should be carefully checked to guarantee that they are valid numbers and that local (or long distance dialing) is appropriate. After the Cv3 has been programmed, a test should be performed to confirm that these numbers are called correctly.

7. OPERATIONS

This chapter gives a detailed description of exactly how the Cv3 will operate after the start-up programming has been completed. Parameters which may be altered are pointed out, with reference to the appropriate Program Code section.

Alarm Sequence

When the B1277 detects an alarm condition, it dials the first telephone number stored in the directory. When the telephone call is answered, the B1277 will announce its Site ID, the list of any alarms present, and prompt the user to “Enter Acknowledge Code”. It will repeat this message a minimum of three times, pausing five seconds after each announcement to wait for an acknowledgement. When the Acknowledge Code is detected, The B1277 will announce “Alarms Acknowledged” and then prompt you to “Enter Command Code”.

If the calling number is busy, if there is no answer, or if the B1277 does not receive the Acknowledge Code after announcing the alarm, it will terminate the call then call the next number in the directory. If the B1277 reaches the end of the directory without being acknowledged, it will wait two minutes (*Directory Timer*) then start calling again beginning at the top of the directory.

In addition to making voice calls, the B1277 may be programmed to announce the alarms a number of times over radio, a public address system, or send out a Text Message containing the alarm information.

Acknowledging an Alarm

When the B1277 calls you on the telephone, it may take up to five seconds before it starts speaking. After it announces the alarms, it prompts you to “Enter Acknowledge Code”. You have five seconds to begin entering digits.

If the B1277 has been programmed to operate its relays (*Output Configuration*), you may send a relay code over the telephone before acknowledging the alarms. The B1277 will actuate the relay, speak the associated voice message, then prompt you again to “Enter Acknowledge Code”. After the B1277 has detected the Acknowledge Code, it will speak the phrase “Alarms Acknowledged” and return to the “Enter Command Code” level. If no activity occurs for five seconds, it will hang up.

Appending the (#) digit at the end of the Acknowledge code allows you to acknowledge the alarm for sixty minutes only (*General Configuration*).

After one hour, the B1277 will check the alarm inputs again, and if the same alarm is still present, it will begin the reporting cycle as if it were a new alarm.

To acknowledge the B1277 locally, configure an input as an Acknowledge Input (Sensor 10) and activate it. If the Site ID and “Alarm” is heard after attempting to acknowledge the alarms, the unit is reporting that additional alarm conditions exist that have not been announced and the acknowledgement will not occur. If this occurs, enter the Interrogate Code to hear all the current alarm conditions and then enter the Acknowledge Code.

Telephoning the B1277

When you call the B1277 on the telephone, it will answer and announce its site ID, and possibly the phrase “No Alarms”, and then prompt you to “Enter Command Code”. The B1277 then waits ten seconds for you to enter one of the following user defined control codes:

- Acknowledge code
- Interrogate code
- Totalizer or Accumulator input reset code
- Intrusion input arm or disarm code
- Shift change code
- Relay on or off code
- Program mode access code

If an Access code has not been programmed, the B1277 will automatically go into the programming mode after five seconds, prompting you to “Enter Program Code”. You may then program the B1277 from your telephone the same as you would from a local programming phone.

The B1277 will hang up whenever it has waited for more than ten seconds without receiving a control code.

Indicators

The Cv3 is equipped with Status Indicators to notify the user of the current operations of the unit and to assist in troubleshooting. The indicators are in the form of LEDs on the top of the unit as shown in Figure 3.

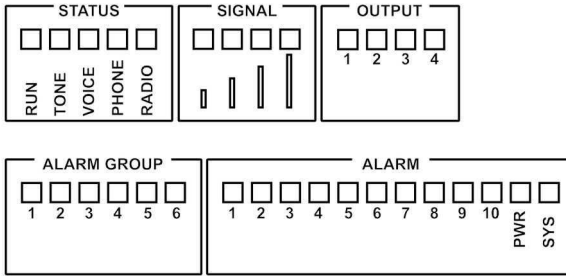


Figure 3 Status Indicators

The indicators are grouped into 5 sections.

1. ALARM GROUP (6, one for each group)

If the group is disabled:	Off
If the group is enabled:	
No alarms in the group	Green
Group alarms are unacknowledged	Flashing Red
Group alarms are acknowledged	Solid Red
Group alarms are being reported	Flashing Yellow

2. ALARM (12, ten hardware inputs, one power supply monitor & one system alarm)

If the input is disabled:	Off
If the input is enabled:	
Configured as an alarm input (<i>digital, analog, watchdog</i>)	
Idle, no alarm	Off
Alarm is unacknowledged	Flashing Red
Alarm is acknowledged	Solid Red
Watchdog Reset Activity	Blink Green

Not Configured as an alarm input (*accumulator, totalizer, interval timer or special purpose*)

Idle	Off
Accumulator or Interval timer while active	Solid Green
Totalizer	Blink Green
Special purpose - acknowledge for 500 msec after each operation	Solid Green
Special purpose – shift 1 or 2	
Shift 1	Solid Green
Shift 2	Flashing Green
Special purpose – advance shift	Blink Green

3. STATUS (5 defined)

Run

During startup initialization or upgrading Flashing Red

During program mode (PC or handset) Solid Red

Operating

No low power modes selected Flashing Green

Low power mode in effect

 Normal conditions Short Green Flash

 Error condition Short Red Flash

Tone

Idle Off

While a tone is being transmitted Solid Red

While a tone is being received Solid Green

Voice

Voice Off

While speaking Solid Red

While recording Solid Green

Phone

This indicator is used in conjunction with the SIGNAL indicators, see below

Radio

Idle Off

While PTT is active Solid Green

While COS is active (busy) Solid Red

4. SIGNAL

Refer to the Signal & Telephone Status table found on Page 32.

5. OUTPUT (4, one for each output relay)

If the relay is in the idle state Off

If the relay is in the ON state Solid Red

If the relay has failed Solid Yellow

Power Switch

This switch is located next to the DB9 connector and is used to bring the system out of low power mode, put the system back into low power mode and to shut the system down when it is operating from battery only.

When the Cv3 is in a low power mode, it will show only a blinking run indicator. Pressing the power switch briefly will restore operation to full power.

While the Cv3 is operating at full power, pressing the switch briefly will force it into low power mode. The unit cannot be forced into low power operation if alarm reporting activities are taking place.

When the Cv3 is disconnected from the primary power source and operating from the internal battery, pressing the power switch continuously for 5 seconds will cause the unit to power down. Normal operation will be restored when primary power is restored.



8. SPECIFICATIONS

Physical:	10" wide x 5.6" high x 3" deep Steel, powder coated matte black Mounting ears for panel installation
Environmental:	-30°C to + 60°C, 95% humidity, non-condensing
Power:	Plug-in screw terminal block connection Internally fused at 1.85A +9 to +30 VDC, negative ground Optional internal battery backup: 1.4 Ahr 12 volt battery Built-in charger: Charger operates with input voltages between +8 and +30 VDC
Alarm Inputs: (10)	Plug-in screw terminal block connection All inputs will withstand up to +30 VDC Inputs 1 to 6: Analog voltage mode: Input impedance: 210k ohm Range: 0 to +5 or 0 to +30 VDC Digital mode: Internal 4.7k ohm pull-up resistor to +5 VDC Operates with ground closure Low state threshold of +2 VDC Inputs 7 to 10: Analog voltage mode: Input impedance: 75k ohm Range: 0 to +5 or 0 to +30 VDC Analog current mode: Input impedance: 100 ohm between pins 75k ohm to ground Range: 4 to 20 mA Digital Mode: Internal 4.7k ohm pull-up resistor to +5 VDC Operates with ground closure Low state threshold of +2 VDC
Relay Outputs: (4)	Plug-in screw terminal block connection Contact rating: 2A/30 VDC 2 contact terminals, programmable as normally open or normally closed

Cellphone:	SMA female antenna connector CDMA cellphone
Radio Port:	Plug-in screw terminal block connection TX audio: 600 ohms, single ended, capacitor coupled Adjustable between 0 dBm and -20 dBm RX audio 600 ohms, single ended, capacitor coupled Adjustable between 0 dBm and -20 dBm
Program Ports:	Telset: RJ11 connector Internal telset bias from the primary power supply Operates with standard TouchTone telephones RS232: DB9 male connector, DTE USB: USB type B connector
Power Switch:	Momentary pushbutton


9. TECHNICAL DRAWINGS

Unit Dimensions

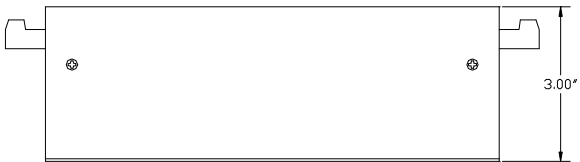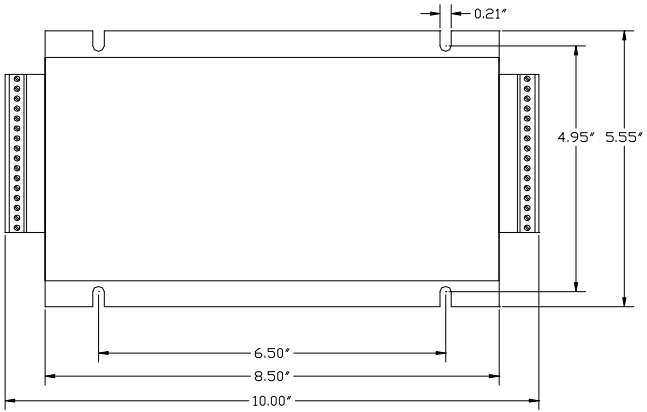


Wiring Inputs


Digital connection – Inputs 1 through 6

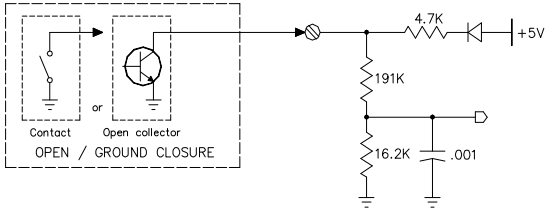


Digital connection – Inputs 7 through 10

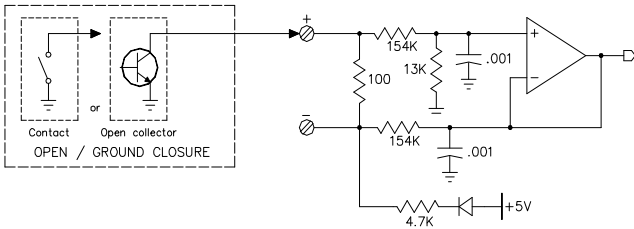


Analog Connection – DC Voltage – Inputs 1 through 6

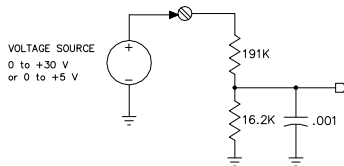

Analog Connection – DC Voltage – Inputs 7 through 10

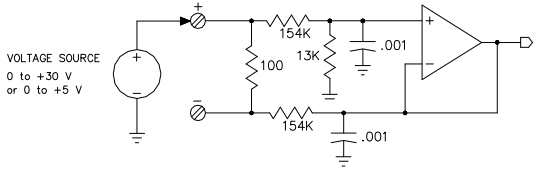

Analog Connection – DC Current – Inputs 7 through 10

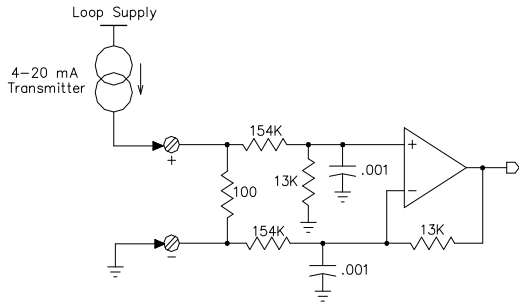

10. GLOSSARY

Access Code – a string of DTMF digits that act as a security password when calling in to a unit with a security level set to two or three. This string of digits is also required to enter programming mode when calling in to remotely program a unit.

Accumulator – an input type that keeps a tally of the amount of time an input is asserted. If the input is de-asserted, the timing stops and resumes when the input is re-asserted.

Acknowledge Input – an input type that, when asserted, will acknowledge all existing alarms in the device.

Analog Input, 30V – an input type that monitors a voltage and possibly has a high and low alarm setpoint with an accepted range on the input terminal of 0 to +30 VDC.

Analog Input, 5V – an input type that monitors a voltage and possibly has a high and low alarm setpoint with an accepted range on the input terminal of 0 to +5 VDC.

Carrier Operated Squelch – an output from a radio that indicates the receiver squelch is open. This signal is used by the ProTalk Cv3 to determine when the radio system is busy where it should delay making an announcement. a.k.a Carrier Operated Relay (COR)

CDMA – Code Division Multiple Access - a mobile telephony standard used by carriers such as Verizon Wireless, Sprint Nextel, Bell Mobility, and Telus Mobility.

Control Code – a string of DTMF digits that are recognized by the unit to perform an action. Examples of Control Codes include the Acknowledge Code and an Output On or Off Code. Alternatively, key presses used when programming are referred to as Program Codes.

COS – see *Carrier Operated Squelch*

COR – Carrier Operated Relay - see *Carrier Operated Squelch*

Current Input – an input type that monitors the flow of current in a current loop. This input type may have a high and low setpoint and has an input range of 4 to 20 mA DC.

Dial Control – a function that, when enabled, delays alarm annunciation until the recipient of the call speaks into the phone. (eg. “Hello”)

Digital Input – an input type that, when asserted, generates an alarm condition. This input type may be configured as asserted by grounding the input terminal, opening the input terminal, or providing a voltage to the input terminal that crosses a 2VDC threshold.

Dipole Antenna – an RF antenna with a simple structure. The dipole antenna included with the Cv3 is intended for indoor use only and has limited range.

Directory – a list of callout instructions that are executed sequentially when an alarm occurs. Each directory line may specify a telephone number to call, a radio transmission with paging tones, or a mobile number to send a text message to.

DTMF – Dual Tone Multiple Frequency; a series of audible tones used for remote command and control of equipment

ESN – *see Electronic Serial Number*

Electronic Serial Number – a permanent 32-bit number embedded by the manufacturer that uniquely identifies a wireless communications device.

Group – a means of having the alarms created by some inputs respond differently than the others. By default, Groups are not used and all alarms are treated the same. If groups are created, inputs may be individually assigned to the group where separate acknowledge and interrogate codes are defined and the directories used have unique lists of callout instructions.

GSM – Global System for Mobile Communications - a mobile telephony standard used by carriers such as AT&T Mobility, T-Mobile, and Rogers Wireless.

Hysteresis – a dead zone around a low and high alarm setpoint that requires the input to change sufficiently after creating an alarm before the level is recognized as being normal again. The hysteresis value should be set larger than the natural short term variations found on an analog input.

Interval Input – an input type that measures the amount of time the input has been asserted. Each time the input is asserted, the count is reset to zero. When the input is de-asserted, the measured value is maintained until the next measurement begins.

Intrusion Input – an input type that provides a time delay and the ability to enable (arm) and disable (disarm) an alarm using a DTMF code. An alarm condition detected on this input remains until the disarm code is received.

MDN – *see Mobile Directory Number*

MIN – *see Mobile Identification Number*

Mobile Directory Number – the ten digit phone number assigned by a cellular provider that one would dial to reach a specific mobile phone. This number may be the same as the MIN.

Mobile Identification Number – a ten digit number assigned by a cellular provider that identifies a mobile device on their network. This number may be the same as the MDN.

Program Code – a DTMF digit that is followed by two * digits that specify the programming parameter to be changed.

PTT – *see Push To Talk*

Pulse Width – *see Interval Input*

Push To Talk – an output from the Cv3 that provides a ground closure when a radio transmission is required and an open circuit when idle. a.k.a. Push To Transmit

Relay – an output that provides a normally open (Form A) or normally closed (Form B) set of isolated contacts that have the capacity to be used to turn on lights or sirens or control other equipment.

Shift – a time when an alternate directory (or set of directories) is used.

Shift Select Input – an input type that can specify the current shift based on its state or that can advance through the shifts each time it is asserted.

Totalizer – an input type that counts the number of transitions of an input between asserted and de-asserted states.

Watchdog – an input type that remains in the idle state as long as the signal on the input terminal is transitioning between asserted and de-asserted states. If the input stops changing for a specified amount of time, an alarm is generated.

11. PRODUCT SUPPORT

Thank you for choosing the ProTalk Cv3 from Barnett Engineering Ltd.

Technical Support

Technical Support for your ProTalk Cv3 is available as follows:

Network & Billing Support

If you have any questions related to network connectivity or your wireless account, please contact your local service representative.

Product Support

For questions related to activation, performance, service, repair or other technical or product support concerns, please contact Barnett Engineering Ltd. At 1-800-268-2646 or email support@barnett-engg.com

Product Repairs

For all your repair needs, please contact Barnett Engineering Ltd.

Barnett Engineering Ltd. commits to a 'Repair Turnaround Time' of thirty (30) business days on all units under warranty. Repair Turnaround Time is defined as the time elapsed from the day the defective product arrives at Barnett Engineering Ltd. facility located in Calgary, Alberta to the day the repaired product is returned and received by you.

For non-warranty units, please call Barnett Engineering Ltd. and ask for a repair estimate.

An RMA form is available in the Support section of our website. Please complete this prior to shipping your unit.

Shipping

Customers are responsible for all shipping costs, to and from Barnett Engineering Ltd.

12. WARRANTY STATEMENT

Barnett Engineering Ltd. warrants that all equipment supplied shall be free from defects in material or workmanship at the time of delivery. Such warranty shall extend from the time of delivery for a period of one year. Buyer must provide written notice to Barnett Engineering Ltd. within this prescribed warranty period of any defect. If the defect is not the result of improper usage, service, maintenance, or installation and equipment has not been otherwise damaged or modified after delivery, Barnett Engineering Ltd. shall either replace or repair the defective part or parts of equipment or replace the equipment or refund the purchase price at Barnett Engineering Ltd. 's option after return of such equipment by buyer to Barnett Engineering Ltd.

Shipment to Barnett Engineering Ltd.'s facility shall be borne on account of buyer.

(1) Consequential Damages: Barnett Engineering Ltd. shall not be liable for any incidental or consequential damages incurred as a result of any defect in any equipment sold hereunder and Barnett Engineering Ltd. 's liability is specifically limited to its obligation described herein to repair or replace a defective part or parts covered by this warranty.

(2) Exclusive Warranty: The warranty set forth herein is the only warranty, oral or written, made by Barnett Engineering Ltd. and is in lieu of and replaces all other warranties, expressed or implied, including the warranty of merchantability and the warranty of fitness for particular purpose.

WARNING: This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instruction manual, it may cause interference to radio communications.

Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, must take whatever measures may be required to correct the interference.