


MED-SPI

Spirometry Plug-in Board



TOWER SYSTEM

Get to Know the MED-SPI Board

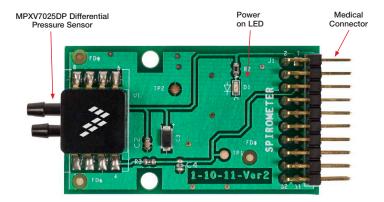



MED-SPI Freescale Tower System

The MED-SPI plug-in board is compatible with the Freescale Tower System, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Elevate your design to the next level with this industrial powerhouse by building your Tower System today.

MED-SPI Features

MED-SPI is a development board which demonstrates the basic implementation of a spirometry application. It includes the MPXV7025DP differential pressure sensor, which allows calibrated pressure and air flow measurements ideal for medical respiratory monitoring devices.

Features

- Tower System compatible
- Integrated Freescale MPXV7025DP
- Reduced components
- · Easy to implement

Step-by-Step Installation Instructions

In this quick start guide, you will learn how to set up the MED-SPI and Tower System and run the included demonstrated software. For more detailed infomation, review the user manual at freescale.com/healthcare.



Verify the Jumper Configuration

Verify the jumper configuration on each board according to the Jumper Configurations table found later in this auide.



Assemble the Tower System

Assemble the Tower System by matching primary and secondary sides on the serial and MCU boards to corresponding elevators.



Connect the MED-SPI AFE

Connect the MFD-SPLAFF to the medical connector on TWR-K53N512, Board must be placed as shown below.



Note: MED-SPI board must be plugged to the medical connector before the Tower System gets powered



Download and Install Software

Download and install IAR Embedded Workbench 6 for ARM®. A 30-day trial version can be downloaded from iar.com.

5 Install the Drivers

Install P&E Micro drivers. The installer is located in IAR installation folder\arm\ drivers\pemicro.



6 Connect a USB Cable

Connect a USB cable from the computer to the USB port on the TWR-K53N512 board. Wait for drivers to install



7 Download the Application Note

Go to **freescale.com** and conduct a parametric search for AN4325. Download AN4325SW.zip.

Open the File

Open the file MED-SPI K53.eww using IAR from \Software\MED-SPI_K53\app\ cdc\iar ew\kinetis.

9 Load the Firmware

Click the Debug button to load the firmware to the MCU.



Step-by-Step Installation Instructions

Continued

10 Install the Software

Install the Medical GUI software. It can be downloaded from **freescale.com**.

Note: Make sure you have already installed Java® JDK on your computer. Look for JDK folder in: C:\Program Files\Java






Disconnect the USB cable from the TWR-K53N512 and connect it to the TWR-SER board.



12 Install Drivers for JM CDC Demo

If the driver is not installed automatically, open Device Manager and install drivers for JM CDC Demo. Drivers can be found here:

- 32-bit version:
 C:\Freescale\Medical GUI\Drivers\x32
- 64-bit version:
 C:\Freescale\Medical GUI\Drivers\x64

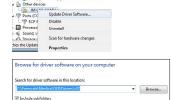

--- Intel(R) Centrino(R) Advanced-N 6200 AGN

Note: Open the Device Manager by opening the start menu, right-clicking on Computer and selecting Manage. Device manager is on the left options tree.

Look for the COM Number

In the device manager, look for the COM number assigned to "Virtual Com Port."



Open the Medical GUI

Open the Medical GUI and select the Virtual Com Port from previous step.




Step-by-Step Installation Instructions

Continued

15 Attach the Hose

Attach the hose to both the mouthpiece and the pressure sensor as shown in the image below.

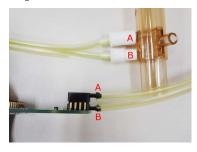

Breathe into the Tube

In the main window, click the SPI section (pink) and follow the next steps:

- 1. Place the tube in your mouth
- 2. Inhale as much air as you can.
- 3. Without taking the tube out of your mouth exhale as hard and fast as possible.
- 4. Click again on the SPI section.





MED-SPI Jumper Options

The following is a list of jumper options. The default installed jumper settings are shown in white text within the green boxes.

TWR-K53N512 Jumper Configurations

Jumper	Position	Function
J1	Open	R71 to ADC1_DM1
J3	Open	FlexBus Latch OE
J4	2-3	Medical Connector Pin 4 Function
J11	1-2	External Oscillator Selection
J15	Connected	Core VDD
J17	Connected	Oscillator Power Enable
J18	Connected	USB0_VBUS Voltage In
J24	1-2	SYS_PWR Select
J28	Open	Disable JM60 Bootloader
J34	Open	Oscillator OE Control

TWR-SER Jumper Configurations

Jumper	Position	Function
J10	1-2	VBDEV Source
J16	3-4	USB Mode Select
J2	1-2	CLK_SEL Source



Quick Start Guide

Visit **freescale.com/healthcareAFE** for the latest information, including:

• AN4325 application note

Support

Visit **freescale.com/support** for a list of phone numbers within your region.

Warranty

Visit **freescale.com/warranty** for complete warranty information.

For more information, visit freescale.com/Tower

Join the online Tower community at towergeeks.org

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. ARM is a registered trademark of ARM Limited. All other product or service names are the property of their respective owners. © 2013 Freescale Semiconductor, Inc.

Document Number: MEDSPIQSG REV 0

