KNOW YOUR BLUE BIRD DASH

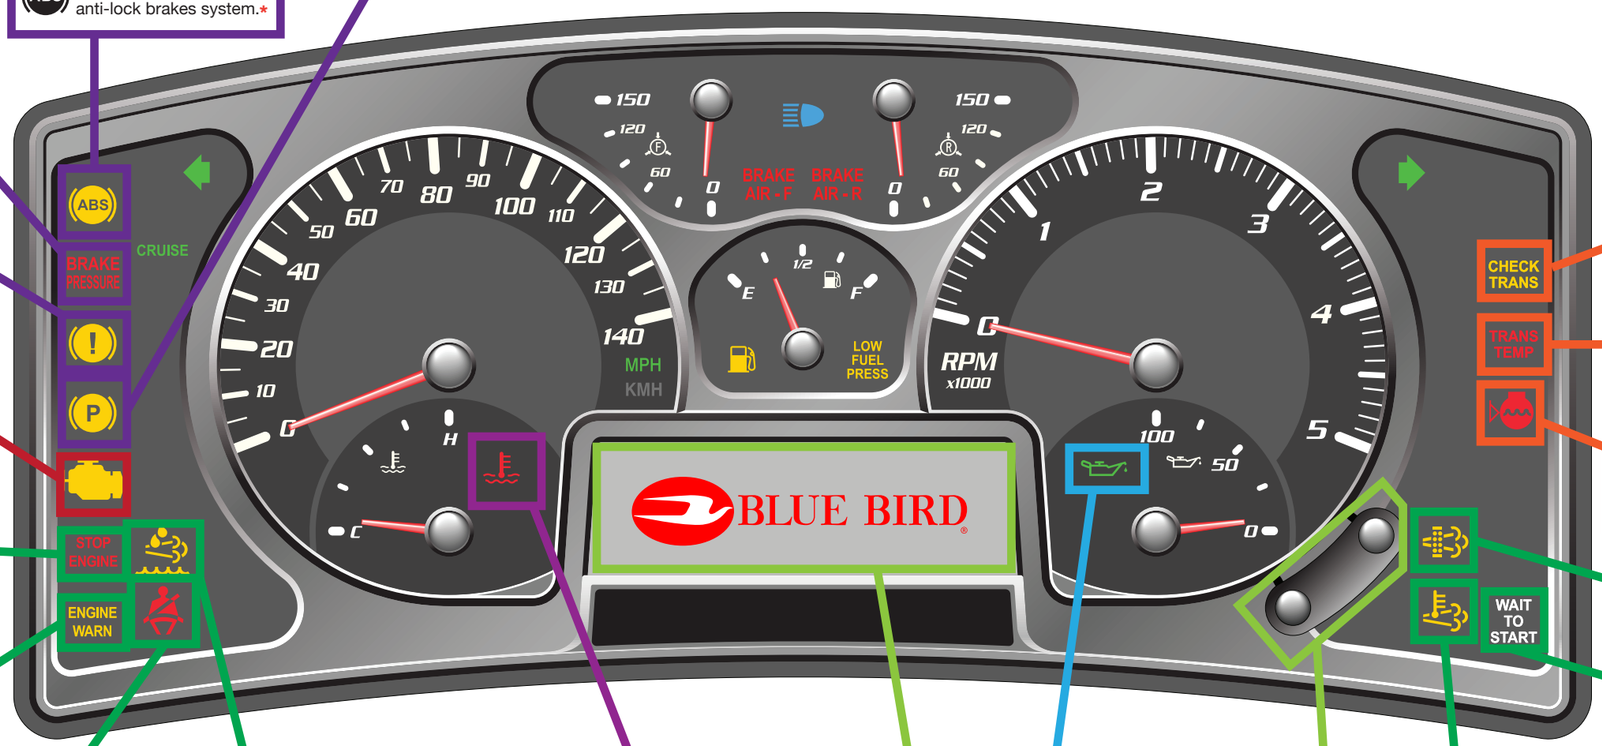

ABS. Indicates fault in the anti-lock brakes system.*

Park. Indicates parking brake is applied.
* (When Flashing)

BRAKE PRESSURE — **Brake Pressure.** Indicates hydraulic brake failure. Stop vehicle and call for assistance. *

Brake Alarm. Indicates a problem with the service brakes (metric units only).*

Malfunction Indicator Lamp. "MIL" Indicates emission related malfunctions. It is NOT necessary to pull over! If there is a major issue "Engine Warning" or "Stop Engine" lights will illuminate. Indication that the emission system is not operating properly and the unit should be serviced at the next convenient time. *

STOP ENGINE — **Stop Engine.** The engine ECU has detected a problem which can lead to engine damage. Stop the engine and call for assistance. *

ENGINE WARN — **Engine Warning.** The engine needs service. *

Seat Belt. Indicates driver seatbelt not engaged. (Optional) *

Diesel Exhaust Fluid. DEF warning light.
* *Diesel Engine Only*

High Coolant Temperature. Indicates coolant temperature out of normal operating range.

Oil Pressure. Indicates low oil pressure. *

Message Display Center

Message Display Control Panel

HEST. High Exhaust System Temperature. Indicates elevated exhaust temperature.
. * *Diesel Engine Only*

CHECK TRANS — **Check Transmission.** The transmission needs service.

TRANS TEMP — **Trans Temperature .**The transmission temperature is outside normal operating range.*

Coolant Level. Indicates low coolant level. *

Diesel Particulate Filter Lamp. (DPF) Indicates a need for regeneration.
Diesel Engine Only

WAIT TO START — **Wait to Start.** Wait until indicator goes off before starting engine.

FEATURED ON YOUR VISION & ALL AMERICAN

BLUE BIRD®

© 2014 Blue Bird Body Company. All Rights Reserved.

*** ALERT INCLUDES AUDIBLE SOUND**

blue-bird.com

Blue Bird. A heritage of looking ahead.