


Installation Instructions Sport Bar Cover


Vehicle Application

Jeep Wrangler 4 Door

2007

Part Number: 80025

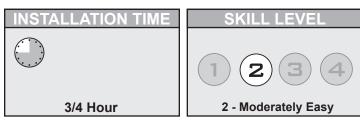

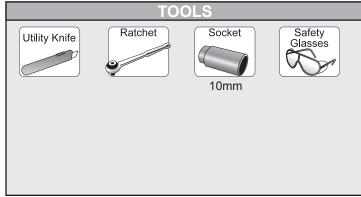





Installation Tips

Before you begin installing this assembly, read all instructions thoroughly.

For a smooth fit:

For ease in installation, the product should be installed at temperatures above 72° F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit to the vehicle. It is normal for fabric to contract and wrinkle when stored in the shipping carton. Within a few days after the installation, the fabric will relax and the wrinkles will disappear.

WARNING
This product is designed primarily to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate the vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES

Read and follow, precisely, all installation instructions provided when installing product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Sport Bar Cover – Installation Instructions

Parts List

Rear Sport Bar Cover
Front Sport Bar Cover, Lt.

Qty - 1

Qty - 1

Front Sport Bar Cover, Rt.

Qty - 1





If your vehicle has a soft top, release the top from the windshield and lay the top and bows down on the tailgate.

2 Remove Speaker Bar

Use the 10mm Socket to remove the bolts that secure the Speaker Bar.


Locate the wires and connector on the passenger side of the vehicle. Lift up on the tab on the connector to release the wires. Set the Speaker Bar and bolts aside to be reinstalled later.

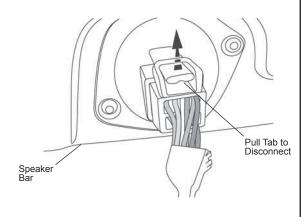

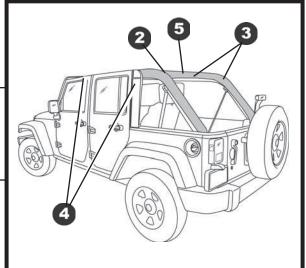


Remove Front and Rear Door Surrounds (Soft Top Only)

Unscrew the knobs above the front and rear door openings. Remove the front door surround first, then the rear door surround.

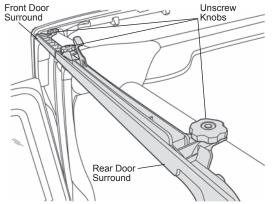

Remove Existing Sport Bar Covers


If your vehicle has sport bar covers, you must remove them before beginning this installation. Unzip the covers and cut them off at the rear bow pivot.

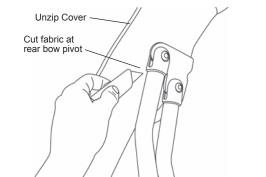

Orient the Rear Sport Bar Cover on Vehicle

Orient the Rear Sport Bar Cover on the vehicle with the Bestop label on the rear leg on the passenger's side.


Zip the Rear Sport Bar Cover closed around the rear sport bar.

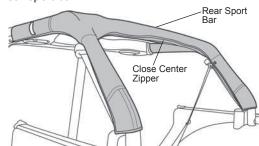


Sport Bar Cover – Installation Instructions

6 Secure the Rear Legs of the Rear Sport Bar Cover

Wrap the fabric around the rear leg of the rear sport bar. Start the zipper at the bottom of the leg and close it up to the bow mount bracket. Tuck the fabric under the seat belt mount and snap the cover closed. Repeat with the other leg.

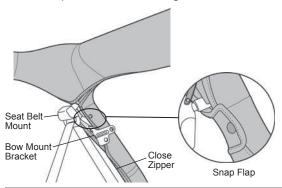

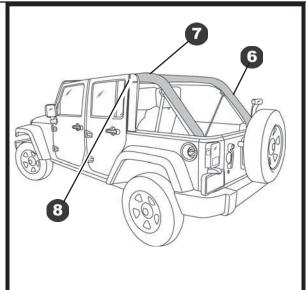

8 Orient Front Sport Bar Cover

Place one of the Front Sport Bar Covers on the vehicle with the long leg toward the windshield. Wrap the fabric around the sport bar above the door and close the zipper. Pull down gently on the plastic molding near the windshield to allow the fabric under the housing. Make sure the openings in the fabric line up with the Door Surround Mounting holes.


Wrap the fabric around the sport bar between the front and rear doors and fasten the hook and loop flaps. Tuck the zipper pull under the cover. Tuck the cover under the plastic pillar molding between the front and rear doors.


Repeat this procedure on the other side of the vehicle.

The zipper goes to the inside of the hori-

Secure the Front Legs of the Rear Sport Bar Cover

Wrap the front legs of the Rear Sport Bar Cover around the horizontal bar and close the zippers. Tuck the fabric under the plastic molding. Repeat on the other side.

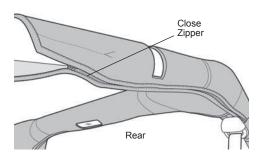

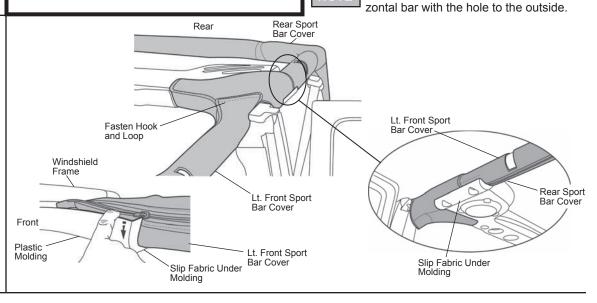



Sport Bar Cover – Installation Instructions



Reinstall Speaker Bar

Pre-cut holes in the fabric allow access for the push fasteners, wiring and bolts to reinstall the speaker bar. Reconnect the wiring and use a 10mm socket to tighten the bolts.

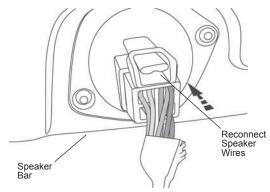


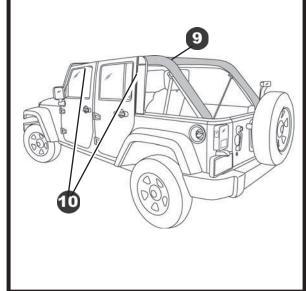



Reinstall Door Surrounds

Reinstall the front and rear door surrounds.

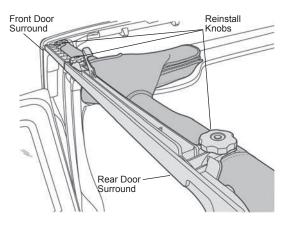

BESTOP ACCESSORIES
BED ACCESSORIES