

Parts Ordering Guidelines :

Genuine Cummins Parts and service facilities are available all over India. There are more than 100 Cummins sales and service locations giving service support to the engines owned by you. Each distribution outlet is thoroughly equipped with technical data, factory trained mechanics, modern equipments and a full adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributer or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trade-mark. Each is ready and eager to help in every possible way through personal contact or through the mail-at your convenience.

The satisfactory ordering and receiving of parts by the purchase is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

1. Write your order clearly, using a typewriter if possible.
2. Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which

FESN
MICO
62221091
6BT 5.9 C
EX 200
S.O.60046 (Proto)
S.O.100094 (Current)
Effective Date : 31/3/2002

the part is to be used. Part numbers are usually located in various places on the part itself.

3. When possible, arrange your purchase order in part number numerical sequence.
4. Please specify shipping instructions, if any, preferable to you.
5. State your company name and shipping address clearly.

Genuine Cummins Parts mean **QUALITY** : They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality and accuracy-by the top craftsman of the trade.

You can be sure a Genuine Cummins Part will fit better-do the job better-lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts.
YOU OWN BEST...REPAIR WITH THE BEST

No part of this manual may be copied, photocopied, reproduced, translated or stored in a retrieval system by any means electronic, mechanical or otherwise without prior permission in writing of Cummins India Limited, Kothrud, Pune 411038.

Visit us at :

www.cummins-india.com

PB6000000 00

CUSTOMERSERVICEINFORMATION

This parts catalog contains parts information.

Part numbers appearing in () against production part no. are available service part nos. Please place order for service replacement parts on bracketed part numbers only.

Parts /AR/BMs marked with asterisk (*) are not available for service. Only assemblies under which they are indented are available for service.

Items marked with @ are not available for service. Please order on individual parts shown under these items.

Engine Model _____ Engine Serial No. _____

MFG Make _____ Model _____ Chassis No. _____

Fuel Pump Assembly No. _____ Injector No. _____

Belt, Fan _____ Belt, Water Pump _____ Belt, Gen _____

Element, Fuel Filter _____ Full Flow Lub. Filter _____

Air Cleaner _____ By-Pass Lub. Filter _____

Special Equipment _____

Cummins Distributor _____

**Since improvements are made from time to time contents
in the parts catalog are subject to change without notice**

PB4200000 00

ABOUT PART INDENTATION USED IN THE PARTS CATALOG

The subject parts catalog uses parts indentation method to break sub level parts under their corresponding top assembly.

By placing an order on corresponding top level assemblies / Bills of material the individual parts under that top assemblies / Bills of material can be obtained

Indentation can be explained as under -

Example :-

Level	Part No	Description
-----	-----	-----
1	3920037	Block Cylinder
2	3815812	Block Cylinder
3	3901685	Bushing
3	3916369	Screw hex. head
3	3917313	Cap main bearing
3	3919917	Block Cylinder
2	3813247	Plug expansoin
2	3004258	Plug expansion
2	3027646	Plug expansion
2	3812090	Plug expansion
2	3813243	Plug expansion

Level '1' assembly 3920037 in above example is a top Bill of Material / Assembly. Level '2' items namely 3815812, 3813247, 3004258, 3027646, 3812090, & 3813243 are included in 3920037. Hence these items are shifted to the right of 3920037 by one space.

3815812 is also a Bill of Material which includes parts, namely 3901685, 3916369, 3917313, 3919917. As 3815812 is of level '2' here, these parts are of level '3'. Hence these are shifted to the right of 3815812 by one space.

In above example if you order on Block assembly 3920037 of level '1', you will receive all the parts of level '2' & level '3'.

If you order on sub assembly 3815812 of level '2', you will receive all the parts of level '3' listed below this level '2' subassembly.

If required, parts of level '2' & level '3' can be ordered individually.

Table of Contents

Description	Ref. Page Number
A	
Air Intake & Exhaust	PB2600185 01, PB2600186 01
Turbocharger, Conn. exhaust outlet	
Alternator	PB2600201 01
Pulley Alternator	
Alternator Drive	PB2600184 00
Alternator Location	PB2600163 00
B	
Block Cylinder	PB2600214 00
C	
Cam Follower Cover	PB2600203 00
Camshaft & Valve Tappet	PB2600202 00
Support Camshaft Thrust, Gear Camshaft	
Cleaner Air	PB2600213 00, PB2600241 00
Element Air Cleaner, Vacuum Indicator	
Conn. Rod & Piston	PB2600103 01, PB2600104 00
Crankshaft & Main Bearing	PB2600106 00, PB2600204 00
F	
Fan Drive	PB2600188 00
Pulley Fan, Fan, Support Fan	
Filter Fuel	PB2600211 00
Flywheel	PB2600190 00
Front Gear Cover	PB2600205 00
Housing Gear, Seal Oil	
Front Gear Train Acc. Drive	PB2600116 00
Fuel Filter Plumbing	PB2600192 00
Fuel Injector	PB2600112 00, PB2600189 00
Fuel Plumbing	PB2600191 00
Valve Check, Manifold Fuel	
Fuel Pump Base	PB2600193 00
Fuel Pump Coupling	PB2600194 00
Fuel System Accessories	PB2600210 00
H	
Head Cylinder	PB 2600123 00, PB2600124 00
Rocker Lever, Lifting Bracket	
Housing Flywheel	PB2600207 00
I	
Instruments/Sensors	PB2600215 00
L	
Lub Oil Cooler	PB2600128 00, PB2600206 00
Lub Oil Pump	PB2600127 00

Parts Catalog pages are arranged in alphabetical order


PB2600247 00

Table of Contents

Description	Ref. Page Number
M	
Mechanical Tachometer Drive	PB2600133 00
Muffler	PB2600199 01, PB2600200 01 PB2600248 00, PB2600249 00
O	
Oil Pan	PB2600134 01, PB2600135 02
Conn. Oil Suctoin	
R	
Radiator (Old Setup)	PB2600212 00, PB2600196 01
Radiator (New Setup)	PB2600246 00, PB2600243 00
S	
Starting Motor Mounting	PB2600197 00
T	
Thermostat	PB2600139 00
Throttle Control	PB2600244 00, PB2600245 00
Valve Fuel Shut off	
V	
Valve Cover	PB2600209 00
Vibration Damper	PB2600143 00
W	
Water Inlet Connection	PB2600144 01
Water Outlet Connection	PB2600145 01
Water Pump	PB2600208 00

Parts Catalog pages are arranged in alphabetical order

PB2600253 00

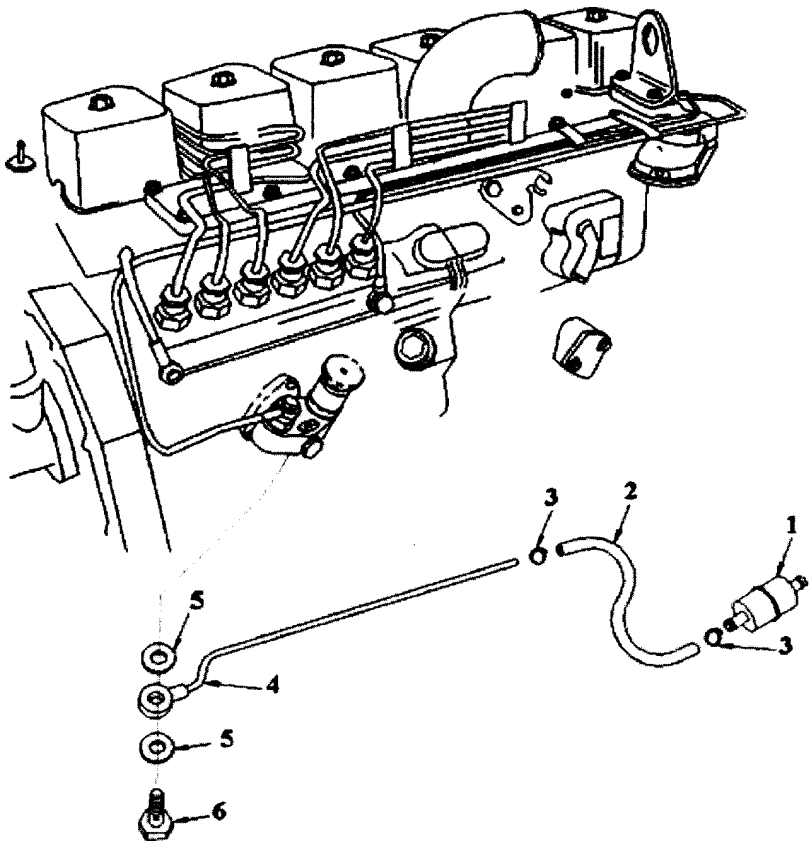


AF26000

Ref No.	Part Number	Part Name	Req	Remarks
1	080720	Strainer, Fuel	1	Alternate Part No. 3910509
2	3915489	Hose, Plain	1	
3	3936583	Clamp, Hose	2	
4	3935321	Tube, Fuel Supply	1	
5	3918192	Washer, Sealing	2	
6	3924725	Screw, Banjo Connector	1	
-	3915489	Hose	1	(Strainer To Pump)
-	3814821	Hose	1	(Tank To Strainer)
-	3814821	Hose	1	(Fuel Drain From Pump)

NOTES

1) Motorpal TO Mico - Conversion Kit 3238534
Lower Engine Gasket Set : 3936563 Imported No. :- 3802376
Upper Engine Gasket Set : 3936562 Imported No. :- 3804897

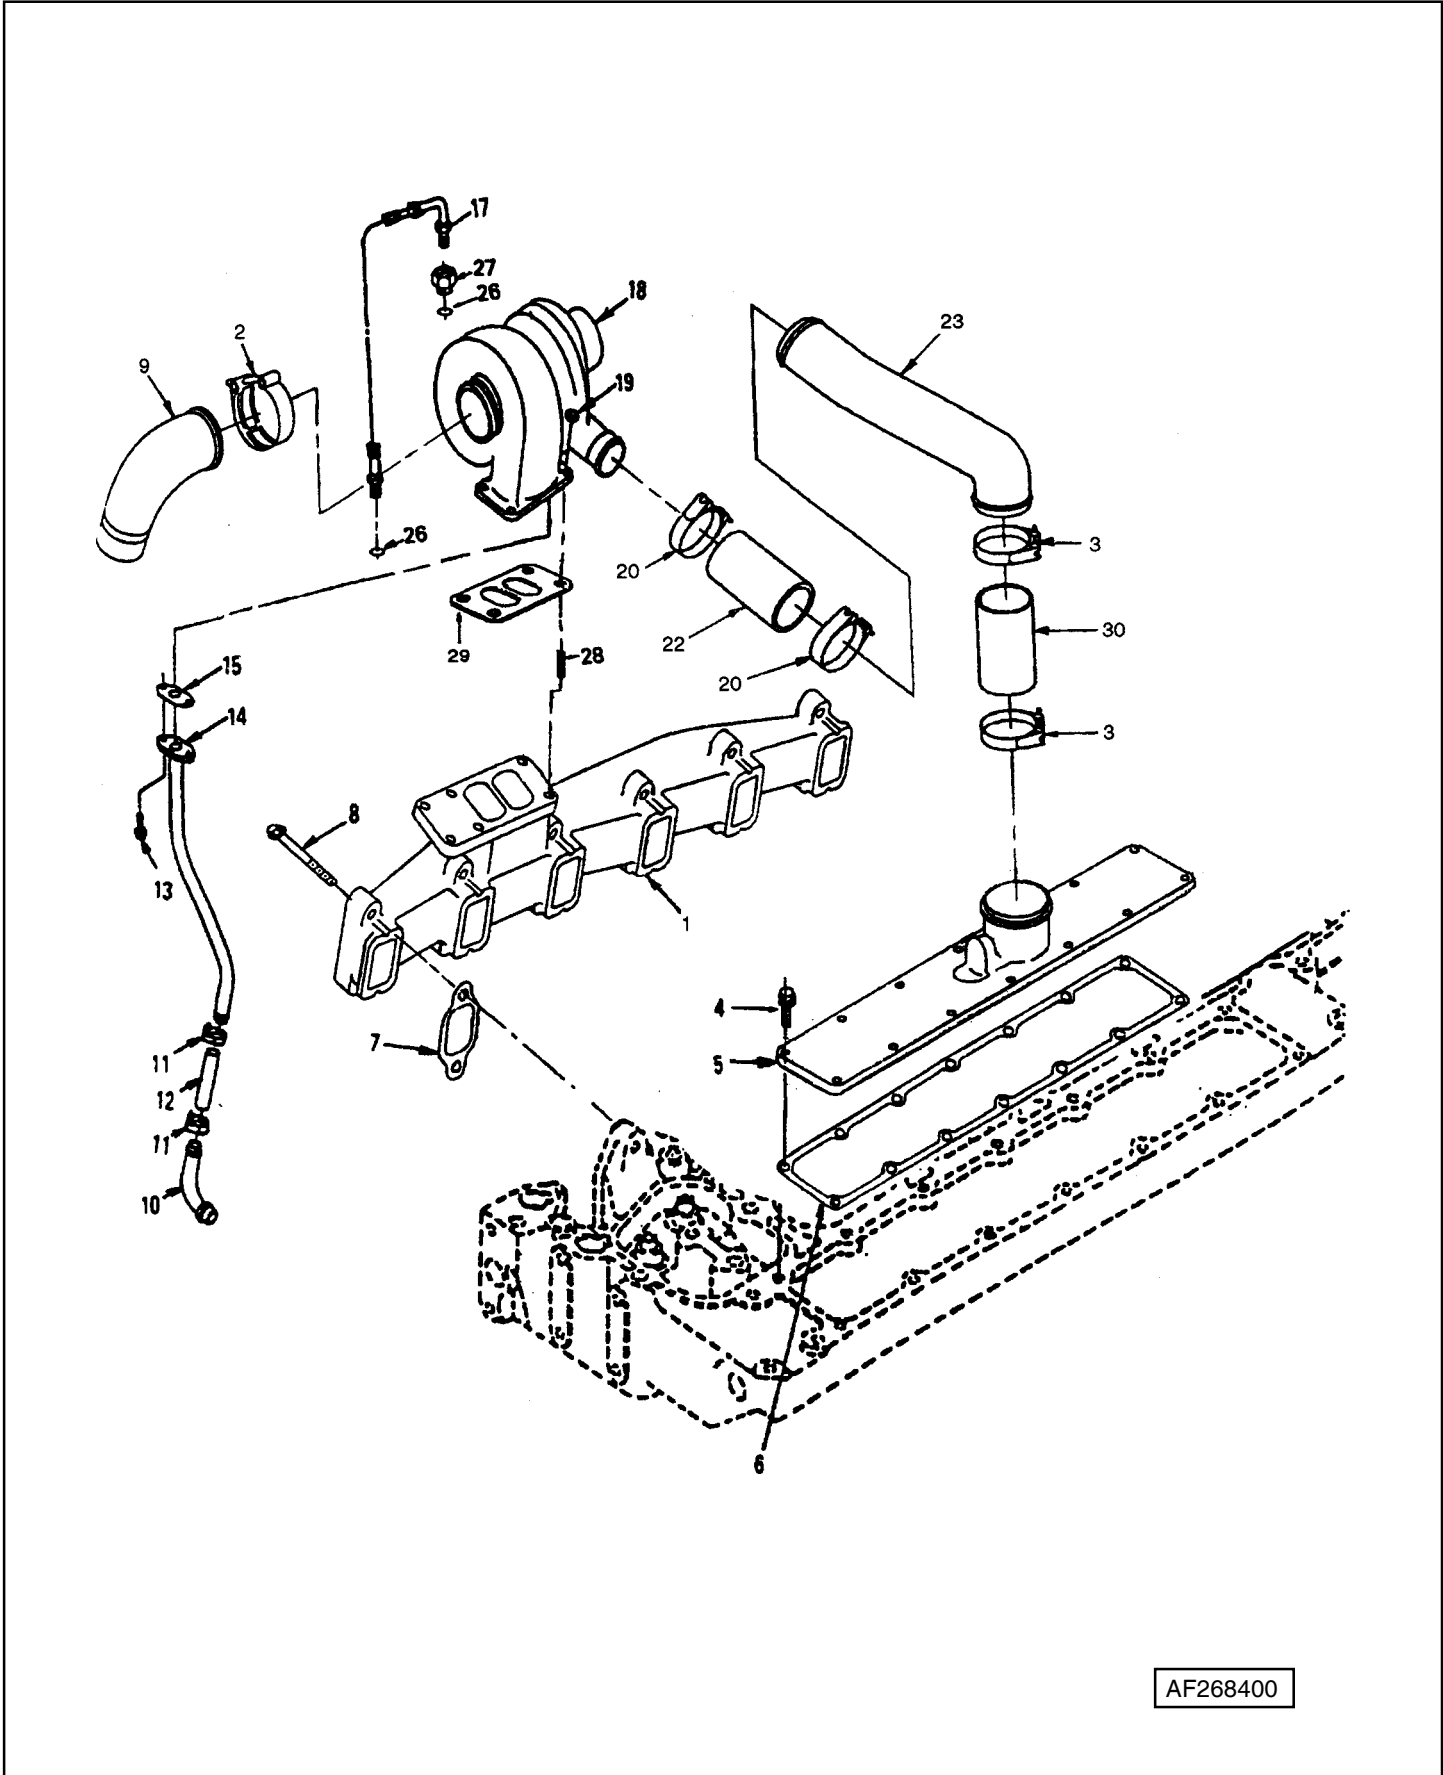


AF268400

Group No.10.06

Air Intake & Exhaust


Ref No.	Part Number	Part Name	Req	Remarks
		AIR INTAKE & EXHAUST		
		MANIFOLD AIR-INTAKE		
-	3008468	Plug, Pipe	2	
8	3901448	Screw, Hex.Flange Head Cap.	12	
7	3905443	Gasket, Exhaust Manifold	6	
6	3914029	Gasket, Intake Manifold Cover	1	
4	3918109	Screw, Hex.Flange Head Cap.	12	
5	3908086	Cover, Intake Manifold	1	
1	3901683	Manifold, Exhaust	1	
15	3282113	Gasket, Oil Drain	1	
14	3905354	Conn.Turbo Oil Drain	1	
13	3900630	Screw, Hex.Head Cap	2	
11	43828 A	Clamp, Hose	2	
12	3903745	Hose, Plain	1	
10	3903744	Tube, Turbo Oil Drain	1	
2	3935338	Clamp, Exhaust	1	
18	3598926	Turbocharger	1	
19	3881824	Nut	4	
17	3909548	Hose, Flexible	1	
20	3033030	Clamp, Hose	2	
23	3906973	Tube, Air Inlet	1	
22	3916166	Hose, Plain	1	
26	3037236	Seal,O Ring	2	
27	3920801	Connector, Female	2	
28	3818823	Stud	4	
29	3901356	Gasket, Turbocharger	1	
30	3916155	Hose, Plain	1	
3	3026396	Clamp, Hose	2	
-	3924389	Washer, Sealing	2	
9	3910993	Connection, Exhaust Outlet	1	

PB2600186 02

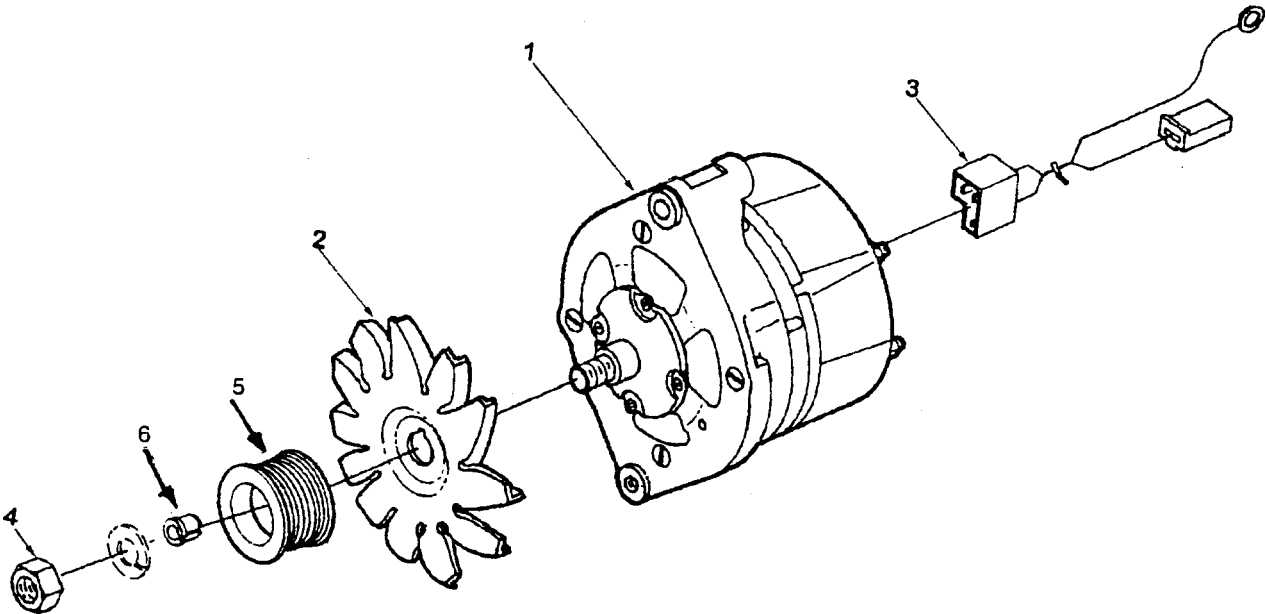

ee268400


Ref No.	Part Number	Part Name	Req	Remarks
		ALTERNATOR		
1	3935326	Alternator	1	
2	3904981	Fan Alternator	1	
3	3920831	Harness, Wiring	1	
4	3902662	Nut, Hexagon Flange	1	
5	3908560	Pulley alternator	1	
6	3908563	Retainer pulley	1	

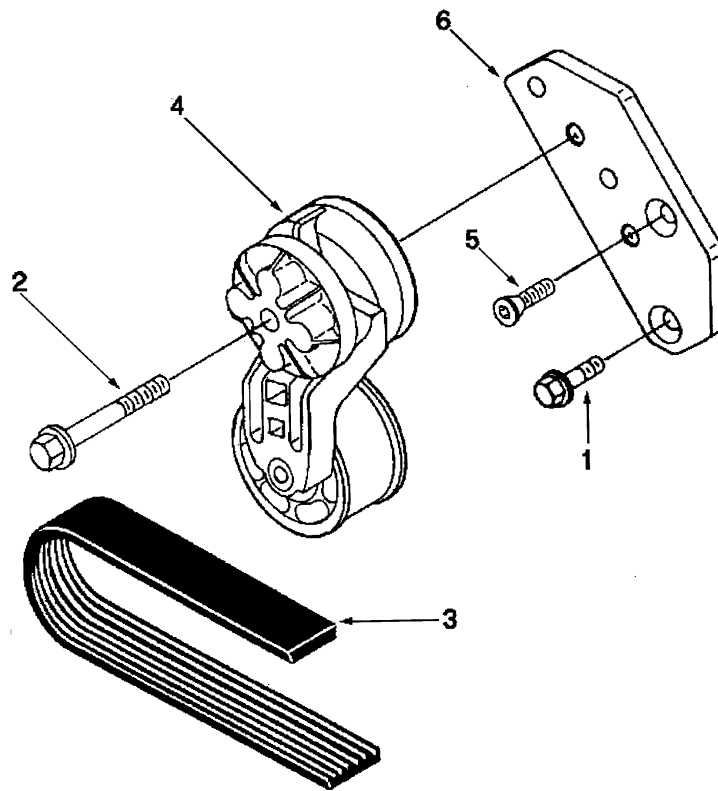

EH268401


Ref No.	Part Number	Part Name	Req	Remarks
		ALTERNATOR DRIVE		
1	3900631	Screw Hex Flange Head Cap	1	Belt P/N(3911557)Suitable for 1.1:1 speed ratio fan pulley
2	3282699	Screw Hex Flange Head Cap	1	
3	3935335	Belt V Ribbed	1	
4	3922900	Tensioner, Belt	1	
5	3925186	Screw Flat Head Cap	1	
6	3925207	Bracket, Belt Tensioner	1	

Alternator Location

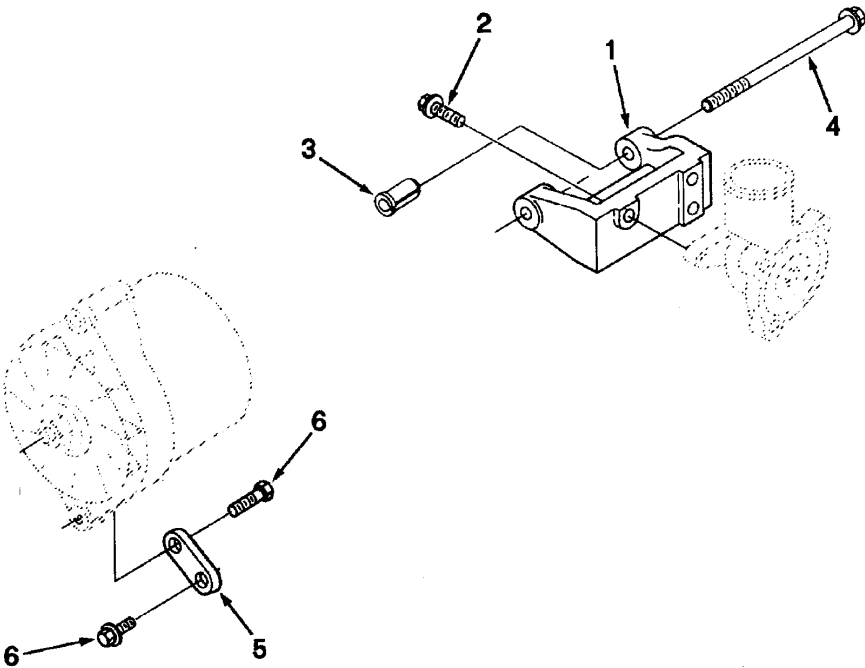

EH268401


Ref No.	Part Number	Part Name	Req	Remarks
		ALTERNATOR LOCATION		
1	3923387	Support Alternator	1	
2	3900631	Screw Hex Flange Head Cap	3	
3	3910715	Spacer Mounting	1	
4	3914407	Screw Hex Flange Head Cap	1	
5	3903089	Brace Alternator	1	
6	3900630	Screw Hex Flange Head Cap	2	

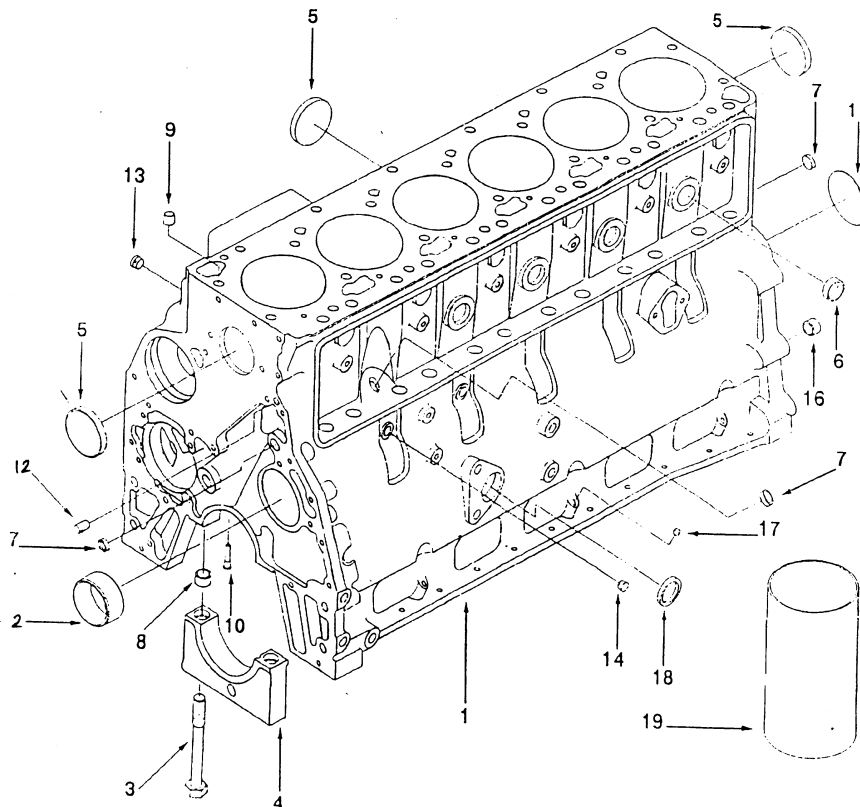

ck268400


Ref No.	Part Number	Part Name	Req	Remarks
		BLOCK CYLINDER		
1	3928797	Block cylinder	1	
2	3901306	Bush	1	
3	3900629	Screw hex head	14	
4	3900967	cap main bearing	7	
5	3812090	Plug expansio	6	
6	3007635	Plug expansion	4	
7	3900956	Plug expansion	3	
8	3900068	Dowel ring	2	
9	3902343	Dowel ring	2	
10	3930139	Nozzle piston cooling	6	
11	3900687	Plug expansio	1	
12	3900257	Dowel pin	2	
13	3008468	Plug pipe	1	
14	3906619	Plug pipe	1	
16	3900068	Dowel ring	2	
17	3900955	Plug expansion	1	
		SERVICE PARTS		
2	3904369	Bushing	N/A	
2	3903242	Bushing	N/A	
4	3900967	Cap main bearing	7	
19	4094029	Sleeve salvage	7	
-	3281692	Screw drive	2	
-	3101085	Screw self tapping	1	
-	3935293	Dataplate	1	
-	3935294	Dataplate	1	

PB260021401

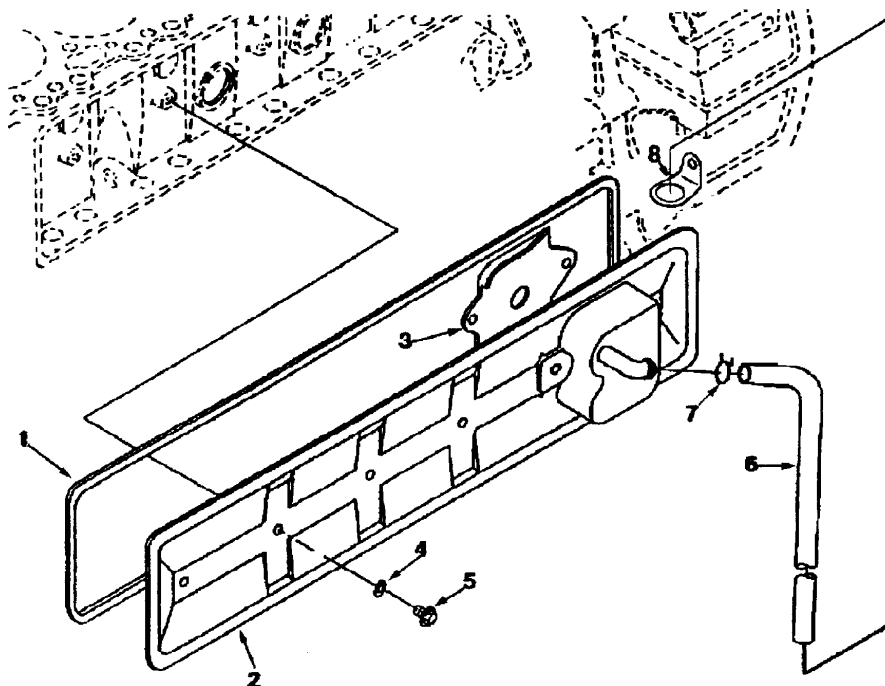


cm268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3907617	Cam Follower Cover	1	
-	3927913	Gasket push rod cover	1	
2	3911822	Cover push rod	1	
3	3907586	Baffle breather	1	
4	3928759	Seal grommet	4	
5	3900629	Screw hex. cap	4	
6	3918614	Hose plain	1	
7	3904230	Clamp spring hose	1	
8	3909670	Clip	1	

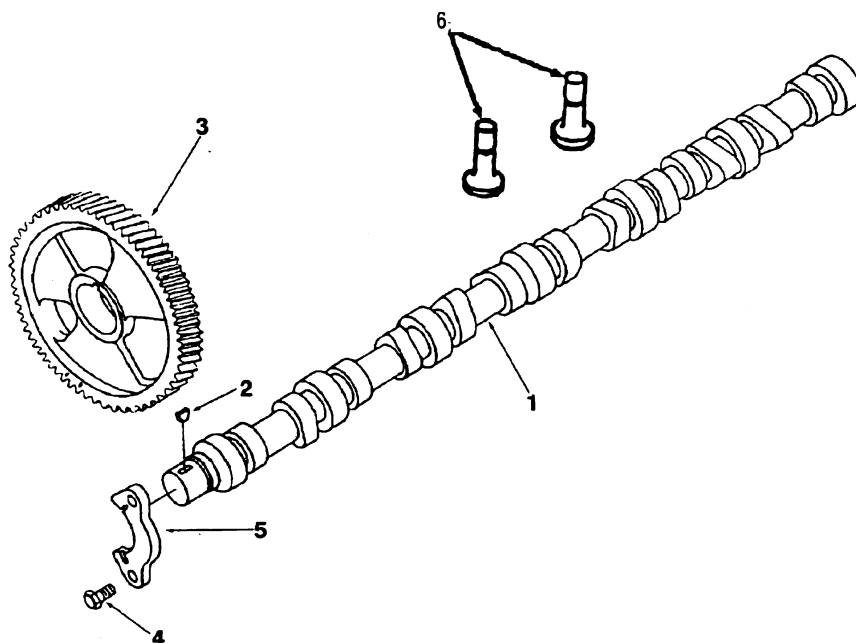


pp268400

Ref No.	Part Number	Part Name	Req	Remarks
-	3609904	PISTON & CONNECTING ROD	6	
1	175755	Piston & connecting rod	2	
2	191970	Ring,retaining	1	
3	3048808	Pin piston	1	
-	3013930	Piston engine	1	
4	3349806	Rod engine connecting	1	
5	218808	Screw connecting rod	2	
6	187420	Rod engine connecting	1	
12	70550	Bushing	1	
7	216983	Dowel pin	2	
8	218025	Ring compression piston	1	
9	214950	Ring compression piston	1	
10	3056429	Bearing connecting rod	2	
11	4058969	Ring compression piston	1	
		Ring oil piston	1	




GC28301

Ref No.	Part Number	Part Name	Req	Remarks
		KIT AIR CLEANER		
1	3814552	Kit air cleaner	1	
-	3814313	Element, Inner	1	
-	3814312	Element, Outer	1	
7	3030762	Hose reducer	2	
3	105312	Elbow 90 deg flexible	1	
2	103810	Hose hump	1	
5	140312	Clamp, t bolt	5	
4	135144	Clamp, t bolt	1	
6	149437	Clamp, t bolt	2	
10	3872813	Vacuum indicator	1	
9	3814273	Tube air inlet	1	
8	3814272	Tube air inlet	1	
11	3814309	Brkt air tube	1	
-	3234934	Capscrew	2	
-	3235459	Washer,lock	2	
-	S 670	Washer,plain	2	
-	S 104	Capscrew 3/8-16x2 1/4	4	
-	S 604	Washer,lock	4	
-	S 602	Washer,plain	4	
-	S 223	Nut,regular hexagon	4	
-	3814365	Shield heat	1	
-	S 107	Screw,hexagon head cap	2	
-	S 605	Washer,lock	2	
-	S 626	Washer,plain	2	
-	S 221	Nut,regular hexagon	2	
-	3814368	Shield heat	1	
-	S 118 A	Capscrew 1/4-20x5/8	2	
-	S 600	Washer,lock	2	
-	146159	Washer,plain	2	
12	3814310	Clamp tube	1	
		MOULDED HOSES		
-	3814883	Hose, Reducer	1	
-	3814884	Hose, Reducer	1	Turbo, End
-	3815297	Shield, Heat	1	
-	3230566	Tube	1	

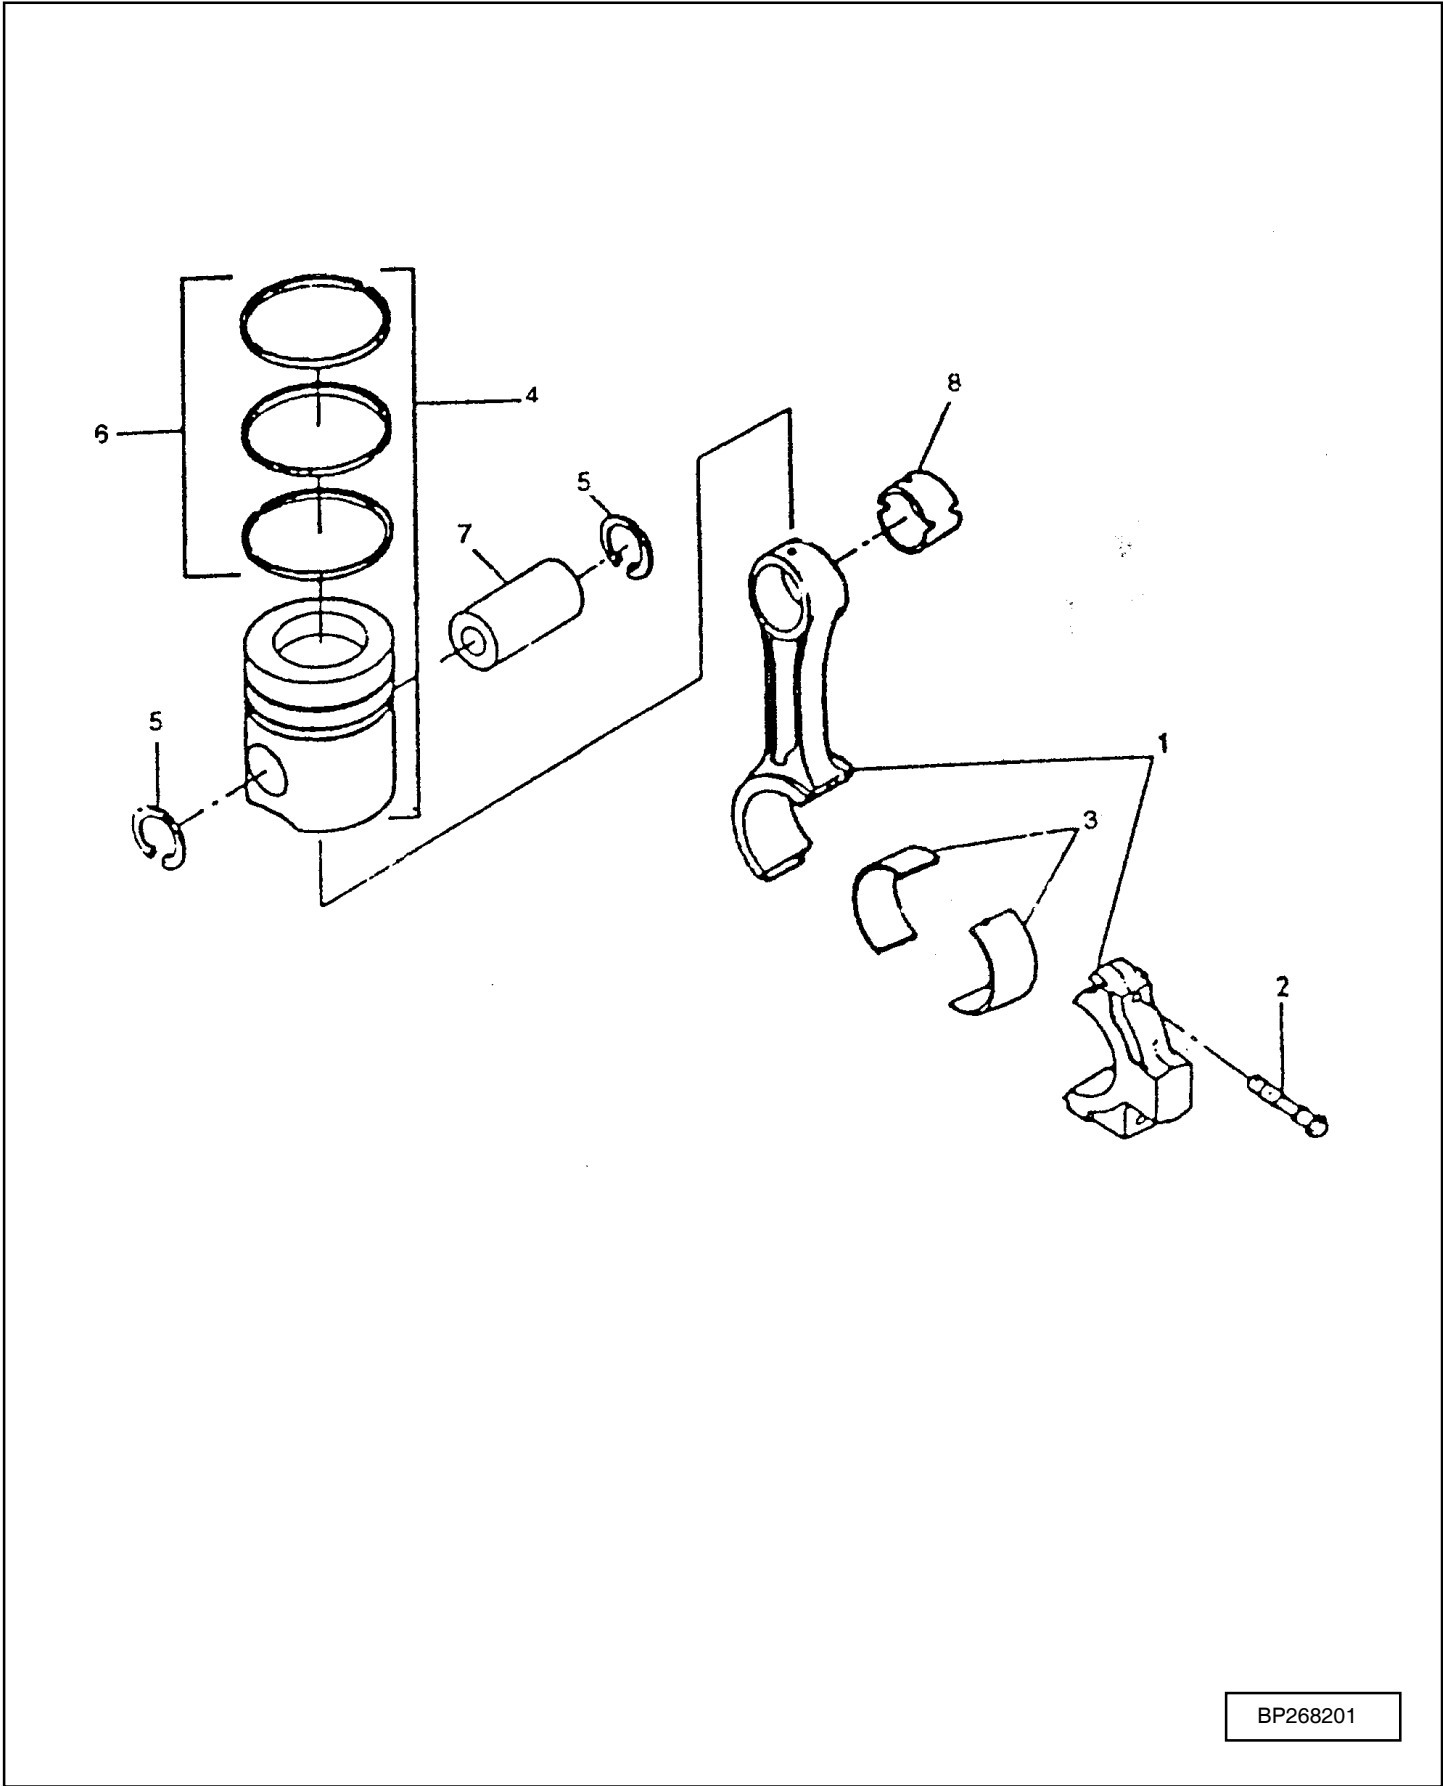

BP268201

Ref No.	Part Number	Part Name	Req	Remarks
-	3925232	CONNECTING ROD AND PISTON	6	
1	3901567	Rod engine connecting	1	
2	3900919	Screw connecting rod cap	2	* Retainer, Pin, Piston
3	4080702	Bearing con rod	12	3928673 - Piston
4	3802248	Kit engine piston	6	
4-1	4093678	Piston engine	1	
5	3920691	Ring retaining	2	
6	3802421	Set piston ring	1	
-	3923889	Ring oil piston	1	
-	3902286	Ring compression piston	1	
-	3918315	Ring compression piston	1	
7	3919053	Pin piston	6	
8	3901085	Bushing	1	
4	3919042	Piston engine	1	
4	3919043	Piston engine	1	piston parts no 3919042 & 3919043 may be substituted for 3919041 to achieve the correct piston height.
3	4080703	Bearing connecting rod	AR	0.25 mm oversize (0.010)
3	4080704	Bearing connecting rod	AR	0.50 mm oversize (0.020)
3	4080705	Bearing connecting rod	AR	0.75 mm oversize (0.030)
3	4080706	Bearing connecting rod	AR	1.00 mm oversize (0.040)
4	3802249	Kit engine piston	6	0.50 mm oversize
4	3919044	Piston engine	1	0.50 mm oversize
5	3920691	Ring retaining	2	
6	3802422	Set piston ring	1	0.50 mm oversize
4	3802250	Kit engine piston	6	1.00 mm oversize
4	3919045	Piston engine	1	1.00 mm oversize
5	3920691	Ring retaining	2	
6	3802423	Set piston ring	1	1.00 mm oversize

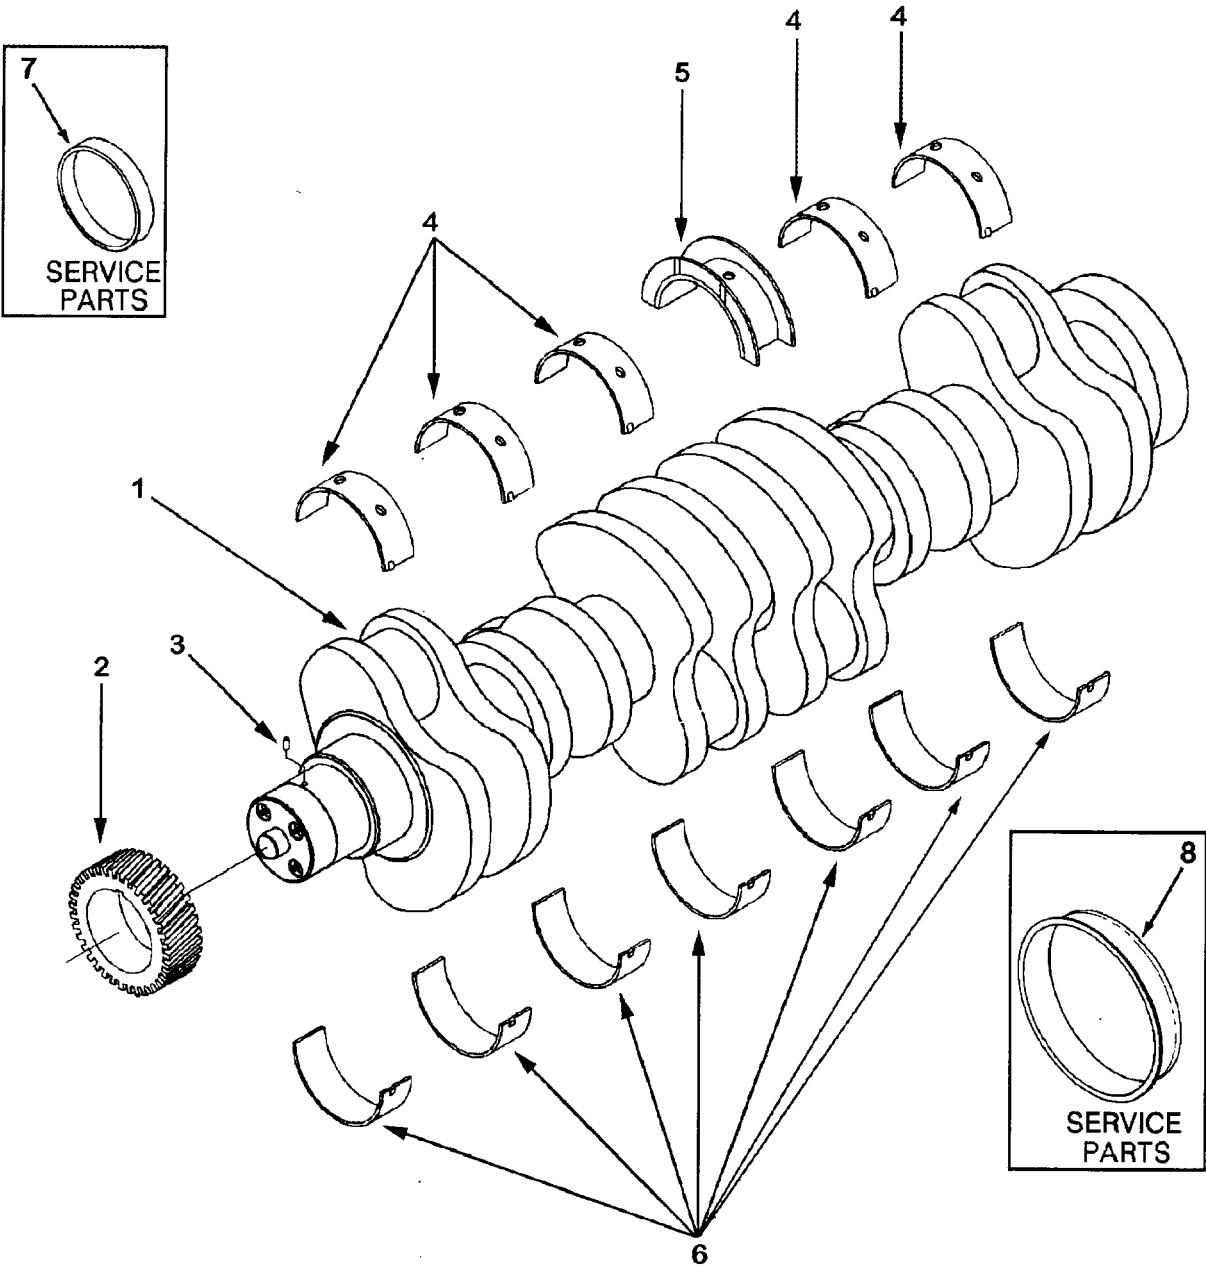


KS268400

Group No. .01.02

Crankshaft & Main Bearing


Ref No.	Part Number	Part Name	Req	Remarks
-	3908032	CRANKSHAFT	1	
1	3929037	Crankshaft, Assembly	1	
2	3929026	Crankshaft, Engine	1	
3	3904483	Gear, Crankshaft	1	
		Dowel, Pin	1	
-	4080707	MAIN BEARING SETS	1	
4	3929016	Set, Main Brg (std)	6	
5	3927772	Bearing, Main	1	
6	3929021	Bearing, Crankshat Thrust	7	
-	3926047	Bearing, Main	1	
		Seal " O " ring		
	4080708	Set, Main Brg (0.010)	1	
4	3929017	Bearing, Main	6	
5	3283065	Bearing, Crankshaft Thrust	1	
6	3929022	Bearing, Main	7	
	3802072	Set, Main Brg (.020)	1	
4	3929018	Bearing, Main	6	
5	3283066	Bearing, Crankshaft Thrust	1	
6	3929023	Bearing, Main	7	
	3802073	Set, Main Brg (030)	1	
4	3929019	Bearing, Main	6	
5	3283067	Bearing Crankshaft Thrust	6	
6	3929024	Bearing, Main	7	
	3802074	Set, Main Brg (.040)	1	
4	3929020	Bearing, Main	6	
5	3283068	Bearisng, Crankshaft Thrust	1	
6	3929025	Bearing, Main	7	
	38000330	Bearing, Crankshat Thrust	1	
5	3283063	Bearing, Crankshaft Thrust	1	
6	3929023	Bearing, Main	1	
	3800331	Bearing, Crankshaft Thrust	1	
5	3283064	Bearing, Crankshaft Thrust	1	
6	3929025	Bearing, Main	1	
		SERVICE PARTS		
7	3802820	Kit, Sleeve Crackshaft	1	
8	3926126	Kit, Sleeve Crankshaft	1	

PB2600204 01

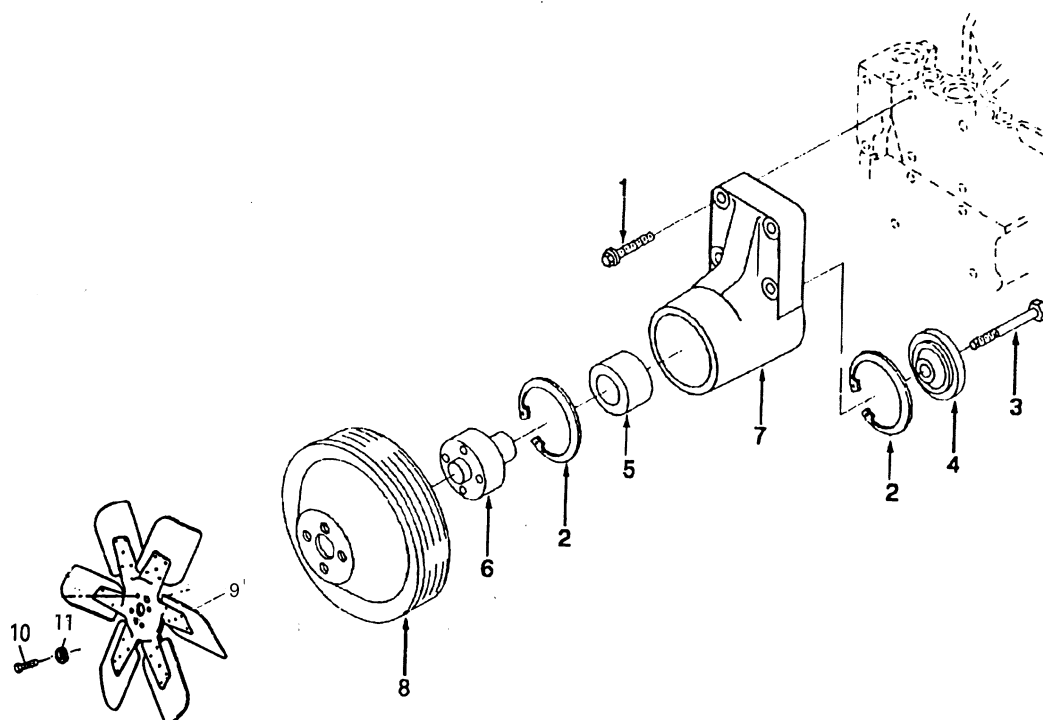


Fa26000

Ref No.	Part Number	Part Name	Req	Remarks
1	3900678	FAN DRIVE Screw hex. flange head cap	4	
-	3913433	Fan Hub Assembly	1	
2	3035960	Ring retaining	2	
3	3907769	Screw hex. cap	1	
4	3923044	Retainer fan hub	1	
5	3910739	Bearing ball	1	
6	3911924	Hub fan	1	
7	3913434	Support fan	1	
8	3935363	Pulley fan	1	For 1.35:1 ratio pulley
9	3814249	Fan	1	(To Be Used With Radiator
10	3900636	Screw hex. cap	4	Part No.3814641 & Shroud
11	3814323	Washer plain	2	Part No.3814642)

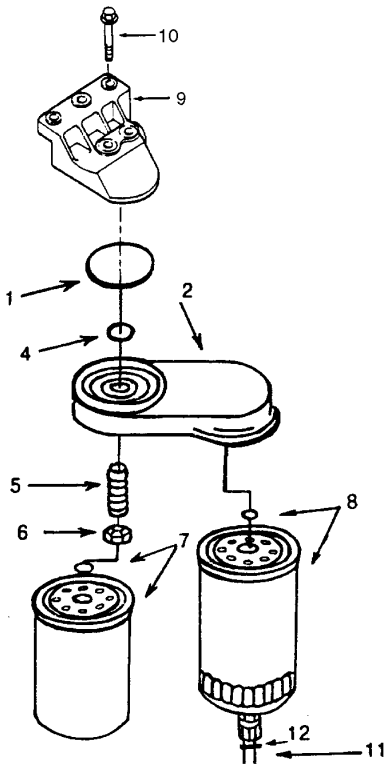


FF26000

Ref No.	Part Number	Part Name	Req	Remarks
		FILTER FUEL		
1	3903546	Seal o ring (Big)	1	
2	3897331	Head fuel filter	1	
4	3906695	Seal o ring (Small)	1	
5	3925955	Adapter filter head	1	
6	3903293	Nut	1	
7	3903640	Fuel filter	1	
8	3890206	Separator fuel water assly	1	
11	3931864	Hose plain	1	
12	3931865	Clamp hose	1	
9	3926788	Head fuel filter	1	
10	3900632	Screw hex.flange head cap	2	
-	4080713	Filter, Fuel	1	(3903640)
-	4080712	Filter, L.O.	1	(3908615)
				Water Seperator
				New Water Seperator Assembly - 40937301
				Only Water Seperator No. - 4093733
				Only Valve No. - 4093732

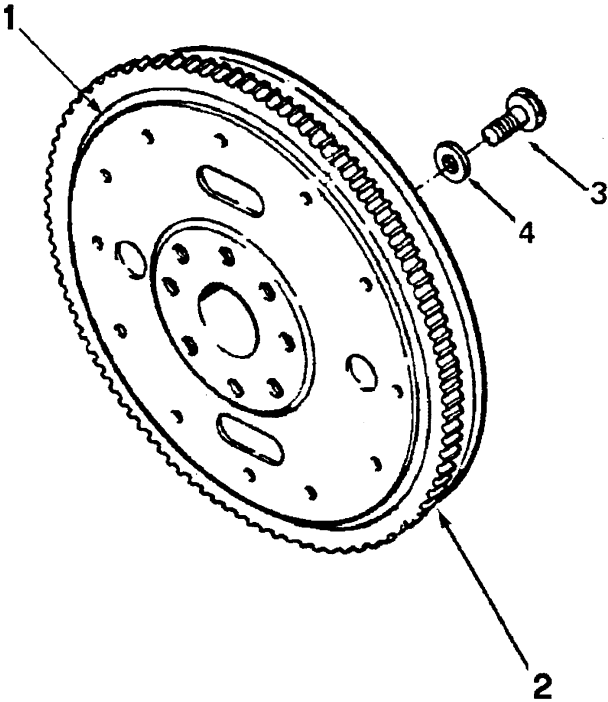

FW268400


Ref No.	Part Number	Part Name	Req	Remarks
		FLYWHEEL		
	3814262	Flywheel	1	
1	3814252	Flywheel	1	
2	4080743	Gear, Flywheel Ring	1	
3	3901395	Screw, Hexagon Head Cap	8	
4	3900269	Washer, Plain	8	

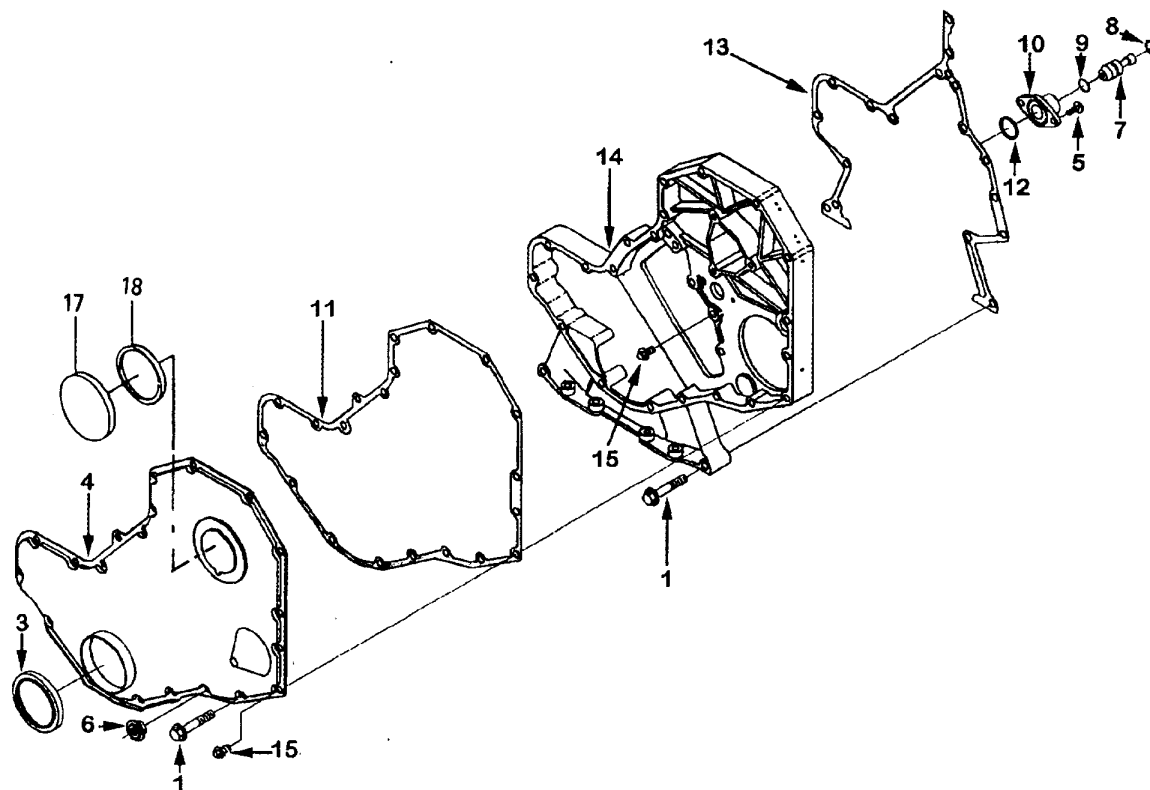

gc26000


Ref No.	Part Number	Part Name	Req	Remarks
1	3900633	Front Gear Cover	11	
-	3917801	Screw, Hex Flange Head Cap	1	
4	3923898	Cover, Gear	1	
3	3900709	Cover, Gear	1	
5	3907998	Seal, Oil	1	
6	3912772	Screw, Round Head Cap	2	
	3913995	Retainer, Bolt	1	
7	3903924	Housing, Timing Pin	1	
8	3904849	Pin, Timing	1	
9	3913994	Ring, Retaining	1	
10	3919683	Seal, O Ring	1	
11	3918673	Housing, Timing Pin	1	
12	3915772	Gasket, Gear Cover	1	
13	3916131	Seal, Rectangular Ring	1	
14	3964422	Gasket, Gear Housing	1	
15	3924962	Housing, Gear	1	
17	3903463	Screw, Hex Flange Head Cap	16	
18	3903475	Cover access	1	
		Seal rectangular ring	1	

PB260020501

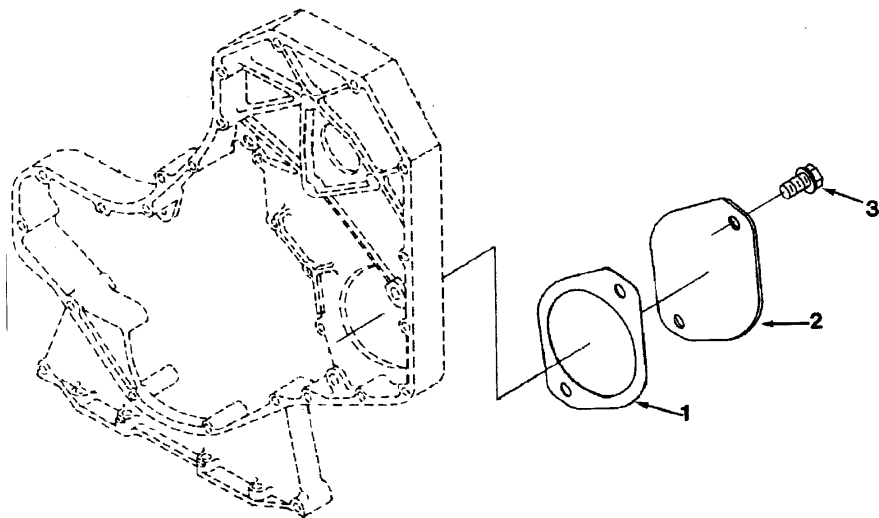


df268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3008400	FRONT GEAR TRAIN ACC.DRIVE Gasket, Acc Drive Cover	1	
2	3200782	Plate, Cover	1	
3	3901249	Screw, Hex Flange Head Cap	2	

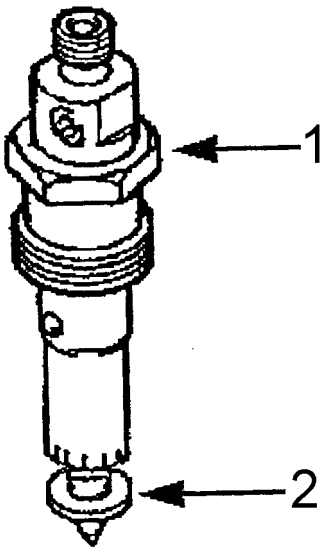

fi268400

Ref No.	Part Number	Part Name	Req	Remarks
-	3936624	FUEL IJECTOR	6	
2	3281840	Serviceable Thin MICO	6	
-	3909356	Seal, Injector	6	
		Seal, Injector		

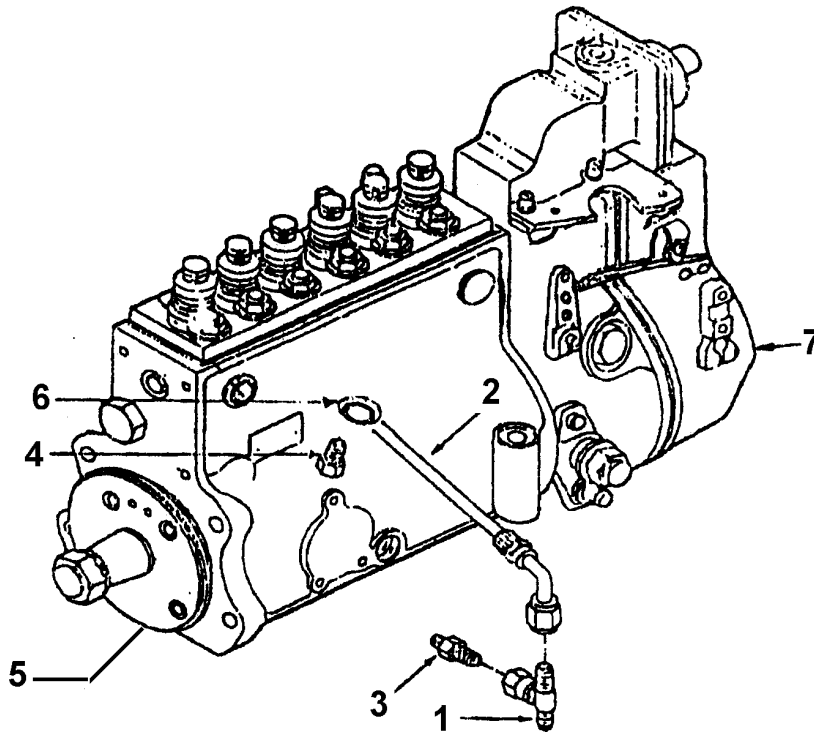


ft288200

Ref No.	Part Number	Part Name	Req	Remarks
1	3924346	FUEL PUMP BASE TEE, Female Branch	1	MICO Pump
2	3935283	Hose, Flexible	1	
3	139969	Nipple, Plain Hex.	1	
4	3918002	Screw, Banjo Connector	1	
5	3912473	Seal, Rectangular	1	
6	3918190	Washer, Sealing	2	
7	4080793	FIP	1	
-	3935319	(Pump Fuel Injection-FIP) Feed, Pump	1	

PB260024201

Gauge Oil Level

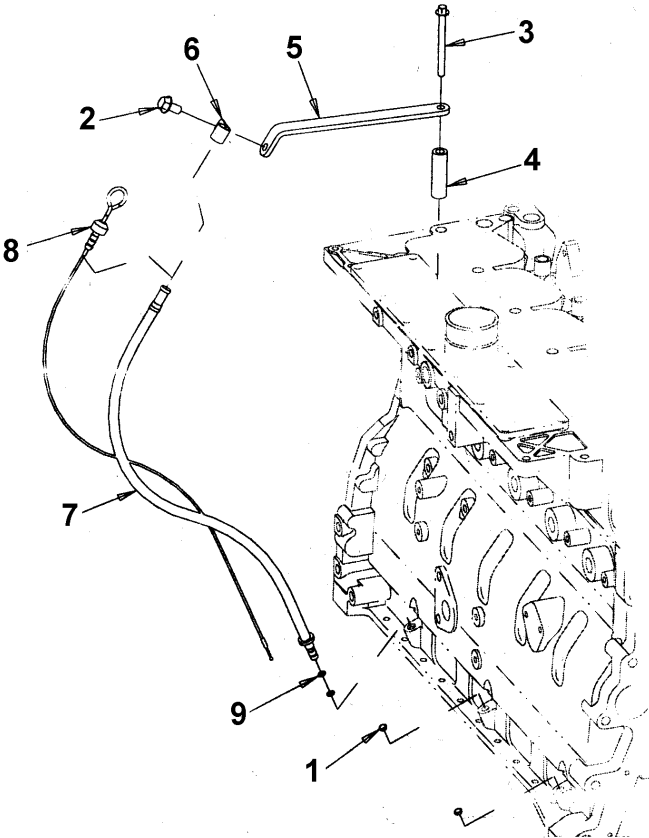


GOL.tif

Ref No.	Part Number	Part Name	Req	Remarks
		GAUGE OIL LEVEL		
1	3900955	PLug, Expansion	2	
2	3903990	Screw, Hex.Flange	1	
3	3913366	Screw, Hex.Flange	1	
4	4080685	Spacer, Mounting	1	
5	4080686	Bracket, Oil Gauge	1	
6	4080758	Clip	1	
7	4080699	Tube, Oil Gauge	1	
8	4080698	Dipstick	1	
9	4093793	Seal,O Ring	2	


New No.

Gauge Oil Level

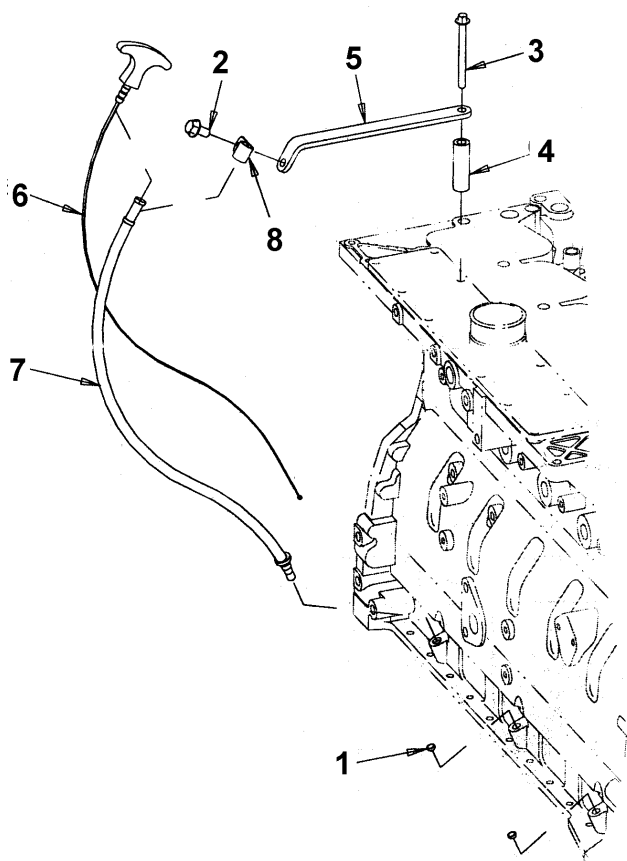




gol.tif

Ref No.	Part Number	Part Name	Req	Remarks
		GAUGE OIL LEVEL		
1	3900955	PLug, Expansion	2	
2	3903990	Screw, Hex.Flange	1	
3	3913366	Screw, Hex.Flange	1	
4	4080685	Spacer, Mounting	1	
5	4080686	Bracket, Oil Gauge	1	
6	4080698	Dipstick	1	
7	4080699	Tube, Oil Gauge	1	
8	4080758	Clip	1	

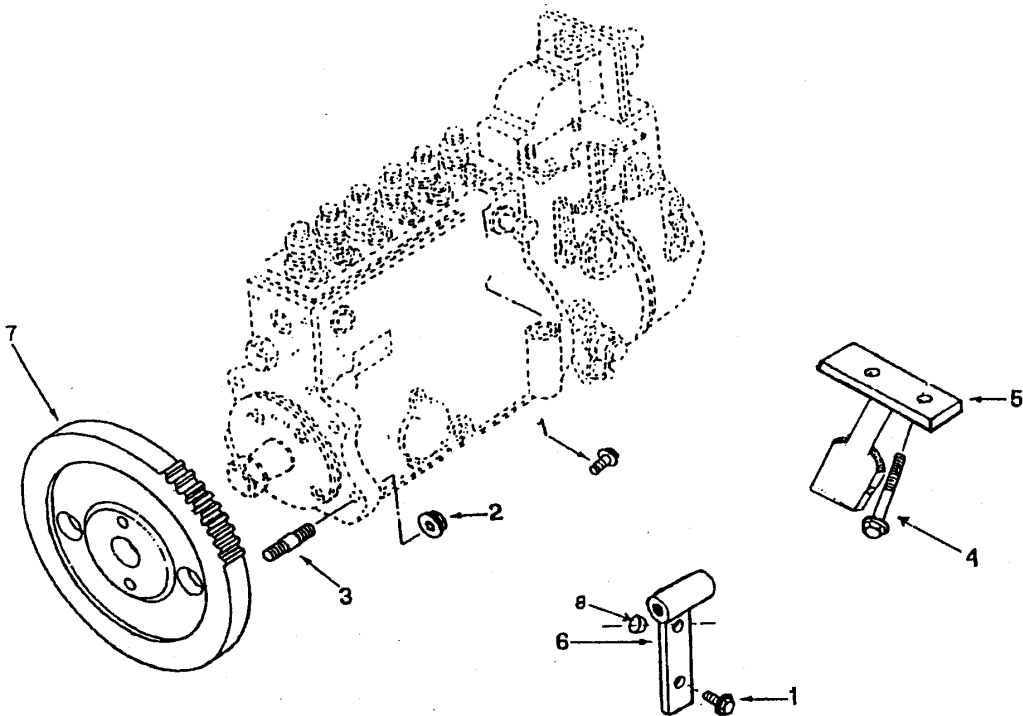


ft268401

Ref No.	Part Number	Part Name	Req	Remarks
		FUEL PUMP COUPLING		
1	3900632	Screw, Hex.Head Cap.	3	
2	3902662	Nut, Hex.Flange	4	
3	3931867	Stud	4	
4	3903990	Screw, Hex.Flange Head Cao	2	
5	3936646	Brace, Fuel Pump	1	
6	3936647	Brace, Fuel Pump	1	
7	3934636	Gear, Fuel Pump	1	

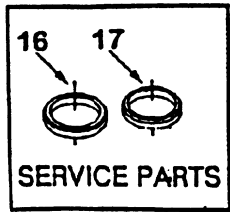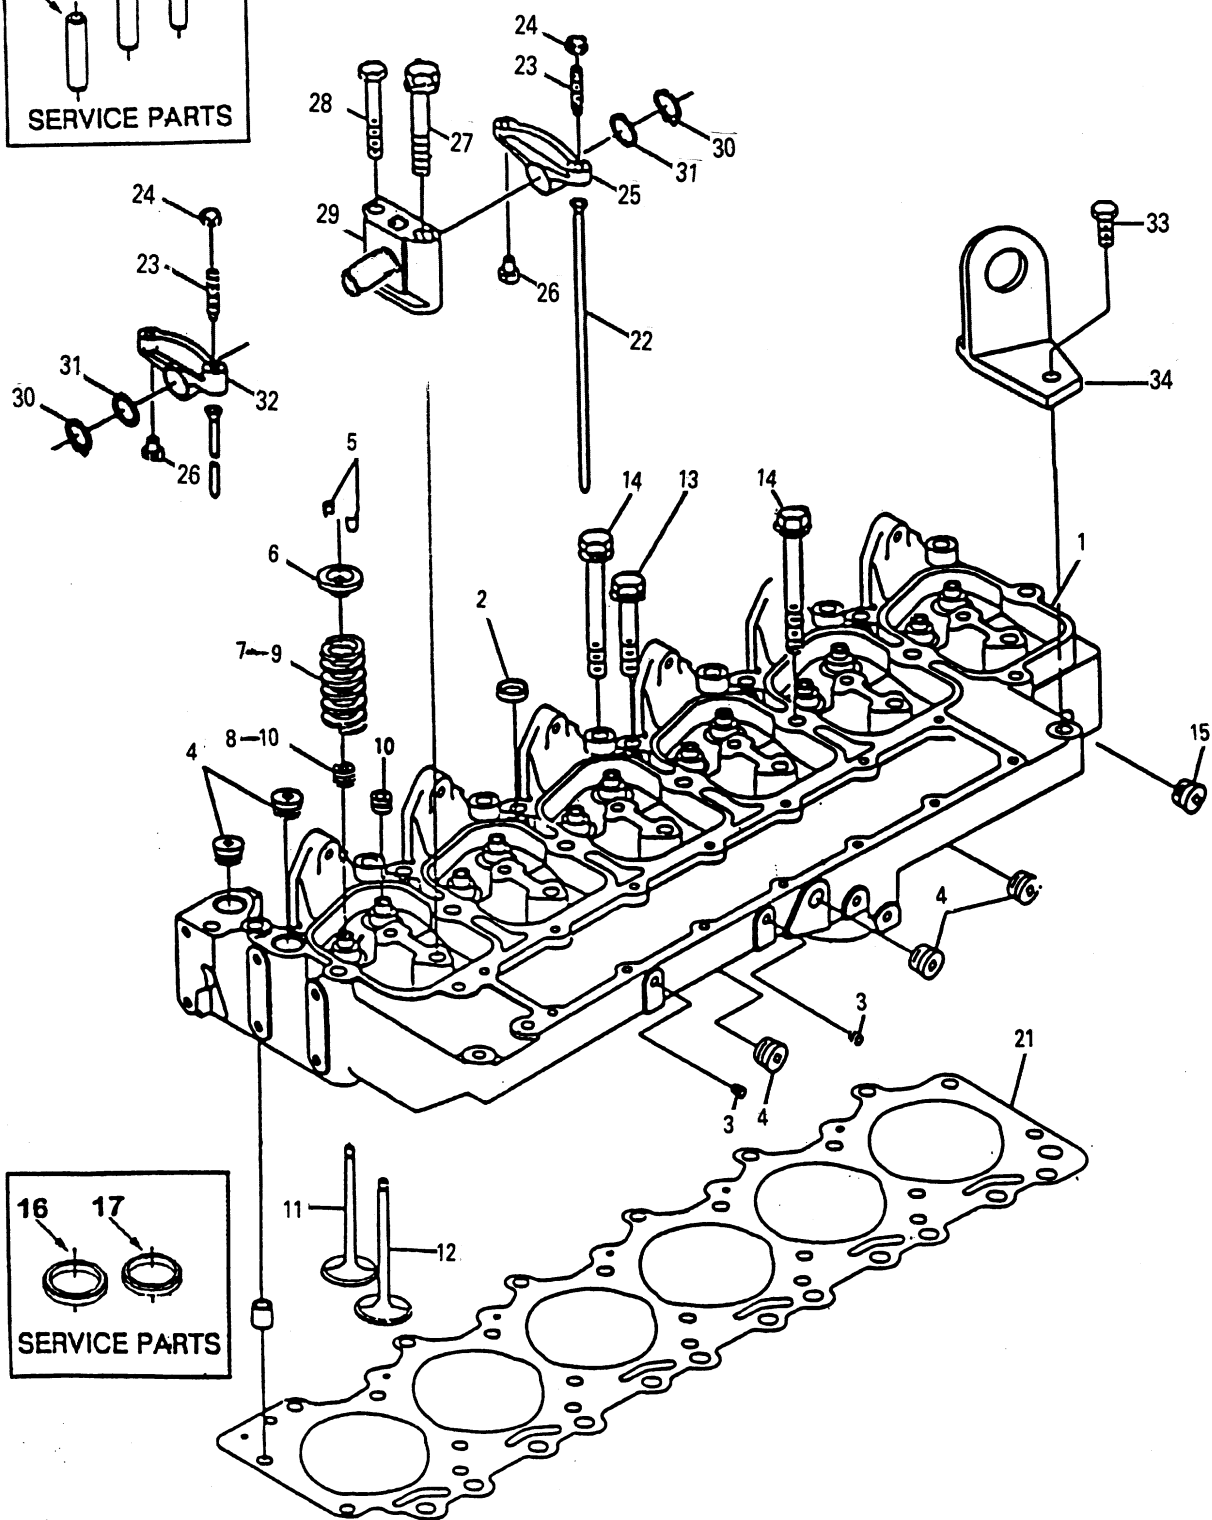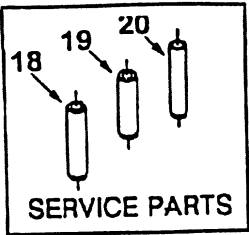

kn268400

Ref No.	Part Number	Part Name	Req	Remarks
		CYLINDER HEAD		
	3927282	Head, Cylinder	1	
1	3925389	Head, Cylinder	1	
2	3812092	Plug, Expansion	5	
3	3906619	Plug, Pipe	1	
4	3008468	Plug, Pipe	5	
5	3900250	Collet, Valve	12	
11	3920867	Valve, Intake	6	
5	3900250	Collet, Valve	12	
12	3920868	Valve, Exhaust	6	
6	3900299	Retainer, Valve Spring	12	
7	3916691	Spring, Compression	6	
8	3901097	Seal, Valve Stem	6	
9	3926700	Spring, Valve	6	
10	3921640	Seal, Valve Stem	6	
13	3920779	Screw, Hex Flange Head Cap	6	
14	3920780	Screw, hex Flange Head Cap	14	
15	3008469	Plug, Pipe	1	
		SERVICE PARTS		
16	3904105	Insert, Valve		Exhaust
17	3906854	Insert, Valve		Intake
18	3904408	Guide, Valve Stem	A/R	Thick wall 60.5 mm long
19	3904409	Guide, Valve Stem	A/R	Thick wall 51.75 mm long
20	3906206	Guide, Valve Stem	A/R	Thin wall intake or exhaust
21	3282805	Gasket cylinder head	1	
-	3283337	Screw	1	
-	3283339	Screw	1	
		ROCKER LEVERS		
-	3910815	Support rocker lever	6	
29	3911423	Support rocker lever	1	
-	3922487	Shaft rocker lever	1	
32	3910811	Lever rocker	6	
-	3910809	Lever rocker	1	
23	3934086	Screw rkr. lever adjusting	1	
24	3927692	Nut heavy hex.	2	
26	3900705	Insert, rocker lever	1	
25	3910810	Lever rocker	6	
-	3910808	Lever rocker	1	
23	3934086	Screw rkr. lever adjusting	1	
24	3927692	Nut heavy hex.	1	
26	3900705	Insert rocker lever	1	
31	3900245	Washer plain	12	
30	3900242	Ring retaining	12	
27	3901221	Screw hex. head cap	6	
28	3920781	Screw hex. flange cap	6	
22	3923262	Rod push	12	
		LIFTING BRACKET		
34	3281012	Lifting bracket	1	
33	3910495	Screw hex. flange head cap	2	

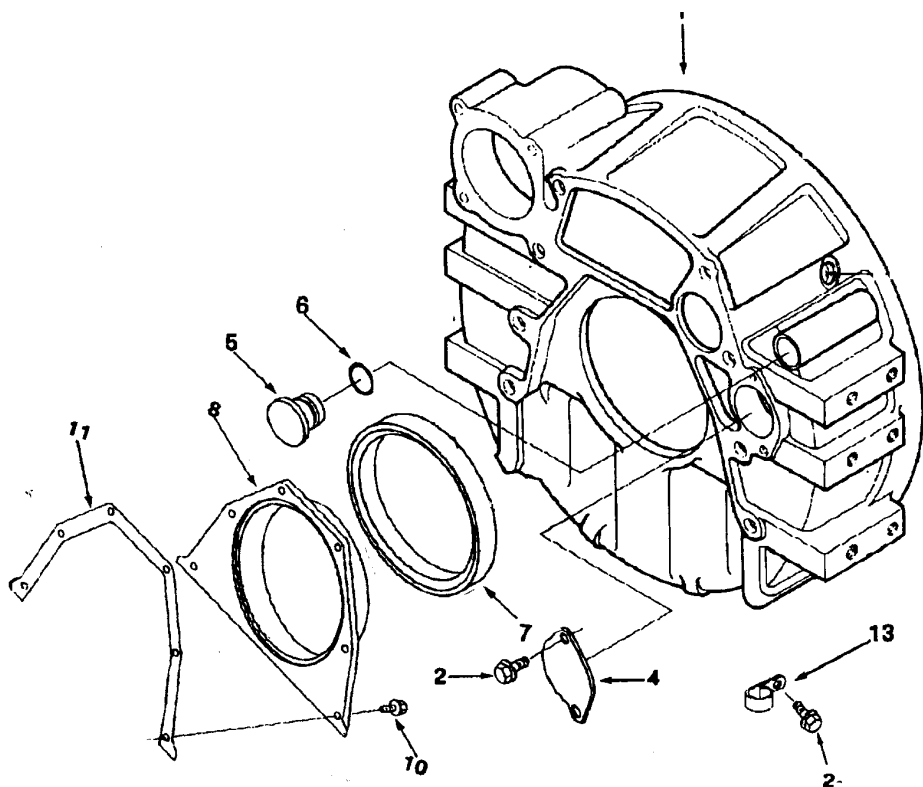

fh268401


Ref No.	Part Number	Part Name	Req	Remarks
		HOUSING FLYWHEEL		
1	3353826	Housing flywheel	1	
2	3900225	Screw hex. cap	2	
4	3925234	Plate cover	1	
5	3910248	Plug O ring	1	
6	3910260	Seal O ring	1	
7	3912473	Seal, oil	1	
8	3936895	Cover rear	1	
10	3913638	Screw hex flange head cap	6	
11	3928493	Gasket rear cover	1	
13	3928989	Clip	1	
-	3920447	Screw hex flange head cap	8	
-	3914386	Gasket rear cover	1	
-	3904181	Plug threaded	1	
-	67949	Clip	1	
-	3910619	Cover rear	1	
-	3925529	Seal oil	1	
-	3910619	Cover, Rear	1	
-	3921043	Cover, Rear	1	
-	3933262	Seal, Oil	1	

Group No. 15.01

Instruments / Sensors


Ref No.	Part Number	Part Name	Req	Remarks
-	3225311	INSTRUMENTS/SENSORS Transducer-HWT	4	
-	3815045	HWT Safety	1	-98Deg.+2
-	S 932 E	Nipple	1	-1
-	S 960	T Connection	1	
-	S 967	Adapter	1	
-	3815046	LLOP Switch	1	
-	S 930 E	T Connection	1	
-	S 945	Adapter LOP	1	
-	136521	Elbow adapter	4	
-	S 1059	Coupling	2	
-	3814909	Gauge, Water Temp.	1	Old No.-3874256
-	O.E.M.Scope	Gauge, Oil Pressure	1	
-	3874267	Sensor, Water temp.	1	

PB260021501

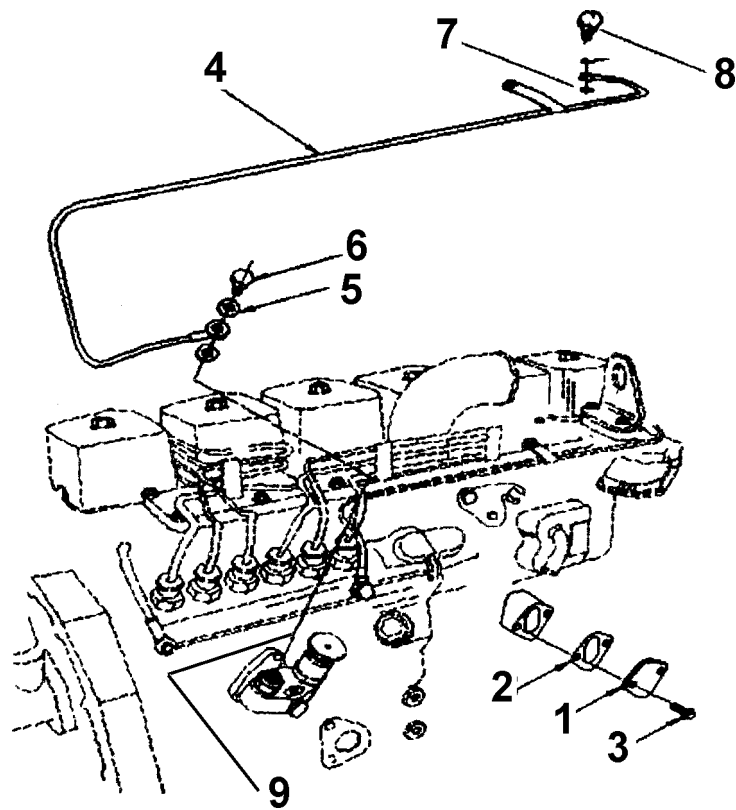


lift.tif

Ref No.	Part Number	Part Name	Req	Remarks
		LIFT PUMP		
1	3904046	Plate, Cover	1	- Lift Pump To Filter
2	3914304	Gasket, Cover Plate	1	
3	3900630	Screw, Hex.Flange Head Cap	2	
4	4080668	Tube, Fuel Supply	1	
5	3918192	Washer, Sealing	2	
6	3924725	Screw, Banjo Connector	1	
7	3918191	Washer, Sealing	2	
8	3916361	Screw, Banjo Connector	1	

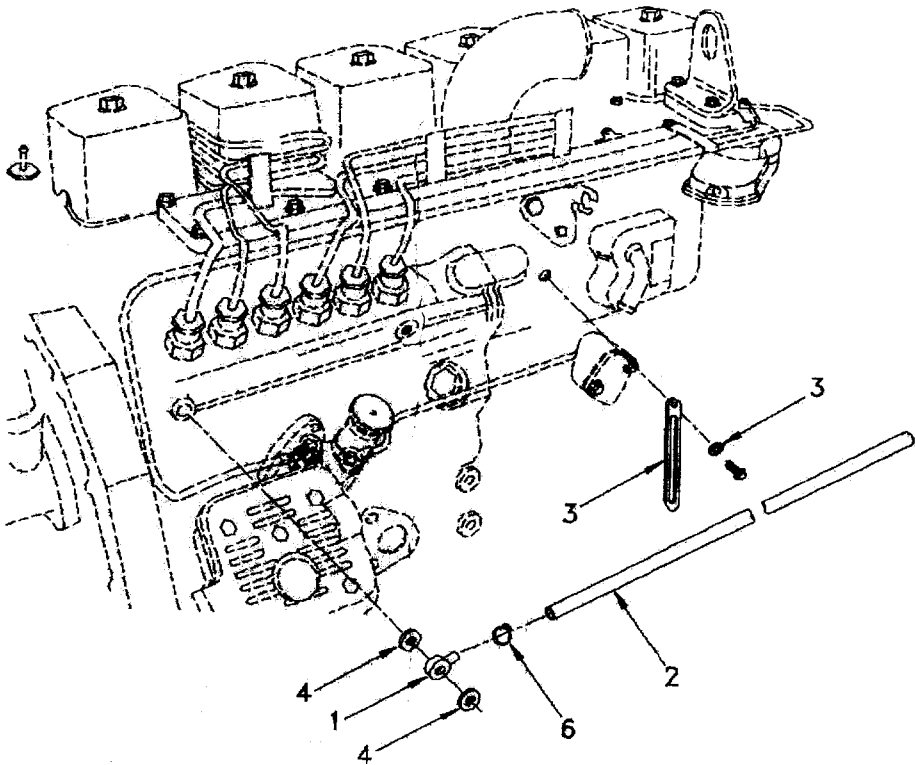

LF26000

Ref No.	Part Number	Part Name	Req	Remarks
1	3936593	LOCATION FUEL DRAIN Banjo, Connector	1	
4	3918192	Washer, Sealing	2	
2				
3				
5				
6	3935267	Clamp	2	

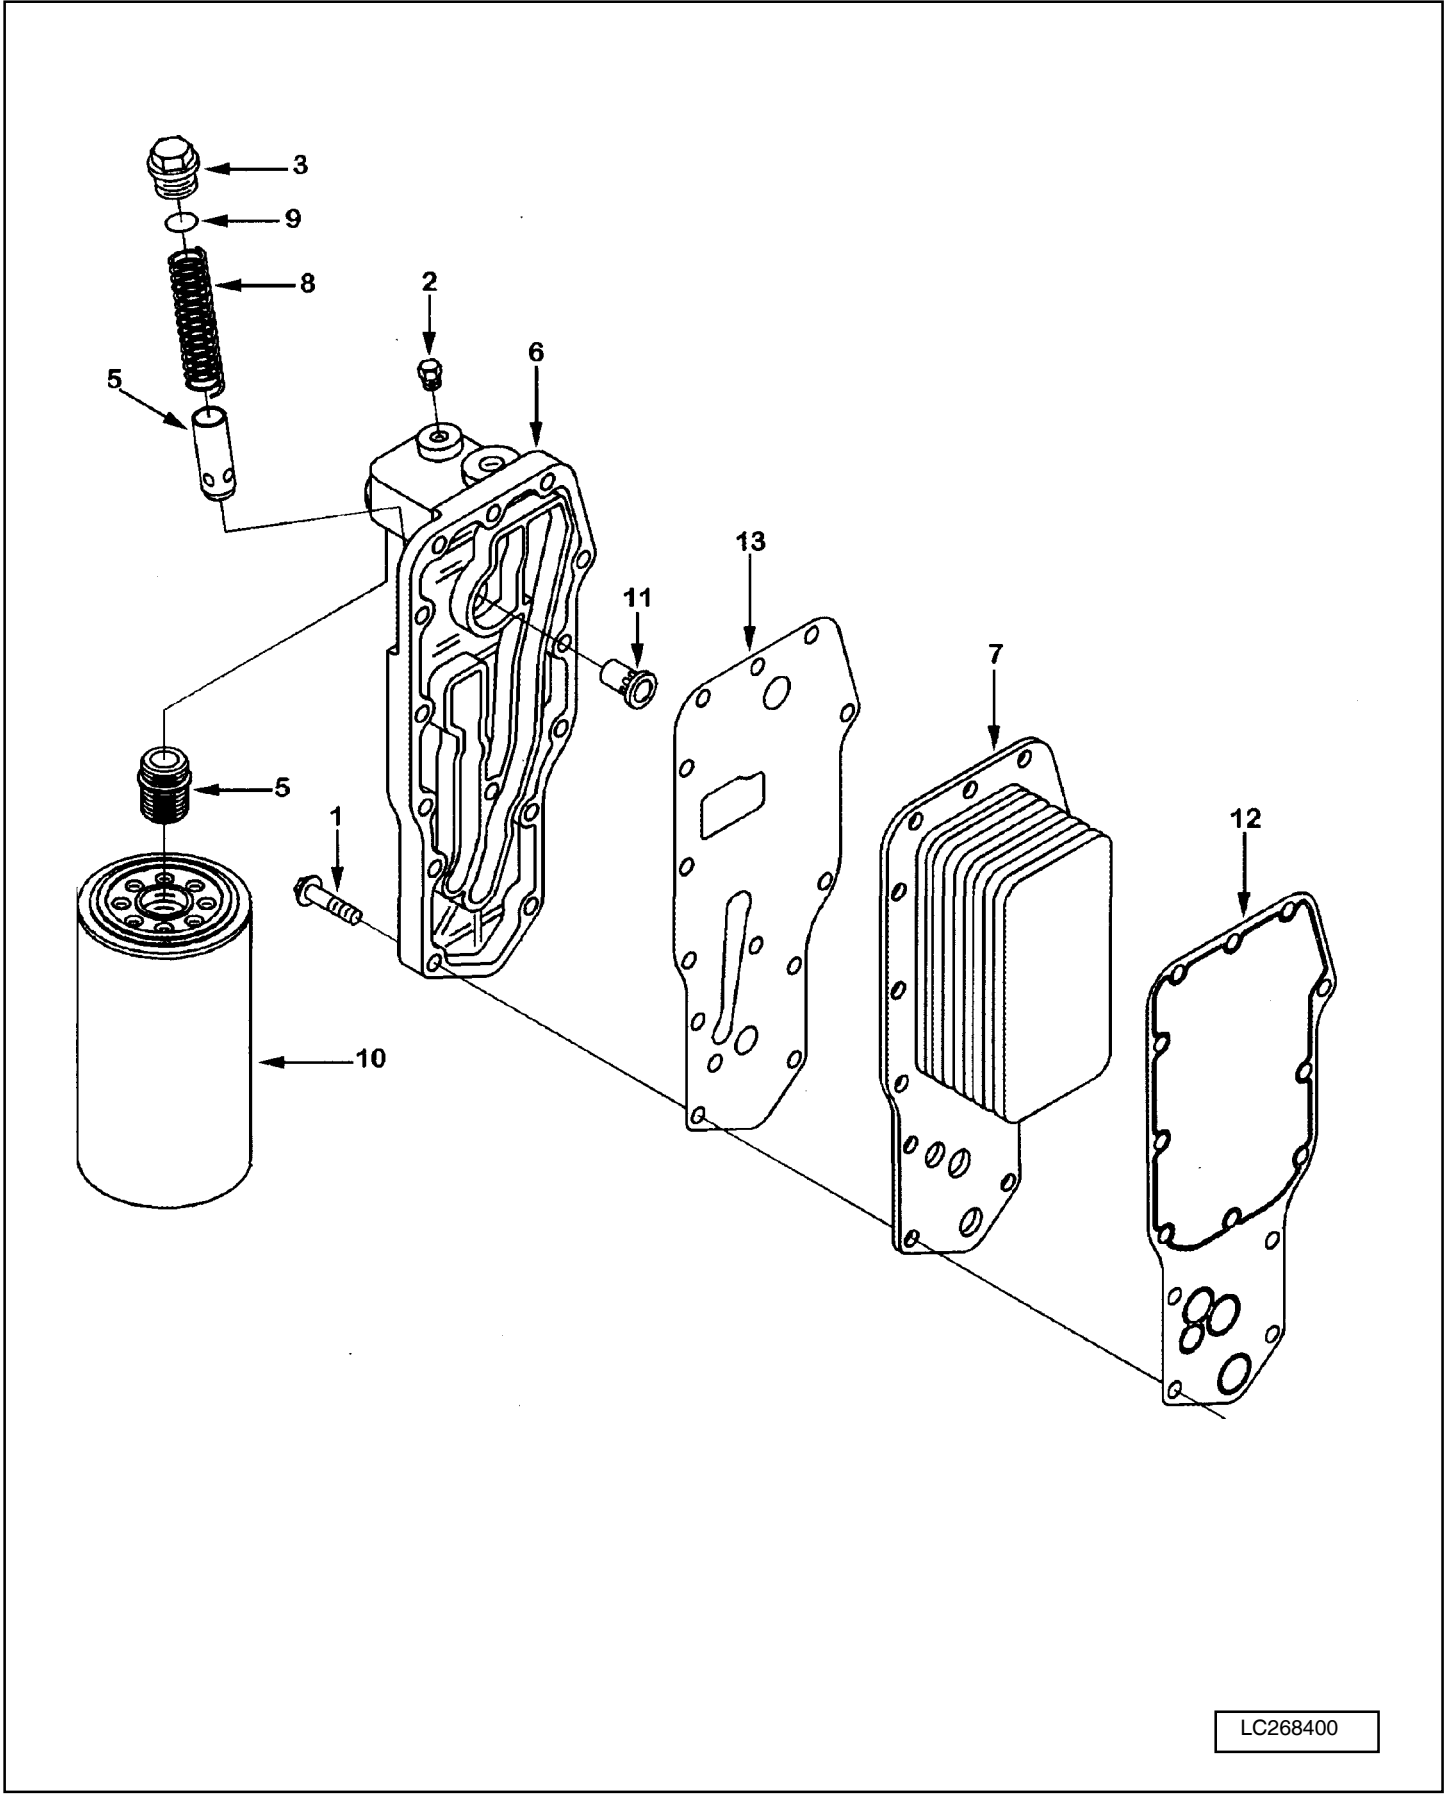


LC268400

Group No. 07.05

Lub.Oil Cooler


Ref No.	Part Number	Part Name	Req	Remarks
		LUBE OIL COOLER		
1	3900632	Screw, Hex Flange Head Cap	14	
2	3906619	Plug, Pipe	1	
3	3915787	Plug, Threaded	1	
4	3918428	Plunger, Prs Regulator	1	
5	3909355	Adapter, Filter Head	1	
6	3918954	Head, Lub Oil Filter	1	
7	3921558	Core, Cooler	1	
8	3925009	Spring, Compression	1	
9	3929457	Seal, O Ring	1	
10	3937743	Cartridge, Lub Oil Filter	1	
11	3927622	Valve, bypass	1	
12	3918256	Gasket, Oil Cooler Core	1	
13	3929792	Gasket, Filter Head	1	

PB2600206 01

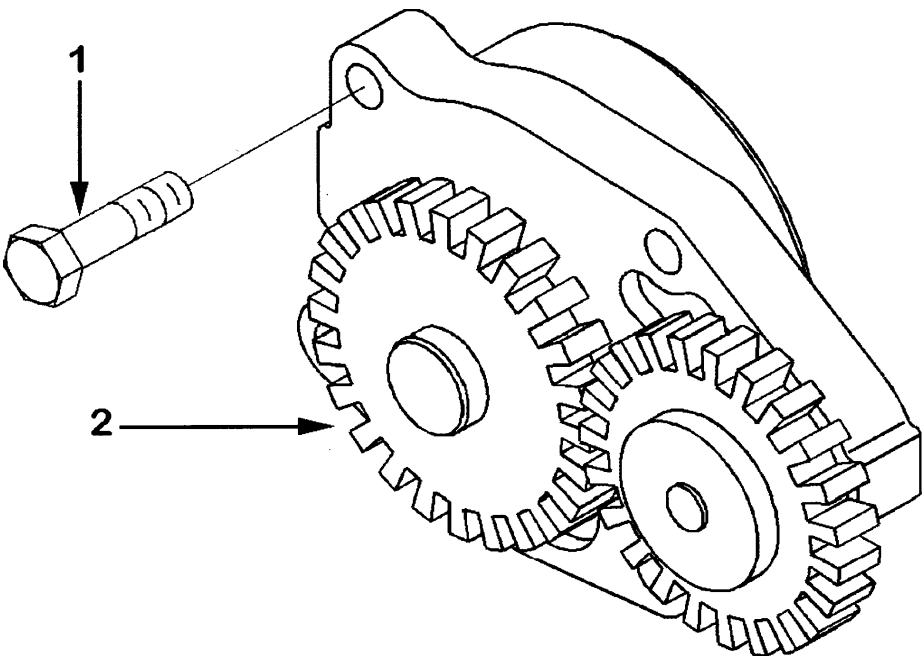


LP268400

Ref No.	Part Number	Part Name	Req	Remarks
-	LP9014	LUB OIL PUMP		
1	3900677	Screw, Hexagon Head Cap	4	
2	3937404	Pump, Lubricating Oil	1	

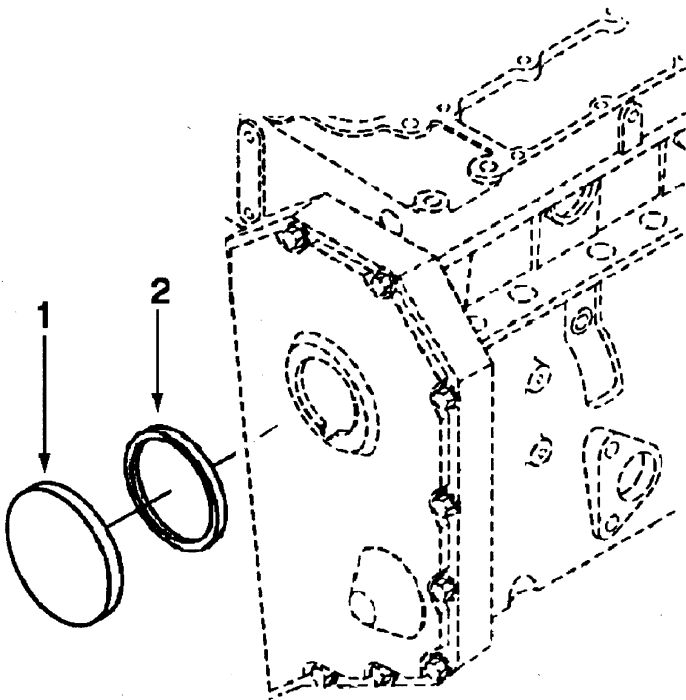

el268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3903463	MECHANICAL TACHOMETER DRIVE Cover access hole	1	
2	3903475	Seal rectangular ring	1	

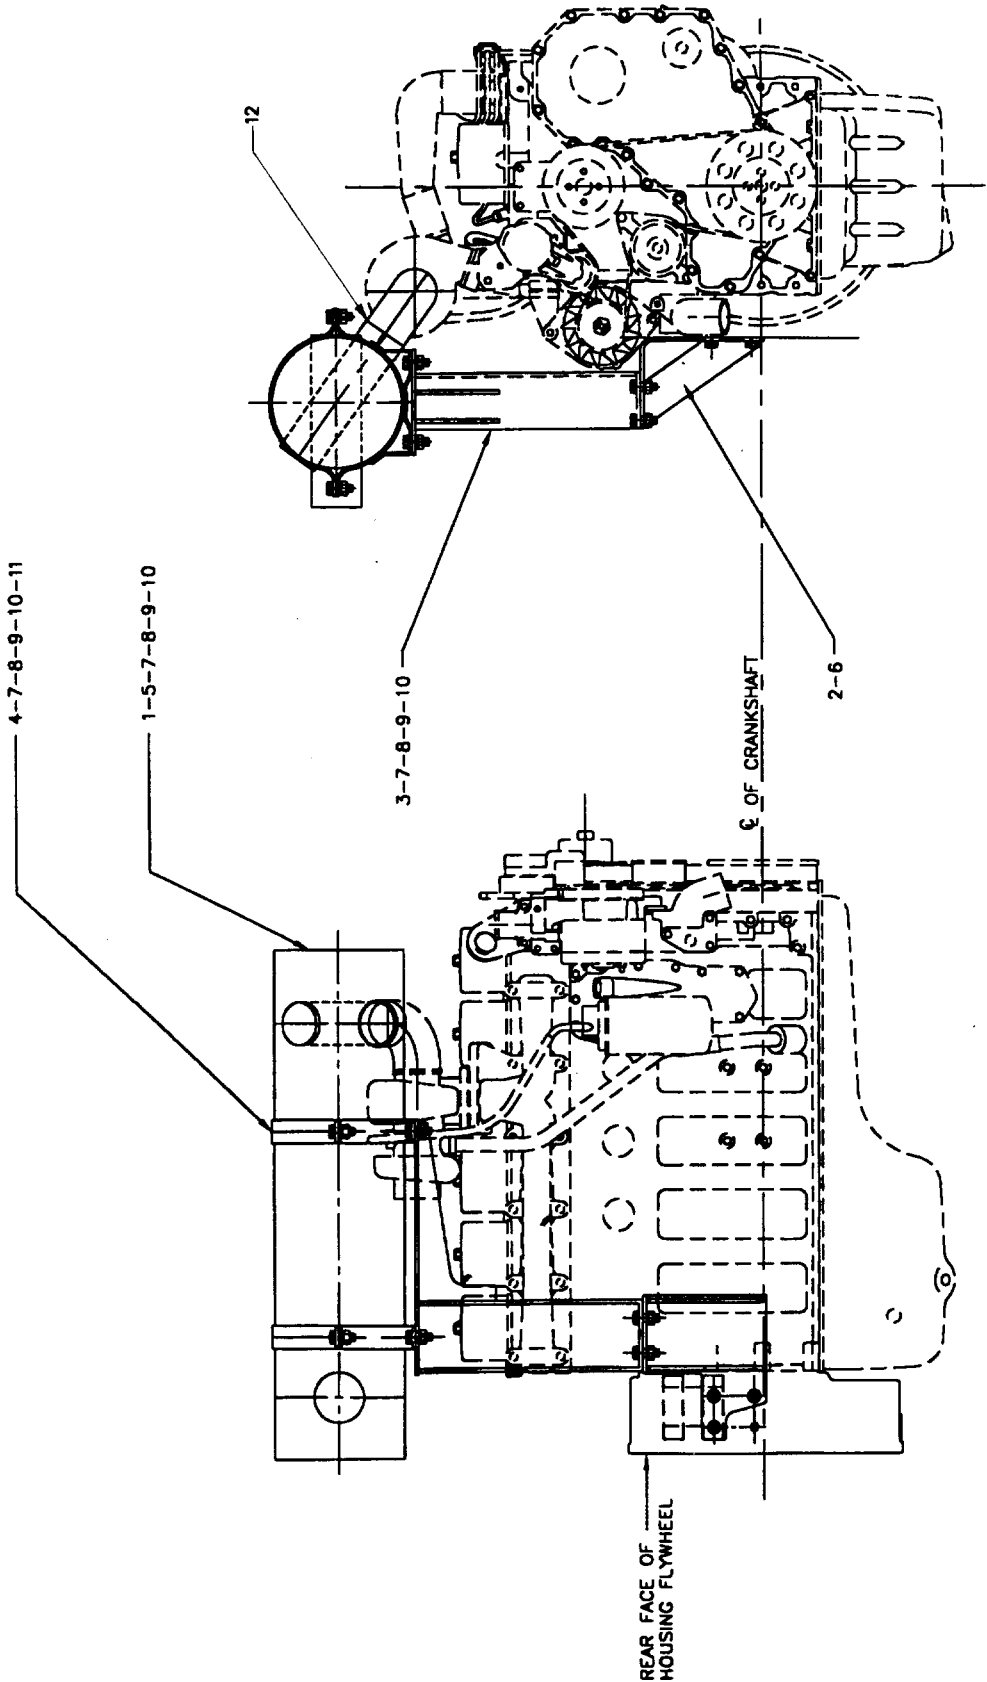


MU26000

Group No.11.02

Muffler (Old Setup)


Ref No.	Part Number	Part Name	Req	Remarks
1	3814208	MUFFLER	1	
2	3814206	Muffler	1	
3	3814207	Bracket muffler	1	
4	3814209	Bracket muffler	1	
5	3814220	Strap muffler	2	
6	3814220	Strap muffler	2	
7	3901249	Capscrew	3	
8	3234934	Capscrew	10	
9	S 608	Lock washer	10	
10	S 670	Plain washer	20	
11	3236460	Nut	10	
12	3235451	Nut	2	
	3814320	Clamp tube	1	

PB2600200 01

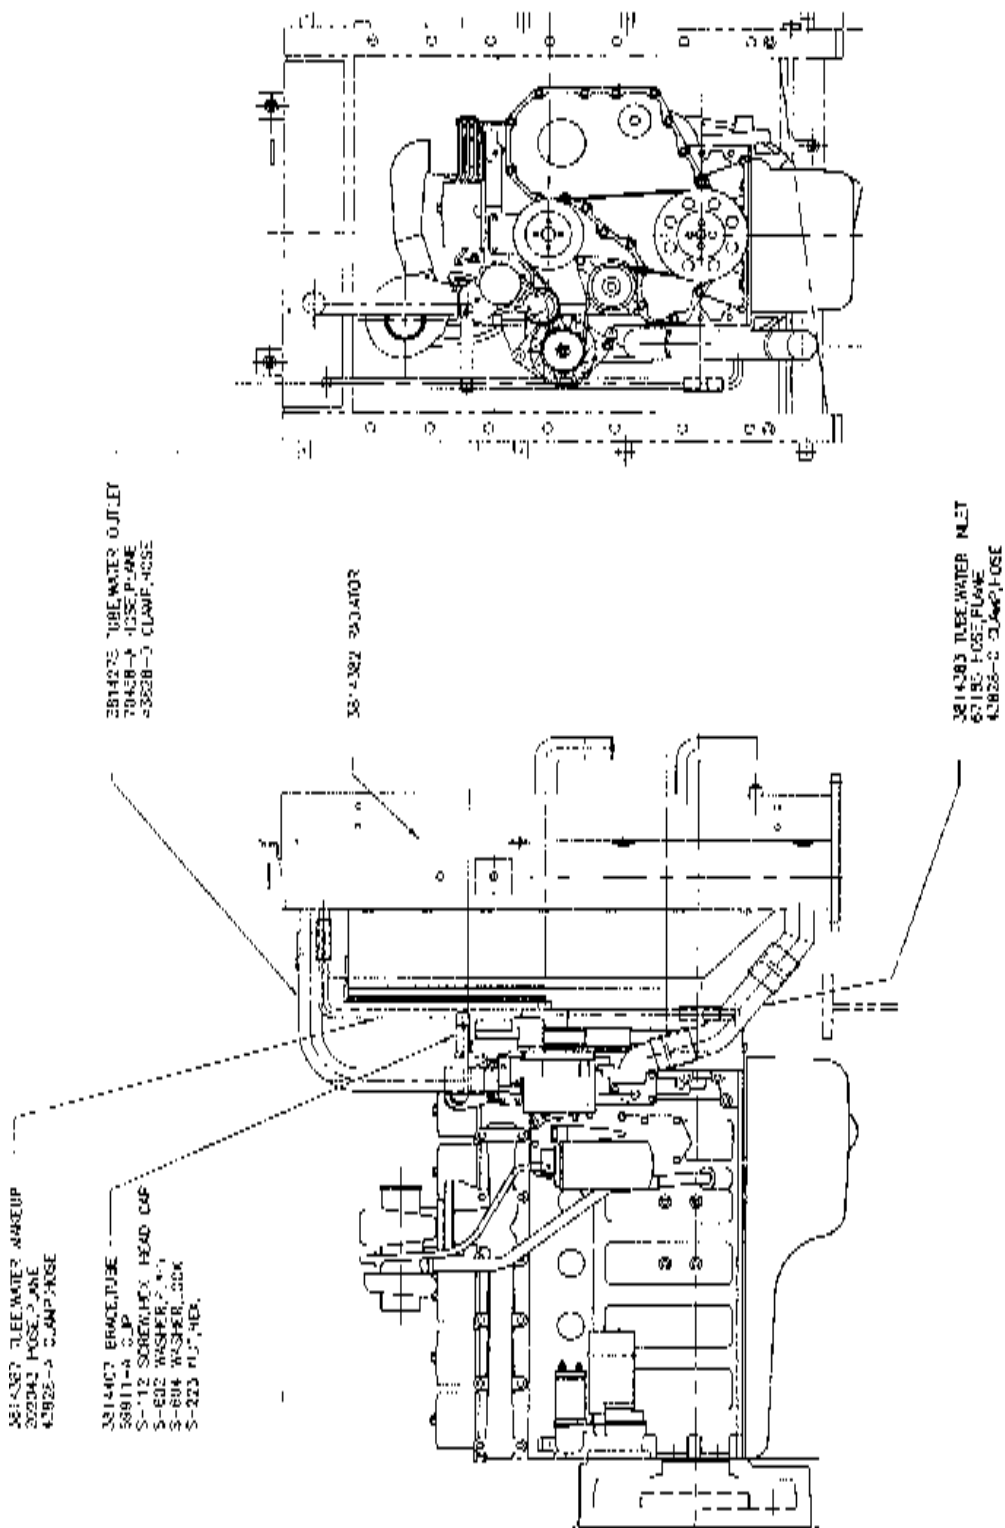

MAS28126

Ref No.	Part Number	Part Name	Req	Remarks

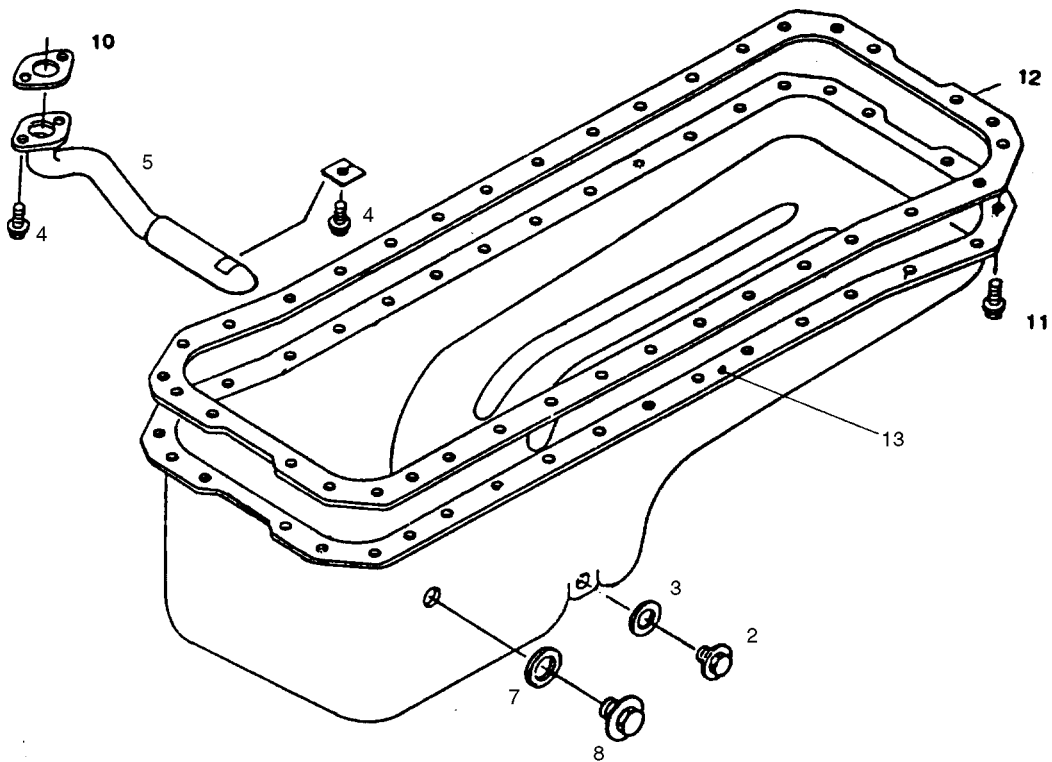


kn268400

Group No. 07.01

Oil Pan


Ref No.	Part Number	Part Name	Req	Remarks
		OIL PAN		
1	3915703	Pan, Oil	1	
10	3914383	Gasket, Flange	1	
4	3900630	Screw, Hex Flange Head Cap	3	
7	3902425	Washer, Sealing	1	
2	3924147	Plug, threaded	1	
5	3909373	Connection, Oil Suction	1	
3	3920773	Washer, Sealing	1	
8	3282266	Plug, Threaded	1	
12	3927167	Plate cylinder block stiffner	1	
11	3907860	Screw hex. head cap	36	
13	1280 B	Threebond (1208 B) Locktight	1	

PB2600135 02

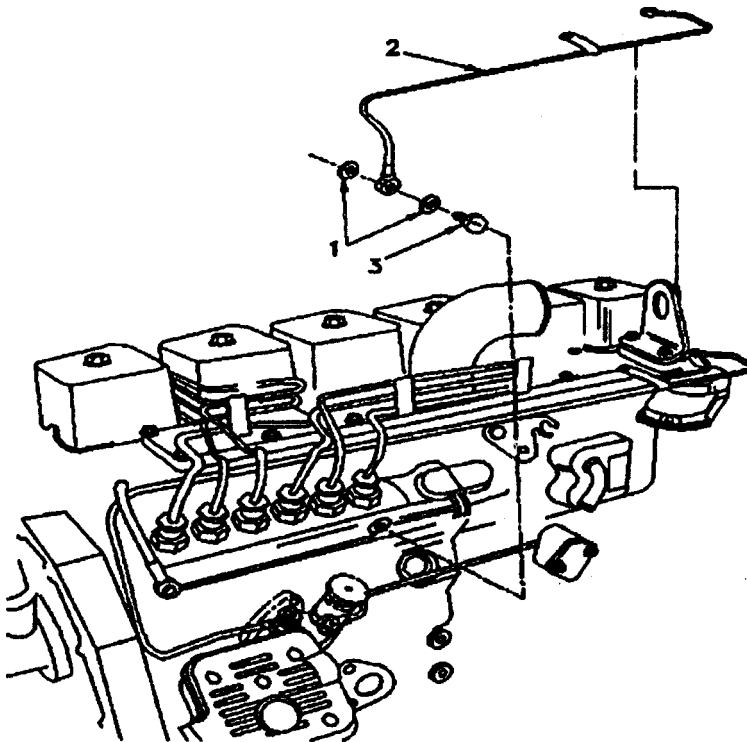

PFF.tif


Ref No.	Part Number	Part Name	Req	Remarks
1	3918192	PLUMBING FUEL FILTER Washer, Sealing	2	(Filter To Fuel Pump)
2	3162000	Tube, Fuel Supply	1	
3	3924725	Screw, banjo Connector	1	

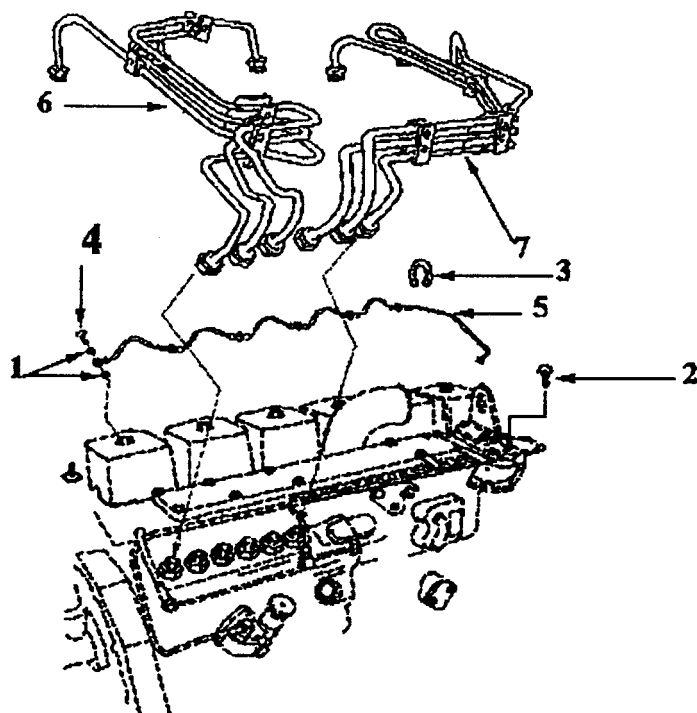

pf268400

Ref No.	Part Number	Part Name	Req	Remarks
		PLUMBING FUEL		
1	3918188	Washer, Sealing	2	
2	3924726	Valve, Check	1	
3	3903380	Seal, Banjo Connector	6	
4	4093674	Screw, Banjo Connector	6	
5	3162001	Manifold, Fuel	1	
6	3931842	Tube, Inj.Fuel Supply	1	
7	3931843	Tube, Inj.Fuel Supply	1	
		TUBE NOs.OF CYLINDERS		
Sr.	Cyl.No.	Tube, No.		
1	1	3931844	1	
2	2	3931845	1	
3	3	3931846	1	
4	4	3931847	1	
5	5	3931848	1	
6	6	3931849	1	

Radiator (New Setup)

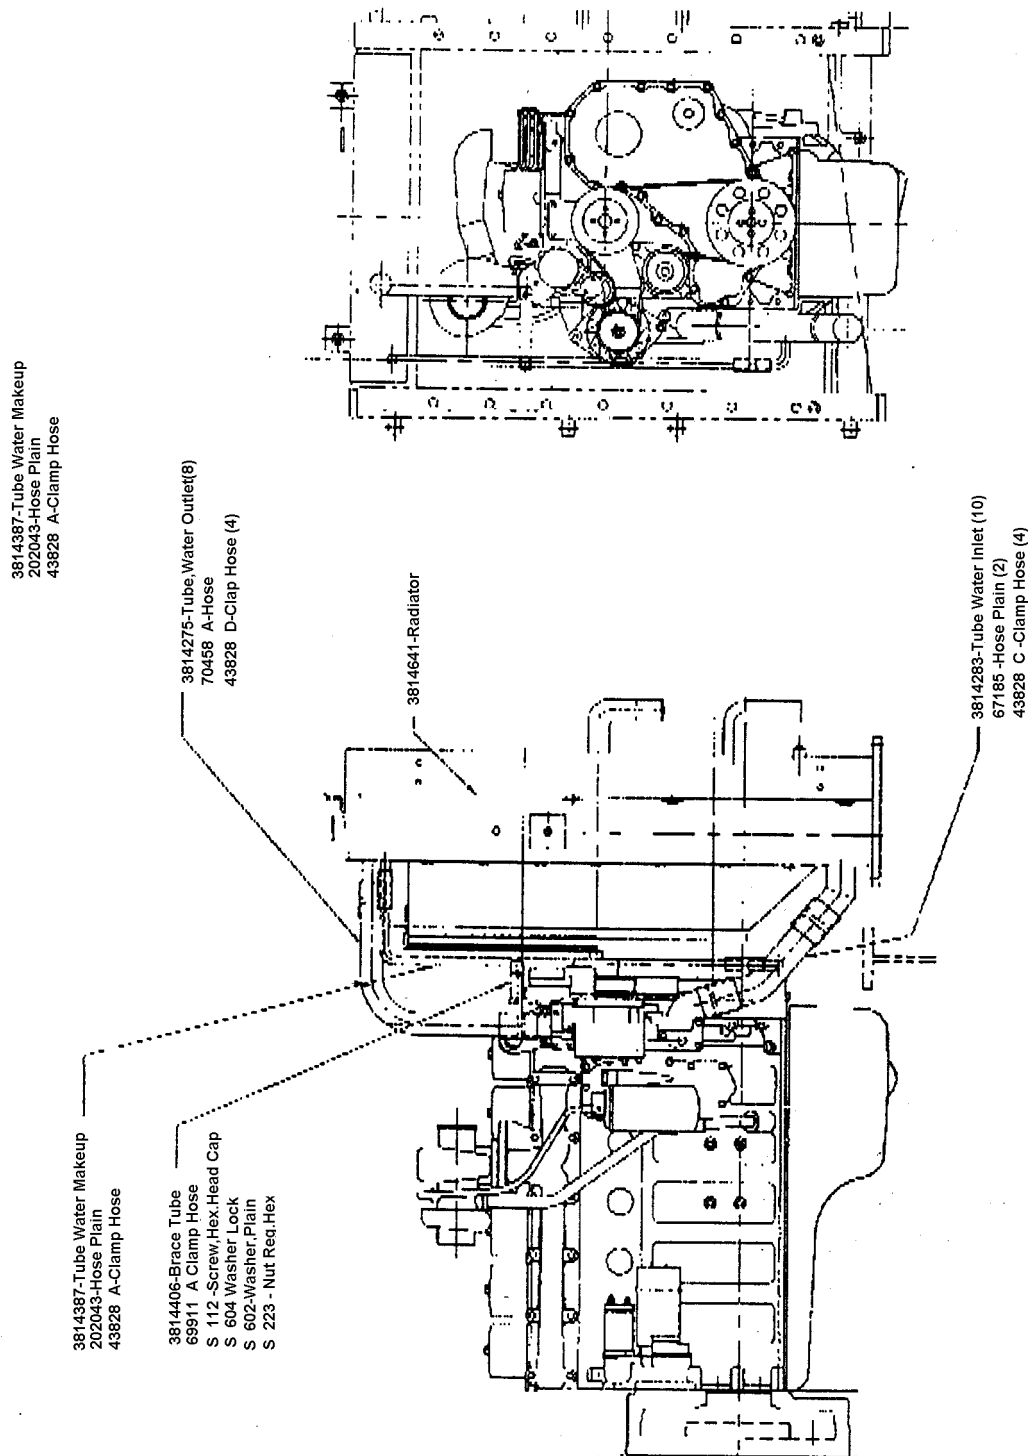

RA26000C


PB260024600

Group No.08.13

Radiator (Newsetup)


Ref No.	Part Number	Part Name	Req	Remarks
1	3814382	RADIATOR Radiator	1	Only Radiator P No. - 4071627
-	AS04603000SS	Hose vent	1	Only Cooler P No. - 4071628
2	43828 C	Clamp	4	Radiator Cap P.No. - 500181
3	67185 H	Hose	2	Rad.Shroud P.No. - 3814642
4	43828 D	Clamp	4	
-	3814110	Hose	2	
-	43828	Clamp	4	
-	3814276	Tube makeup	1	
-	3814274	Tube water inlet	1	
-	69911	Support clamp	2	
-	112105	Adapter	2	
-	3814417	KIT RADIATOR Kit radiator	1	
8	3814275	Tube,water inlet	1	
9	70458 A	Hose 1.75 x 2.12 x 3"	2	
-	43828 D	Clamp hose	4	
10	3814383	Tube wtr inlet	1	
-	67185	Hose	2	
-	43828 C	Clamp hose	4	
5	3814387	Tube water make up	1	
6	202043	Hose plain	2	
-	43828 A	Clamp,t bolt	4	
-	3814406	Brace tube	1	
7	69911 A	Clamp hose	1	
-	S 112	Screw,hex head cap	2	
-	S 604	Washer,lock	2	
-	S 602	Washer,plain	2	
-	S 223	Nut,regular hexagon	2	
-	144372	Elbow	1	
-	143950	Adapter flexible hose	1	
-	AS502000 SS	Hose assembly	1	
-	3914407	Screw hex flange head cap	4	
-	3814323	Lockplate	2	

PB260024301

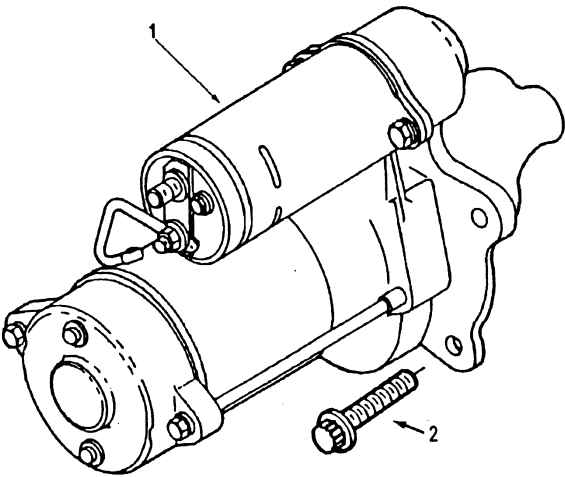


st268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3935328	STARTING MOTOR	1	
2	3903834	Starting motor Screw, twelve point cap	3	

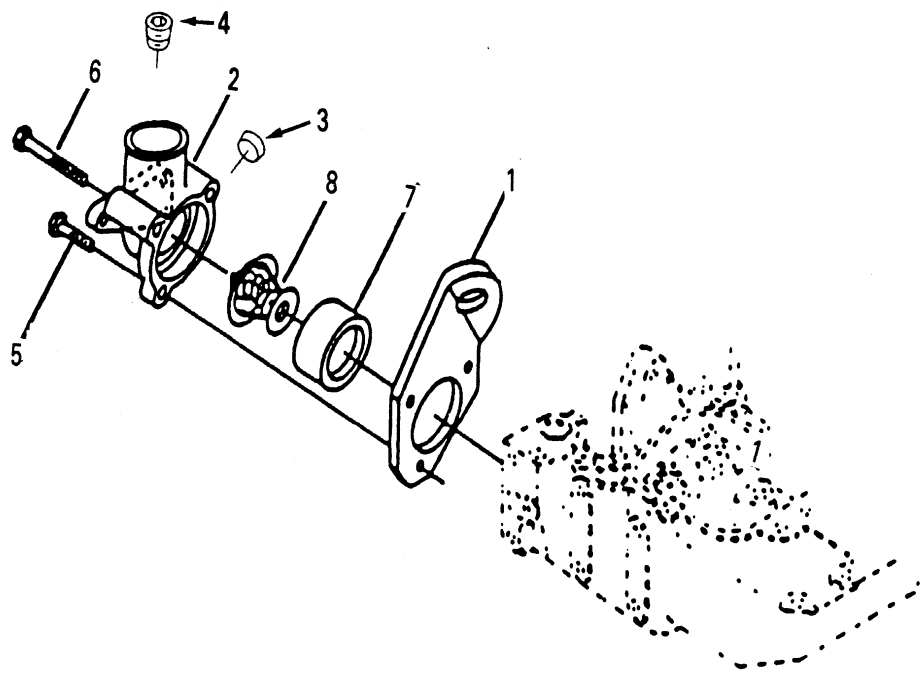


th268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3281246	THERMOSTAT HOUSING	1	
2	3924473	Bracket, Lifting	1	
3	3008468	Housing, Thermostat	1	
4	3900956	plug Pipe	1	
5	3900678	Plug, Expansion	1	
6	3913366	Screw, Hex Flange Head Cap	1	
7	3906697	Screw, Hex Flange Head Cap	2	
		Seal, Rectangular Ring	1	
8	3917324	THERMOSTAT		
		Thermostat (Modified)	1	
-	3906697	Seal	1	

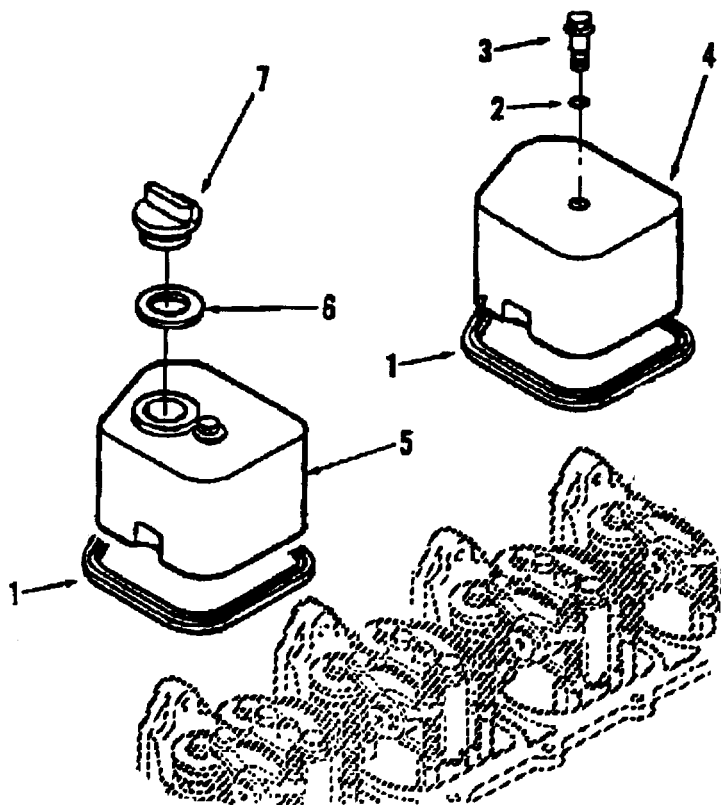


vc268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3930906	VALVE COVER	6	
2	3928406	Gasket, Valve Cover	6	
3	3907049	Isolator, Noise	6	
4	3928404	Screw, Hex Flange Head Cap	5	
5	3928405	Cover, Valve	1	
6	3902363	Cover, Valve	1	
7	3901895	Seal rectangular ring	1	
		Cap filler		

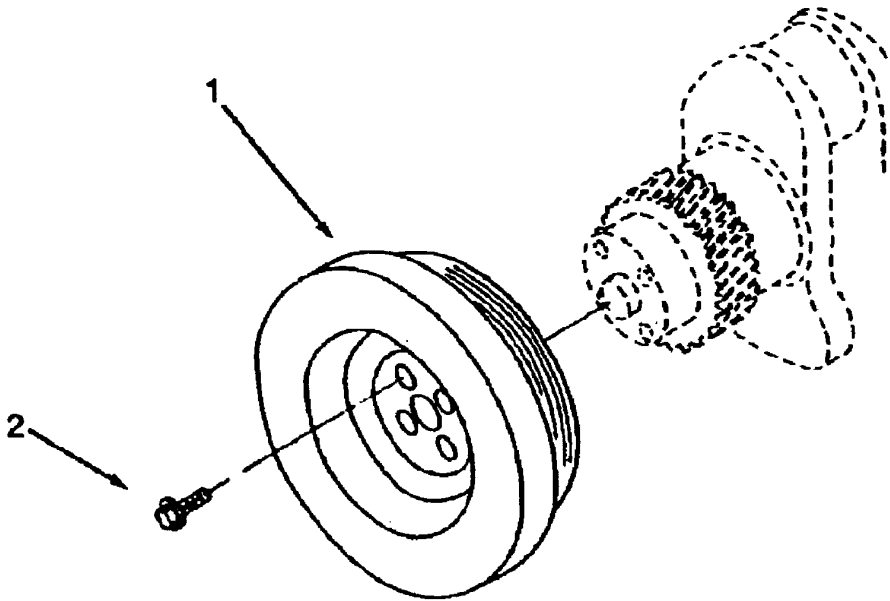


da268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3914454	VIBRATION DAMPER	1	
2	3903857	Damper, Vibration Screw, Hex Flanger Head Cap	4	

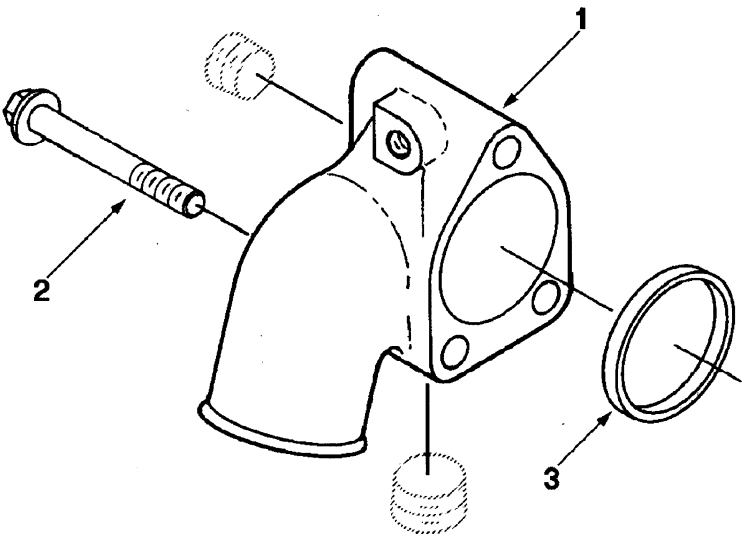


wi268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3903103	WATER INLET CONNECTION	1	
2	3901757	Connection, Water Inlet	3	
3	3906697	Screw, hex Flange Head Cap	1	
		Seal, Rectangular Ring		

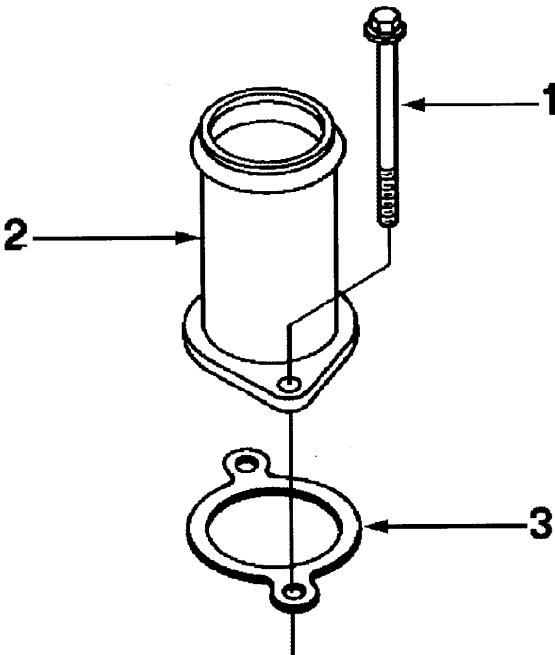

wo268400

Ref No.	Part Number	Part Name	Req	Remarks
1	3900630	WATER OUTLET CONNECTION	2	
2	4080781	Screw hex. flange head cap	1	
3	3912558	Connection water outlet	1	
		Gasket connection		

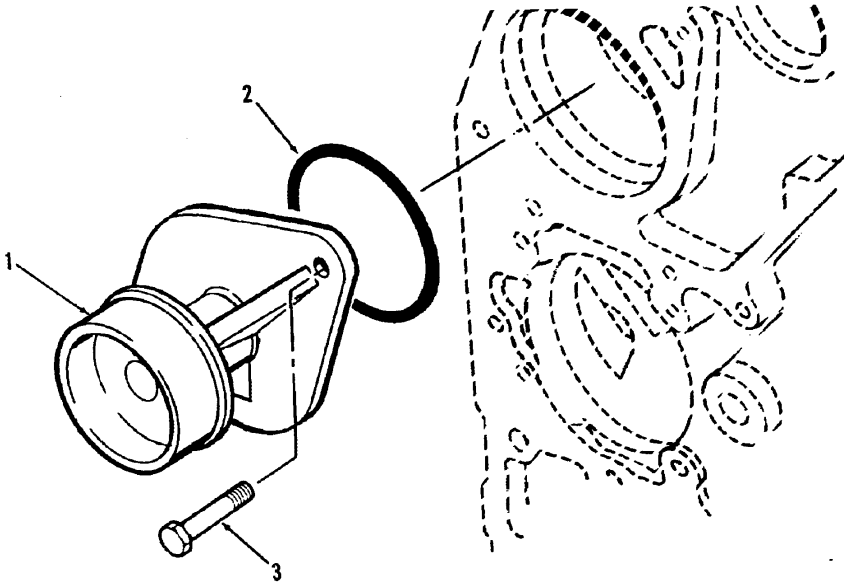

wp268400

Ref No.	Part Number	Part Name	Req	Remarks
	3802971	WATER PUMP		
1	3285410	Kit, Water Pump	1	
2	3903297	Pump, Water	1	
3	3900227	Seal, Rectangular Ring	1	
		Screw, Hexagon Head Cap	2	