

Draft

Best practices, Standards, and Guidelines
to using engineered nanomaterials.

Nanotoolkit

Working Safely with
Engineered Nanomaterials in
Academic Research Settings

**California Nanosafety Consortium of Higher
Education**
11/23/2011

Acknowledgement

Contributors

Casimir Scislowicz	<i>California Institute of Technology (CalTech)</i>
Chuck Geraci	<i>National Institute for Occupational Safety and Health</i>
Frank S. Parr	<i>Department of Toxic Substances Control</i>
Guy DeRose	<i>California Institute of Technology (CalTech)</i>
Hamid Saebfar	<i>Department of Toxic Substances Control (DTSC)</i>
Hilary Godwin	<i>University of California Los Angeles (UCLA)</i>
Jane Bartlett	<i>University of Southern California (USC)</i>
Jay Brakensiek	<i>Claremont University Consortium</i>
Jeff Wong	<i>Department of Toxic Substances Control (DTSC)</i>
Khadeeja Abdullah	<i>University of California Los Angeles (UCLA)</i>
Kristin Yamada	<i>University of California Los Angeles (UCLA)</i>
Larry Wong	<i>University of California Office of the President</i>
Lawrence Gibbs	<i>Stanford University</i>
Mary Dougherty	<i>Stanford University</i>
Michelle Lee	<i>University of Southern California (USC)</i>
Rebecca Lally	<i>University of California Irvine (UCI)</i>
Russell Vernon	<i>University of California Riverside (UCR)</i>
Ryan Kinsella	<i>Department of Toxic Substances Control (DTSC)</i>

Thanks

Some of this material is based upon work supported by the California Department of Toxic Substances Control (DTSC) and the University of California Center for Environmental Implications of Nanotechnology in a grant from the National Science Foundation and the Environmental Protection Agency (EPA) under Cooperative Agreement Number DBI-0830117. Generous support for this work, in the form of a graduate fellowship for Khadeeja Abdullah, the doctoral student who worked on this project, was provided by the UCLA Luskin Center of Innovation. Any opinions, findings, and conclusions or recommendations expressed in this material are those of the author(s) and do not necessarily reflect the views of the National Science Foundation, the Environmental Protection Agency, the California Department of Toxic Substances Control, or the UCLA Luskin Center. This work has not been subjected to EPA review and no official endorsement should be inferred.

Editor

Janette de la Rosa Ducut, Ed.D. *University of California Riverside*

Table of Contents

Acknowledgement	1
Preface	3
Objectives	
Goals	
The Consortium	
Using the Nanotoolkit	4
What is the Nanotoolkit?	
How to Use	
Overview of nanomaterials	5
Definitions	
Types of nanomaterials	
Occupational Health and Safety Concerns	
Exposure Limits	
Planning your research	6
Gather Information	
Determine Potential Risks	
Develop a Standard Operating Procedure (SOP)	
Obtain Training and Consultation / Approval	
Conducting your research	7
Minimize exposures	
<i>Engineering Controls</i>	
<i>Administrative Controls</i>	
<i>Personal Protective Equipment (PPE)</i>	
Respond to Exposures and Spills	
Dispose Properly	
General Nanomaterial Waste Management Practices	
Quick Guide	10
Purpose	
Instructions	
<i>Step 1. Determine your risk level</i>	
<i>Step 2. Identify the controls needed</i>	
<i>Step 3. Develop a Standard Operating Procedure</i>	
Appendices	12
Appendix A. Standard Operating Procedures (SOP) Template	
Appendix B. Standard Operating Procedures (SOP) Sample	
Appendix C. Additional Information	
Appendix D. Reference	

Preface

Background on California Nanosafety Consortium of Higher Education and Development of the Nanotoolkit

Objectives

The increasing use of nanomaterials in research and development laboratories along with applications in industry are providing breakthroughs for many technologies and solutions for addressing major problems in our society. However, as with all new technologies, the potential health effects of engineered nanomaterials (ENMs) remain uncertain.

The aim of this project is to provide practical guidance as to how ENMs should be handled safely in the research laboratory setting in the face of such uncertainty over possible toxic effects. Currently many government agencies, academic institutions, and industries have issued detailed guidance documents as to how NMs should be monitored, controlled, and handled in different work settings. Only a portion of these practices have been validated by scientific research or reference to peer reviewed literature. Most guidance documents and exposure studies to date have focused primarily on industrial settings, but academic research settings present their own challenges that also need to be addressed. Much of the initial research and development (R&D) in nanotechnology is still performed in academic research laboratories. In academic laboratories, the quantity of materials used tends to be less than those used in industry, but the variety of nanomaterials used tends to be more diverse. As a result, the potential hazards are also more diverse and exposure monitoring is more challenging. Furthermore, academic practices tend to be less standardized and to vary more from lab to lab and from day to day than typical industrial processes. This means that engineering controls which are commonly used in industry may not be practical to apply in academic laboratory research settings. The nature of research and training in academic institutions dictates that new students and employees with various backgrounds and levels of training are regularly being introduced into the many diverse laboratory settings. Undergraduate student researchers, graduate students and other laboratory personnel often have minimal formal safety training or are lacking the latest hazard information about such new technological developments. All of these factors make a simple adoption or application of standardized industrial best practices for working with NMs in laboratories difficult.

Goals

The goal of this project is to provide an easy to use tool kit for academic researchers to quickly identify safe handling practices based on whether the work they propose is in a low, moderate, or high potential exposure category. The exposure categories and controls were determined from a review and analysis of many related nanomaterial health and safety guidance documents.

The Consortium

The analysis of the proposed recommendations included summarizing all the relevant recommendations from the various guidance documents into one matrix, conducting a literature search to see if the recommended practices were appropriately validated, and having a group of experienced environmental health and safety professionals from various California universities use their professional judgment and the research literature provided to rank the applicability of each recommendation as well as rate each recommendation in terms of the need for further research.

The working group summarized [documents](#) from 19 academic institution, 14 government agencies and four industrial sources. This project was a collaborative effort by the California Nano Environmental Health and Safety (EH&S) group. The group included representatives from:

Government Agencies

National Institute of Occupational Safety and Health (NIOSH)
Department of Toxic Substances Control (DTSC)

University Environmental Health and Safety Professionals (EH&S)

University of California Los Angeles (UCLA)
University of California Irvine (UCI)
University of California Riverside (UCR)
University of California (UC) Office of the President
University of Southern California (USC)
Stanford University
California Institute of Technology
Claremont University Consortium

Professors and Graduate Students

University of California Los Angeles (UCLA)
University of California Santa Barbara (UCSB)

Through this process we identified existing safety concerns of health and safety professionals and uncovered shortcomings in the current guidance documents, while recommending guidance that is most appropriate and validated by peer reviewed research for application to the research laboratory setting. A practical and easy to use tool kit was developed to help academic researchers to quickly identify proposed laboratory research work with nanomaterials as a low, medium, or high-risk activity and then identify appropriate control measures. Also included are sections with general information about engineered nanomaterials, spill cleanup and waste management.

The user of this tool kit is advised that this document provides a best practice guideline to approaching and understanding how to work safely with engineered nanomaterials in the laboratory. Ultimately, it is the responsibility of the faculty member, the principal investigator, or the laboratory supervisor who is directing such work in the laboratory to provide for the safe conduct of all individuals conducting research in their laboratories. If applied diligently and appropriately, these guidelines will help provide for the safety and health of laboratory personnel conducting research using engineered nanomaterials.

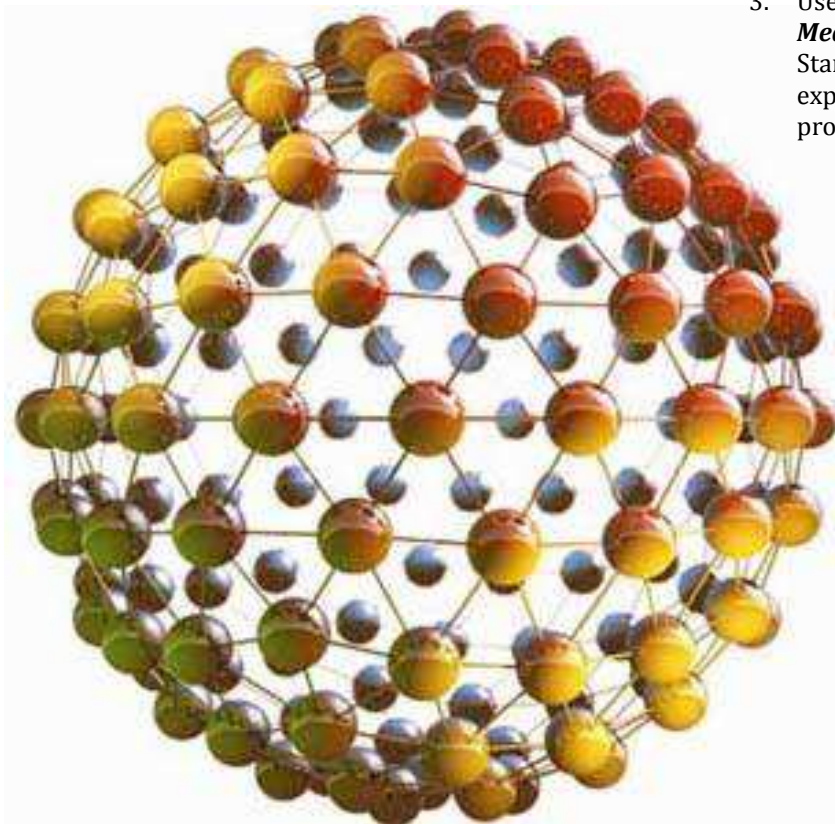
Using the Nanotoolkit

What is the Nanotoolkit?

The Nanotoolkit is an easy to use guide for academic researchers to quickly identify safe handling practices when working with Engineered Nanomaterials (ENMs) based on a low, moderate, or high potential exposure category as described in this document.

How to Use:

1. Read the **Overview of Nanomaterials** section to obtain general information on ENMs.
2. Review the **Planning Your Research** and **Conducting Your Research** sections to obtain information on how to plan and conduct your experiment/operation involving ENMs.
3. Use the **Quick Guide: Risk Levels and Control Measures for Nanomaterials** to prepare a Standard Operating Procedure (SOP) for your experiment/operation employing the template provided.



Overview of Nanomaterials


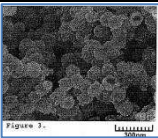
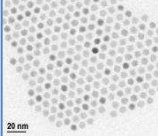
Definitions

Nanomaterial: Material or particle with any external dimension in the nanoscale (range 1 nm to 100 nm) or having internal structure or surface structure in the nanoscale (Source: ISO/TS 80004-1:2010, ISO/TS 27687:2008)^{1,2}

Naturally Occurring Nanomaterial: Particles on the nanoscale occur naturally in the environment. They can also be manufactured and have a variety of commercial applications. More information on naturally occurring nanomaterials can be found in Appendix C.

Engineered Nanomaterials (ENMs): An Engineered Nanomaterial is any intentionally produced material with any external dimension in the nanoscale. It is noted that neither 1 nm nor 100 nm is a “bright line” and some materials are considered engineered nanomaterials that fall outside this range. For example, Buckyballs are also included even though they have a size <1 nm. Excluded are materials that are on the nanoscale, but do not have properties that differ from their bulk counterpart and micelles and single polymers.³

Types of Nanomaterials

Type	Examples
 <p>Carbon Based</p>	<p>Buckyballs or Fullerenes, Carbon Nanotubes*, Dendrimers</p> <p><i>Often includes functional groups like* PEG (polyethylene glycol), Pyrrolidine, N, N-dimethylethylenediamine, imidazole</i></p>
 <p>Metals and Metal Oxides</p>	<p>Titanium Dioxide (Titania)**, Zinc Oxide, Cerium Oxide (Cerium), Aluminum oxide, Iron Oxide, Silver, Gold, and Zero Valent Iron (ZVI) nanoparticles</p>
 <p>Quantum Dots</p>	<p>ZnSe, ZnS, ZnTe, CdS, CdTe, CdSe, GaAs, AlGaAs, PbSe, PbS, InP</p> <p><i>Includes crystalline nanoparticle that exhibits size-dependent properties due to quantum confinement effects on the electronic states (ISO/TS 27687:2008).</i></p>

* Carbon Nanotubes are subject to a proposed Recommended Exposure Limit¹⁰ of TWA 7 µg/m³ due to the risk of developing respiratory health effects.

**Nano-Titanium Dioxide is subject to a proposed Permissible Exposure Limit¹¹ of TWA 0.3 mg/m³ due to the risk of developing lung cancer. There are mixed studies regarding TiO₂ skin penetration. Some studies indicate TiO₂ and ZnO does not pass through the stratum corneum^{6,7}, while others indicate significant penetration through the skin⁸.

OCCUPATIONAL HEALTH AND SAFETY CONCERNS

1. ROUTES OF EXPOSURE

Exposure to engineered nanomaterials may occur via inhalation and dermal contact depending on use and handling; ingestion is unlikely but possible.

2. LACK OF INFORMATION ON FULL HEALTH EFFECTS

With a lack of chronic exposure data and reproductive and developmental toxicity data, a precautionary approach when working with engineered nanomaterials is warranted.

3. TOXICITY

Some potential toxic outcomes can be predicted from what we know about ultrafine particles⁴ and based on known chemical and structural properties⁵. Nanomaterials have the potential to:

1. *Deposit in the respiratory tract.* Small airborne particles penetrate deep into the lungs.
2. *Cross cell membranes.* Some nanomaterials have the ability to cross cell membranes.
3. *Penetrate healthy intact skin/translocation to other organ systems.* Reports on this topic are mixed; caution is urged until more is known.

4. OTHER

- a. **Catalytic effects.** In general, nanomaterials are not known to have catalytic effects, however, some nanomaterials are specifically engineered to have catalytic properties.
- b. **Fire or explosion.** Nanomaterials are generally not explosive or flammable, however some of the synthesis methods may use reagents and techniques where fire and explosion are potential hazards.



Exposure Limits



Nanomaterials fall under OSHA General Industry Standards⁹. Established exposure limits for naturally occurring nanomaterials, and detailed information about current state and federal regulations can be found in Appendix C. **Although there are currently no established (legally enforceable) Exposure limits (US or International)** for Engineered Nanomaterials, NIOSH has developed Recommended Exposure Limits (RELs) for carbon nanotubes (TWA 7 $\mu\text{g}/\text{m}^3$) and nano-titanium dioxide (TWA 0.3 mg/m^3).

Planning your research

1. Gather Information

Select less-hazardous forms. Whenever possible, select engineered nanomaterials bound in a substrate or matrix or in water-based liquid suspensions or gels.

Review Material Safety Data Sheet (MSDS), if available.

NOTE: Information contained in some MSDSs may not be fully accurate and/or may be more relevant to the properties of the bulk material rather than the nano-size particles. The toxicity of the nanomaterials may be greater than the parent compound.

Review your institution's Chemical Hygiene Plan for general Laboratory Safety guidance.

2. Determine Potential Risks

Common laboratory operations involving ENMs may be categorized as posing a low, moderate, or high potential exposure risk to researchers depending on the state of the material and the conditions of use. Refer to the *Quick Guide: Risk Levels and Control Measures for Nanomaterials*. Follow the instructions in this matrix to identify the potential risk of exposure and recommended control measures. Special consideration should be given to the high reactivity of some nanopowders with regard to potential fire and explosion, particularly if scaling up the process. Consider the hazards of the precursor materials in evaluating the process.

3. Develop a Standard Operating Procedure (SOP)

A standard operating procedure (SOP) is a set of written instructions that describes in detail how to perform a laboratory process or experiment safely and effectively. Employing the hierarchy of controls described in *Quick Guide: Risk Levels and Control Measures for Nanomaterials*, establish an SOP for operations involving nanomaterials. For an example, refer to Appendix B.

4. Obtain Training and Consultation / Approval

Training. Principal Investigators or laboratory supervisors must ensure that researchers have both general laboratory safety training pursuant to Cal/OSHA's *Occupational Exposure to Hazardous Chemicals in Laboratories* (8 CCR 5191) and lab-specific training relevant to the nanomaterials and associated hazardous chemicals used in the process/experiment. Laboratory-specific training can include a review of this Nanotoolkit, the relevant Material Safety Data Sheets (if available), and the lab's Standard Operating Procedure (SOP) for the experiment.

Consultation / Approval. Consult with and seek prior approval of the Principal Investigator or laboratory supervisor prior to procuring or working with nanomaterials, and/or if working alone in the laboratory is anticipated. [Follow institution's rules on working alone.]

Notification. If dosing animals with the nanomaterial, follow institution's hazard communication processes for advanced notification of animal facility and cage labeling/management requirements.

Controlling potential exposures to nanomaterials involves elimination of highly hazardous materials through substitution, engineering controls, administrative or work practices, and personal protective equipment. The hierarchy of controls are shown in Figure 1. If the nanomaterial cannot be substituted with a less hazardous substance, then engineering controls must be installed to control exposure.

1. Minimize Exposures

Engineering Controls

CONTROL EXPOSURE WITH EQUIPMENT

Minimize airborne release of ENMs by utilizing one of the following devices:

Work in a fume hood or biosafety cabinet.

Conduct work inside a fume hood or low flow enclosures to prevent exposure. Biosafety cabinets must be ducted if used in conjunction with volatile compounds.

Use a glove box or fully-enclosed system. Where it is not possible to prevent airborne release, such as in grinding operations or in gas phase, use equipment that fully encloses the process. This includes a glove box.

Use local capture exhaust hoods. Do not exhaust aerosols containing engineered nanoparticles into the interior of buildings. Use High-Efficiency Particulate Air (HEPA) filtered local exhaust ventilation (LEV). HEPA-filtered LEV should be located as close to the possible source of nanoparticles as possible, and the installation must be properly engineered to maintain adequate ventilation capture. HEPA-filtered local capture exhaust hoods to capture any nanoparticles from tube furnaces, or chemical reaction vessels or during filter replacements.

ENSURE PERFORMANCE AND MAINTENANCE

Laboratory equipment and exhaust systems used with nanoscale materials should be wet wiped and HEPA vacuumed prior to repair, disposal, or reuse. Make sure fume hoods and any LEV achieves and maintains adequate control of exposure at all times. These systems require regular maintenance and periodic monitoring to ensure controls are working and thorough examination and testing at least once a year.

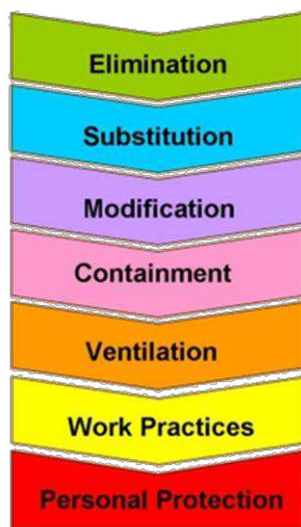


Figure 1

Hierarchy of Controls

Administrative Controls

USE SOLUTIONS OR SUBSTRATES

To minimize airborne release of engineered nanomaterials to the environment, nanomaterials are to be handled in solutions, or attached to substrates so that dry material is not released.

LOCATE SAFETY EQUIPMENT

Know the location and proper use of emergency equipment, such as emergency eyewash/safety showers, fire extinguishers, fire alarms, and spill clean-up kits¹².

USE SIGNS AND LABELS

Restrict access and post signs in area indicating ENM work. When leaving operations unattended, use cautious judgment: 1) Post signs to communicate appropriate warnings and precautions, 2) Anticipate potential equipment and facility failures, and 3) Provide appropriate containment for accidental release of hazardous chemicals.

CLEAN AND MAINTAIN

Line work area with absorbent pad. When working with powders, use antistatic paper and floor sticky mats. Wet wipe and/or HEPA-vacuum work surfaces potentially contaminated with nanoparticles (*e.g.*, benches, glassware, apparatus) at the end of each operation. Consult with your institution regarding the maintenance of HEPA vacuums and replacement of HEPA filters.

MAINTAIN PERSONAL HYGIENE

To avoid potential nanoparticle or chemical exposure via ingestion in area where ENMs are used or stored, do not: consume or store food and beverages, apply cosmetics, or use mouth suction for pipetting or siphoning. Remove gloves when leaving the laboratory in order to prevent contamination of doorknobs or other common use objects such as phones, multiuser computers, etc. Wash hands frequently to minimize potential chemical or nanoparticle exposure through ingestion and dermal contact.

STORE AND LABEL PROPERLY

Store nanomaterials in a well-sealed container. Label all chemical containers with the identity of the contents (do not use abbreviations/ acronyms); include term “nano” in descriptor (*e.g.*, “nano-zinc oxide particles” rather than just “zinc oxide.” Include hazard warning and chemical concentration information, if known.

TRANSPORT IN SECONDARY CONTAINMENT

Use sealed container with secondary containment when transporting nanomaterials between laboratories or buildings.

Table 1. Glove Choices for Nanomaterials

Select glove based on compatibility with material and solvents to be used and, if possible, permeability studies for that category of ENM. Recommend wearing gauntlet-type/wrist-length gloves with extended sleeves. The table below contains information on select ENMs and the associated reference.

Nanomaterial / State	Glove Type (Recommendation)
Carbon Nanotubes (CNTs)	Nitrile over Latex ^{*,**}
TiO ₂ and PT	Latex ^{**} , Nitrile, Neoprene ^{***}
Graphite	Latex ^{**} , Nitrile, Neoprene, Vinyl ^{***}

* Consider potential latex allergies in PPE selection.

**Reference: Methner, et. al (NIOSH)

*** Reference: Golanski, et. al (2010)

Personal Protective Equipment (PPE)

KNOW THE APPLICATIONS AND LIMITS

The use of PPE is generally considered to be the least desirable option to control employee exposure to occupational safety and health hazards. However, in an academic laboratory, there are often scenarios under which PPE can minimize potential employee exposure to occupational safety and health hazards either as a stand-alone control mechanism, or, as a supplement to either administrative or engineering control approaches.

Many occupational safety and health issues associated with ENM's are not fully understood (*i.e.*, ENM toxicity, exposure metrics, fate and transport, etc.). The same uncertainty exists with how to select the myriad of available types of PPE and effectively use them to minimize the potential hazards associated with employee exposure to ENM hazards.

There is a growing body of evidence resulting from on-going research which indicates that commonly available PPE does have efficacy against specific sizes and types of ENMs. The PPE described within the Nanotool Quick Guide was selected as a result of a comprehensive review of available guidance and published research available at the time the Guide was developed.

USE THE QUICK GUIDE

The user of this Nanotool is directed to the Quick Guide for a description of the recommended PPE. Note that the referenced PPE increases for each Category consistent with the increasing exposure potential. The basic PPE ensemble described under **Category 1** is to be augmented by the specific PPE in **Category 2** and **Category 3**. The user is reminded of the following important issues associated with the safe and effective use of PPE:

- **Respiratory Protection.** Mandatory use of respirators will require full adherence to the requirements of your institution's respiratory protection program. It is imperative that you consult with your institution's EH&S representative prior to utilizing respiratory protection, even if that use is voluntary.

- **Gloves and Clothing.** Glove material, fabrication process and thickness are significant issues which impact the permeation of ENM's. Consequently, consideration should be given to utilizing two layers of gloves. For more information, refer to Table 1.

The selection of dermal PPE for protection against ENM's must also take into account other chemicals which may be part of the ENM matrix or use conditions (*i.e.*, solvents, surfactants, carrier gases, etc.).

The use of PPE is considered to be the least desirable option to control employee exposure.

Dermal PPE manufacturers provide permeation/penetration tables which allow the end user to select dermal PPE based upon performance criteria to specific chemical threats. For examples, refer to the [Controlled Environments](#) guide by Du Pont®, or the [Chemical Resistance Guide](#) by Ansell © 2003. The technique used to remove gloves (and all PPE) is very important so that any material contaminating the outer

surfaces of the PPE does not impact the wearer. Consult with your EH&S representative to learn the appropriate technique(s) to remove chemical protective clothing.

REDUCE PPE HAZARDS

Under specific use conditions, utilizing PPE may put the user at risk of occupational injury. PPE may impair vision and dexterity and increase the likelihood of trip, slip, or fall hazards in addition to increasing the potential to develop heat-related illnesses. Consult with your EH&S professional for questions pertaining to the appropriate selection and use conditions for PPE.

2. Respond to Exposures and Spills

Actions to be taken in the event of a personnel exposure or a spill exposure are listed as part of the Appendix A “Standard Operating Procedure (SOP)” template.

3. Dispose Properly

Manage waste streams containing ENMs according to your hazardous waste program requirements. Until more information is available, assume ENM containing wastes to be hazardous waste unless they are known to be non-hazardous. Recommended management methods for typical research waste streams containing nanomaterials are described in Table 2.

Table 2. Recommended Nanomaterial waste management methods by stream.

Waste Stream	Management Method
Solid <ul style="list-style-type: none"> • Dry ENM product • Filter media containing ENMs • Debris / dust from ENMs bound in matrix 	<ol style="list-style-type: none"> 1. Follow <i>General Nanomaterial Waste Management Practices</i> 2. Collect waste in rigid container with tight fitting lid.
Liquid <ul style="list-style-type: none"> • Suspensions containing ENMs 	<ol style="list-style-type: none"> 1. Follow <i>General Nanomaterial Waste Management Practices</i>. 2. Indicate both the chemical constituents of the solution and their hazard characteristics, and the identity and approximate percentage of ENMs on container labels. 3. Use leak proof containers that are compatible with all contents. 4. Place liquid waste containers in secondary containment and segregate from incompatible chemicals during storage.
Laboratory trash with trace nanomaterials <ul style="list-style-type: none"> • PPE • Tacki mats • Spill clean-up materials 	<ol style="list-style-type: none"> 1. Follow <i>General Nanomaterial Waste Management Practices</i>. 2. Dispose of in double clear plastic bags, folded over and taped at the neck. 3. Avoid rupturing the bags during storage and transport.
Solid Matrix embedded with nanomaterials (intact and in good condition)	<ol style="list-style-type: none"> 1. Consult with your EH&S department, as these materials may be non-hazardous.

General Nanomaterial Waste Management Practices

1. **Manage according to** hazardous waste program requirements at your institution.
2. **Label nanomaterial waste containers** at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word “nano” as a descriptor.
3. **Keep containers closed** at all times when not in use.
4. Maintain containers in **good condition** and free of exterior contamination.

Quick Guide

Risk Levels and Control Measures for Nanomaterials

Purpose

This Quick Guide categorizes common laboratory operations involving engineered nanomaterials according to their potential risk of exposure to personnel, which is based on the state of the material and the conditions of use. Controls are provided in the table to minimize exposures. This guide is intended to be used in conjunction with the academic institutions' laboratory safety practices or other established guidelines (e.g., [Prudent Practices](#) by The National Research Council's).

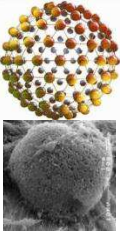
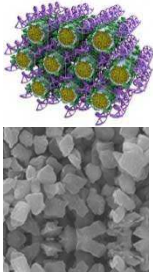
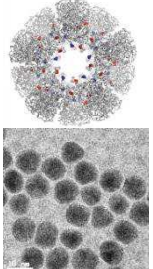
Instructions

Follow these steps to create a Standard Operating Procedure:

- Step 1.** Determine your risk level
- Step 2.** Identify the controls needed
- Step 3.** Develop a Standard Operating Procedure

Below are tables to assist you in completing each step. If your research falls in between two risk categories, consider employing the higher level control.

Step 1. Determine your risk level

Risk Level	Material State or Type of Use	Examples
Category 1 Low Exposure Potential	Material State <i>No potential for airborne release (when handling)</i> <ul style="list-style-type: none"> • Solid: Bound in a substrate or matrix • Liquid: Water-based liquid suspensions or gels • Gas: No potential for release into air (when handling) Type of Use <ul style="list-style-type: none"> • No thermal or mechanical stress 	<ul style="list-style-type: none"> • Non- destructive handling of solid engineered nanoparticle composites or nanoparticles permanently bonded to a substrate 
Category 2 Moderate Exposure Potential	Material State <i>Moderate potential for airborne release (when handling)</i> <ul style="list-style-type: none"> • Solid: Powders or Pellets • Liquid: Solvent-based liquid suspensions or gels • Air: Potential for release into air (when handling) Type of Use <ul style="list-style-type: none"> • Thermal or mechanical stress induced 	<ul style="list-style-type: none"> • Pouring, heating ,or mixing liquid suspensions (e.g., stirring or pipetting), or operations with high degree of agitation involved (e.g., sonication) • Weighing or transferring powders or pellets • Changing bedding out of laboratory animal cages 
Category 3 High Exposure Potential	Material State <i>High potential for airborne release (when handling)</i> <ul style="list-style-type: none"> • Solid: Powders or Pellets with extreme potential for release into air • Gas: Suspended in gas 	<ul style="list-style-type: none"> • Generating or manipulating nanomaterials in gas phase or in aerosol form • Furnace operations • Cleaning reactors • Changing filter elements • Cleaning dust collection systems used to capture nanomaterials • High speed abrading / grinding nanocomposite materials 

Step 2. Identify the controls needed

Use the table below to identify the controls needed to work with the risk level of your nanomaterial (Category 1, 2, or 3).

Risk level	Controls	
Category 1 Low Exposure Potential	Engineering	<ul style="list-style-type: none"> • Fume Hood or Biosafety Cabinet. Perform work with open containers of nanomaterials in liquid suspension or gels in a laboratory-type fume hood or biosafety cabinet, as practical. • Storage and labeling. Store in sealed container and secondary containment with other compatible chemicals. Label chemical container with identity of content (include the term “nano” in descriptor). • Preparation. Line workspace with absorbent materials. • Transfer in secondary containment. Transfer between laboratories or buildings in sealed containers with secondary containment.
	Work Practices	<ul style="list-style-type: none"> • Housekeeping. Clean all surfaces potentially contaminated with nanoparticles (i.e., benches, glassware, apparatus) at the end of each operation using a HEPA vacuum and/or wet wiping methods. DO NOT dry sweep or use compressed air. • Hygiene. Wash hands frequently. Upon leaving the work area, remove any PPE and wash hands, forearms, face, and neck. • Notification. Follow institution’s hazard communication processes for advanced notification of animal facility and cage labeling/management requirements if dosing animals with the nanomaterial
	PPE	<ul style="list-style-type: none"> • Eye protection. Wear proper safety glasses with side shields (for powders or liquids with low probability for dispersion into the air) • Face protection. Use face shield where splash potential exists. • Gloves. Wear disposable gloves to match the hazard, including consideration of other chemicals used in conjunction with nanomaterials (refer to Table 1. Glove Choices for Nanomaterials) • Body protection. Wear laboratory coat and long pants (no cuffs). • Closed toe shoes.
Category 2 Moderate Exposure Potential	Engineering	<ul style="list-style-type: none"> • Fume Hood, Biosafety Cabinet, or Enclosed System. Perform work in a laboratory-type fume hood, biosafety cabinet* (must be ducted if used in conjunction with volatile compounds), powder handling enclosure, or enclosed system (i.e., glove box, glove bag, or sealed chamber).
	Work Practices	<ul style="list-style-type: none"> • Category 1 Work Practices. Follow all work practices listed for Category 1. • Access. Restrict access. • Signage. Post signs in area. • Materials. Use antistatic paper and/or sticky mats with powders.
	PPE	<ul style="list-style-type: none"> • Category 1 PPE. Wear all PPE listed for Category 1. • Eye protection. Wear proper chemical splash goggles (for liquids with powders with moderate to high probability for dispersion into the air). • Gloves. Wear two layers of disposable, chemical-protective gloves. • Body protection. Wear laboratory coat made of non-woven fabrics with elastic at the wrists (disposable Tyvek®-type coveralls preferred). • Closed toe shoes. Wear disposable over-the-shoe booties to prevent tracking nanomaterials from the laboratory when working with powders and pellets. • Respiratory Protection. If working with engineering controls is not feasible, respiratory protection may be required. Consult an EH&S professional for more information (i.e., N95 respirator, or one fitted with a P-100 cartridge).
Category 3 High Exposure Potential	Engineering	<ul style="list-style-type: none"> • Enclosed System. Perform work in an enclosed system (i.e., glove box, glove bag, or sealed chamber).
	Work Practices	<ul style="list-style-type: none"> • Category 2 Work Practices. Follow all work practices listed for Category 2. • Category 2 PPE. Wear all PPE listed for Category 2.
	PPE	<ul style="list-style-type: none"> • Body protection. Wear disposable Tyvek®-type coveralls with head coverage. • Respiratory Protection. If working with engineering controls is not feasible, respiratory protection may be required. Consult an EH&S professional for more information (i.e., N95 respirator, or one fitted with a P-100 cartridge).

Step 3. Develop a Standard Operating Procedure

Complete Appendix A “Standard Operating Procedures (SOP) for the Laboratory Use of Engineered Nanomaterials”. For examples, refer to Appendix B.

Standard Operating Procedures (SOP)

For the Laboratory Use of Engineered Nanomaterials

Instructions: Review the **Quick Guide: Risk Levels and Control Measures for Nanomaterials**. Use this template to develop a Standard Operating Procedure for your experiment / process.

OVERVIEW	PROCEDURE TITLE:			
	DATE OF CREATION / REVISION:			
	LOCATION: (Building, Room #)			
	PRINCIPAL INVESTIGATOR (PI) OR LABORATORY SUPERVISOR NAME:	PHONE:	EMAIL:	
	DESCRIPTION. PROVIDE A 1-2 SENTENCE BRIEF DESCRIPTION OF THE PROCESS. INDICATE IF AEROSOLS ARE LIKELY TO BE CREATED.			
MATERIAL STATE AND CONDITIONS OF USE Nanomaterials are handled in/as: <input type="checkbox"/> DRY PARTICLES (POWDERS / PELLETS) <input type="checkbox"/> SUSPENSION / GELS <input type="checkbox"/> GASEOUS PHASE			FREQUENCY (check one): <input type="checkbox"/> ONE TIME <input type="checkbox"/> DAILY <input type="checkbox"/> WEEKLY <input type="checkbox"/> MONTHLY <input type="checkbox"/> OTHER:	DURATION PER EXPERIMENT: _____ MINUTES; OR _____ HOURS
HAZARDS	RISK LEVEL: <input type="checkbox"/> CATEGORY 1: LOW POTENTIAL FOR EXPOSURE <input type="checkbox"/> CATEGORY 2: MODERATE POTENTIAL FOR EXPOSURE <input type="checkbox"/> CATEGORY 3: HIGH POTENTIAL FOR EXPOSURE			
	POTENTIAL HAZARDS. IDENTIFY POTENTIAL CHEMICAL AND SAFETY HAZARDS USING THE MATERIAL SAFETY DATA SHEET (MSDS) FOR THE NANOMATERIAL OR PARENT COMPOUND. THE TOXICITY OF THE NANOMATERIALS MAY BE GREATER THAN THE PARENT COMPOUND. SPECIAL CONSIDERATION SHOULD BE GIVEN TO THE HIGH REACTIVITY OF SOME NANOPOWDERS WITH REGARD TO POTENTIAL FIRE AND EXPLOSION, PARTICULARLY IF SCALING UP THE PROCESS. CONSIDER THE HAZARDS OF ANY PRECURSOR MATERIALS IN EVALUATING THE PROCESS. FOR MORE INFORMATION, REFER TO THE SECTION ON "PLANNING YOUR RESEARCH".			

INSTRUCTIONS: INDICATE THE ENGINEERING, WORK PRACTICE, AND PERSONAL PROTECTIVE EQUIPMENT (PPE) CONTROLS YOU WILL BE IMPLEMENTING TO REDUCE THE HAZARDOUS EFFECTS OF WORKING WITH YOUR NANOMATERIALS. BASE YOUR SELECTION ACCORDING TO THE “QUICK GUIDE” SECTION.

CONTROLS

ENGINEERING CONTROLS. INDICATE ENGINEERING DEVICE(S) TO BE UTILIZED. NOTE: IF WORK CANNOT BE CONDUCTED WITH APPROPRIATE ENGINEERING CONTROLS, CONSULT WITH AN EH&S PROFESSIONAL.

- FUME HOOD** (*laboratory-type*)
- BIOSAFETY CABINET** (*must be ducted if used in conjunction with volatile compounds*)
- ENCLOSED SYSTEM** (*i.e., glove box, glove bag, or sealed chamber*)
- POWDER HANDLING ENCLOSURE**
- OTHER:**

WORK PRACTICE CONTROLS. THE FOLLOWING CONTROLS WILL BE IMPLEMENTED (*check all that apply*):

- | | | |
|--|---|---|
| <input type="checkbox"/> Category 1 work practices <ul style="list-style-type: none"> • STORE in sealed container with secondary containment with other compatible chemicals • LABEL chemical container with the identity of contents and include term “nano” as descriptor • TRANSFER in sealed container with secondary containment • PREPARE work space by lining with absorbent materials • CLEAN all surfaces potentially contaminated with nanoparticles (e.g., benches, glassware, apparatus) at the end of each operation using a HEPA vacuum and/or wet wiping methods. • WASH hands frequently. Upon leaving the nanomaterial work area, remove any PPE worn and wash hands, forearms, face, and neck. • NOTIFY in advance of animal facility and cage labeling / management requirements if dosing animals with nanomaterial | <input type="checkbox"/> Category 2 work practices <ul style="list-style-type: none"> • FOLLOW all work practices listed for Category 1. • RESTRICT ACCESS. • POST signs in area • USE antistatic paper and/or sticky mats with powders. | <input type="checkbox"/> Category 3 work practices <ul style="list-style-type: none"> • FOLLOW all work practices listed for Category 2. |
|--|---|---|

Other. DESCRIBE ANY ADDITIONAL WORK PRACTICES SPECIFIC TO THE EXPERIMENT / PROCESS:

PERSONAL PROTECTIVE EQUIPMENT (PPE). INDICATE THE PPE TO BE UTILIZED (*check all that apply*):

Body Protection:

- Long pants (no cuffs)
- Laboratory coat *made of standard materials*
- Laboratory coat *made of non-woven fabrics with elastics at wrists (i.e., Tyvek®)*
- Coveralls (disposable) with head coverage (*i.e., Tyvek®*)

Eye / Face Protection:

- Safety glasses with side shields
- Chemical splash goggles
- Face shield

Hand Protection:

- Latex
- Nitrile
- Neoprene
- Vinyl
- Other:

Foot Protection:

- Closed toe shoes
- Over-the-shoe booties

Other:

- Respiratory Protection*
- Other:

* Consult with your institution on respiratory program requirements

LOCATION OF NEAREST EMERGENCY EQUIPMENT:

Item:	Location
Eyewash / Safety Shower	
First Aid Kit	
Chemical Spill Kit	
Fire Extinguisher	
Telephone	
Fire Alarm Manual Pull Station	

DESCRIBE INSTITUTION'S EMERGENCY PROCEDURES:

ACCIDENT AND SPILL PROCEDURES

Personnel Exposure procedures

1. Flush contamination from eyes/skin using the nearest emergency eyewash /shower for a minimum of 15 minutes. Remove any contaminated clothing.
2. Take copy of MSDS(s) of chemical(s) when seeking medical treatment.
3. Report potential exposures to your Principal Investigator/Laboratory Supervisor.
4. File an incident report with your institution.

Spill Response procedures

1. **Notify.** Alert workers near spill to avoid entering the area. Post signs in area or on door of lab. Eliminate sources of ignition. Report spill to your Principal Investigator/Lab Supervisor.
2. **Assess.** Are you able to cleanup spill yourself?
 - YES
*Proceed with **Spill Cleanup** if it is a small spill (i.e., 30 mL), you are knowledgeable about the hazards of the spill, it can be cleaned up within 15 minutes, and an appropriate spill kit is available.*
 - NO
Obtain spill assistance. Contact your institution's hazardous materials unit.
3. **Cleanup Spill.** Wear existing PPE (NOTE: Respiratory protection may be required if spill / release is outside the engineering control device).
 - For powders:**
 - Use a dedicated, approved HEPA vacuum whose filtration effectiveness has been verified.
 - Do not sweep dry nanoparticles or use compressed air.
 - Consider possible pyrophoric hazards associated with vacuuming up nanoparticles.
 - Wet wipe using damp cloths with soaps or cleaning oils, or commercially available wet or electrostatic microfiber cleaning cloths. Consider possible reactivity of nanoparticles with the wipe solvent.
 - For liquid dispersions:**
 - Apply absorbent material (appropriate for the solvent in the dispersion) to liquid spill.
4. **Dispose.** Dispose of used cleaning materials and wastes as hazardous waste.
5. **Report.** File incident report with your institution.

GENERAL SAFETY TRAINING. DESCRIBE YOUR INSTITUTION'S GENERAL LABORATORY SAFETY TRAINING.

TRAINING

LABORATORY-SPECIFIC TRAINING. (CHECK ALL THAT APPLY)

- REVIEW THIS NANOTOOL
- REVIEW THE MSDS FOR THE NANOMATERIAL(S), *if available*
- REVIEW THE MSDS FOR OTHER CHEMICALS INVOLVED IN THE EXPERIMENT / PROCESS
- REVIEW THIS SOP
- OTHER:

INDICATE THE NANOMATERIAL WASTE MANAGEMENT PROCEDURES TO BE UTILIZED.

DISPOSAL

Waste Stream	Management Method
<input type="checkbox"/> <p>Solid</p> <ul style="list-style-type: none"> • Dry ENM product • Filter media containing ENMs • Debris / dust from ENMs bound in matrix 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word “nano” as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Collect waste in rigid container with tight fitting lid.
<input type="checkbox"/> <p>Liquid</p> <ul style="list-style-type: none"> • Suspensions containing ENMs 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word “nano” as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Indicate both the chemical constituents of the solution and their hazard characteristics, and the identity and approximate percentage of ENMs on container labels. 6. Use leak proof containers that are compatible with all contents. 7. Place liquid waste containers in secondary containment and segregate from incompatible chemicals during storage.
<input type="checkbox"/> <p>Laboratory trash with trace nanomaterials</p> <ul style="list-style-type: none"> • PPE • Sticky mats • Spill clean-up materials 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word “nano” as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Dispose of in double clear plastic bags, folded over and taped at the neck. 6. Avoid rupturing the bags during storage and transport.
<input type="checkbox"/> <p>Solid Matrix embedded with nanomaterials (intact and in good condition)</p>	<ol style="list-style-type: none"> 1. Consult with your EH&S department, as these materials may be non-hazardous.

DESCRIBE INSTITUTION’S WASTE MANAGEMENT PROCEDURES HERE (IF APPLICABLE):

Approval. *By signing this form the individual certifies that the information provided is true and correct to the best of their knowledge.*

PRINT NAME / SIGNATURE

DATE:

Draft Standard Operating Procedures (SOP) sample

For the Laboratory Use of Engineered Nanomaterials

Instructions: Review the *Quick Guide: Risk Levels and Control Measures for Nanomaterials*. Use this template to develop a Standard Operating Procedure for your experiment / process.

OVERVIEW	PROCEDURE TITLE: <i>Use of fluorescent nanocrystals as biological markers</i>		
	DATE OF CREATION / REVISION: <i>09/24/2011</i>		
	LOCATION: (Building, Room #) <i>Sproul Hall 4127</i>		
	PRINCIPAL INVESTIGATOR (PI) OR LABORATORY SUPERVISOR NAME: <i>Jane Doe</i>	PHONE: <i>(951) 827-6303</i>	EMAIL: <i>jane.doe@university.edu</i>
	<p>DESCRIPTION. PROVIDE A 1-2 SENTENCE BRIEF DESCRIPTION OF THE PROCESS. INDICATE IF AEROSOLS ARE LIKELY TO BE CREATED.</p> <p><i>To achieve high optical density, maintain thinness, and prevent photodegradation, fluorescent nanocrystals will be used (over organic dyes) as biological markers. This study will also investigate fabrication of nanocomposites (polymer spheres) to avoid slow recognition kinetics and high non-specific bonding.</i></p>		
MATERIAL STATE AND CONDITIONS OF USE Nanomaterials are handled in/as: <input type="checkbox"/> DRY PARTICLES (POWDERS / PELLETS) <input checked="" type="checkbox"/> SUSPENSION / GELS <input type="checkbox"/> GASEOUS PHASE	FREQUENCY (check one): <input type="checkbox"/> ONE TIME <input type="checkbox"/> DAILY <input checked="" type="checkbox"/> WEEKLY <input type="checkbox"/> MONTHLY <input type="checkbox"/> OTHER:	DURATION PER EXPERIMENT: <i>30</i> _____ MINUTES; OR _____ HOURS	
HAZARDS	RISK LEVEL: <input type="checkbox"/> CATEGORY 1: LOW POTENTIAL FOR EXPOSURE <input checked="" type="checkbox"/> CATEGORY 2: MODERATE POTENTIAL FOR EXPOSURE <input type="checkbox"/> CATEGORY 3: HIGH POTENTIAL FOR EXPOSURE		
	<p>POTENTIAL HAZARDS. IDENTIFY POTENTIAL CHEMICAL AND SAFETY HAZARDS USING THE MATERIAL SAFETY DATA SHEET (MSDS) FOR THE NANOMATERIAL OR PARENT COMPOUND. THE TOXICITY OF THE NANOMATERIALS MAY BE GREATER THAN THE PARENT COMPOUND. SPECIAL CONSIDERATION SHOULD BE GIVEN TO THE HIGH REACTIVITY OF SOME NANOPOWDERS WITH REGARD TO POTENTIAL FIRE AND EXPLOSION, PARTICULARLY IF SCALING UP THE PROCESS. CONSIDER THE HAZARDS OF ANY PRECURSOR MATERIALS IN EVALUATING THE PROCESS. FOR MORE INFORMATION, REFER TO THE SECTION ON "PLANNING YOUR RESEARCH".</p> <p><i>Chalcogen oxide is harmful if inhaled or ingested. Chemical is incompatible with strong bases. Cadmium Selenide (CdSe) is harmful if inhaled or ingested or when in contact with skin. Chemical is incompatible with acids.</i></p>		

INSTRUCTIONS: INDICATE THE ENGINEERING, WORK PRACTICE, AND PERSONAL PROTECTIVE EQUIPMENT (PPE) CONTROLS YOU WILL BE IMPLEMENTING TO REDUCE THE HAZARDOUS EFFECTS OF WORKING WITH YOUR NANOMATERIALS. BASE YOUR SELECTION ACCORDING TO THE “QUICK GUIDE” SECTION.

Sample

CONTROLS

ENGINEERING CONTROLS: INDICATE ENGINEERING DEVICE(S) TO BE UTILIZED. NOTE: IF WORK CANNOT BE CONDUCTED WITH APPROPRIATE ENGINEERING CONTROLS, CONSULT WITH AN EH&S PROFESSIONAL.

- FUME HOOD** (*laboratory-type*)
- BIOSAFETY CABINET** (*must be ducted if used in conjunction with volatile compounds*)
- ENCLOSED SYSTEM** (*i.e., glove box, glove bag, or sealed chamber*)
- POWDER HANDLING ENCLOSURE**
- OTHER:**

WORK PRACTICE CONTROLS. THE FOLLOWING CONTROLS WILL BE IMPLEMENTED (*check all that apply*):

- Category 1 work practices**
 - **STORE** in sealed container with secondary containment with other compatible chemicals
 - **LABEL** chemical container with the identity of contents and include term “nano” as descriptor
 - **TRANSFER** in sealed container with secondary containment
 - **PREPARE** work space by lining with absorbent materials
 - **CLEAN** all surfaces potentially contaminated with nanoparticles (e.g., benches, glassware, apparatus) at the end of each operation using a HEPA vacuum and/or wet wiping methods.
 - **WASH** hands frequently. Upon leaving the nanomaterial work area, remove any PPE worn and wash hands, forearms, face, and neck.
 - **NOTIFY** in advance of animal facility and cage labeling / management requirements if dosing animals with nanomaterial
- Category 2 work practices**
 - **FOLLOW** all work practices listed for Category 1.
 - **RESTRICT ACCESS.**
 - **POST** signs in area
 - **USE** antistatic paper and/or sticky mats with powders.
- Category 3 work practices**
 - **FOLLOW** all work practices listed for Category 2.

Other: DESCRIBE ANY ADDITIONAL WORK PRACTICES SPECIFIC TO THE EXPERIMENT / PROCESS:

PERSONAL PROTECTIVE EQUIPMENT (PPE). INDICATE THE PPE TO BE UTILIZED (*check all that apply*):

Body Protection:

- Long pants (no cuffs)
- Laboratory coat *made of standard materials*
- Laboratory coat *made of non-woven fabrics with elastics at wrists (i.e., Tyvek®)*
- Coveralls (disposable) with head coverage (*i.e., Tyvek®*)

Eye / Face Protection:

- Safety glasses with side shields
- Chemical splash goggles
- Face shield

Hand Protection:

- Latex
- Nitrile (*2 layers*)
- Neoprene
- Vinyl
- Other:

Foot Protection:

- Closed toe shoes
- Over-the-shoe booties

Other:

- Respiratory Protection*
- Other:

* Consult with your institution on respiratory program requirements

LOCATION OF NEAREST EMERGENCY EQUIPMENT:

Item:	Location
Eyewash / Safety Shower	<i>Outside main door of in Sproul Hall 4127</i>
First Aid Kit	<i>Under sink in Sproul Hall 4127</i>
Chemical Spill Kit	<i>Under sink in Sproul Hall 4127</i>
Fire Extinguisher	<i>On the fourth floor of Sproul Hall, near restrooms</i>
Telephone	<i>On desk in corner of in Sproul Hall 4127</i>
Fire Alarm Manual Pull Station	<i>On the fourth floor of Sproul Hall, near restrooms</i>

DESCRIBE INSTITUTION'S EMERGENCY PROCEDURES:

Follow "In Case of an Accident" poster affixed to laboratory door

ACCIDENT AND SPILL PROCEDURES

Personnel Exposure procedures

1. Flush contamination from eyes/skin using the nearest emergency eyewash /shower for a minimum of 15 minutes. Remove any contaminated clothing.
2. Take copy of MSDS(s) of chemical(s) when seeking medical treatment.
3. Report potential exposures to your Principal Investigator/Laboratory Supervisor.
4. File an incident report with your institution.

Spill Response procedures

1. **Notify.** Alert workers near spill to avoid entering the area. Post signs in area or on door of lab. Eliminate sources of ignition. Report spill to your Principal Investigator/Lab Supervisor.
2. **Assess.** Are you able to cleanup spill yourself?
IF YES
*Proceed with **Spill Cleanup** if it is a small spill (i.e., 30 mL), you are knowledgeable about the hazards of the spill, it can be cleaned up within 15 minutes, and an appropriate spill kit is available.*
IF NO
Obtain spill assistance. Contact your institution's hazardous materials unit.
3. **Cleanup Spill.** Wear existing PPE (NOTE: Respiratory protection may be required if spill / release is outside the engineering control device).
For powders:
 - Use a dedicated, approved HEPA vacuum whose filtration effectiveness has been verified.
 - Do not sweep dry nanoparticles or use compressed air.
 - Consider possible pyrophoric hazards associated with vacuuming up nanoparticles.
 - Wet wipe using damp cloths with soaps or cleaning oils, or commercially available wet or electrostatic microfiber cleaning cloths. Consider possible reactivity of nanoparticles with the wipe solvent.**For liquid dispersions:**
 - Apply absorbent material (appropriate for the solvent in the dispersion) to liquid spill.
4. **Dispose.** Dispose of used cleaning materials and wastes as hazardous waste.
5. **Report.** File incident report with your institution.

GENERAL SAFETY TRAINING. DESCRIBE YOUR INSTITUTION'S GENERAL LABORATORY SAFETY TRAINING.

Laboratory Safety Orientation, Hazardous Waste Management, and Chemical Hygiene are required of all users prior to working in the laboratory. All courses are available online at <http://www.university.edu>

TRAINING

LABORATORY-SPECIFIC TRAINING. (CHECK ALL THE APPLY)

- REVIEW THIS NANOTOOL
- REVIEW THE MSDS FOR THE NANOMATERIAL(S), *if available*
- REVIEW THE MSDS FOR OTHER CHEMICALS INVOLVED IN THE EXPERIMENT / PROCESS
- REVIEW THIS SOP
- OTHER:

INDICATE THE NANOMATERIAL WASTE MANAGEMENT PROCEDURES TO BE UTILIZED.

DISPOSAL

Waste Stream	Management Method
<input type="checkbox"/> Solid <ul style="list-style-type: none"> • Dry ENM product • Filter media containing ENMs • Debris / dust from ENMs bound in matrix 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word "nano" as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Collect waste in rigid container with tight fitting lid.
<input checked="" type="checkbox"/> Liquid <ul style="list-style-type: none"> • Suspensions containing ENMs 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word "nano" as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Indicate both the chemical constituents of the solution and their hazard characteristics, and the identity and approximate percentage of ENMs on container labels. 6. Use leak proof containers that are compatible with all contents. 7. Place liquid waste containers in secondary containment and segregate from incompatible chemicals during storage.
<input checked="" type="checkbox"/> Laboratory trash with trace nanomaterials <ul style="list-style-type: none"> • PPE • Sticky mats • Spill clean-up materials 	<ol style="list-style-type: none"> 1. Manage according to hazardous waste program requirements at your institution. 2. Label nanomaterial waste containers at all times. Specify the nanomaterial and its hazard characteristic (or the hazard characteristic of the parent material) on container labels; label information to contain the word "nano" as a descriptor. 3. Keep containers closed at all times when not in use. 4. Maintain containers in good condition and free of exterior contamination. 5. Dispose of in double clear plastic bags, folded over and taped at the neck. 6. Avoid rupturing the bags during storage and transport.
<input type="checkbox"/> Solid Matrix embedded with nanomaterials (intact and in good condition)	<ol style="list-style-type: none"> 1. Consult with your EH&S department, as these materials may be non-hazardous.

DESCRIBE INSTITUTION'S WASTE MANAGEMENT PROCEDURES HERE (IF APPLICABLE):

Use the University Online Tag Program (OTP) to schedule pickup of hazardous waste with EH&S.

Approval. By signing this form the individual certifies that the information provided is true and correct to the best of their knowledge.

PRINT NAME / SIGNATURE

Jane Doe

DATE:

09/24/2011

Additional Information

Health Effects

Table X. Select publications on the health effects of nanomaterials.

Effect	Particle	Reference
Deposit in the alveoli	Ultrafine TiO ₂	Sager et al. 2008
	SWCNT	Shvedova et al. 2005
		Mercer et al. 2008
Evade phagocytosis	SWCNT	Mercer et al. 2008
Enter alveolar walls	SWCNT	Mercer et al. 2008
	TiO ₂	Oberdörster et al. 1994
Produce interstitial inflammation	Ultrafine carbon black	Nikula et al. 1995
Produce fibrosis	SWCNT	Shvedova et al. 2005
		Mercer et al. 2008
Produce tumors	Ultrafine TiO ₂	Heinrich et al. 1995
Form granulomas	SWCNT	Shvedova et al. 2005

Naturally Occurring Nanomaterials

Table X. Sources, Notes, and Exposure limits for select naturally occurring nanomaterials

Types	Amorphous Silica	Carbon Black										
Sources	Crystalline silica is abundant in sand and soils, rocks (sandstone, granite), minerals (quartz). Amorphous silica is far less abundant in nature (diatomaceous earth, silica glass and opal) but is commonly manufactured ^{14,15}	Carbon black is a powdered form of elemental carbon. Worldwide production of carbon black in 1993 was approximately 6 million tonnes. Typical classes of chemicals adsorbed onto the carbon black surface are polycyclic aromatic hydrocarbons (PAHs) ¹⁶										
Notes	Used for industrial applications such as flow agents, anti-caking agents and flavor carriers in food, polishing agents in toothpastes, flattening agents and thickeners in paints, etc. Man-made silica nanoparticles include: Mesoporous, colloidal, precipitated, and pyrogenic. A few examples of the applications are: cosmetics, drugs, food additives, and drug delivery systems. Contrary to the well-studied crystalline micron-sized silica, relatively little information exists on the toxicity of its amorphous and nano-size forms ^{17,18}	IARC Group 2B Possible Carcinogen. "The primary use of carbon black is in rubber products, mainly tires and other automotive products, but also in many other rubber products such as hoses, gaskets and coated fabrics. Much smaller amounts of carbon black are used in inks and paints, in plastics and in the manufacture of dry-cell batteries." ¹⁹										
Exposure Limits	<table border="1"> <tr> <td>OSHA</td> <td>PEL: 80 mg/ m³</td> </tr> <tr> <td>ACGIH</td> <td>TLV: 10mg/ m³</td> </tr> </table>	OSHA	PEL: 80 mg/ m ³	ACGIH	TLV: 10mg/ m ³	<table border="1"> <tr> <td>OSHA</td> <td>PEL: TWA 3.5 mg/m³</td> </tr> <tr> <td>NIOSH</td> <td>REL: TWA 3.5 mg/m³ TWA 0.1 mg/m³ for carbon blacks with > 0.1% PAH</td> </tr> <tr> <td>ACGIH</td> <td>TLV: TWA 3.5 mg/m³</td> </tr> </table>	OSHA	PEL: TWA 3.5 mg/m ³	NIOSH	REL: TWA 3.5 mg/m ³ TWA 0.1 mg/m ³ for carbon blacks with > 0.1% PAH	ACGIH	TLV: TWA 3.5 mg/m ³
	OSHA	PEL: 80 mg/ m ³										
ACGIH	TLV: 10mg/ m ³											
OSHA	PEL: TWA 3.5 mg/m ³											
NIOSH	REL: TWA 3.5 mg/m ³ TWA 0.1 mg/m ³ for carbon blacks with > 0.1% PAH											
ACGIH	TLV: TWA 3.5 mg/m ³											

Regulations

Governmental Agencies and Relevant Legislation to Nanomaterials


- **European Union-** Registration, Evaluation, Authorisation, and Restriction of Chemical Substances, 2007 (REACH)
- **US EPA-** Toxic Substances Control Act, 1976 (TSCA)
- **OSHA-** "Nanomaterials fall under OSHA General Industry Standards"²⁰


European Union & REACH- "Provides an over-arching legislation applicable to the manufacture, placing on the market and use of substances on their own, in preparations or in articles. Nanomaterials are covered by the definition of a "substance" in REACH, even though there is no explicit reference to nanomaterials. The general obligations in REACH, such as registration of substances manufactured at 1 tonne or more and providing information in the supply chain apply as for any other substance.

The first registration deadline under REACH (30 November 2010) applies to substances manufactured or imported at 1000 tonnes or more per year. The registrations of nanomaterials in this tonnage band will help to generate more information useful for the assessment of risks. [The European Chemicals Agency \(ECHA\)](#) receives the registrations and the Agency plays a central role in the collection, evaluation and dissemination of information on substances and preparations, including nanomaterials.

Nanomaterials that fulfill the criteria for classification as hazardous under [Regulation 1272/2008 on classification, labelling and packaging \(CLP\) of substances and mixtures](#) must be classified and labeled. Many of the related provisions, including safety data sheets and classification and labeling apply already today, independently of the tonnage in which the substances are manufactured or imported. Substances, including nanomaterials, meeting the classification criteria as hazardous must be notified to ECHA by 3 January 2011.

In close co-operation with the [CARACAL](#) subgroup on nanomaterials ("CASG Nano", composed of Member States and stakeholder experts) the Commission is preparing advice on how to manage nanomaterials in accordance with REACH and the CLP Regulation. The first

paper [Nanomaterials in REACH](#)  [236 KB] provides an overview of how the provisions of REACH apply to nanomaterials. The second paper, [Classification, Labeling and Packaging of Nanomaterials in](#)

[REACH and CLP](#)  [560 KB], focuses on the classification of nanomaterials in accordance with REACH and particularly the CLP Regulation. Additional papers are planned on registration, communication in the supply chain, substance identification, information requirements and chemical safety assessment. These papers can be considered as a preliminary advice and will be used by ECHA in their further work on relevant guidance documents."²¹

US EPA & TSCA- "[TSCA requires manufacturers of new chemical substances to provide specific information to the Agency for review prior to manufacturing chemicals or introducing them into commerce.](#) EPA can take action to ensure that those chemicals that pose an unreasonable risk to human health or the environment are effectively

controlled. The Agency is developing a SNUR (Significant New Use Rule) under section 5(a)(2) of TSCA to ensure that nanoscale materials receive appropriate regulatory review. The SNUR would require persons who intend to manufacture, import, or process new nanoscale materials based on chemical substances listed on the TSCA Inventory to submit a [Significant New Use Notice \(SNUN\)](#) to EPA at least 90 days before commencing that activity. The SNUR would identify existing uses of nanoscale materials based on information submitted under the Agency's voluntary [Nanoscale Materials Stewardship Program \(NMSPP\)](#) and other information. As part of the Agency's efforts to ensure a more comprehensive understanding of nanoscale materials that are already in commerce, EPA is also developing a proposed rule under [TSCA section 8\(a\)](#) to require the submission of additional information. This rule would propose that persons who manufacture these nanoscale materials notify EPA of certain information including production volume, methods of manufacture and processing, exposure and release information, and available health and safety data. Under [TSCA section 4](#) EPA will propose a rule to require testing for certain nanoscale materials that are already in commerce. EPA would be particularly interested in classes of nanoscale materials not already being tested by other Federal and international organizations. The results of the required tests would assist EPA in understanding potential health and environmental effects of the nanoscale materials. The results could also help to establish a correlation between the chemical/physical properties and the effects of the nanoscale materials."²²

For an overview of how the TSCA impacts worker health related to nanomaterials see: Sayre, P., S. Prothero, and J. Alwood, *Nanomaterial Risk Assessment and Management Experiences Related to Worker Health Under the Toxic Substances Control Act*. Journal of Occupational and Environmental Medicine, 2011. 53(6 Supplement): p. S98-S102.

Other Regulatory Drivers

- OECD- Define terms, and standardize protocols for safety testing.
- Cal EPA (DTSC)- Chemical Call in Program for Nanomaterials
- Current Legislation- REACH, TSCA, California Green Chemistry Initiative Statutes "[Assembly Bill 1879](#) and [Senate Bill 509](#)."

OECD- Define terms, and standardize protocols for safety testing. http://www.oecd.org/department/0,3355,en_2649_37015404_1_1_1_1_1,00.html

Cal EPA (DTSC)- "Have started a chemical call-in program for carbon nanotubes, nano cerium oxide, nano silver, nano titanium dioxide, nano zero valent iron, nano zinc oxide, and quantum dots. This call in requires manufacturers and importers of these materials in the state of California to provide information on their product, including, but not limited to, known toxicological data and use and quantity information."²³

Current Legislation. As of 2011, this includes: REACH, TSCA, California Green Chemistry Initiative Statutes "[Assembly Bill 1879](#): The California Environmental Protection Agency is given greater authority to regulate toxins in consumer products and [Senate Bill 509](#): Authorizes the online Toxics Information Clearinghouse to provide Californians with information on hazardous chemicals encountered in their everyday lives."²⁴

Reference

- ¹ Lövestam, G., Rauscher, H., et al. (2010). Considerations on a Definition of Nanomaterial for Regulatory Purpose. *Joint Research Centre (JRC) Reference Reports*. Luxembourg, European Union [ISO TS 80004-1]
- ² Council for Science and Technology Nanosciences and Nanotechnologies. (2007). A Review of Government's Progress on Its Policy Commitments. *Nano Review* (11). London.
- ³ Good Nano Guide. (2007, March 13). *What are nanomaterials?* Retrieved June 16, 2011 from <http://goodnanoguide.org/tiki-index.php?page=What+are+nanomaterials>; and American Chemistry Council, Nanotechnology Panel. (2007, March 13). *Consideration for a Definition for Engineered Nanomaterials*. Retrieved June 16, 2011 from http://www.americanchemistry.com/s_acc/bin.asp?CID=654&DID=5090&DOC=FILE.PDF
- ⁴ Peters, A., Ruckerl, R., et al. (2011). Lessons From Air Pollution Epidemiology for Studies of Engineered Nanomaterials. *Journal of Occupational and Environmental Medicine* 53 (6 Supplement): S8-S13.
- ⁵ Castranova, V. (2011). Overview of Current Toxicological Knowledge of Engineered Nanoparticles. *Journal of Occupational and Environmental Medicine* 53 (6 Supplement): S14-S17.
- ⁶ Nohynek, G. J., EDufour, E.K., et al. (2008). Nanotechnology, Cosmetics and the Skin: Is There a Health Risk? *Skin Pharmacology and Physiology* 21(3): 136-149.
- ⁷ Sadrieh, N., Wokovich, A.M., et al. (2010). Lack of Significant Dermal Penetration of Titanium Dioxide from Sunscreen Formulations Containing Nano- and Submicron-Size TiO₂ Particles. *Toxicological Sciences* 115 (1): 156-166.
- ⁸ Wu, J., Liu, W., et al. (2009). Toxicity and penetration of TiO₂ nanoparticles in hairless mice and porcine skin after subchronic dermal exposure. *Toxicology Letters* 191 (1): 1-8.
- ⁹ OSHA. *Nanotechnology Standards*. Retrieved June 24, 2011 from http://www.osha.gov/dsg/nanotechnology/nanotech_standards.html
- ¹⁰ NIOSH. (2010). Occupational Exposure to Carbon Nanotubes and Nanofiber [DRAFT]. *Current Intelligence Bulletin*. Rationale: "In this risk analysis, NIOSH has determined that workers may be at risk of developing adverse respiratory health effects if exposed for a working lifetime at the upper limit of quantitation (LOQ) of NIOSH Method 5040, currently the recommended analytical method for measuring airborne CNT. The LOQ for NIOSH Method 5040 is 7 µg/m³. Specifically, the animal data-based risk estimates indicate that workers may have >10% excess risk of developing early stage pulmonary fibrosis if exposed over a full working lifetime at the upper LOQ for NIOSH Method 5040. Until improved sampling and analytical methods can be developed, and until data become available to determine if an alternative exposure metric to mass may be more biologically relevant, NIOSH is recommending a REL of 7 µg/m³ elemental carbon (EC) as an 8-hr TWA respirable mass airborne concentration."
- ¹¹ NIOSH. (2011). Occupational Exposure to Titanium Dioxide. *Current Intelligence Bulletin* 63. Rationale: "NIOSH recommends airborne exposure limits of 2.4 mg/m³ for fine TiO₂ and 0.3 mg/m³ for ultrafine (including engineered nanoscale) TiO₂, as time-weighted average (TWA) concentrations for up to 10 hr/day during a 40-hour work week. These recommendations represent levels that over a working lifetime are estimated to reduce risks of lung cancer to below 1 in 1,000. The recommendations are based on using chronic inhalation studies in rats to predict lung tumor risks in humans."
- ¹² Recommended Spill Kit Contents:
- Latex or Nitrile gloves
 - Disposable laboratory coat w/elastic wrists or Tyvek suit
 - Absorbent material
 - Pre-moistened wipes
 - Sealable plastic bags and tape
 - Hazardous waste containers with leak proof caps
 - Walk off mats (e.g., Tacki-Mat)
 - Dedicated HEPA vacuum, labeled 'For Nanomaterials Only'
 - Hazardous waste labels
 - 'Do not enter - Nanomaterial Spill Clean-up in Progress' sign
- ¹³ ???
- ¹⁴ http://www.nanogenotox.eu/index.php?option=com_glossary&id=57&Itemid=100 (6/15/11)
- ¹⁵ Napierska et al. Particle and Fibre Toxicology 2010, 7:39
<http://www.particleandfibretoxicology.com/content/7/1/39>
- ¹⁶ Carbon Black, in International Agency for Research on Cancer (IARC) - Summaries & Evaluations 1996. p. 149.
- ¹⁷ http://www.nanogenotox.eu/index.php?option=com_glossary&id=57&Itemid=100 (6/15/11)
- ¹⁸ Napierska et al. Particle and Fibre Toxicology 2010, 7:39
<http://www.particleandfibretoxicology.com/content/7/1/39>

- ¹⁹ Carbon Black, in International Agency for Research on Cancer (IARC) - Summaries & Evaluations 1996. p. 149.
- ²⁰ http://www.osha.gov/dsg/nanotechnology/nanotech_standards.html (OSHA website, visited 6/24/11)
- ²¹ http://ec.europa.eu/enterprise/sectors/chemicals/reach/nanomaterials/index_en.htm (European Commission Website, visited 6/24/11)
- ²² <http://www.epa.gov/opptintr/nano/> (EPA Website, visited 6/24/11)
- ²³ <http://www.dtsc.ca.gov/TechnologyDevelopment/Nanotechnology/nanoport.cfm> (DTSC Nanotechnology webpage, visited 6/24/11)
- ²⁴ <http://www.dtsc.ca.gov/PollutionPrevention/GreenChemistryInitiative/index.cfm> (Visited 6/24/11)