


INSTRUCTIONS

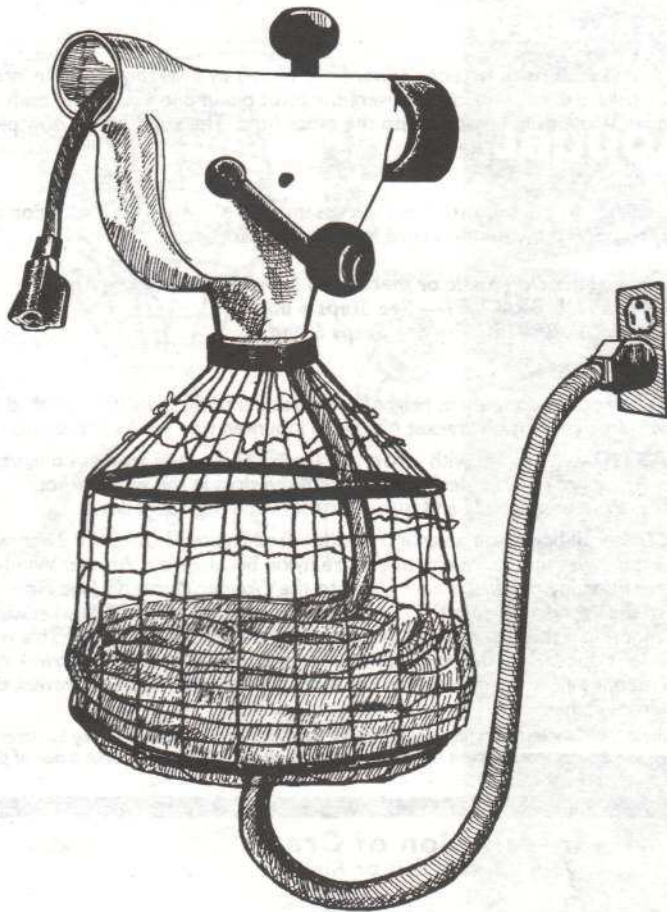

**Wonder
Winder**®

2/1/2006

ASSEMBLY INSTRUCTIONS

PLEASE REFER TO "FIGURE A" FOR A DETAILED DRAWING OF ALL COMPONENTS.

SEE FIGURE A & FIGURE #1

1. Determine whether you prefer to wind with the crank on the left or right side.
2. Place the drive wheel into the body, then install the bearings into the holes on the side of the body. Insert the crank through the bearings, body and wheel.
3. To secure the crank, slide the crank connector over the square end of the crank. Fasten the crank connector with the #8 hex head screw and washer. **DO NOT** over tighten this screw or you will lock the drive wheel. If this occurs simply back off the screw 1/2 turn at a time until the drive wheel turns freely.

SEE FIGURE #2

4. If not installed, install yoke (with lettering toward the wheel) by inserting the yoke into the body as shown, angle the yoke a small amount and insert the pivot pin in one side of the body. Then twist the yoke to move the opposite pivot pin into the other hole. The yoke should now pivot freely back & forth.

SEE FIGURE #3

5. Install the cord anchor to the bottom of the net assembly as shown. This illustration also shows the proper way to hook the extension cord into the cord anchor.

NOTE: You may have either a plastic or metal wall bracket. (See Figure A)
IF USING PLASTIC BRACKET— See Steps 6 and 7.
IF USING METAL BRACKET— See Steps 6 and 8.

SEE FIGURE A & FIGURE #2

6. Mount the wall bracket at a convenient height for crank operation, and with enough clearance for the nylon bag to swing freely. The wall bracket **MUST** be mounted to a solid surface, such as a 2x4 stud.
7. Mount the **PLASTIC** wall bracket with arrow up (arrow can be seen inside of the wall bracket.) Line up the locking ears of the WonderWinder® with the slots in the wall bracket. Insert the WonderWinder®, push in and turn 1/4 turn so the bag hangs down.
8. Mount the **METAL** wall bracket in a vertical position (see Figure A) using the 2 screws provided. Install the 2 wall mount inserts (these are nylon bushings the WonderWinder® will pivot on after inserting the wall mount pin) into the WonderWinder® (see Figure 2). Install the end of the WonderWinder® with the wall mounts into the wall bracket, then insert the wall mount pin through the wall bracket and the wall mount inserts. This will secure the WonderWinder® to the wall bracket. There is a small hole (not shown) in the end of the wall mount pin. Install the hairpin clip through the hole. This will prevent the wall mount pin from coming out.

NOTE: The metal wall bracket fits tightly on the WonderWinder® when installing. It may be necessary to increase the distance between the top & bottom lip of the metal bracket with a pair of pliers.

FIGURE #1 - Installation of Crank
 (Your Choice: Left or Right)


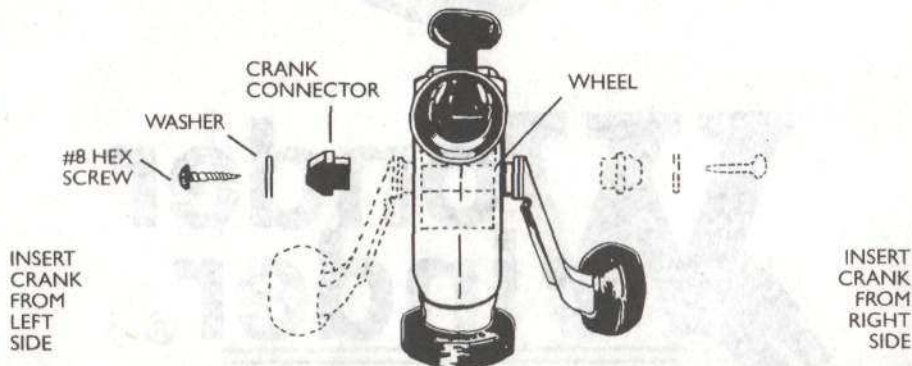


FIGURE #2



FIGURE #3

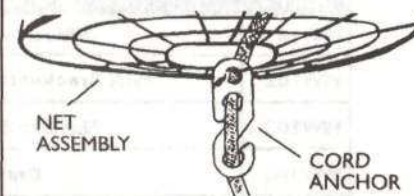

*Wall Mount Inserts are used in Metal Bracket installation only

OPERATING INSTRUCTIONS

1. Stretch cord out and remove kinks before loading. (In cool weather when cord is stiff, let cord lay in sunlight or a heated area to soften slightly before loading.)
2. Insert male plug end of cord through WonderWinder® (see Figure 4.)
3. Pull enough cord through the bottom of the net bag to allow the bag to swing freely when cord is plugged into an electric outlet.
4. Attach cord to the cord anchor at the bottom of the net bag.
5. To wind up cord (see Figure 5) push on yoke, applying just enough pressure to lightly squeeze the cord between the yoke roller and the drive wheel. Keep pressure on the yoke and turn the crank.
6. To use the cord, simply pull out the amount of cord you need.

FIGURE #4


Multiple Cords



- Multiple cords can be used.
- Round and flat cords may be coupled.
- Hand assistance required for connection to go through wheel.

FIGURE #5

Cord Winding

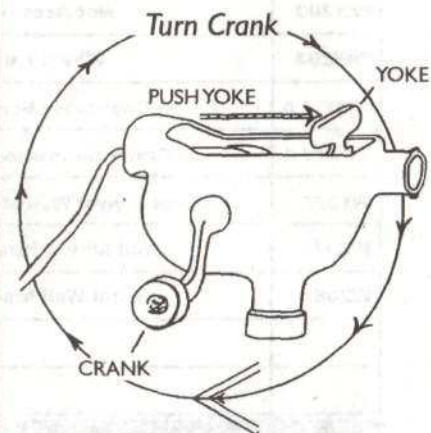

• SPECIAL INFORMATION •

- CAUTION:** Do not use cords above their rated capacity.
- * Cords may get hot with use if not fully extended. With cord wound in the net **DO NOT** operate with tools or appliances that draw more than 50% of the rated capacity (amp) of cords.
 - * **DO NOT** use old cords that are weather cracked, frayed, cut, or damaged in any way.
 - * **ALWAYS** follow cord manufacturers recommended load rating and any usage recommendations on cord or cord package.
 - * Some cords will crack in sub zero weather coiled. **DO NOT** wind a cord into the WonderWinder® under these conditions unless your cord has been designed for use under sub zero temperatures.

• AT LAST •

A SIMPLE-TOUGH-FOOLPROOF WAY TO KEEP THAT LONG EXTENSION CORD FREE OF TWISTS AND KNOTS, AND TO HAVE IT NEATLY STORED AND READY TO USE.

Designed for wall mounting in your shop or garage, yet easily movable to other locations by using extra wall brackets available through Green Leaf, Inc.[®]. The electric cord is without question the cheapest, most effective source of power. The greatest shortcoming of the electrical cord is that it is extremely troublesome to use. Long cords tend to get twisted and knotted; they often take longer to untangle and wind up than the time it takes to do the job that needs done. These troublesome factors have led to the proliferation of the cordless tools powered by gasoline engines or batteries. These tools cost more to buy and are less dependable to operate than the standard electric tool which does not need gas and oil, battery charging or tune-ups.

FOR EXTENSION CORDS 50 to 150 FEET

Only thirty seconds to wind up 100 feet. Will handle any extension cord or combination of cords up to 150 feet long.

THREE YEAR WARRANTY

Your WonderWinder[®] is guaranteed for three years from the date-of-purchase. If during this period it fails from normal wear and tear, simply return it with proof-of-purchase receipt to:

WONDER WINDER[®]
P.O. Box 88
Fontanet, IN 47851 USA


You be the judge. It will be repaired free of charge. (Shipping costs not included.)

WonderWinder[®]

THE WONDER WINDER[®] IS A GREAT IDEA!

You'll wonder how you ever got along without it!

FIGURE A

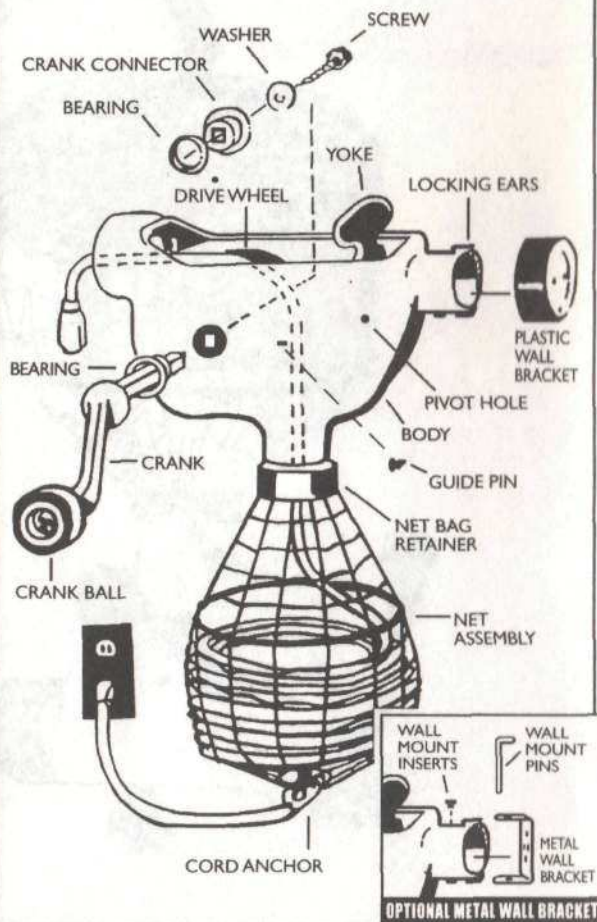

GREEN LEAF
INCORPORATED

Green Leaf Incorporated[®]
P.O. Box 88
Fontanet, IN 47851 USA
www.grnleafinc.com


— THREE YEAR WARRANTY —

Your WonderWinder[®] is guaranteed for 3(three) years from the date of purchase. If during this period it fails from normal wear and tear, simply return with proof of purchase receipt to:

WonderWinder[®]
c/o Green Leaf Inc.[®]
P.O. Box 88
Fontanet, IN 47851 USA

1-800-654-9808
www.grnleafinc.com

You be the judge. It will be repaired free of charge. (Shipping cost not included.)



• IMPORTANT •

Please fill out the warranty registration form below and mail to:

WonderWinder[®]
c/o Green Leaf Inc.[®]
P.O. Box 88
Fontanet, IN 47851 USA

DATE OF PURCHASE: _____

PURCHASED FROM: _____

—OWNER INFORMATION—

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____

ZIP: _____ COUNTRY: _____

Wonder Winder® Replacement Parts

PART #	DESCRIPTION	UNIT PRICE
WW101	Wheel (no tread)	4.55
WW102	Wall Bracket (1/4 turn plastic)	2.25
WW103	Net Bag Retainer	.87
WW104	Crank	1.75
WW105	Crank Ball	.62
WW106	Yoke	.75
WW107	Yoke Roller	.40
WW108	Bearing	.30
WW109	Net Pins	.30
WW110	Guide Pins	.30
WW112	Crank Connector	.40
WW113	Cord Anchor	.32
WW114	Body	15.86
WW115	Yoke Roller Pin	.30
WW202	Wall Bracket Screw	.33
WW203	Net Assembly	5.50
WW204	Wheel Tread	2.50
WW112 A	Crank Connector Screw (#8 hex head)	.30
WW112 B	Crank Connector Washer	.30
W102S	Metal Swivel Wall Mount Bracket	2.25
W207	Wall Mount Inserts (pair)	.75
W208	Metal Wall Mount Pin	1.50

NOTE: SHIPPING AND HANDLING CHARGES WILL BE DETERMINED AT THE TIME OF ORDER PLACEMENT.

**PLEASE PHONE REPLACEMENT PART
ORDERS IN ONLY.**

Phone: 1-800-654-9808

• NO FAX OR MAIL ORDERS ACCEPTED •