


3200NT Timer

Service Manual

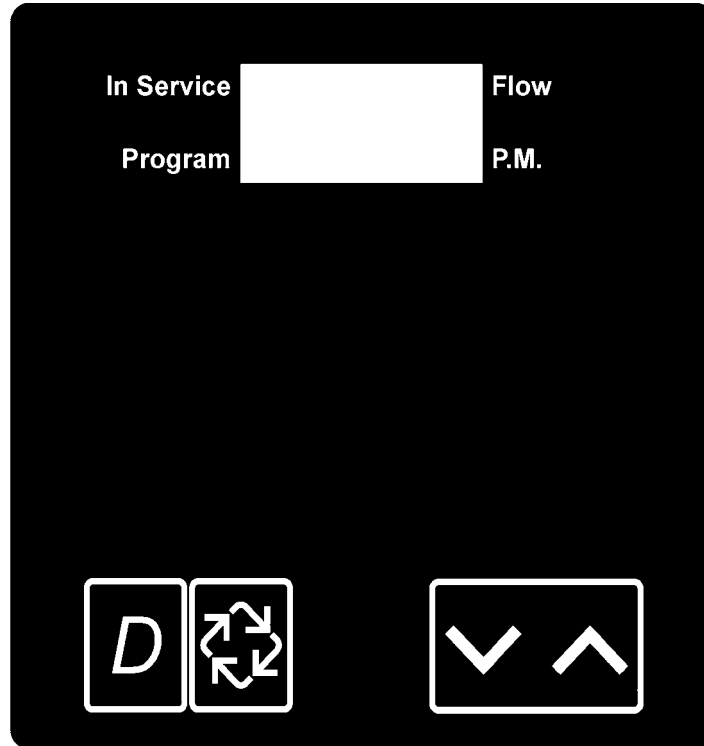

41151
NT001-1

Valve Serial Number _____

Valve Position

1-LEAd

2-LAg

3-LAg

4-LAg

IMPORTANT: Fill in pertinent information on *page 3* for future reference.

3200NT Timer

Table of Contents

Job Specifications Sheet	3
Timer Operation	4
Set Time of Day	4
Manually Initiating a Regeneration	4
Timer Operation During Regeneration	4
Start a Regeneration Tonight	4
Day Regeneration Timer	4
Flow Meter Equipped Timer	4
Timer Operation	5
Immediate Regeneration Timer with Regeneration Day Override Set	5
Delayed Regeneration Timer with Regeneration Day Override Set	5
Timer Operation During Programming	5
Timer Operation During A Power Failure	5
Remote Lockout	5
Remote Signal Start Regeneration	5
Day Override Feature	5
System Operations	6
System 4	6
System 5	6
System 6	6
System Operations	7
System 7	7
System 9	7
Important System Operations Tips	7
Timer Displays	8
Timer Display Description	8
Timer Programming Mode	9
Timer Operation Display Definitions and Examples	10
Timer Diagnostics Display Definitions and Examples	11
Power Head Assembly Parts List	
2750/2850/2900 Upper Drive and 2900 Lower Drive	13
Power Head Assembly,	
3150/3900 Upper Drive and 3900 Lower Drive	14
Power Head Assembly Parts List,	
3150/3900 Upper Drive and 3900 Lower Drive	15
2750/2850 Timer Wiring Diagram	16
3150 Timer Wiring Diagram	17
2900 Timer Wiring Diagram	18
3900 Timer Wiring Diagram	19
Network Timer System Configuration Wiring Diagrams	20
Interlocking 3200NT	20
Installing and Grounding the Transformer	21
Troubleshooting	22
Communication Error	22
Troubleshooting	23
Programming Error	23
Simultaneous Communication and Programming Errors	23
Master Programming Mode Flow Chart	24
Master Programming Guide	28

IMPORTANT: The information, specifications and illustrations in this manual are based on the latest information available at the time of printing. The manufacturer reserves the right to make changes at any time without notice.

Job Specifications Sheet

Please circle and/or fill in the appropriate data for future reference.

Programming Mode:

Feed Water Hardness _____ Grains Per Gallon or _____ Degrees
 Regeneration Time: Delayed _____ a.m. / p.m. or Immediate
 Regeneration Day Override Off or Every _____ Days

Master Programming Mode:

Valve Model	2750	2850	2900	3150	3900
Regeneration Type	Downflow	Upflow Brine Draw First		Upflow Brine Fill First	
System Type	4 Time Clock	4 Meter Immediate		4 Meter Delayed	
	5 Interlock	6 Series		7 Alternating	9 Alternating
Valve Position	LEAd	or	LAg		
Remote Signal Start	Off	or	On	Signal Time needed _____ Minutes	
Display Format	US Gallons	or	m ³		
Unit Capacity	_____		Grains	or	Degrees
Capacity Safety Factor	Zero	or	_____ %		
Regeneration Cycle Step #1			_____ Minutes		
Regeneration Cycle Step #2	Off	or	_____ Minutes		
Regeneration Cycle Step #3	Off	or	_____ Minutes		
Regeneration Cycle Step #4	Off	or	_____ Minutes		
Regeneration Cycle Step #5	Off	or	_____ Minutes		
Time Auxiliary Relay Output					
Window #1	Off	or	Start Time _____		
			End Time _____		
Time Auxiliary Relay Output					
Window #2	Off	or	Volume _____		
			Seconds _____		
Fleck Flow Meter size	1"	1.25"	1.5"	2"	3" or Non Fleck _____ Pulses
Line Frequency	50Hz	or	60Hz		

3200NT Timer

Timer Operation

Set Time of Day

When the timer is **In Service**, push either the **Set Up** or **Set Down** button once to adjust the **Time of Day** by one digit. Push and hold to adjust by several digits.

Manually Initiating a Regeneration

1. When timer is **In Service**, press the **Extra Cycle** button for 5 seconds to force a manual regeneration.
2. The timer reaches **Regeneration Cycle Step #1**.
3. Press the **Extra Cycle** button once to advance valve to Regeneration Cycle Step #2 (if active).
4. Press the **Extra Cycle** button once to advance valve to Regeneration Cycle Step #3 (if active).
5. Press the **Extra Cycle** button once to advance valve to Regeneration Cycle Step #4 (if active).
6. Press the **Extra Cycle** button once to advance valve to Regeneration Cycle Step #5 (if active).
7. Press the **Extra Cycle** button once more to advance the valve back to **In Service**

Timer Operation During Regeneration

In the **Regeneration Cycle** step display, the timer shows the current regeneration step number the valve is advancing to, or has reached, and the time remaining in that step. The step number that displays flashes until the valve completes driving to this regeneration step position. Once all regeneration steps are complete the timer returns to **In Service** and resumes normal operation.

Example:



Less than 10 Minutes Remaining in Regen Step #1



Press the **Extra Cycle** button during a **Regeneration Cycle** to immediately advance the valve to the next cycle step position and resume normal step timing.

Start a Regeneration Tonight

With metered delayed timers, press the **Extra Cycle** button momentarily. The **In Service** indicator dot flashes and starts a **Regeneration** tonight at the programmed **Regeneration Time**.

Day Regeneration Timer

During normal operation the **Time of Day** display is visible at all times. The timer operates normally until the number of days since the last regeneration reaches the **Regeneration Day Override** setting. Once this occurs, a regeneration cycle is initiated at the preset **Regeneration Time**.

Flow Meter Equipped Timer

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³).

- As treated water is used, the **Volume Remaining** display counts down from the calculated system capacity to zero or (---). When this occurs a **Regeneration Cycle** begins or delays to the set Regeneration Time.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

Timer Operation

Immediate Regeneration Timer with Regeneration Day Override Set

When the valve reaches the set **Days Since Regeneration Override** value, a **Regeneration Cycle** initiates immediately. This occurs even if the **Volume Remaining** display has not reached zero.

Delayed Regeneration Timer with Regeneration Day Override Set

When the timer reaches the set **Days Since Regeneration Override** value a **Regeneration Cycle** initiates at the preset **Regeneration Time**. This occurs even if the **Volume Remaining** display has not reached zero.

Timer Operation During Programming

The timer only enters the Program Mode with the timer **In Service**. While in the Program Mode the timer continues to operate normally monitoring water usage and keeping all displays up to date. Timer programming is stored in memory permanently. There is no need for battery backup power.

Timer Operation During A Power Failure

During a power failure all timer displays and programming are stored for use upon power re-application. The timer retains all values, without loss. The timer is fully inoperative and any calls for regeneration are delayed. The timer, upon power re-application, resumes normal operation from the point that it was interrupted.

NOTE: An inaccurate **Time of Day** display may indicate a power outage.

Remote Lockout


The timer does not allow the unit/system to go into **Regeneration** until the Regeneration Lockout Input signal to the unit/system is cleared. This requires a contact closure to activate. The recommended gauge wire is 20 with a maximum length of 500 feet. See P4 remote inputs in the wiring diagrams on *pages 16 - 20*.

Remote Signal Start Regeneration

The control valve monitors treated water other than a flow meter. When timer receives a contact closure for the programmed amount of time, regeneration begins. The recommended gauge wire is 20 with a maximum length of 500 feet. See P4 remote inputs in the wiring diagrams on *pages 16 - 20*.

Day Override Feature

If the **Day Override** option is turned on and the valve reaches the set Regeneration Day Override value without the water meter initiating a **Regeneration Cycle**, a **Regeneration Cycle** queues. This occurs regardless of the remaining volume available.

	<p>WARNING Transformer must be grounded and ground wire must be terminated to the back plate where grounding label is located before installation. See instructions for <i>Installing and Grounding the Transformer, page 21</i>.</p>
---	--

3200NT Timer

System Operations

System 4

Time Clock (1 Valve)

During normal operation the **Time of Day** display may be viewed at all times. The control operates normally until the number of days since the last regeneration reaches the **Regeneration Day Override** setting. Once this occurs, a **Regeneration Cycle** initiates at the preset **Regeneration Time**.

Meter Delayed (1 Valve)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³).

- As treated water is used, the **Volume Remaining** display counts down from the calculated system capacity.
- The system monitors the volume of water used. When the system calculates that there is not a sufficient capacity for the next day's operation, a regeneration cycle is initiated at the preset regeneration time.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

Meter Immediate (1 Valve)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³).

- As treated water is used, the **Volume Remaining** display counts down from the calculated system capacity to zero or (----). When this occurs a **Regeneration Cycle** is started.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

System 5

Interlock (2 – 4 Valves)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³).

- As treated water is used, the **Volume Remaining** display counts down from the calculated system capacity to zero or (----). When this occurs a **Regeneration Cycle** queues.
- If no other valve is in **Regeneration** the valve sends a lock command and starts a **Regeneration Cycle**.
- If another valve is in **Regeneration** (i.e. the system is already locked) the valve remains **In Service** with **Regeneration** queued until other valves complete **Regeneration**. Then the system locks and **Regeneration** begins.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

System 6

Series (2 – 4 Valves)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³). The **Volume Remaining** is the total volume for all units in the system.

- As treated water is used, the **Volume Remaining** display counts down from the calculated system capacity to zero or (----). When this occurs a **Regeneration Cycle** queues.
- If no other valve is in regeneration the lead valve sends a lock command and starts a **Regeneration Cycle**.
- When the LEAd valve completes regeneration cycle the remaining valve(s) in the system regenerate sequentially until all valves regenerate.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.
- LAG valve volume remaining is updated every 5 seconds from the LEAd valve.
- A manually forced regeneration (EC key) can only be done on the LEAd valve and only if the system is not in **Regeneration**.

System Operations

System 7

Alternating (2 Valves)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³). The **Volume Remaining** is for the individual unit.

- As treated water is used, the **Volume Remaining** display counts down from the calculated capacity to zero or (----). When this occurs a **Regeneration Cycle** queues.
- The valve requiring **Regeneration** sends a lock command to the standby valve. The standby valve goes to **In Service** and exhausted valve starts a **Regeneration Cycle**.
- If a valve is in **Regeneration** and the other valve exhausts its volume remaining, then the exhausted valve remains **In Service** with **Regeneration** queued until the other valve goes into standby. The exhausted valve goes into standby after completing **Regeneration**.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

System 9

Alternating (2 – 4 Valves)

During normal operation the **Time of Day** display alternates with the **Volume Remaining** display (gallons or m³). The **Volume Remaining** is for the individual unit.

- As treated water is used, the **Volume Remaining** display counts down from the calculated capacity to zero or (----). When this occurs a **Regeneration Cycle** queues.
- The valve requiring **Regeneration** sends a lock command to the standby valve. The standby valve goes to **In Service** and exhausted valve starts a **Regeneration Cycle**.
- If a valve is in **Regeneration** and another valve exhausts its volume remaining, then the exhausted valve remains **In Service** with **Regeneration** queued until the other valve goes into standby. The exhausted valve goes into standby after completing **Regeneration**.
- All units remain **In Service** except those in standby or **Regeneration**.
- Water flow through the valve is indicated by the Flow Dot that flashes in a direct relationship to flow rate.

Important System Operations Tips

- When programming multi-unit systems, program LAg units first and then LEAd unit. This eliminates or minimizes lower drive movement due to system type changes and errors.
- When changing a valve from one system type to another system type, perform a Master Reset first.
- System 6, 7 and 9 valves coming out of program mode or on power-up calculate their volume (display = CALc) and then wait for a good communication signal.
 - When a good communication signal is received, the system resume normal operations.
 - If the system does not receive a good communication signal, CALc displays and the system goes into a wait. Press the EC key to force the system out of the wait and resume normal operation. A communication error may appear after one minute.
- The System 4, 5 and 6 LEAd valve drive sequence going into **Regeneration** is:
 - The lower drive moves to off-line and the upper drive moves to first **Regeneration** position.
- All system 7 and 9 valves:
 - The off-line valve moves to online, the valve requiring **Regeneration** moves its lower drive to off-line and then the upper drive moves to first **Regeneration** position.
- Reserve capacity—System 4Fd only. After power-up or Master Reset, the reserve is set by using the safety factor. Reserve is limited to a range of 0% - 50% of the unit capacity.
- System 6 and 7, LEAd units only, respond to remote lock and chemical pump. Also chemical pump is available only if the auxiliary relay in regeneration is not used [AroF]

3200NT Timer

Timer Displays

Timer Display Description


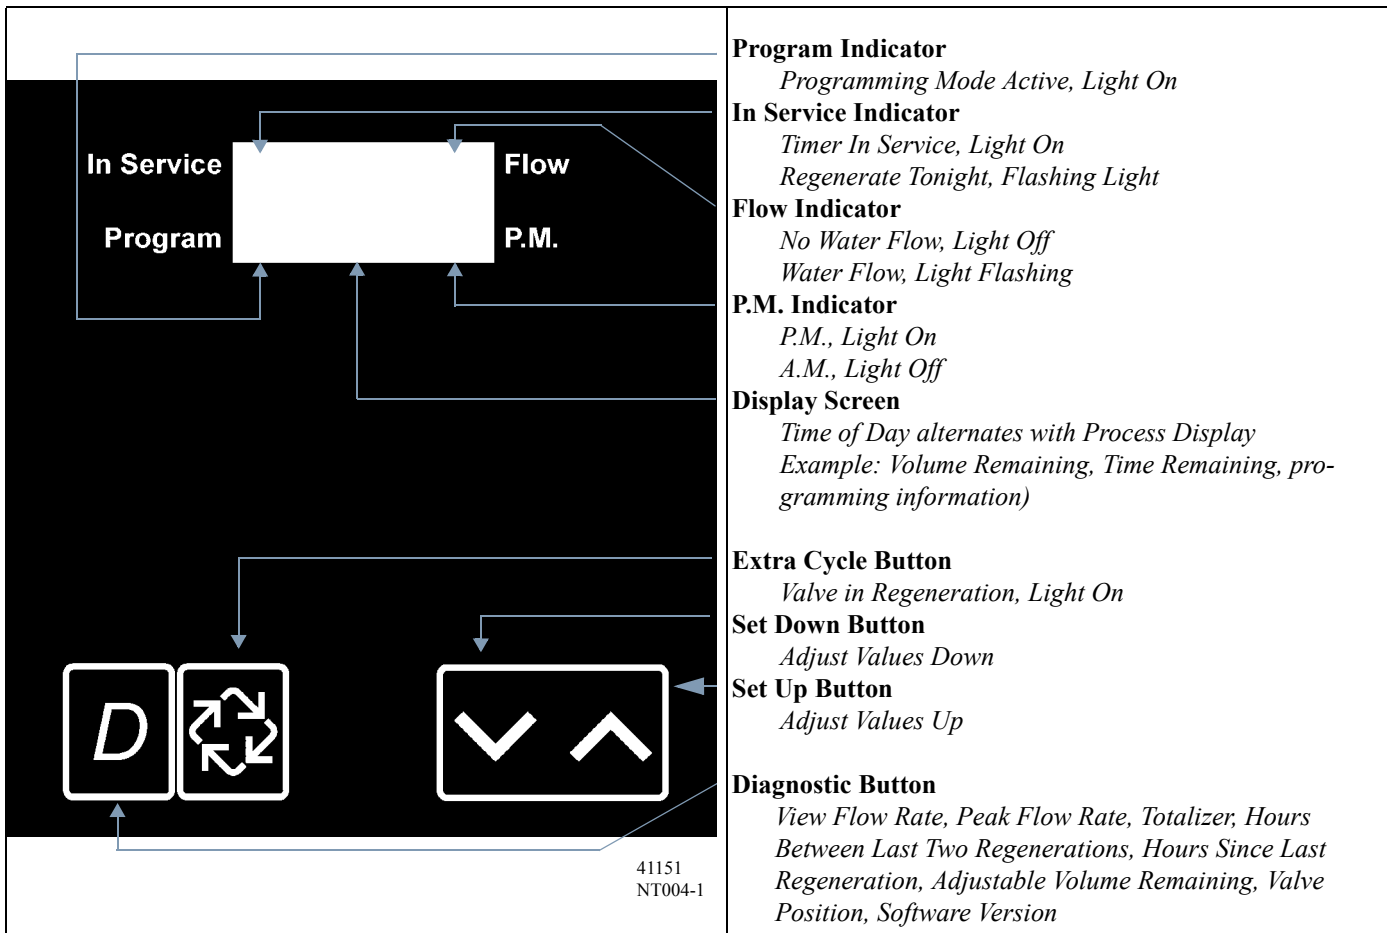


Figure 1: Control Panel and Display

Timer Programming Mode

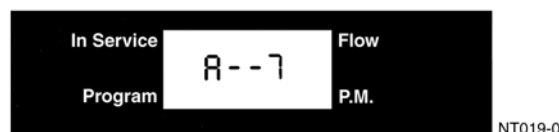

1. Enter 3200NT Programming Mode

Press and hold both the **Set Up** and **Set Down** buttons for five (5) seconds to enter Programming Mode. When the program mode is entered, the program light illuminates.

2. Set Feed Water Hardness

The feed water hardness setting displays only if the Regeneration Type is set to Meter Immediate or Meter Delayed.

- Press the **Set Up** and **Set Down** buttons to set the amount of feed water hardness (in grains/gallon). The system automatically calculates treated water capacity based on the feed water hardness and the system capacity.
- Press the **Extra Cycle** button to proceed to the next step.

3. Set Regeneration Time

A non-flashing colon between two sets of numbers identifies the **Regeneration Time** display. Set the desired time of day that you want **Regeneration** to occur.

- Press the **Set Up** and **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button to proceed to the next step.

4. Set Regeneration Day Override

Use this display to set the maximum amount of time (in days) the unit can be **In Service** without a **Regeneration**.

- For System 4 Time Clock regeneration mode the system regenerates at the time set in Step 4 after the number of days programmed in this step.
- For all other System Types (4 Meter Immediate, 4 Meter Delayed, 5, 6, 7, 9) the system regenerates after the number of days programmed in this step unless the meter initiates a **Regeneration** cycle earlier.
- Press the **Extra Cycle** button to proceed to the next step.

Timer programming is complete and exits from the Programming Mode. Normal operation resumes.

3200NT Timer

Timer Operation Display Definitions and Examples

Time of Day

Format = US/Gallons



Calculating the Volume Remaining



Format = Metric/Meter³



Communication Error



Volume Remaining

L = Display Code (X 1,000,000)

Range = 1,000,000 - 2,900,000



Programming Error



t = Display Code (X 1000)

Range = 10,000 - 999,999



Timer is Locked Out



No Display Code

Range = 1 - 9,999



Remote Signal Start Signal is Communicating



Zero



Remote Lock Out Signal Is On



Timer Diagnostics Display Definitions and Examples

Flow Rate

r = Display Code
Range = 1 - 99.9



NT023-0


Range = 100 - 500



NT024-0

Peak Flow Rate

P = Display Code
Range = 0 - 500

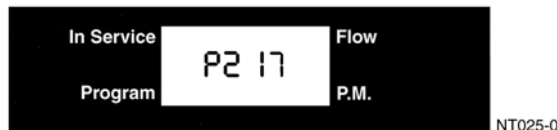

NT025-0

Totalizer

L = Display Code (X 1,000,000)
Range = 1,000,000 - 99,999,999



NT026-0

t = Display Code (X 1000)
Range = 10,000 - 999,999



NT027-0

No Display Code
Range = 1 - 9,999



NT028-0

Hours Between Last Two Regenerations

II = Display Code
Range = 1 - 199



NT029-0

Hours Since Last Regeneration

≡ = Display Code
Range = 1 - 199



NT030-0

Adjustable Volume Remaining

L = Display Code (X 1,000,000)
Range = 1,000,000 - 2,900,000



NT031-0

t = Display Code (X 1000)
Range = 10,000 - 999,999



NT032-0

No Display Code
Range = 1 - 9,999



NT022-0

Valve Position

No Display Code (Lead or Lag)



NT033-0

Software Version

SP = Display Code




NT034-0

3200NT Timer

Power Head Assembly

2750/2850/2900 Upper Drive and 2900 Lower Drive

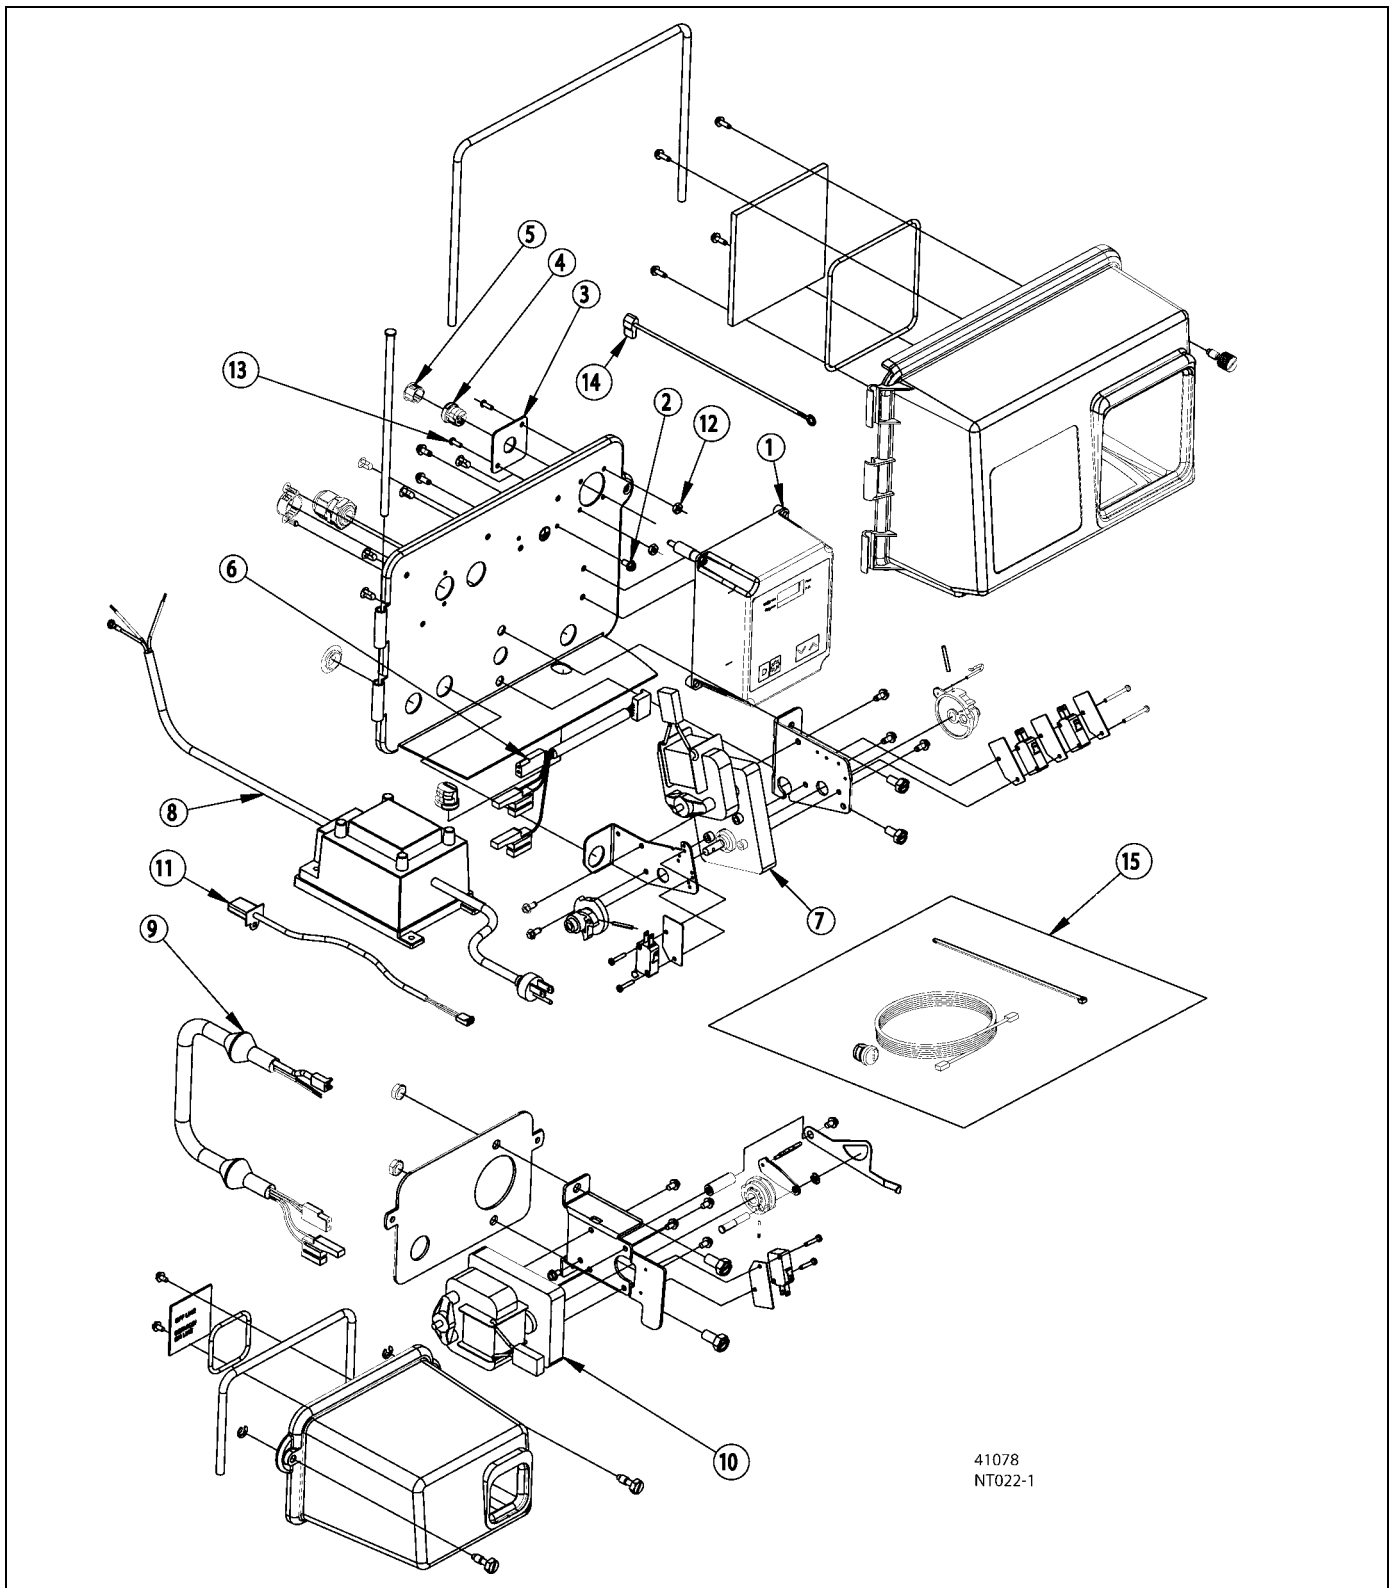

41078
NT022-1

Figure 2: 2750/2850/2900 Upper Drive and 2900 Lower Drive Power Head Assembly

Power Head Assembly Parts List

2750/2850/2900 Upper Drive and 2900 Lower Drive

<i>Item</i>	<i>Quantity</i>	<i>Part Number</i>	<i>Description</i>
1	1	41062	3200NT timer assembly
2	1	14202-01	screw, slotted hex washer head, #8-32 x .31
3	1	40959	bracket, strain relief, EZ NET
4	1	41071	bushing, strain relief
5	1	41035	plug, strain relief
6	1	40941	harness, upper drive
7	1	40385	motor, drive, 24V 50/60 Hz
8	1	41034	transformer, 120 / 24V, US
	1	41049	transformer, 230V/24V, European
	1	41050	transformer, 230V/24V, Australian
9	1	40943	harness, lower drive
10	1	40388	motor, drive, 24V 50/60 Hz
11	1	19121-08	meter cable assembly, 35"
	1	19121-09	meter cable assembly, 99.5"
	1	19121-10	meter cable assembly, 303.5"
12	2	12732	nut, hex, machine, #5-40
13	2	10299	screw, slotted round head, #5-40 x .38
14		40175-03	wire, ground, 7.5 lg w/ crimp connector
15	1	41047	kit, communication cable
Not shown			
16	1	41228	card, program/Diagnostics

NOTE: For all other service part numbers, see the Service Manual that accompanies the control valve.

3200NT Timer

Power Head Assembly, 3150/3900 Upper Drive and 3900 Lower Drive

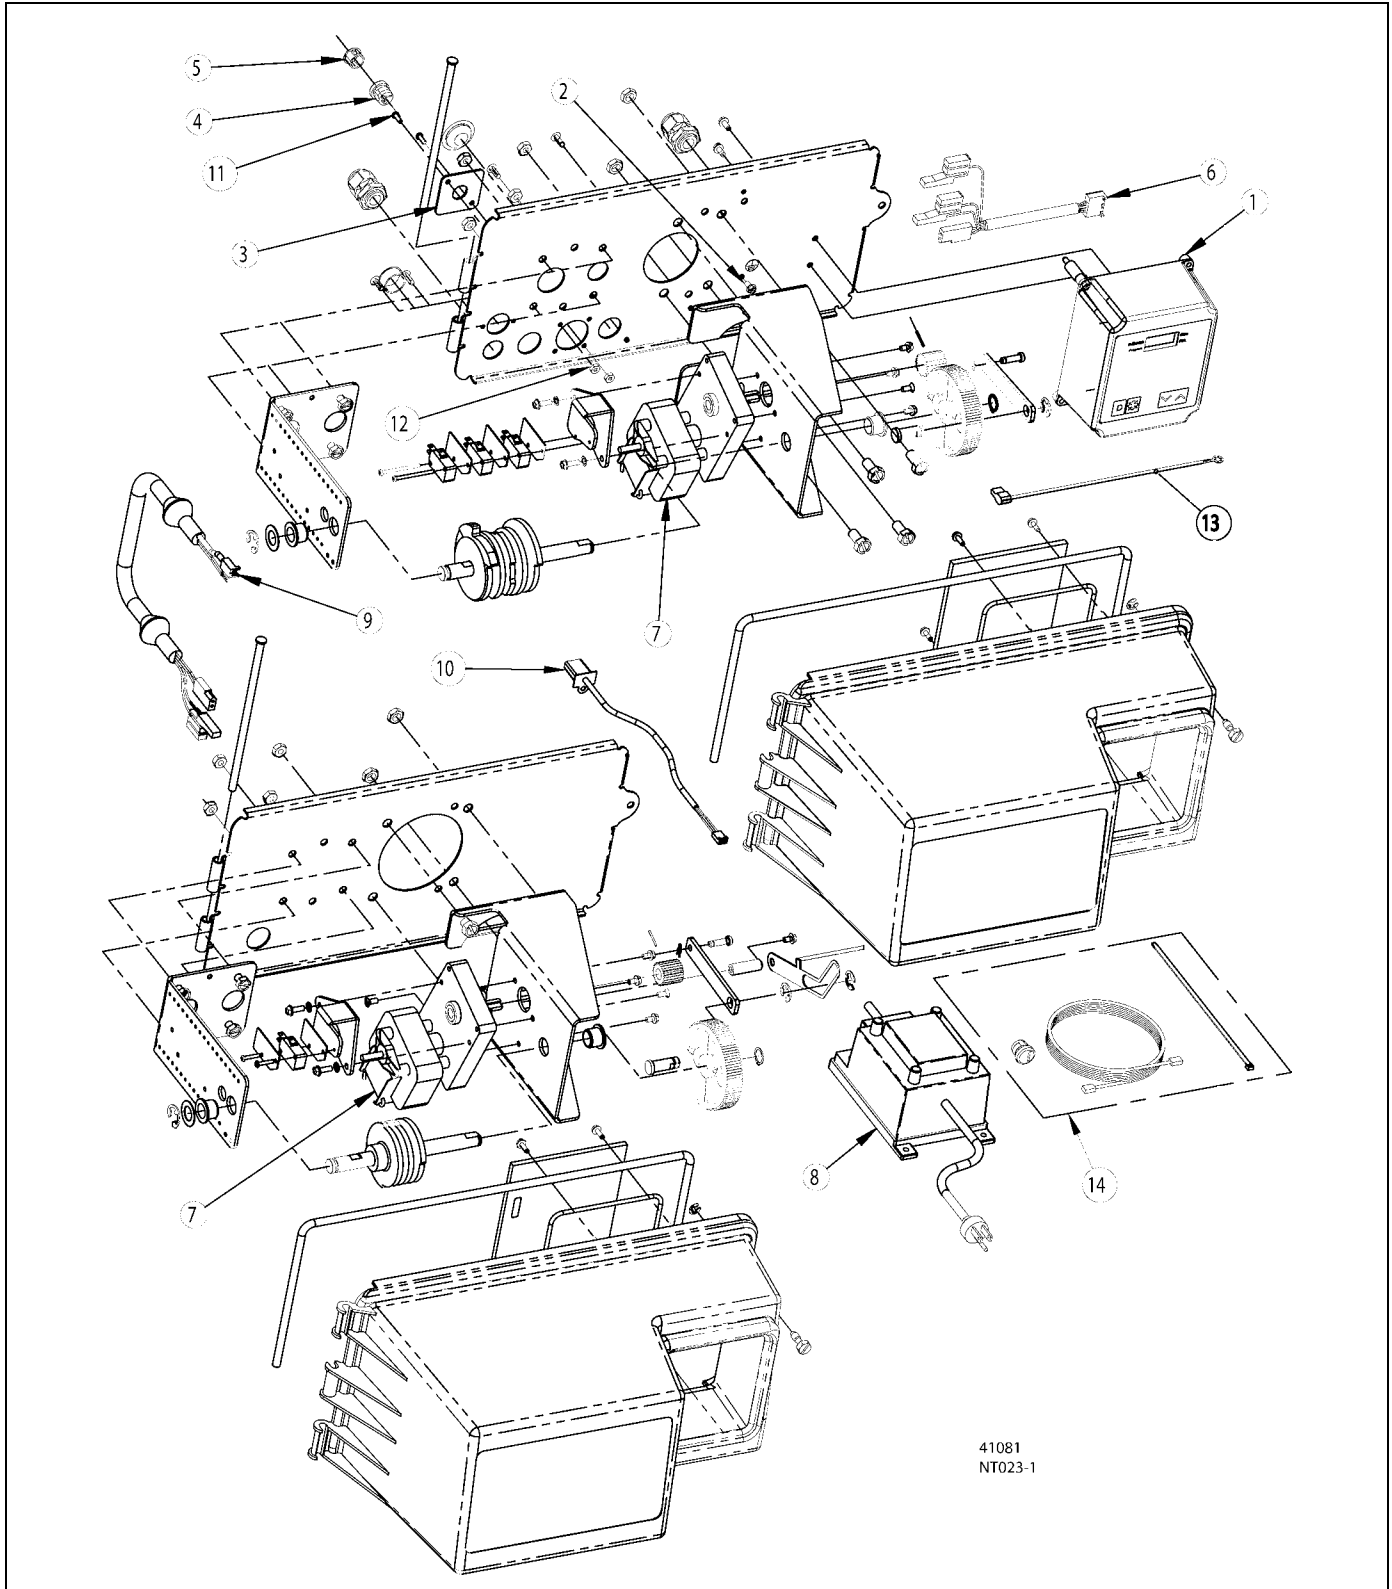


Figure 3: 3150/3900 Upper Drive and Lower Drive Power Head Assembly


Power Head Assembly Parts List, 3150/3900 Upper Drive and 3900 Lower Drive

<i>Item</i>	<i>Quantity</i>	<i>Part Number</i>	<i>Description</i>
1	1	41062	3200NT timer assembly
2	1	14202-01	screw, slotted, hex washer head, #8-32 x .31
3	1	40959	bracket, strain relief, EZ NET
4	1	41071	bushing, strain relief
5	1	41035	plug, strain relief
6	1	40941	harness, upper drive
7	2	40391	motor, drive, 24V, 50/60 Hz
8	1	41034	transformer, 120V/24V
	1	41049	transformer, 230V/24V, European
	1	41050	transformer, 230V/24V, Australian
9	1	40943	harness, lower drive
10	1	19121-08	meter cable assembly, 35"
	1	19121-09	meter cable assembly, 99.5"
	1	19121-10	meter cable assembly, 303.5"
11	2	10299	screw, slotted round head, #5-40 x .375
12	2	12732	nut, hex, machine, #5-40
13		40175-03	wire, ground, 7.5 lg w/ crimp connector
14	1	41047	kit, communication cable
Not shown			
15	1	41228	card, program/Diagnostics

NOTE: For all other service part numbers, see the Service Manual that accompanies the control valve.

3200NT Timer

2750/2850 Timer Wiring Diagram

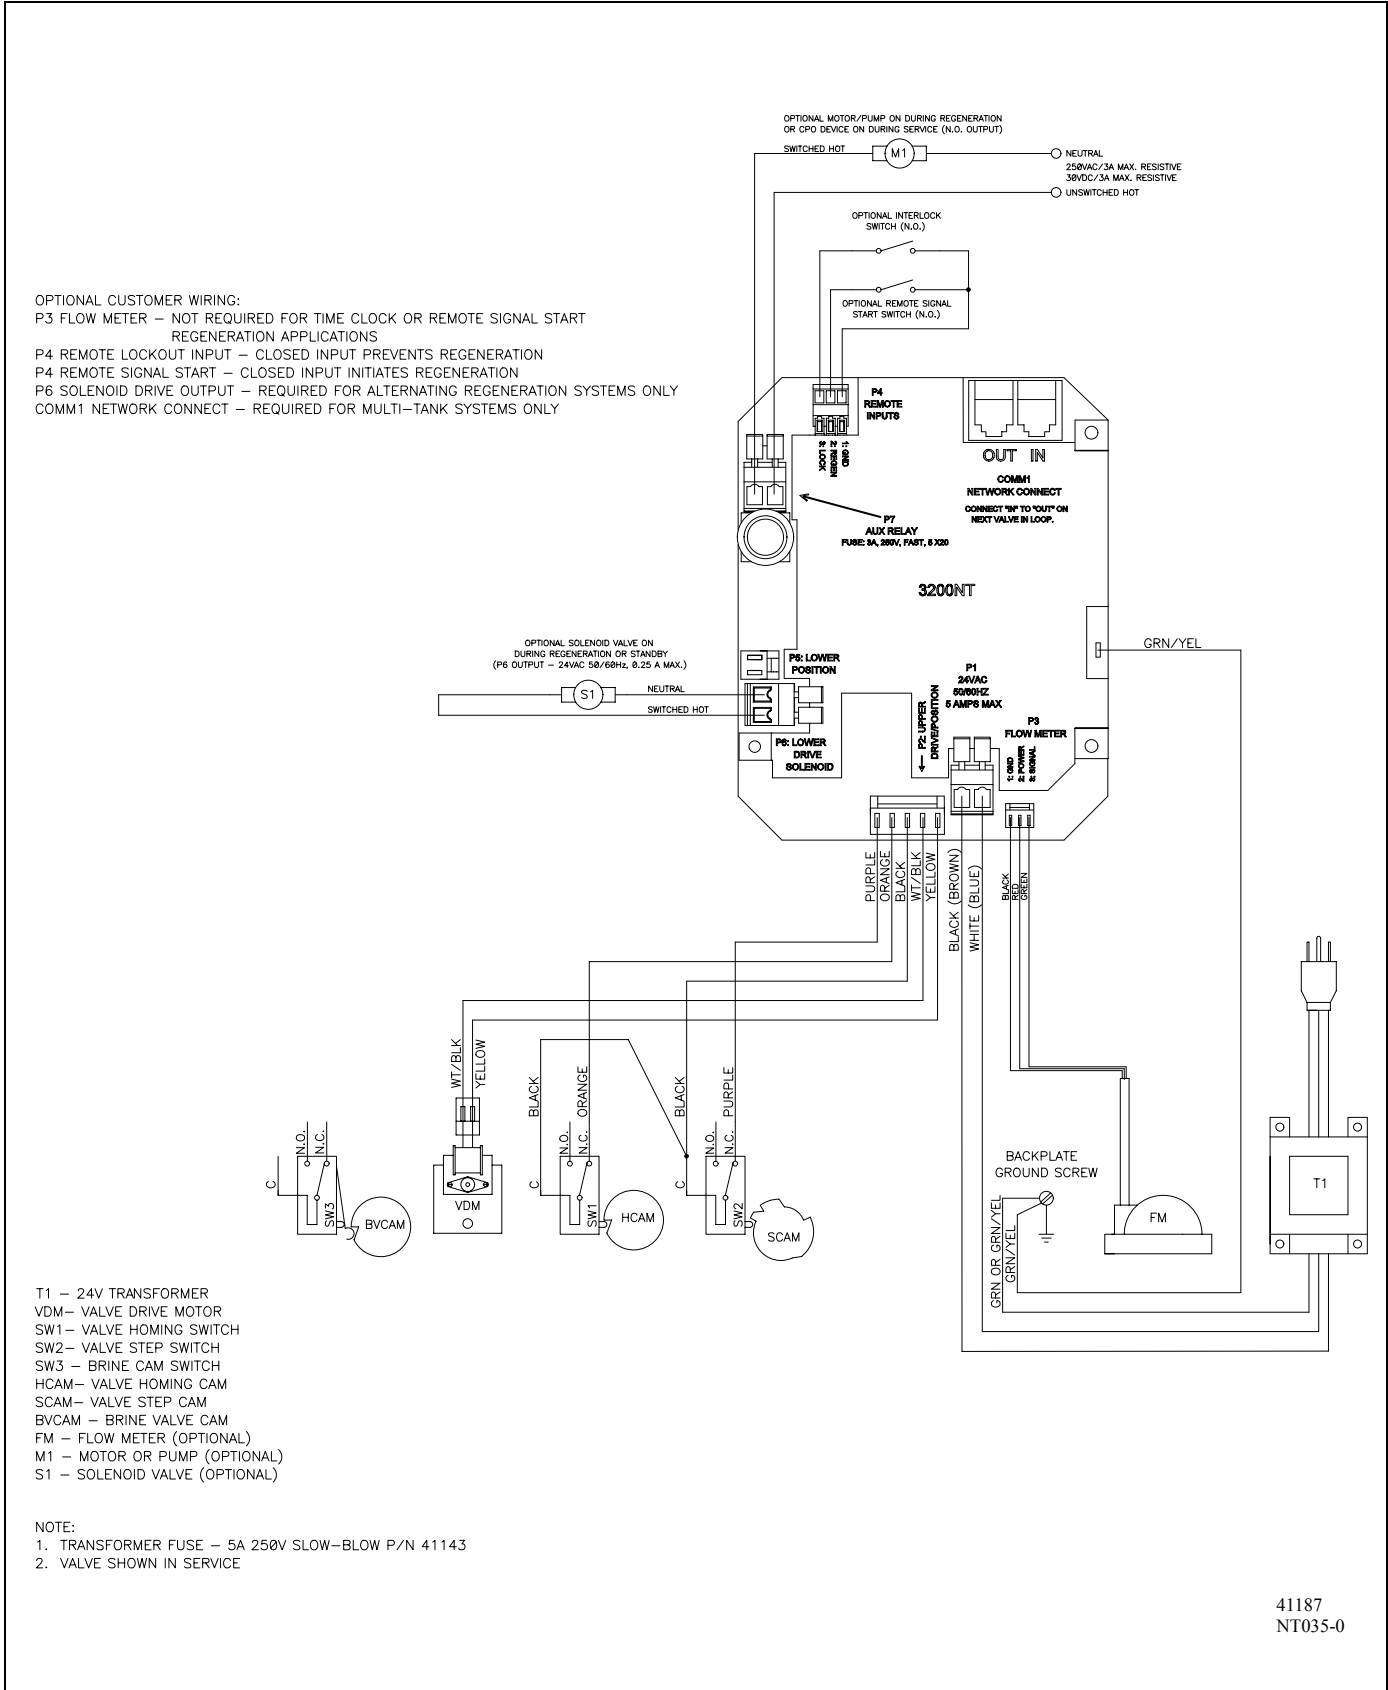


41187
 NT035-0

Figure 4: 2750/2850 Timer Wiring Diagram, System #4—Single Valve Regeneration

3150 Timer Wiring Diagram

OPTIONAL CUSTOMER WIRING:
 P3 FLOW METER – NOT REQUIRED FOR TIME CLOCK OR REMOTE SIGNAL START REGENERATION APPLICATIONS
 P4 REMOTE LOCKOUT INPUT – CLOSED INPUT PREVENTS REGENERATION
 P4 REMOTE SIGNAL START – CLOSED INPUT INITIATES REGENERATION
 P6 SOLENOID DRIVE OUTPUT – REQUIRED FOR ALTERNATING REGENERATION SYSTEMS ONLY
 COMM1 NETWORK CONNECT – REQUIRED FOR MULTI-TANK SYSTEMS ONLY

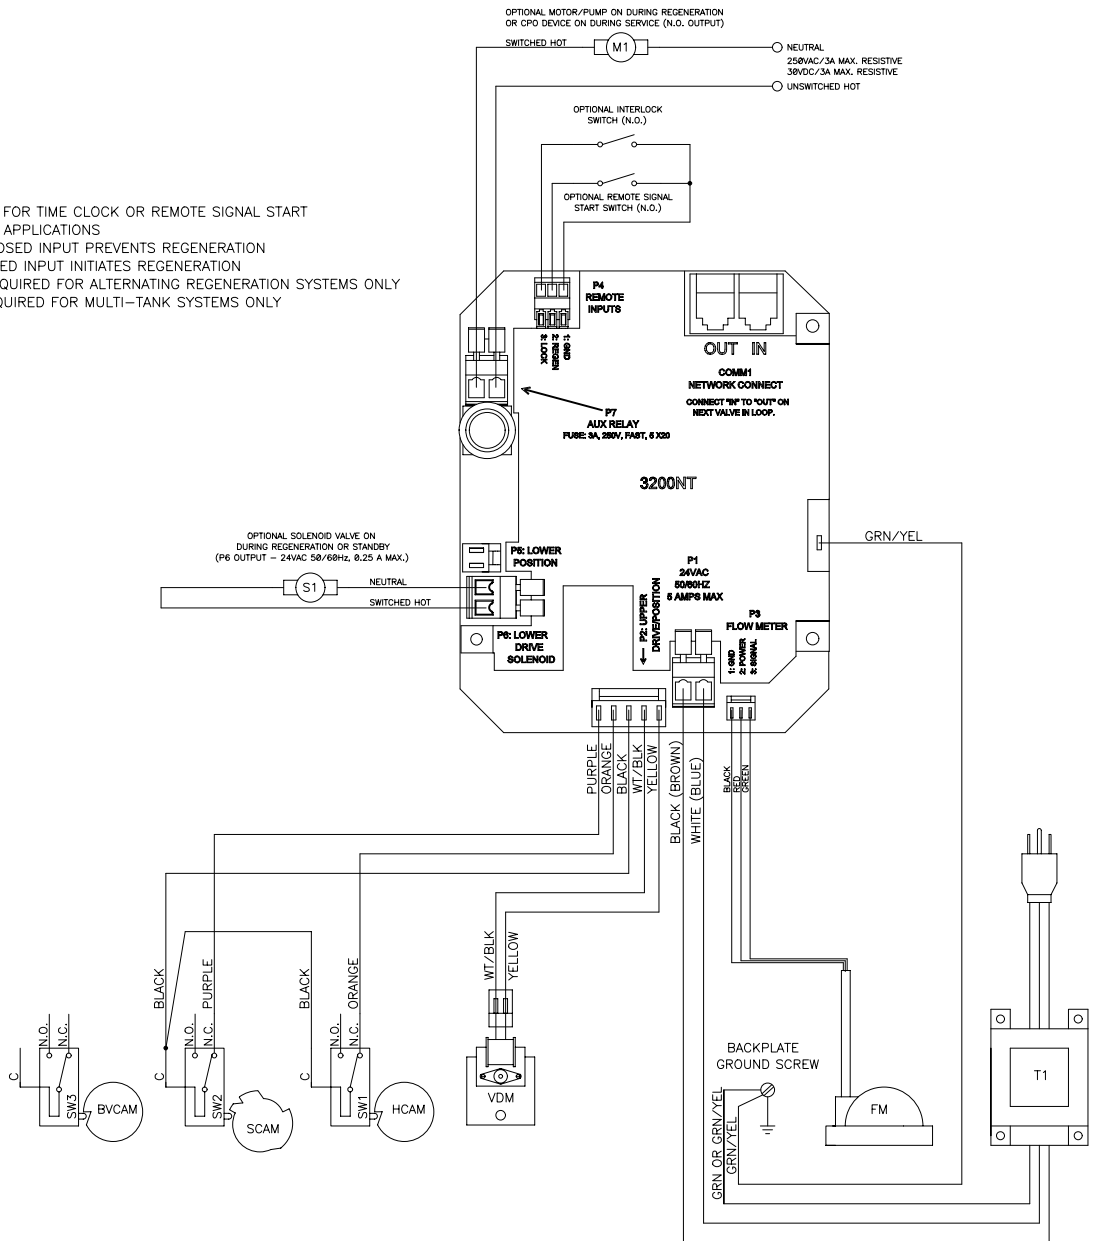

T1 – 24V TRANSFORMER
 VDM – VALVE DRIVE MOTOR
 SW1 – VALVE HOMING SWITCH
 SW2 – VALVE STEP SWITCH
 SW3 – BRINE CAM SWITCH
 HCAM – VALVE HOMING CAM
 SCAM – VALVE STEP CAM
 BVCAM – BRINE VALVE CAM
 FM – FLOW METER (OPTIONAL)
 M1 – MOTOR OR PUMP (OPTIONAL)
 S1 – SOLENOID VALVE (OPTIONAL)

NOTE:
 1. TRANSFORMER FUSE – 5A 250V SLOW-BLOW P/N 41143
 2. VALVE SHOWN IN SERVICE

41187
 NT036-0

Figure 5: 3150 Timer Wiring Diagram, System #4—Single Valve Regeneration

3200NT Timer

2900 Timer Wiring Diagram

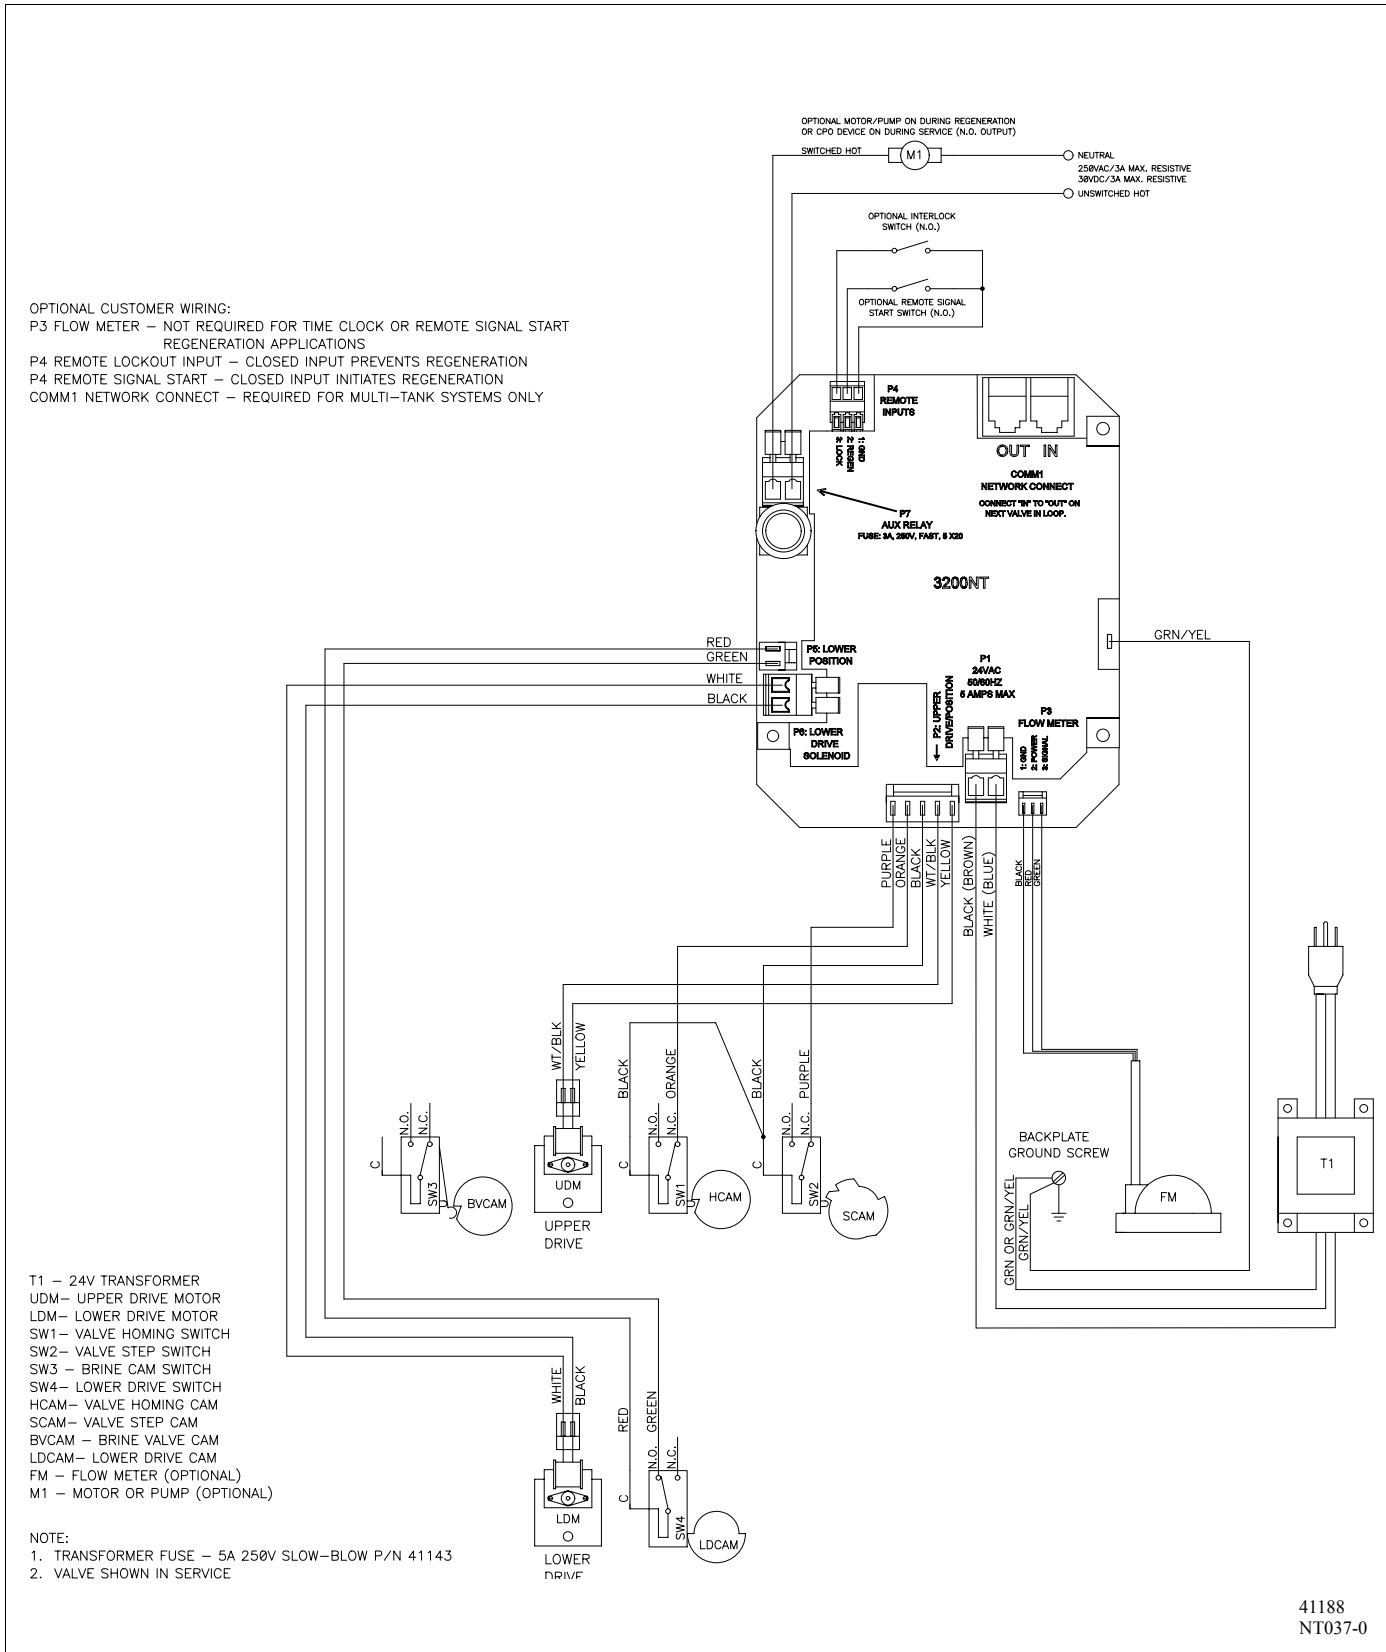


Figure 6: 2900 Timer Wiring Diagram, System #4—Single Valve Regeneration

3900 Timer Wiring Diagram

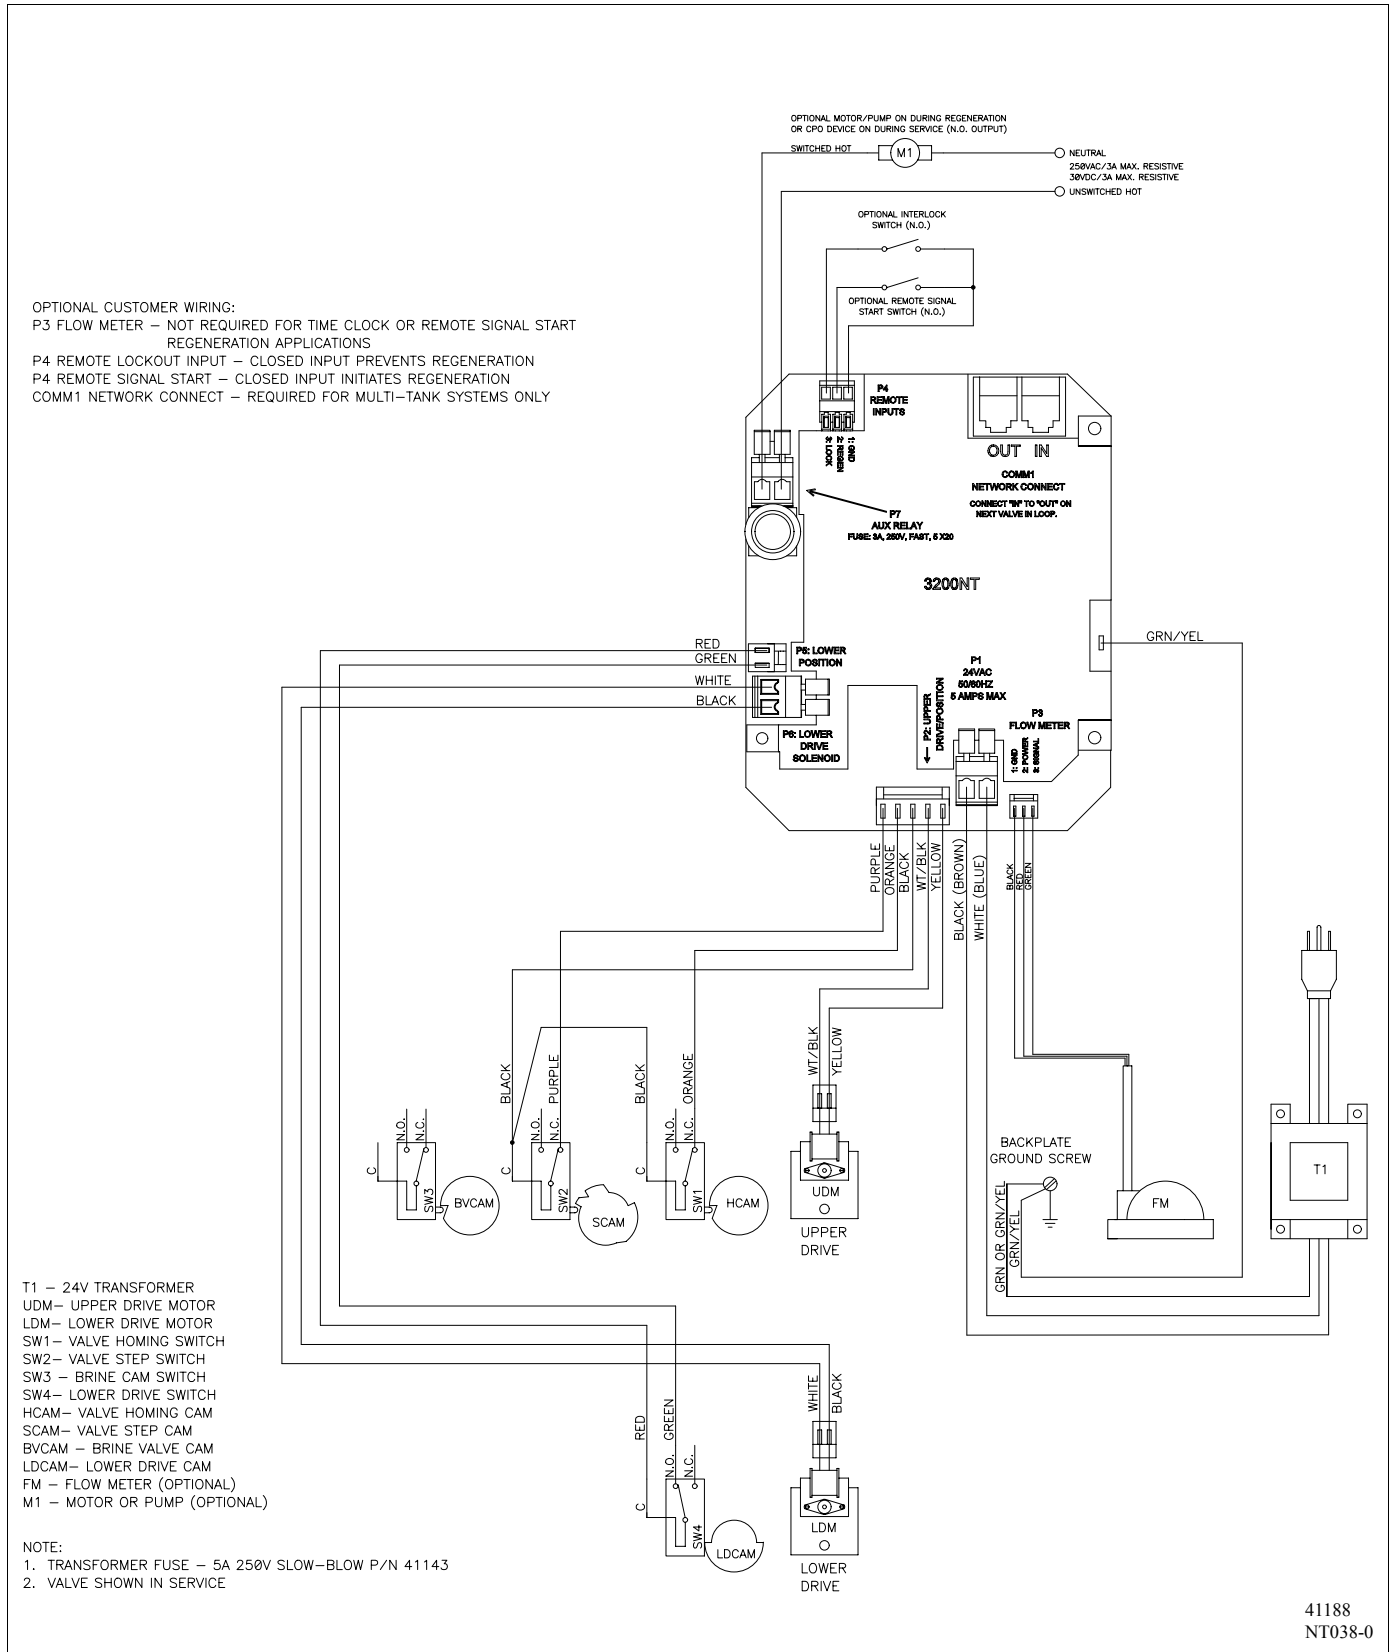


Figure 7: 3900 Timer Wiring Diagram, System #4—Single Valve Regeneration

3200NT Timer

Network Timer System Configuration Wiring Diagrams

Two Timers

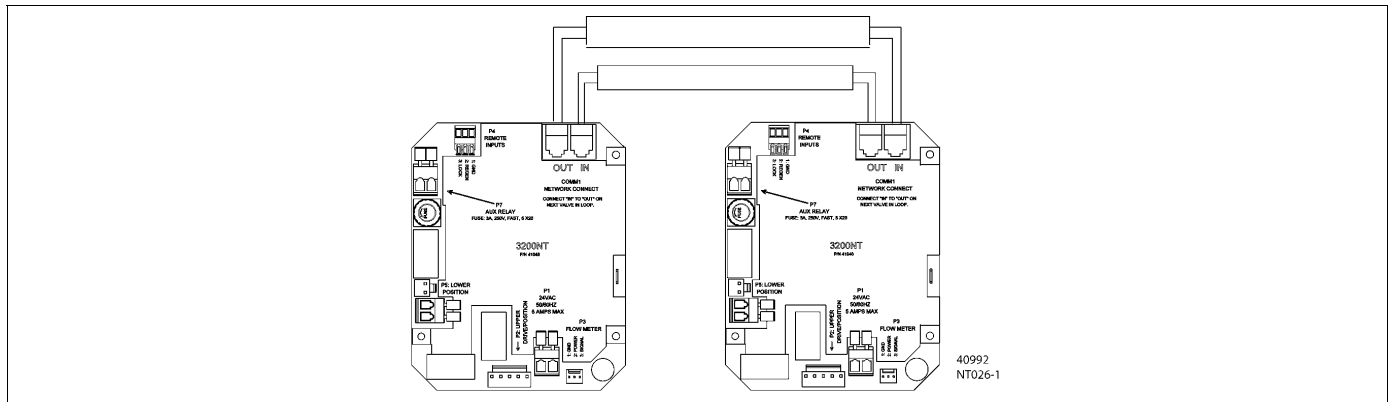


Figure 8: Network Timer System Wiring Diagram for System 5, 6, 7 and 9 Duplex

Three Timers

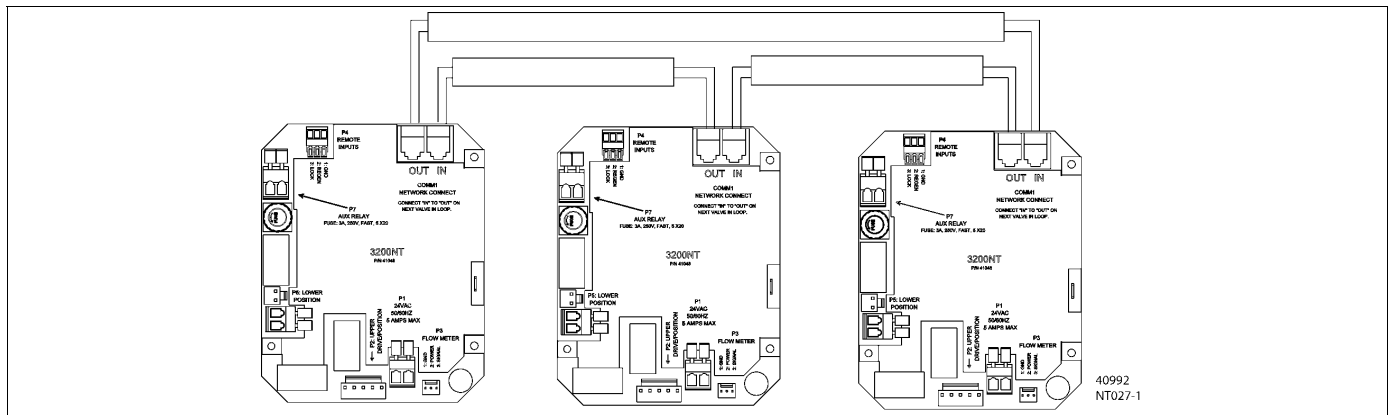


Figure 9: Network Timer System Wiring Diagram for System 5, 6 and 9 Triplex

Four Timers

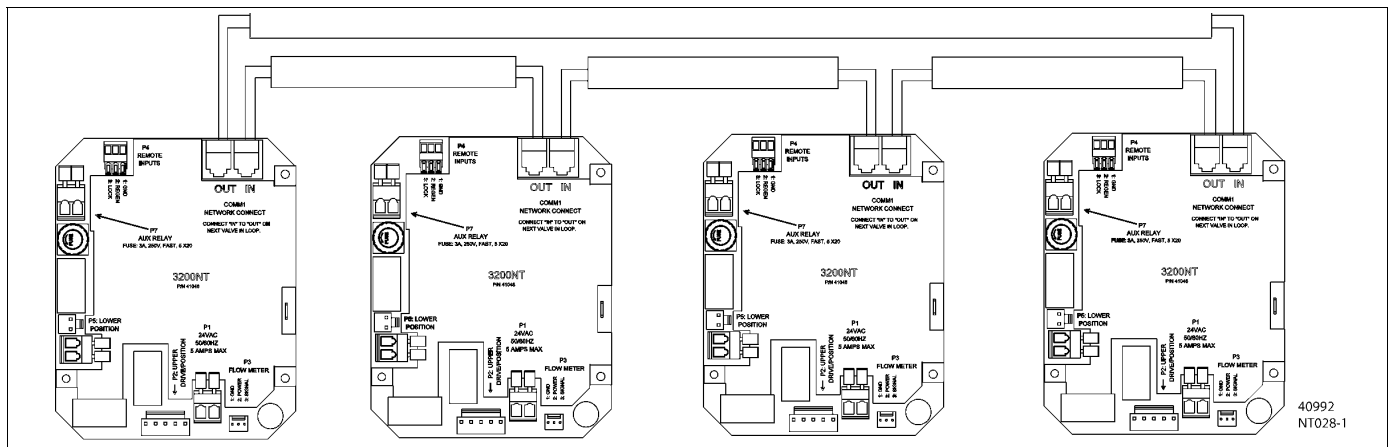


Figure 10: Network Timer System Wiring Diagram for System 5, 6 and 9 Quadplex

Interlocking 3200NT

NOTE: Use only 6-place, 4-conductor, RJ11 phone or extension cables.

1. Connect phone or extension cables first before programming.
 - System Type 7 and 6: flow meter cable must be connected to the timer programmed as the LEAd Timer.
2. A maximum cable length of 100' cable can be used between timers.
3. Always connect "IN" communication port to the "OUT" communication port of the next timer. Connect the last timer back to the first timer.

Transformer, Phone Cable and Meter Cable Installation

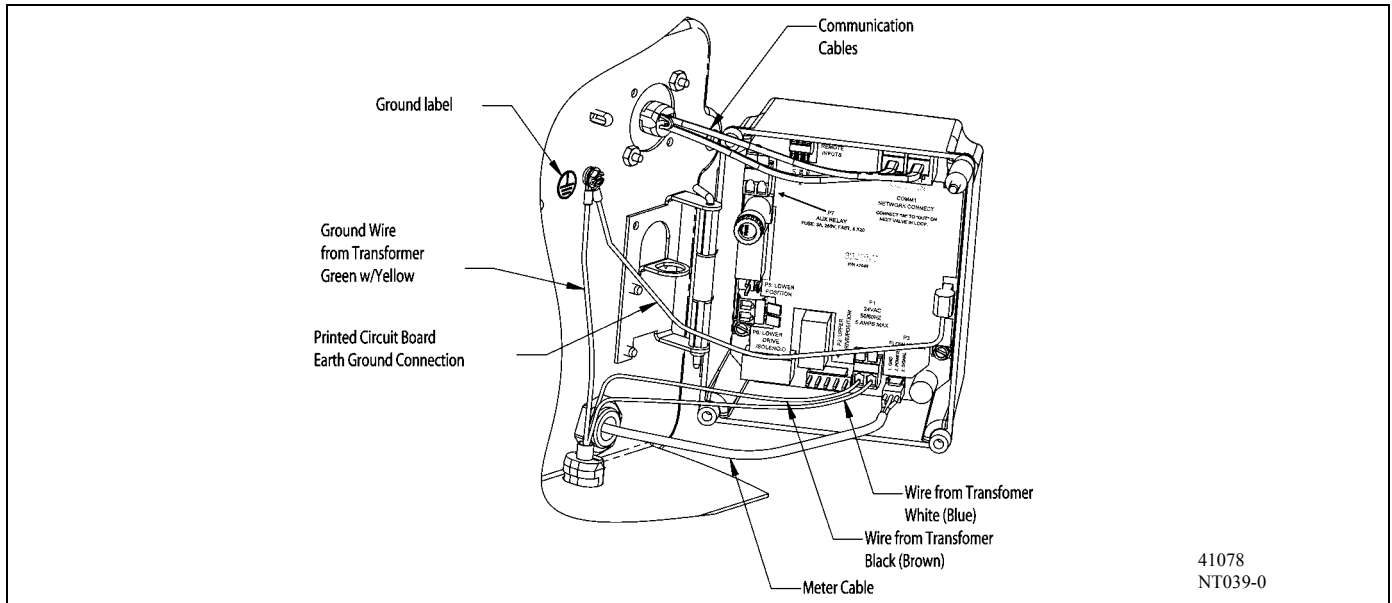


Figure 11: Installing Ground Wire on Transformer, 2750/2850/2900 Valves

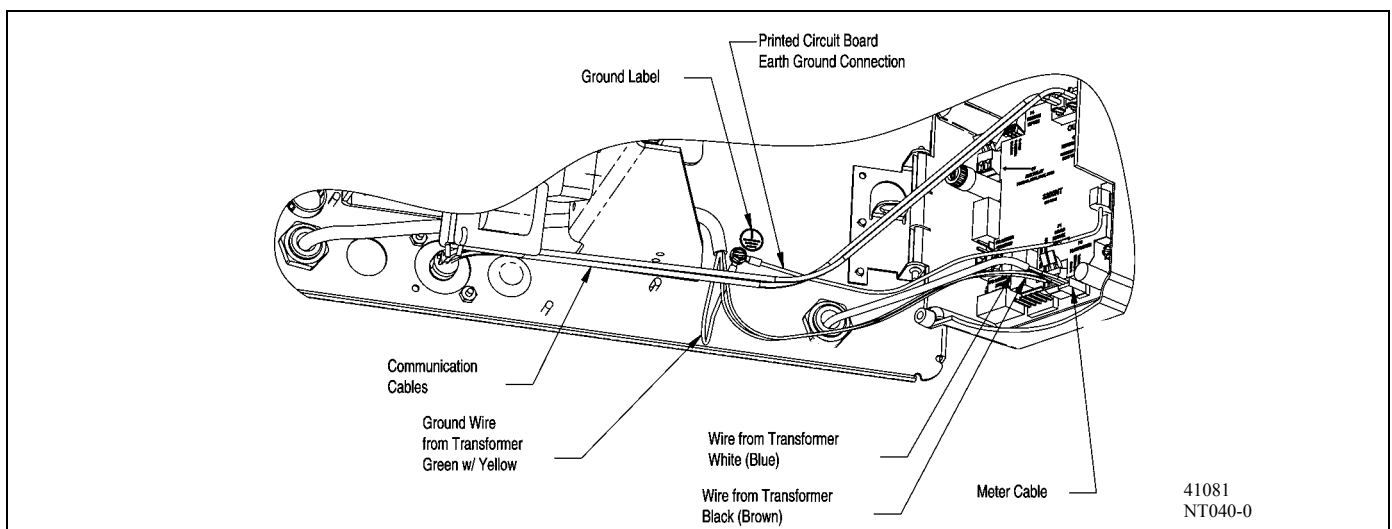


Figure 12: Installing Ground Wire on Transformer, 3150/3900 Valves

<i>Item</i>	<i>Description</i>
A	ground label
B	ground wire from transformer
C	wires from transformer

Installing and Grounding the Transformer

1. Locate the ground label (A) to find ground screw.
2. Remove the screw and attach the transformer ground wire (B).
3. Re-attach the screw.

Troubleshooting

Communication Error

If a communication error is detected, **cErr** displays. It may take several minutes for all of the units in a system to display the error message.

- All units **In Service** remain in the **In Service** position.
- All units in standby go to **In Service**.
- Any unit in regeneration when the error occurs completes regeneration and goes to **In Service**.
- No units are allowed to start a regeneration cycle while the error condition exists.
- When the communication problem is corrected and the error no longer displays (it may take several minutes for all of the units in a system to stop displaying the error message), the system returns to normal operation.

NOTE: During the error condition the control continues to monitor the flow meter and update the remaining volume. Once the error condition is corrected all units return to the operating status they were in prior to the error and regeneration is queued according to the normal system operation. If reprogramming the unit in the Master Programming Mode clears the error, the volume remaining may be reset to the full unit capacity (i.e. as though it were just regenerated).

NOTE: System 4 units retain their normal display and do not display **cErr**.

Cause	Correction
A. One or more units have a missing or bad communication cable.	A. Connecting the communication cables.
B. One or more units has a communication cable plugged into the wrong receptacle.	B. Connecting the communication cable as shown on the wiring diagrams.
C. One or more units is not powered.	C. Powering all units.
D. One or more of the units programmed as a stand alone system 4tc, 4FI or 4Fd and one or more units programmed as a multi-unit system 5FI, 6FI, 7FI or 9FI.	D. Programming the units for the same system type in the Master Programming Mode.
E. All of the units programmed as LAg. With no unit programmed as a LEAd (there is no unit to start the communications).	E. Programming the units correctly in the Master Programming Mode.

Troubleshooting

Programming Error

Timers display **PErr** when a programming error occurs.

- If multiple timers are programmed as LEAd, **PErr** displays on all units.
- If multiple timers are programmed with different system types, feed water hardness, regeneration day override and line frequency, a **PErr** will be displayed.
- All units **In Service** remain in the **In Service** position.
- All units in standby go to **In Service**.
- Any unit in regeneration when the error occurs completes regeneration and goes to **In Service**.
- No units are allowed to start a regeneration cycle while the error condition exists.
- When the problem is corrected and the error no longer displays (it may take several minutes for all of the units in a system to stop displaying the error message), the system returns to normal operation.

NOTE: During the error condition the control continues to monitor the flow meter and update the remaining capacity. Once the error condition is corrected all units return to the operating status they were in prior to the error and regeneration is queued according to the normal system operation. If reprogramming the unit in the Master Programming Mode clears the error, the volume remaining may be reset to the full unit capacity (i.e. as though it were just regenerated).

NOTE: System 4 units retain their normal display and do not display **PErr**.

Cause	Correction
A. One or more timers are programmed as System type different from the LEAd unit.	A. Programming the units correctly in the Master Programming Mode.
B. More than one timer is programmed as the LEAd unit.	B. Programming the units correctly in the Master Programming Mode.
C. One or more timers are programmed with different hardness, day override or line frequency values.	C. Program these values to be the same on all units.

Simultaneous Communication and Programming Errors

If both a communication and programming errors occur simultaneously, the communications error (**cErr**) has precedence and masks the programming error (**PErr**). When the communications error (**cErr**) is corrected, the programming error (**PErr**) displays until corrected.

3200NT Timer

Master Programming Mode Flow Chart

NOTE:

1. Set Time of Day display to 12:01 P.M.
2. Press and hold both the Set Up and Set Down buttons for 5 seconds.
3. Press Extra Cycle button once per display until all displays are viewed and Normal Display is resumed.
4. Option setting displays may be changed as required by pressing either the Set Up or Set Down button.
5. Depending on current valve programming, certain displays may not be viewed or set.



With Time of Day display set to 12:01 P.M., press and hold both the Set Up and Set Down buttons for 5 seconds.

Valve Model

Example: 2750 Control Valve [2750] =
Default
2850 Control Valve [2850]
2900 Control Valve [2900]
3150 Control Valve [3150]
3900 Control Valve [3900]



Regenerant Flow

Example: Downflow [dF] =
Default
Upflow, Brine Draw First [UfbF]
Upflow, Brine Refill First [UFFF]



System Type

Example: System #4 Time Clock Delayed [4tc] =
Default
System #4 Meter Immediate [4FI]
System #4 Meter Delayed [4Fd]
System #5 Meter Immediate [5FI]
System #6 Meter Immediate [6FI]
System #7 Meter Immediate [7FI]
System #9 Meter Immediate [9FI]



Valve Position

Example: First Control Valve [LEAd]
Second, Third, Fourth Control Valve [LAg] =
Default

NOTE:This display is viewed with System #5, #6, #7, and #9 only.



Remote Signal Start

Example: Cancel Setting [rSoF] =
Default
Need 3 minute signal time to start regeneration [rS-3]



NOTE:System Capacity, Capacity Safety Factor, Feed Water Hardness, Flow Meter Size and Chemical Pump Output settings are not viewed or used.




Display Format

Example: US/Gallons [U- -1] =

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Mode Flow Chart

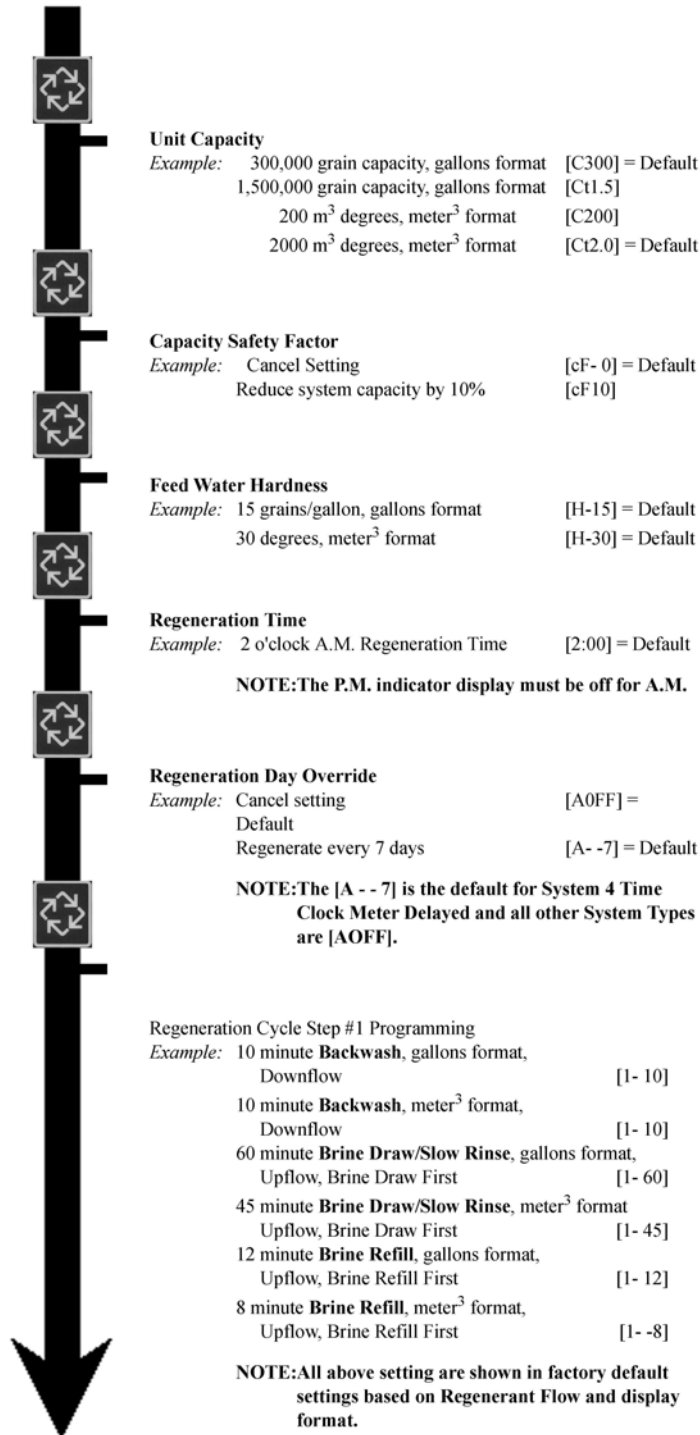

CAUTION: Before entering master programming, please contact your local professional water dealer



Regeneration Cycle Step #2 Programming

Example: 60 minute **Brine Draw/Slow Rinse**, gallons format, Downflow [2- 60]
45 minute **Brine Draw/Slow Rinse**, meter³ format, Downflow [2- 45]
10 minute **Backwash**, gallons format, Upflow, Brine Draw First [2- 10]
10 minute **Backwash**, meter³ format, Upflow, Brine Draw First [2- 10]
15 minute **Pause**, gallons format, Upflow, Brine Refill First [2- 15]
15 minute **Pause**, meter³ format, Upflow, Brine Refill First [2- 15]

NOTE:All above setting are shown in factory default settings based on Regenerant Flow and display format.

Regeneration Cycle Step #3 Programming

Example: 10 minute **Rapid Rinse**, gallons format, Downflow[3- 10]
10 minute **Rapid Rinse**, meter³ format, Downflow[3- 10]
10 minute **Rapid Rinse**, gallons format, Upflow, Brine Draw First [3- 10]
10 minute **Rapid Rinse**, meter³ format, Upflow, Brine Draw First [3- 10]
60 minute **Brine Draw/Slow Rinse**, gallons format, Upflow, Brine Refill First [3- 60]
45 minute **Brine Draw/Slow Rinse**, meter³ format, Upflow, Brine Refill First [3- 45]

NOTE:All above setting are shown in factory default settings based on Regenerant Flow and display format.

Regeneration Cycle Step #4 Programming

Example: 12 minute **Brine Tank Refill**, gallons format, Downflow[4- 12]
8 minute **Brine Tank Refill**, meter³ format, Downflow[4- 8]
12 minute **Brine Tank Refill**, gallons format, Upflow, Brine Draw First [4- 12]
8 minute **Brine Tank Refill**, meter³ format, Upflow, Brine Draw First [4- 8]
10 minute **Backwash**, gallons format, Upflow, Brine Refill First [4- 10]
10 minute **Backwash**, meter³ format, Upflow, Brine Refill First [4- 10]

NOTE:All above setting are shown in factory default settings based on Regenerant Flow and display format.

Regeneration Cycle Step #5 Programming

Example: Cancel Setting [50FF]
10 minute **Rapid Rinse**, gallons format, Upflow, Brine Refill First [4- 10]
10 minute **Rapid Rinse**, meter³ format, Upflow, Brine Refill First [4- 10]

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Mode Flow Chart



Timed Auxiliary Relay Output Window #1 Start Time Setting

Example: Cancel Setting [Arof] =
 Default
 Turn on start of Regeneration [S- -0]
 Turn on after 10 minutes in Regeneration [S- 10]

Timed Auxiliary Relay Output Window #1 End Time Setting

Example: Shut off end of Regeneration [E- 92]
 Shut off after 20 minutes in Regeneration [E- 20]

NOTE:The maximum timer setting is the total of all
 Regeneration Cycle step times. The minimum
 End time is 1 min > than the start time.

Chemical Pump Auxiliary Relay Output Window #2

Cancel Setting [cPof]
 After every 200 gallons [u200]
 Turn on for 60 seconds after every 200 gallons [t- 60]

Flow Meter Size

Example: Non Fleck® Meter [FF - -]
 Fleck® 1" Meter [FF 1.0]
 Fleck® 1-1/2" Meter [FF 1.5]
 Fleck® 2" Meter [FF 2.0]
 Fleck® 3" Meter [FF 3.0]

NOTE:Above setting is not shown on System: 4 Time
 Clock, 6 or 7 Lag Valve.

Non Fleck® Meter

Example: 13.1 pulses per gallon, gallons format [F13.1]
 36.3 pulses per liter [F36.3]

Line Frequency

Example: 60Hz Line Frequency [LF60]
 50Hz Line Frequency [LF50]


NOTE:Will default to LF60 if display format is in
 gallons or to LF50 if display format is in
 meters³.

Master Programming Mode is Exited

CAUTION: Before entering master programming, please contact your local professional water dealer

3200NT Timer

Master Programming Guide

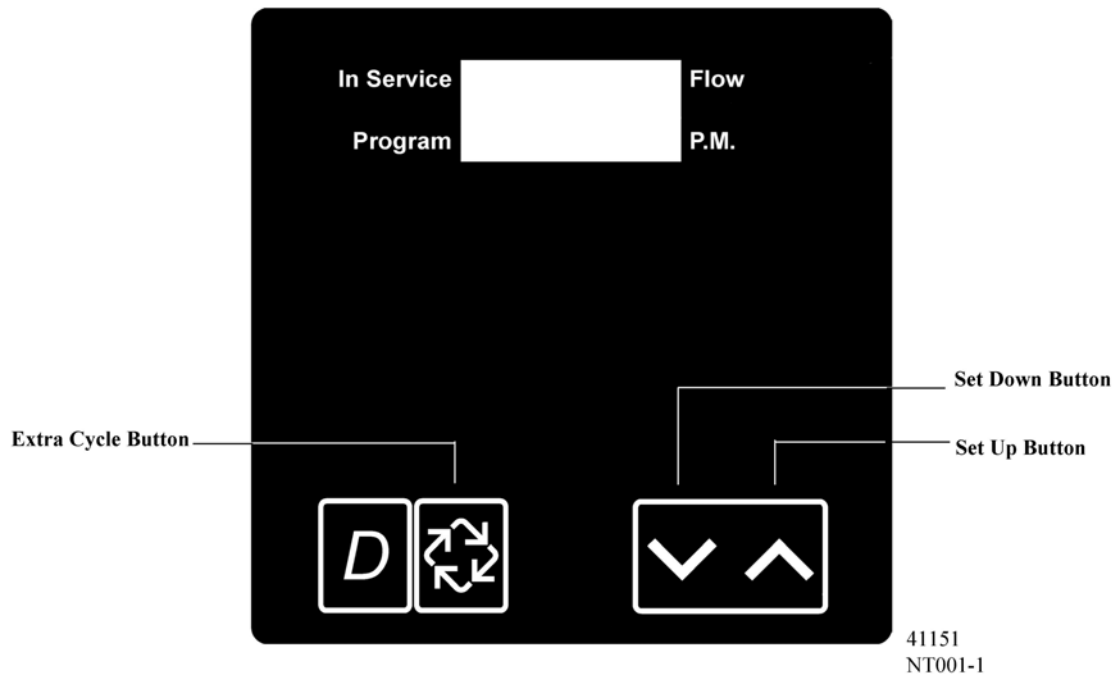

When the Master Programming Mode is entered, all available option setting displays may be viewed and set as needed. Depending on current option settings, some displays cannot be viewed or set.

Entering Master Programming Mode

Set the **Time Of Day** display to 12:01 P.M. Press and hold the **Set Up** and **Set Down** buttons together until the **Program** indicator turns on (about 5 seconds). Depending on current option settings, some displays cannot be viewed or set.

Exiting Master Programming Mode

Press the **Extra Cycle** button once per display until all are viewed. The **Program Mode** is exited and normal display resumes.

Resetting Permanent Programming Memory

Press and hold the **Set Up** and **Set Down** buttons (for about 25 seconds) until the **Time Of Day** display resets to 12:00 P.M. All option settings reset to default values. Control programming must be reset as necessary.

1. Valve Model (No Display Code)

This program step selects valve models: *2750, 2850, 2900, 3150, and 3900*

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

2. Regenerant Flow (No Display Code)

This program step is used to set the Regeneration Type. Availability is dependent on valve model chosen.

DownflowSetting: [**dF**]

Upflow, Brine FirstSetting: [**UFbF**]

Upflow, Fill FirstSetting: [**UFFF**]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Guide

3. System Type

Use this program step to set the System Type. Possible settings are:

System Type 4 Time Clock Delayed

Setting: [**4tc**]

The control regenerates on the days set in Regeneration Day Override, at the Regeneration Time set in Regeneration Time.

System Type 4 Meter Immediate

Setting: [**4FI**]

The control regenerates immediately when the available volume of treated water drops to zero (0).

System Type 4 Meter Delayed

Setting: [**4Fd**]

The control regenerates on the day the available volume of treated water drops to less than the reserve volume. Regeneration starts at the Regeneration Time.

System Type 5 Meter Immediate (Interlock)

Setting: [**5FI**]

This is a 2 to 4 unit system, each unit having a meter, and all in service. Only one unit is allowed in regeneration at a time. A unit regenerates immediately when the available volume of treated water drops to zero (0) and no other unit is in regeneration.

System Type 6 Meter Immediate (Series)

Setting: [**6FI**]

This is a 2 to 4 unit system, all in service, with one meter for the entire system. When the entire system volume of treated water drops to zero (0), it requests the first unit to go into regeneration. Then, when the first unit is done regenerating, the second follows, and so on.

System Type 7 Meter Immediate (Alternating)

Setting: [**7FI**]

This is a 2 unit system, with only one unit having a meter and only one unit in service. When the volume of treated water drops to zero (0) in the unit in service, it requests regeneration. This causes the unit in standby to move to service. Then the unit requesting regeneration moves to standby and begins regeneration.

System Type 9 Meter Immediate (Alternating)

Setting: [**9FI**]

This is a 3 or 4 unit system, each unit having a meter, one unit in standby and all other units in service. Only one unit is allowed in regeneration at a time. When the volume of treated water drops to zero (0) in the unit in service, it requests regeneration. This causes the unit in standby to move to service. Then the unit requesting regeneration moves to standby and begins regeneration.

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

4. Valve Position (No Display Code)

This program step is for two or more control valves in a system. Enter **Lead** on the first Control valve in a system and the remaining enter **Lag**. For systems that use 1 meter, the flow meter cable must be connected to the lead control valve. This program step is skipped for System Types 4tc, 4FI and 4Fd.

First Control Valve

Setting: [**LEAd**]

Second, Third, Fourth Control Valve

Setting: [**LAG**]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

3200NT Timer

Master Programming Guide

5. Remote Signal Start (Display Code rS)

The control valve is monitored other than a meter. Regeneration begins immediately after a contact closure is received for the number of minutes programmed. The amount of time is required for a contact closure to be presented before the signal is considered to be valid.

Range = 1 – 99 minutes

Cancel Setting

Setting: [rSoF]

3-Minute Signal Time To Start Regeneration

Setting: [rS-3]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

6. Gallons / Meter³ Display Format (Display Code U)

This program step sets the desired display format. The letter U in the first digit of the display identifies this program step. The possible settings include:

Gallons of water, 12 hour timekeeping, and grains of hardness

Setting: [U - - 1]

M³ of water, 24 hour timekeeping, and degrees of hardness

Setting: [U - - 4]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

7. Unit Capacity (Display Code C)

This program step sets the capacity of the system in kilograins (or m³ X degrees for metric systems). The letter C in the first digit of the display identifies this program step. System Capacity calculates the amount of treated water (gallons or liters) that can be treated by the unit before a regeneration cycle is required.

Range = C--9 – C999 kilograins (US [U - -1])

Range = Ct1.0 – Ct2.9 thousands of kilograins or millions of grains (US [U - -1])

Range = C199 – C999 m³ X degrees (metric [U - - 4])

Range = Ct1.0 – Ct19 kilo m³ X degrees (metric [U - - 4])

450,000 grain system capacity, US display

Setting: [C 450]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

8. Capacity Safety Factor (Display Code cF)

This program step adjusts system capacity. The setting is a percentage by which the unit's capacity is reduced.

Range = 0 – 50%.

Reduce system capacity by 10%

Setting: [cF10]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Guide

9. Feed Water Hardness (Display Code H)

This program step sets the feed water hardness. The letter H in the first digit of the display identifies this program step. The system automatically calculates treated water capacity based on the feed water hardness entered in this program step and the system capacity entered in program step #3.

Range = 1 – 199 grains/gallon (US [U - -1])

Range = 2 – 199 degrees (metric [U - - 4])

20 grains/gallon

Setting: [H - 20]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

10. Regeneration Time (No Display Code)

This program step sets time of day for the regeneration to occur. A non-flashing colon between two sets of numbers identifies the Regeneration Time display.

Range = Anytime

2 o'clock A.M. regeneration time

Setting: [2:00] (P.M. Indicator Off)

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

11. Regeneration Day Override (Display Code A)

This program step sets the maximum amount of time (in days) the unit can be in service without a regeneration. The letter A in the first digit of the display identifies this program step. For System Type Time Clock Delayed [4tc] the system regenerates at the time set in program step #5 after the number of days programmed in this step. For any Meter System Types, the system regenerates after the number of days programmed in this step at the same time of day that the previous regeneration occurred unless the meter initiates a regeneration cycle earlier.

Range = 1 – 99 (Time Clock Delayed [4tc])

Range = OFF, 1 – 99 (All Meter Regeneration Types)

Override every 14 days

Setting: [A -14]

Option turned off

Setting: [AOFF]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

12. Regeneration Cycle Step Programming (Display Code 1 – 6)

This program step programs the Regeneration Cycle step times. Up to 6 Regeneration Cycle steps can be programmed. The Regeneration Cycle Step being programmed is shown in the first digit of the display. Each display sets the duration time in minutes of that specific step in the regeneration cycle. For regeneration programs with less than 6 regeneration cycle steps, the time for the step # after the last active step must be set to OFF. To skip a regeneration cycle step and go to the next cycle, the setting should be at 0. If regeneration cycle step setting is OFF, the remaining cycle steps will not appear to set.

Range = OFF, 0 – 99 minutes (US [U - -1])

Range = OFF, 0 – 99 minutes (metric [U - - 4])

Regeneration Cycle Step #1 (10 minutes)

Setting: [1- 10]

Regeneration Cycle Step #4 (Cancel)

Setting: [4OFF]

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

13. Auxiliary Relay Output (Display Codes AroF, cPoF)

The next two displays viewed are part of a series of settings used to program the optional relay output.

The first setting turns the output on / off during Regeneration only. The second turns the output on during Service only, when a set volume of water used has accumulated. This second is not viewed on non-metered systems. When more than one of these settings is used, the relay must be wired to the auxiliary brine cam switch output to operate two separate pieces of equipment at one time.

NOTE: When auxiliary outputs are in the OFF (default) setting, use the Set Up or Set Down buttons to set the first setting. Then press the Extra Cycle button to advance to the second setting.

a. Timed Auxiliary Relay Output (Display Codes S-Start Time, E-End Time)

This option setting consists of two displays. The first display sets the turn-on time of the output, referenced to the start of the first Regeneration Cycle. The second display sets the output turn-off time, referenced again to the start of first Regeneration Cycle. An OFF setting cancels this setting. All settings are in minutes and output timing is synchronized with regeneration cycle timing.

Range = Total time of Regeneration

Cancel Setting [AroF]

Turn on Start of Regeneration [S- 0]

Shut off End of Regeneration [E- 92]

Turn on after 10 minutes in Regeneration [S- 10]

Shut off after 20 minutes in Regeneration [E- 20]

NOTE: The end of Regeneration is the total of all Regeneration Cycle steps times.

b. Chemical Pump Output (Display Codes u-Volume, t-Seconds)

This option setting consists of two displays. The first display sets the volume of water flow at which the output turns on. The second display sets the turn-on time (in seconds) of the output.

Range = 1 – 999 gallons

Range = 1 – 999 seconds

Cancel Setting [cPoF]

Activate output after every 200 gallons [u200]

Turn on for 60 seconds after every 200 gallons [t- 60]

— Use **Set Up** or **Set Down** buttons to adjust this value.

— Press the **Extra Cycle** button.

14. Fleck® Flow Meter Size (Display Code FF)

This program step sets the size of the Fleck® flow meter. The letters FF in the first two digits of the display identifies this program step. The last two digits of the display indicate the meter's size. If [FF- -] generic is chosen, the next step is **Generic Flow Meter Size**. If any other selection is chosen, the next step is **Line Frequency**.

Range = 1" – 3" Fleck® Meter

2" Fleck® Meter

Setting: [FF2.0]

— Use **Set Up** or **Set Down** buttons to adjust this value.

— Press the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Guide

15. Generic Flow Meter Size (Display Code F)

This program step sets the proper number of pulses generated by the flow meter for each gallon or liter of water flow.

Range = 0.1 – 99.9 pulses per gallon 100 – 199 pulses per gallon

Range = 0.1 – 99.9 pulses per liter 100 – 199 pulses per liter

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

16. Line Frequency (Display Code LF)

This program step sets the frequency of the power supply. When the line frequency is properly set, all timekeeping functions remain accurate. The letters LF in the first digit of the display identify this program step. The possible settings are:

60Hz Line Frequency

Setting: **[LF60]**

50Hz Line Frequency

Setting: **[LF50]**

- Use **Set Up** or **Set Down** buttons to adjust this value.
- Press the **Extra Cycle** button.

Exiting the Master Programming Mode

Press the **Extra Cycle** button once more to exit Master Program Mode.

After leaving Master Programming mode the abbreviation **CALc** appears on the display indicating that volume is being calculated (initial communication is taking place if the System Type is 7 or 9).

NOTE: The length of time CALc displays is dependent on the calculated volume and could be a minute or more.

Time of Day

Finish the control programming by setting the time of day. With the controller in Normal Operating Mode (not in Master Programming Mode or User Programming Mode), set the time by pressing **Set Up** or **Set Down** buttons.

NOTE: Do NOT press the Extra Cycle button after setting the time or a regeneration cycle may be initiated.

Verify the following menu structure for each System Type. An “X” indicates that parameter is available.
(Note parameters before System Type are not included here.)

Parameter	4tc	4FI	4Fd	5FI	6 & 7	6 & 7	9FI
Valve Position (Lead or Lag)				Lead/Lag	Lead	Lag	Lead/Lag
Remote Start (Set to rSoF)		X		X	X		X
Display Format (U--x)	X	X	X	X	X	X	X
System Capacity (Cxxx)		X	X	X	X	X	X
Capacity Safety Factor (cFxx)		X	X	X	X	X	X
Feed Water Hardness (H-xx)		X	X	X	X		X
Regeneration Time (xx:xx)	X	X	X	X	X	X	X
Regeneration Day Override (Axxx)	X	X	X	X	X	X	X
Regeneration Cycle Step Times (1-xx, 2-xx, etc.)	X	X	X	X	X	X	X
Auxiliary Relay (AroF)	X	X	X	X	X	X	X
Chemical Pump Output (cPOF)		X	X	X	X		X
Flow Meter Size (FFxx)		X	X	X	X		X
Line Frequency (LFxx)	X	X	X	X	X	X	X


CAUTION: Before entering master programming, please contact your local professional water dealer

3200NT Timer

Master Programming Guide


NOTE:

1. Push and release the "D" button.
2. Press Extra Cycle button once per display until all displays are viewed and Normal Display is resumed.
3. Push and release the "D" button at anytime during diagnostic mode and the timer will exit the mode.
4. Depending on current valve programming, certain displays may not be able to be viewed or set.

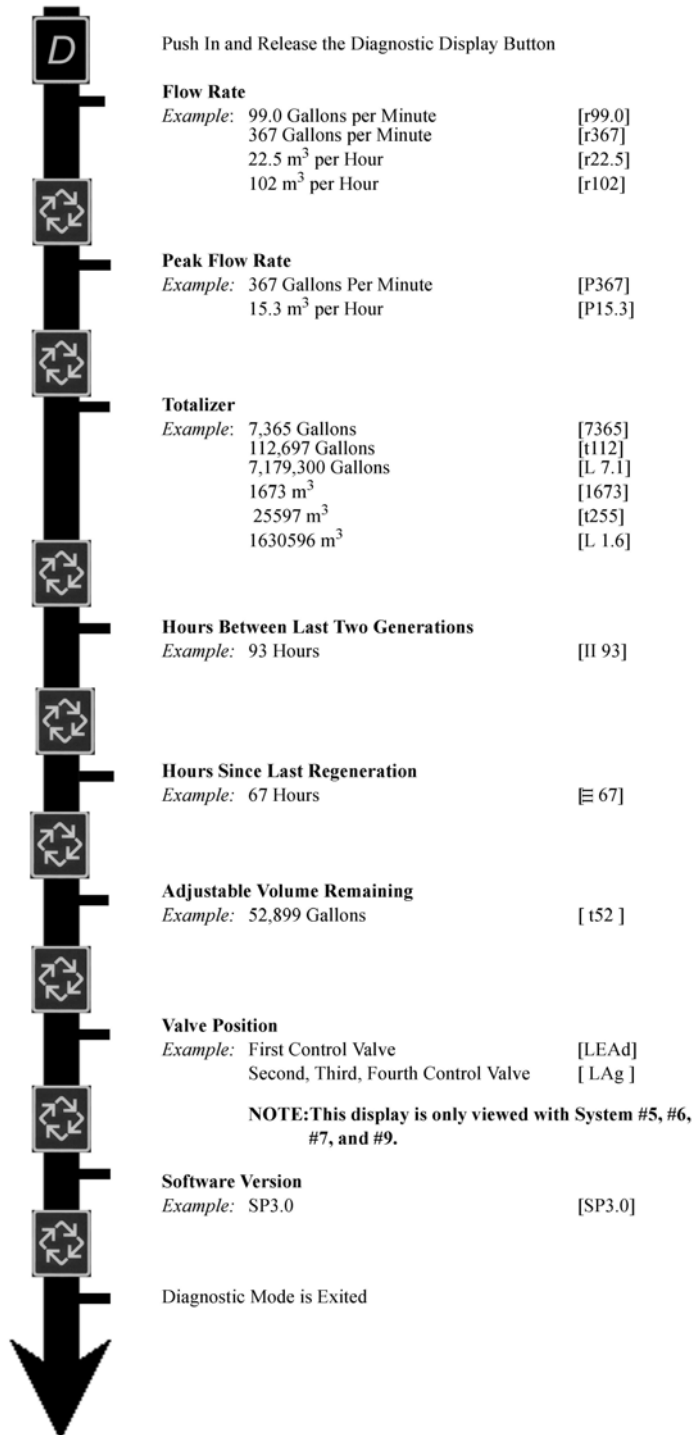

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Guide

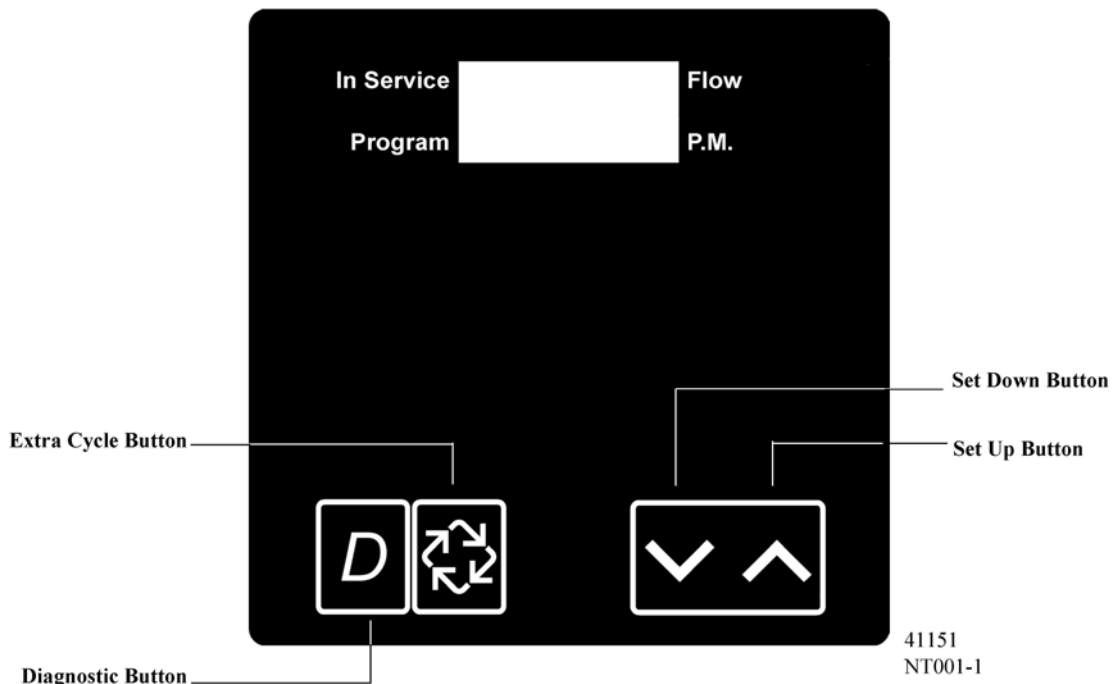

When the Diagnostics Mode is entered, all available displays are viewed as needed. Depending on current option settings, some displays cannot be viewed.

Overview Diagnostic Mode

The current diagnostic will be displayed until Extra Cycle key is pressed. There is no time limit on each display. The timer will display local information, not system information. In the event of regeneration occurring while displaying diagnostics, the regeneration step and time remaining will be displayed. When regeneration has been completed, the display will return to diagnostic display.

Entering and Exiting Diagnostic Mode

Push and Release the “D” button to enter. Pressing the Extra Cycle button will move to the next diagnostic to be displayed. Push the Extra Cycle button once per display until all are viewed. The Diagnostic Mode is exited and normal operation resumes. Pressing the Diagnostic button, while in the Diagnostic Mode, will cause the unit to leave the Diagnostic Mode and return to the normal time of day display.

1. Flow Rate (Display Code r)

Flow Rate for this particular Timer will be calculated and displayed. Flow rates will be calculated over the time between pulses up to 20 seconds. Times between pulses longer than 20 seconds will be ignored. If the display is flashing, the flow rate has exceeded the range and will not calculate. The display updates once per second.

Display example: r100

Range = 0.0 – 99.9 gpm, 100 – 500gpm

Range = 0.0 – 99.9 m³/h, 100 – 113 m³/h

Depress the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

3200NT Timer

Master Programming Guide

2. Peak Flow Rate (Display Code P)

The Peak Flow Rate since the last regeneration will be captured. Reset to zero by holding up and down keys for 5 seconds during the Peak Flow Rate display.

Display example: P100

Range = 0.0 – 99.9 gpm, 100 – 500gpm

Range = 0.0 – 99.9 m³/h, 100 – 113 m³/h

Depress the **Extra Cycle** button.

3. Totalizer (Display Code t = x 1000, L = x 1,000,000)

The total volume of treated water that passes through a meter will be counted to a maximum limit of 99,999,999 gallons or m³. Reset to zero by holding up and down keys for 5 seconds during the Totalizer display.

Ranges = No Display Code	0 to 9999	=	0 – 9,999
Display Code (t)	t-10 to t999	=	10,000 – 999,999
Display Code (L)	L-1.0 to L99.9	=	1,000,000 – 99,999,999

Depress the **Extra Cycle** button.

4. Hours Between Last Two Regenerations (Display Code II)

The hours between the last two regenerations will be saved and displayed.

Display example: II 93

Range = 0 to 999 Hours

Depress the **Extra Cycle** button.

5. Hours Since Last Regeneration (Display Code Ξ)

The hours since the last regeneration will be saved and displayed.

Display example: 67

Range = 0 to 999 hours.

Depress the **Extra Cycle** button.

CAUTION: Before entering master programming, please contact your local professional water dealer

Master Programming Guide

6. Volume Remaining

Volume remaining will be adjustable when displayed in this mode. Regeneration will occur if set to zero for more than 10 seconds.

Ranges = No Display Code	0 to 9999	=	0 – 9,999
Display Code (t)	t-10 to t999	=	10,000 – 999,999
Display Code (L)	L-1.0 to L 2.9	=	1,000,000 – 2,900,000

Use **Set UP** or **Set DOWN** buttons is used to adjust this value.

Depress the **Extra Cycle** button

7. Valve Position (No Display Code)

This diagnostic display is for 2 control valves or more in a system. This will allow you to see which timer is programmed for the Lead or Lag. This Diagnostic display is skipped for System Types 4tc, 4FI and 4Fd.

First Control Valve	Setting: [LEAd]
Second, Third, Fourth Control Valve	Setting: [LAg]

Depress the **Extra Cycle** button.

8. Software Version (Display Code SP)

The electronic timer's software program version number will be displayed.

Display example: **SP3.0**

Depress the **Extra Cycle** button to exit.

CAUTION: Before entering master programming, please contact your local professional water dealer

3200NT Timer

Notes
