

Executive Order VR-204-A
VST Phase II EVR System Including Veeder-Root ISD

Exhibit 8
Vapor Pressure Sensor Verification Test

Definitions common to all certification and test procedures are in:

D-200 Definition for Vapor Recovery Procedures

For the purpose of this procedure, the term “ARB” refers to the California Air Resources Board, and the term, “ARB Executive Officer” refers to the Executive Officer of the ARB or his or her authorized representative or designee.

1. Purpose and Applicability

1.1 The purpose of this test procedure is to determine if the Pressure Management Control (PMC) Vapor Pressure Sensor (listed in Exhibit 1) is operating in accordance with the pressure sensor requirements of Exhibit 2. This procedure is used:

1.1.1 To determine the measured ullage pressure in underground gasoline storage tanks (USTs) installed at gasoline dispensing facilities (GDFs) equipped with a VST Phase II enhanced vapor recovery system and compare to the pressure reading of the PMC at the TLS console.

1.1.2 To determine whether the Vapor Pressure Sensor complies with the performance specification when the sensor is exposed to ambient pressure.

1.2 This procedure is applicable for compliance testing.

2. Principle and Summary of Test Procedure

Determining UST Pressure - The pressure of the USTs is determined at the Phase I vapor recovery adaptor (dry break assembly) with a vapor coupler test assembly as shown in Figures 2 and 3 of TP-201.3 (*Determination of 2 Inch WC Static Pressure Performance of Vapor Recovery Systems of Dispensing Facilities*) or a modified dust cap test assembly as shown in Figures 8-1 and 8-2 of this exhibit. The test assembly is equipped with a center probe, which opens the dry break, and a quick connect fitting that is connected to an electronic pressure measuring device or digital manometer. The test assembly should open the dry break with minimal venting of the USTs. This test can be performed while product is being dispensed into motor vehicles.

Determining Ambient Pressure - The Vapor Pressure Sensor is subjected to ambient pressure by turning the Vapor Pressure Sensor valve, which is located in the dispenser closest to the tanks, to the Atmospheric Valve Position as shown in Figure 8-3. This test can be performed while product is being dispensed into motor vehicles.

3. Biases and Interferences

3.1 This test shall not be conducted within 30 minutes following gasoline transfer from a cargo tank.

- 3.2 This test shall not be conducted if the processor is operating (audible indication that the processor is running).

4. Range and Accuracy

Electronic Pressure Measuring Device such as a digital manometer

Minimum readability shall be 0.01 inches WC with measurement range(s) to include at least up to positive and negative ten (± 10) inches WC with a minimum accuracy of plus or minus 0.05 inches WC of full scale.

5. Equipment

- 5.1 The dust cap test assembly shall be modified in the following manner:

5.1.1. Install a probe in the center of the dust cap as shown in Figure 8-1 (one method is to tap and thread probe). The probe shall be of sufficient length to open approximately $\frac{1}{2}$ inch of the dry break while allowing the cap to maintain a leak tight seal on the adaptor.

5.1.2. Install female quick connect fitting on the top of the dust cap, offset from the center probe as shown in Figure 8-1. A Swagelok, part number SS-QC4-B-4-PM, quick connect fitting or equivalent can be used.

5.1.3. Use "Tygon tubing" or equivalent to connect the manometer to the dust cap (Figure 8-2). Install a male quick connect fitting (Swagelok part number SS-QC4-5-400 or equivalent can be used) on one end of a ferrule stainless steel tube (or equivalent material). Connect one end of the "Tygon tubing" to the stainless steel tube and connect the other end to the digital manometer (Figure 8-2).

- 5.2 Alternatively, the vapor coupler test assembly, Figures 2 and 3 of TP-201.3 may be used in lieu of the dust cap test assembly.

- 5.3 Digital Manometer (Electronic Pressure Measuring Device)

Use a minimum range ± 10.00 inches WC digital manometer to monitor the UST pressure with a minimum readability of 0.01 inches of WC. Dwyer Series 475 Mark III Digital manometer or equivalent can be used. A copy of the manufacturer's operating instructions shall be kept with the equipment.

6 Calibration Requirements

- 6.1 A copy of the most current calibration of the electronic pressure measuring device shall be kept with the equipment.

6.2 All electronic pressure measuring devices shall be bench tested for accuracy using a reference gauge, incline manometer or National Institute of Standards and Technology (NIST) traceable standard at least once every twelve (12) consecutive months. Accuracy checks shall be performed at a minimum of five (5) points (e.g., 10, 25, 50, 75 and 90 percent of full scale) each for both positive and negative pressure readings. Accuracy shall meet the requirements of Section 4.

Determining UST Pressure

7 Pre-Test Procedure

- 7.1 Turn on digital manometer and allow instrument to warm up for five minutes.
- 7.2 Zero out digital manometer using adjustment pod on top of instrument in accordance with manufacturer's instructions. Drift may be minimized by re-zeroing immediately after use by venting both pressure ports to atmosphere and adjusting the knob until the display reads exactly zero.
- 7.3 Attach the male quick connect fitting to the female quick connect fitting on the modified vapor dust cap.
- 7.4 Attach digital manometer to open end of Tygon tubing.

8 Test Procedure

- 8.1 Attach the dust cap or vapor coupler test assembly to the vapor adaptor (Figure 8-2).
- 8.2 On the TLS Console front panel, use the 'mode key' to scroll to "DIAG MODE" then use the function and step keys, as shown in Figure 8-4 to view the current pressure value.
- 8.3 Simultaneously record the ullage pressure from the digital manometer (connected to the vapor coupler test assembly) and the TLS Console. Record the above information on Form 1 "Data Form for Vapor Pressure Sensor UST Pressure Test." Districts may require the use of an alternate form, provided it includes the same minimum parameters as identified in the Data Form.
- 8.4 Verify that the pressure reading from the TLS Console is within ± 0.2 inches WC from the digital manometer reading. If difference is not within ± 0.2 inches WC, the pressure sensor is not in compliance with the pressure sensor requirements of Exhibit 2.
- 8.5 Press the <MODE> key to leave the 'PMC DIAGNOSTIC' menu

Determining Ambient Pressure

9 Test Procedure for Testing Sensor Under Ambient Pressure

- 9.1 Access the Vapor Pressure Sensor, which is located in the dispenser closest to the tanks. Record which dispenser contains the pressure sensor and the pressure sensor serial number on the data form.
- 9.2 Remove the cap from the ambient reference port of the Vapor Pressure Sensor valve and open the valve to atmosphere by turning it 90 degrees so that the flow arrows point to both the Vapor Pressure Sensor sensing port and the ambient reference port (see Figure 8-3).

- 9.3 On the TLS Console front panel, use the 'mode key' to scroll to "DIAG MODE" then use the function and step keys, as shown in Figure 8-4 to view the current pressure value.
- 9.4 Verify that the pressure value is between +0.2 and -0.2 inches WC. If the pressure value is not within this range, the pressure sensor is not in compliance with the pressure sensor requirements of Exhibit 2.
- 9.5 Replace the cap on the ambient reference port of the Vapor Pressure Sensor valve. Restore the Vapor Pressure Sensor valve by turning it 90 degrees so that the flow arrows point to both the Vapor Pressure Sensor sensing port and the UST vapor space sensing line (ref. Figure 8-3).
- 9.6 Press the <MODE> key to leave the 'PMC DIAGNOSTIC' menu.
- 9.7 Record the above information on Form 2 "Data Form for Vapor Pressure Sensor Ambient Reference Test." Districts may require the use of an alternate form, provided it includes the same minimum parameters as identified in the Data Form.

10 Alternate Procedures

This procedure shall be conducted as specified. Any modifications to this test procedure shall not be used unless prior written approval has been obtained from the ARB Executive Officer, pursuant to Section 14 of CP-201.

Figure 8-1 - Typical Modified Vapor Adaptor Dust Cap (Bottom View)

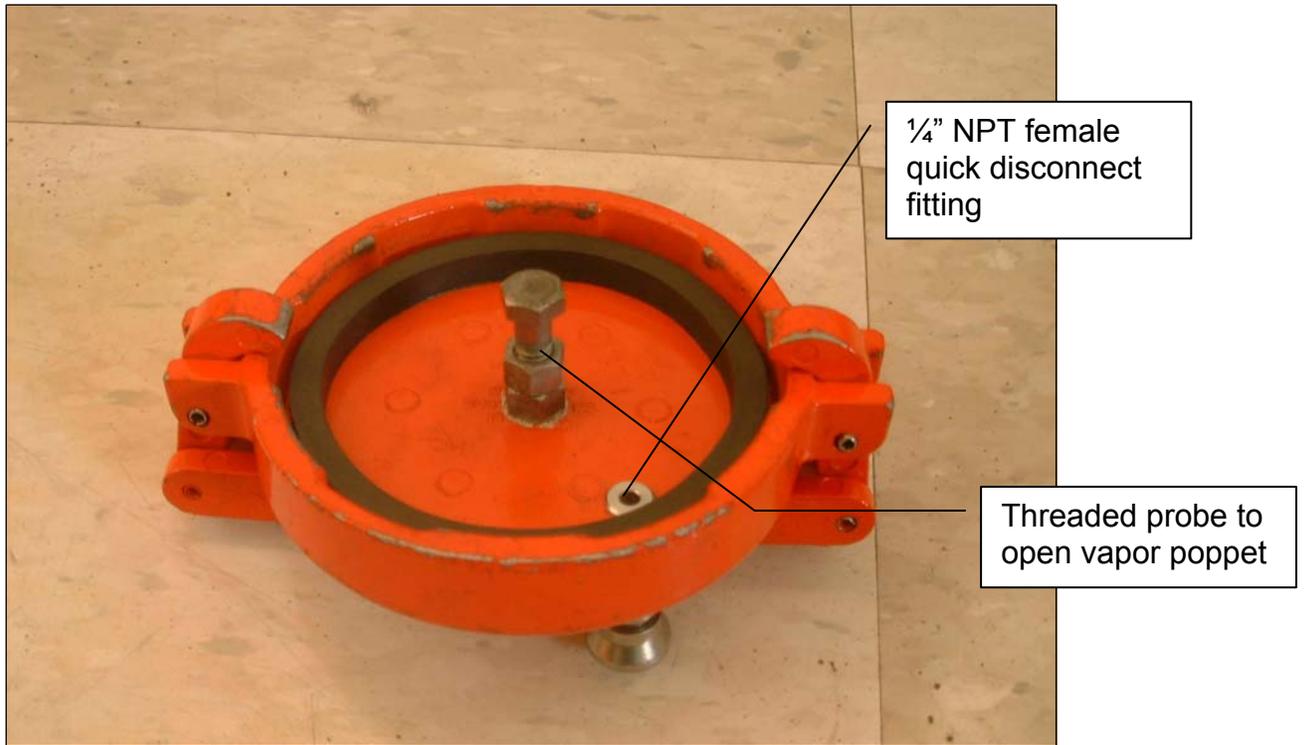


Figure 8-2 - Typical Field Installation of UST Pressure Measurement Assembly



Figure 8-3
Vapor Pressure Sensor Valve Position


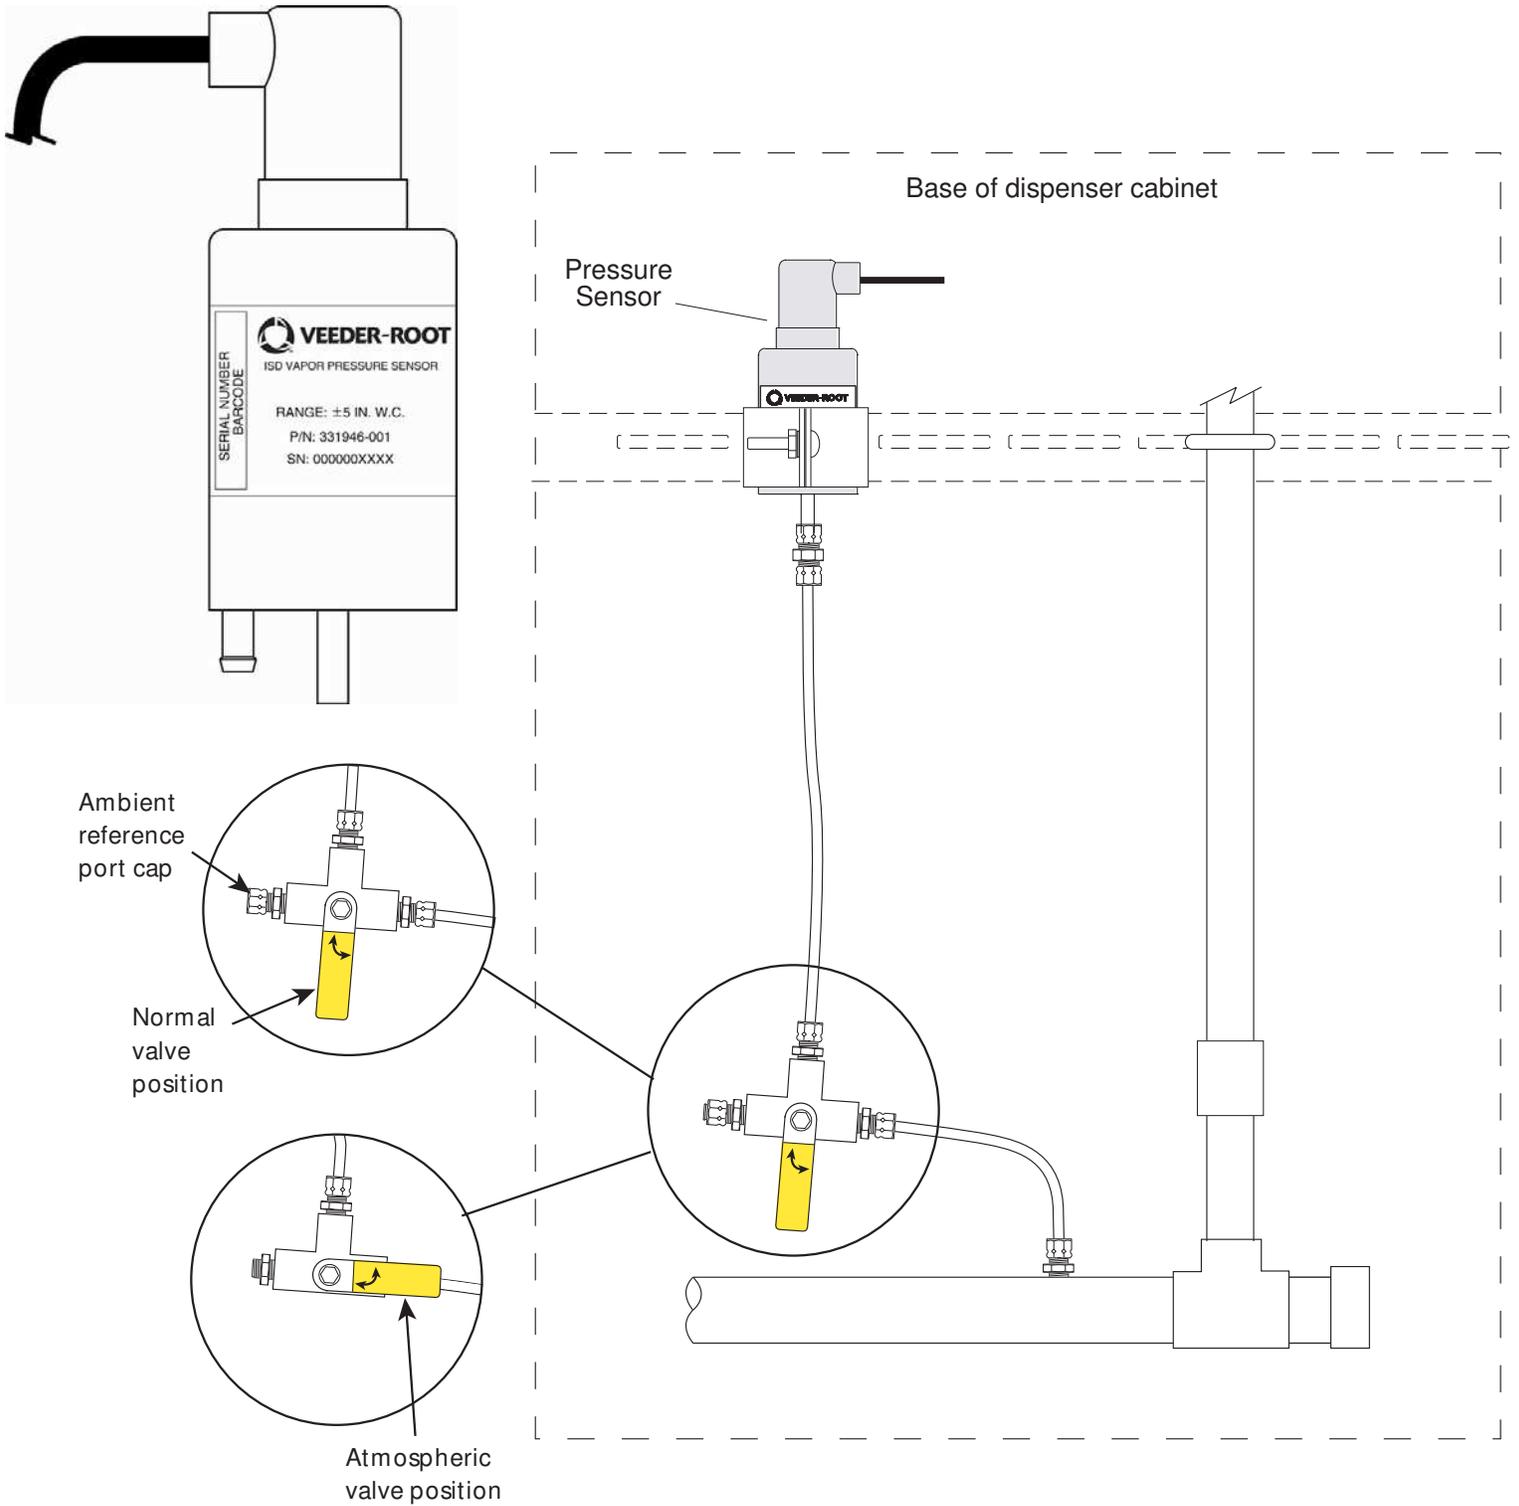


Figure 8-4
Accessing the Vapor Pressure Sensor Reading

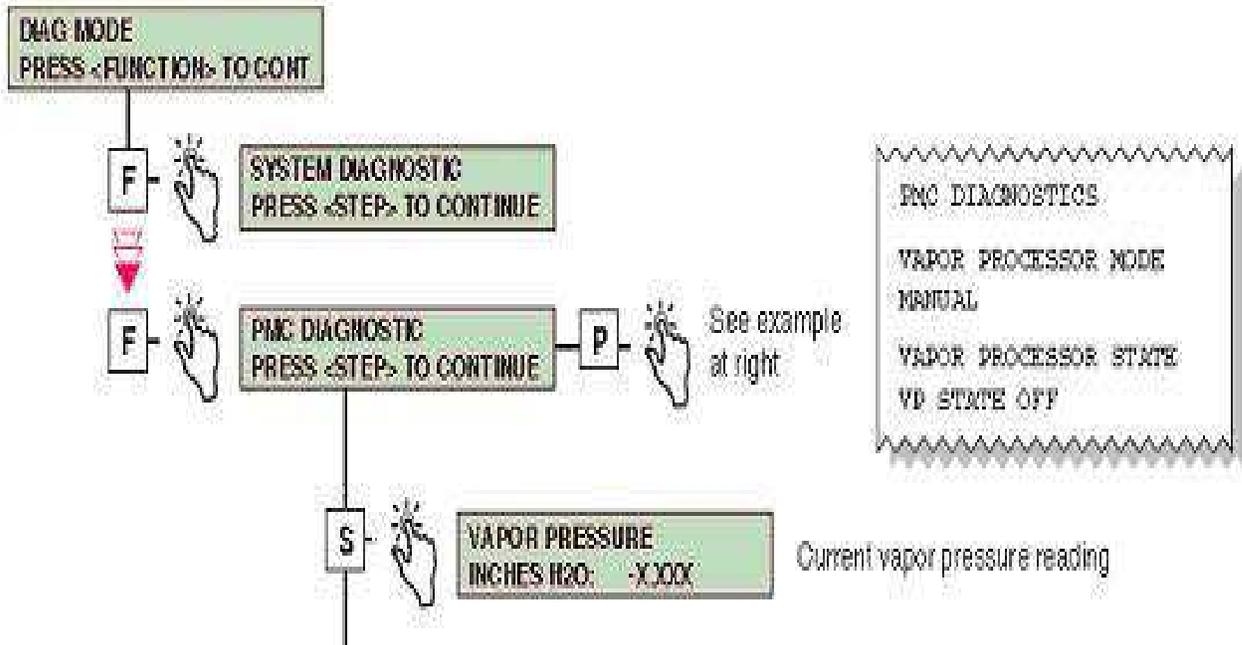

Form 1

Data Form for Vapor Pressure Sensor UST Pressure Test

DATE OF TEST _____

SERVICE COMPANY NAME	SERVICE COMPANY'S TELEPHONE
SERVICE TECHNICIAN	VST or VEEDER-ROOT TECH CERTIFICATION # (as applicable) ICC or DISTRICT TRAINING CERTIFICATION (as applicable)
STATION NAME	DISTRICT PERMIT #
STATION ADDRESS	CITY STATE ZIP

PRESSURE SENSOR LOCATION: DISPENSER FUELING POINT (FP) NUMBERS	FP # _____	PRESSURE SENSOR SERIAL NUMBER: _____
---	-------------------	---

STEP 8.3	DIGITAL MANOMETER VALUE _____ inches WC
-----------------	---

STEP 8.3	TLS 350 SENSOR VALUE _____ inches WC (OBTAIN VALUE USING TLS CONSOLE KEYPAD SEQUENCE SHOWN IN FIG. 8-4, Vapor Pressure)
-----------------	---

STEP 8.4	TLS 350 Sensor Value within ±0.2 inches WC of Digital Manometer Value? Yes <input type="checkbox"/> No <input type="checkbox"/> IF NO: THE PRESSURE SENSOR IS NOT IN COMPLIANCE WITH THE PRESSURE SENSOR REQUIREMENTS OF EXHIBIT 2.
-----------------	---

STEP 8.5	MODE KEY PRESSED TO EXIT PMC DIAGNOSTIC MENU? <input type="checkbox"/>
-----------------	---

Form 2

Data Form for Vapor Pressure Sensor Ambient Reference Test

DATE OF TEST _____

SERVICE COMPANY NAME		SERVICE COMPANY'S TELEPHONE	
SERVICE TECHNICIAN		VST or VEEDER-ROOT TECH CERTIFICATION # (as applicable)	
		ICC or DISTRICT TRAINING CERTIFICATION (as applicable)	
STATION NAME		DISTRICT PERMIT #	
STATION ADDRESS		CITY	STATE ZIP
STEP 9.1	PRESSURE SENSOR LOCATION: DISPENSER FUELING POINT (FP) NUMBERS	FP # _____	PRESSURE SENSOR SERIAL NUMBER: _____
STEP 9.2	REFERENCE PORT CAP REMOVED?		<input type="checkbox"/>
	VALVE SET TO AMBIENT REFERENCE PORT (PER FIG. 8-3)?		<input type="checkbox"/>
STEP 9.3	NON-CALIBRATED SENSOR VALUE _____ Inches WC (OBTAIN VALUE USING TLS CONSOLE KEYPAD SEQUENCE SHOWN IN FIG. 8-4, Vapor Pressure)		
STEP 9.4	PRESSURE BETWEEN +0.20 & -0.20?		Yes <input type="checkbox"/> No <input type="checkbox"/>
	IF NO: THE PRESSURE SENSOR IS NOT IN COMPLIANCE WITH THE PRESSURE SENSOR REQUIREMENTS OF EXHIBIT 2.		
STEP 9.5	REFERENCE PORT CAP REPLACED?		<input type="checkbox"/>
	VALVE SET TO NORMAL VALVE POSITION (PER FIG 8-3)?		<input type="checkbox"/>
STEP 9.6	MODE KEY PRESSED TO EXIT PMC DIAGNOSTIC MENU?		<input type="checkbox"/>