

-90 -80 -70 -60 -50 -40 -30 -20 -10

-10

-20

# Filter Control FS-21

*EasyRange*





Index

1	General Information.....	4
1.1	Equipment .....	4
2	Installation.....	5
2.1	Mechanical Installation.....	5
2.2	Electrical Installation.....	5
2.2.1	Connection Diagram.....	6
3	Operation .....	6
3.1	Overview of the Display and Operating Elements.....	6
3.1.1	The LED – Indicators.....	7
3.2	The LCD – Display.....	7
3.2.1	One Filter Operating Mode.....	7
3.2.2	Two Filter Operating Mode.....	7
3.2.3	Parameter Mode.....	7
3.3	Function of the Keys.....	8
3.3.1	Key Combinations.....	8
3.4	Operating Concept.....	9
3.4.1	Editing Parameters .....	10
4	Starting Up .....	10
4.1	Calling up Operation Values / Parameters.....	10
4.1.1	Parameter Input Lock.....	10
4.2	Device Configuration (Filter Configuration).....	11
4.2.1	One Filter Mode.....	11
4.2.2	Two Filter Mode.....	11
4.2.3	Two Filter Mode with Half – Duplex Transmission or Parallel Operation.....	11
4.3	Regeneration Release.....	11
4.3.1	Regeneration Release according to Time.....	11
4.3.2	Setting the Regeneration Time.....	12
4.3.3	External - / Quality dependent Regeneration Release.....	12
4.3.4	External - / Quality dependent Regeneration Release (delayed).....	12
4.3.5	Regeneration Release according to Quantity.....	12
4.3.6	Regeneration Release according to Quantity (delayed).....	12
4.3.7	Regeneration Release according to Minimum Quantity.....	13
4.3.8	Regeneration Release according to Minimum Quantity (delayed).....	13
4.3.9	Regeneration Release according to Maximum Quantity.....	13
4.3.10	Regeneration Release according to Maximum Quantity (delayed).....	13
4.3.11	Setting the Regeneration Quantities.....	14
4.4	Valve Selection .....	15
4.4.1	User defined Valve.....	15
4.5	Pulse Duration / Running Time.....	15
4.6	Step Timings.....	15
5	System and Display.....	16
5.1	Change Language.....	16
5.2	View Change Time.....	16
5.3	View Reset Time.....	16
5.4	Standard View .....	16
6	Service.....	17
6.1	Service Message .....	17
6.2	Service Reset .....	17



Index

---

7	Operation Value Settings .....	17
7.1	Regeneration Counter .....	17
8	Inputs .....	18
9	Outputs .....	19
10	Setting the Time .....	20
11	Manual Operating Options .....	20
11.1	Changing the Filter in Automatic Mode.....	20
11.2	Manual Operation.....	20
11.3	Regeneration Release in Hand Operation .....	20
11.4	Skip to Next Regeneration Step in Hand Operation .....	20
12	Fault Messages .....	20
13	Application and Configuration Examples .....	21
13.1	Connection of Two FS-21 in Interconnected Operation .....	21
13.2	Connection of Several FS-21 in Interconnected Operation.....	21
14	Technical Data .....	22
14.1	Ordering Information .....	22
15	Connection Examples.....	23
16	Default Settings.....	25
17	Form for Configuration and Parameter Settings .....	27





## 1 General Information

---

The filter control FS-21 meets the basic objectives for control of a one or two filter system with pilot distributors or central control valves. The valve types are selected via configuration and FS-21 automatically adjusts its operation sequence to the selected valve type. Both decarbonisation filters and gravel filters can be controlled.

We recommend the use of our filter control FS-201 for more complex applications. This is equipped with an enhanced range of functions.

1

### 1.1 Equipment

---


- 4-line text display indicating the operating states;
- Permanent storage of the configuration and operating data in an internal flash memory;
- The time is buffered for at least 72 hours in the event of a power failure;
- Operation of several FS-21 in combination with the possibility of mutual interlocking;
- 6 relay outputs, 2 of which are assignable with any regeneration step or incident;
- 4 digital Inputs;
- Regeneration counter for monitoring accomplished regenerations;
- Language selection for the text messages (English or German, others on request);



## 2 Installation

### 2.1 Mechanical Installation

Mounting dimensions

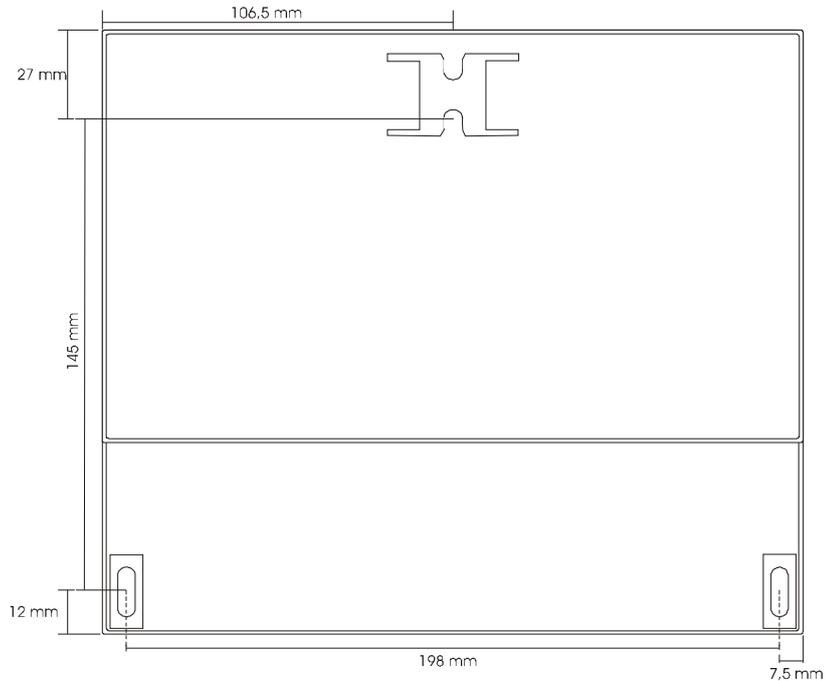

2

### 2.2 Electrical Installation




**Only trained personnel are authorised to assemble and start up the equipment.**


**When selecting the cables and electrical connections for the equipment, observe the directives stipulated in VDE 0100 'Directive defining low-voltage equipment with a nominal voltage under 1000 V', VDE 0160 'Equipping low-voltage equipment with electronic operating resources' and the equivalent, respective country regulations.**

**The electrical connection may only be completed by properly trained personnel (VDE 1000 T. 10).**

**The device must be disconnected from the mains power supply in the event of service and installation work.**

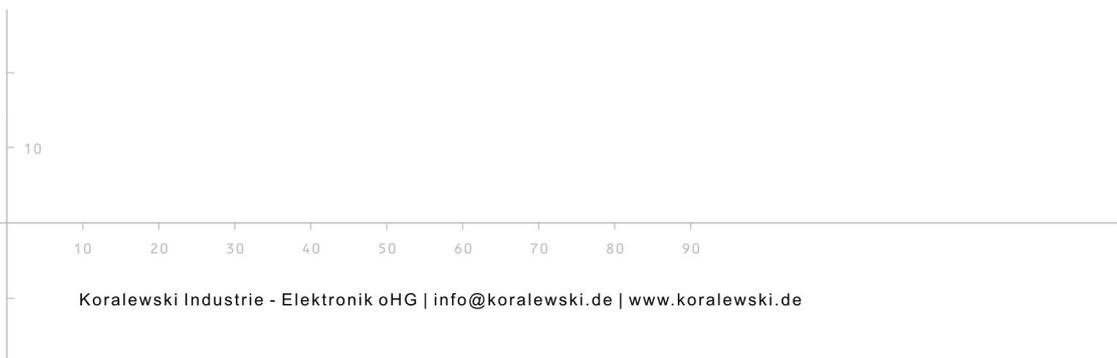


### 2.2.1 Connection Diagram

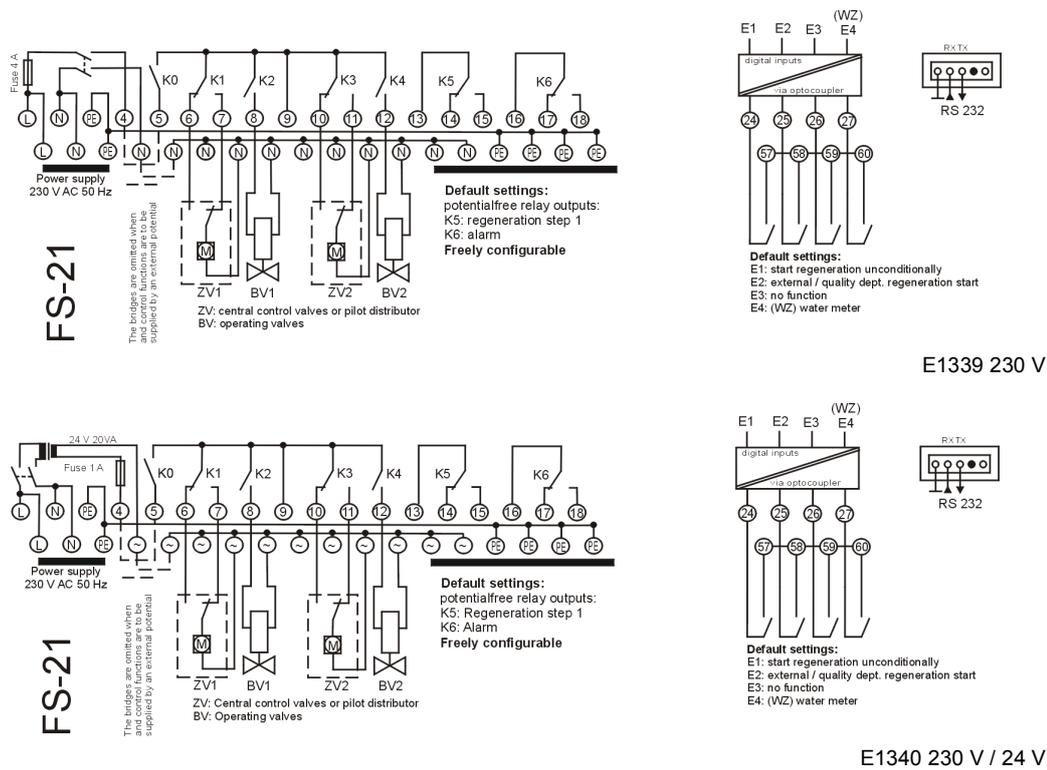

**Note:** A valid connection diagram is located within the lid of the respective associated device.

## 3 Operation

### 3.1 Overview of the Display and Operating Elements

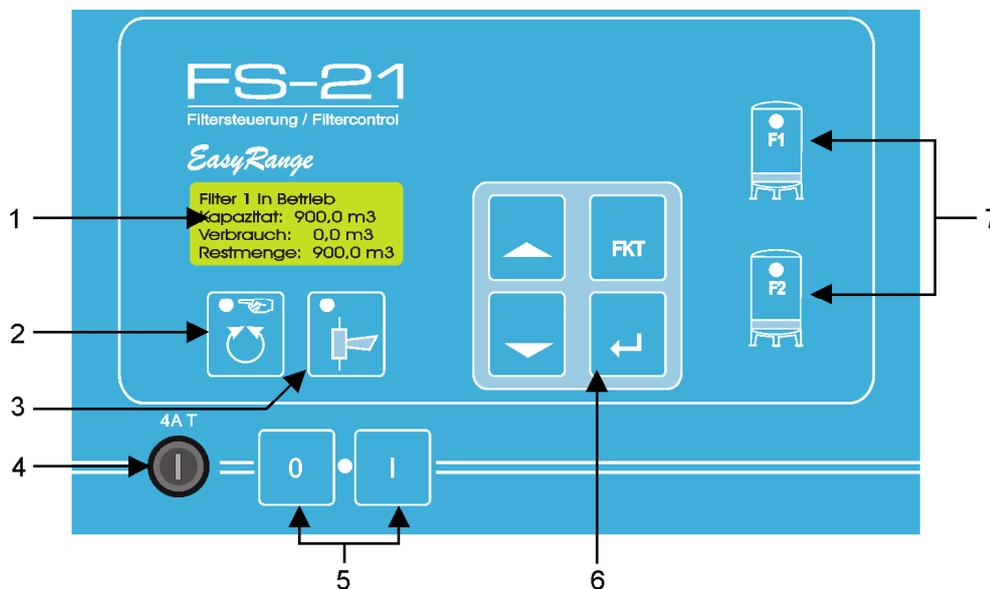

- |                         |                            |
|-------------------------|----------------------------|
| 1 LCD Display           | 5 On / Off switch          |
| 2 Hand / Auto - key     | 6 Operating panel          |
| 3 Acknowledgement - key | 7 Filter status Indicators |
| 4 Device fuse           |                            |




### 3.1.1 The LED – Indicators



LED (green)

Lights up when the device is switched on and power is supplied.

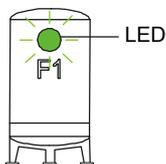

LED (green / yellow)

Lights up continuously green when the filter is in operation.  
Flashes green at 2s cycles when the filter is ready in standby  
Flashes green in a 1 second cycle during regeneration, when step setting mode is accomplished.

Is off when the filter is switched off.

Lights up continuously yellow when filter is in regeneration.



LED (yellow)

Lights up continuously when the filter is in HAND mode.  
Is off when the filter control is in AUTO mode.



LED (red)

Flashes at 1 s intervals when a fault has occurred.  
Lights up continuously when a fault is acknowledged but the cause not yet located.

### 3.2 The LCD – Display

The LC display serves to display operating states (operating mode) and the parameters (configuration mode).

#### 3.2.1 One Filter Operating Mode

```

Filter 1 operating
Capacity:      10.0 m³
Consumption:  8.0 m³
remaining:    2.0 m³
    
```

#### 3.2.2 Two Filter Operating Mode

More display variations can be set up in two-filter mode and are explained in more detail in Chapter 4.

```

Filter 1 Cap: 10.0 m³
Consump. :    8.3 m³
Filter 2 Cap: 10.0 m³
Consump. :    5.4 m³
    
```


*E.g.:* Display of the operating status in two-filter mode. Lines 1 and 2 display the states for Filter 1, Lines 3 and 4 display the states for Filter 2.

#### 3.2.3 Parameter Mode

```

Type of Device:
one Filter
    
```

In Parameter mode, Line 1 displays the parameter menu option and Line 2 – 4 the parameters and values which can be changed.

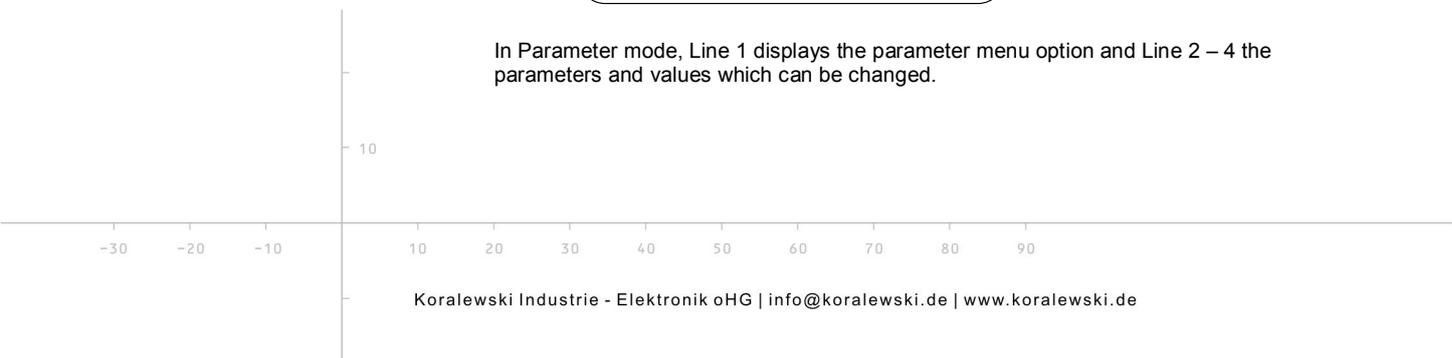

### 3.3 Function of the Keys

	ON – key	This key is used to switch the control unit on.
	OFF – key	This key is used to switch the control unit off.
	Hand – key	This key is used to switch Hand mode on and off.
	Acknowledgement – key	This key is used to acknowledge faults and release the buzzer relay contact again.
	Up (Arrow) – key	When used in the display, this key is used to scroll upwards in the values displayed. In Parameter mode, this key is used to increase the input value.
	Down (Arrow) – key	When used in the display, this key is used to scroll downwards in the values displayed. In Parameter mode, this key is used to decrease the input value.
	Function – key	In Parameter mode, this key is used to move one level back or to cancel an entry.
	Enter – key	This key is used to call up the currently selected menu item ( e.g. 'Operation Values' – ref. to chap. 3.4 Operating Concept ) or to confirm input.




*Note:* The Enter – key has to be pressed down for at least 2 seconds to call up the menu item 'Parameters'.

#### 3.3.1 Key Combinations



Change languages

Change the language by pressing the Function – key and Up – key simultaneously.

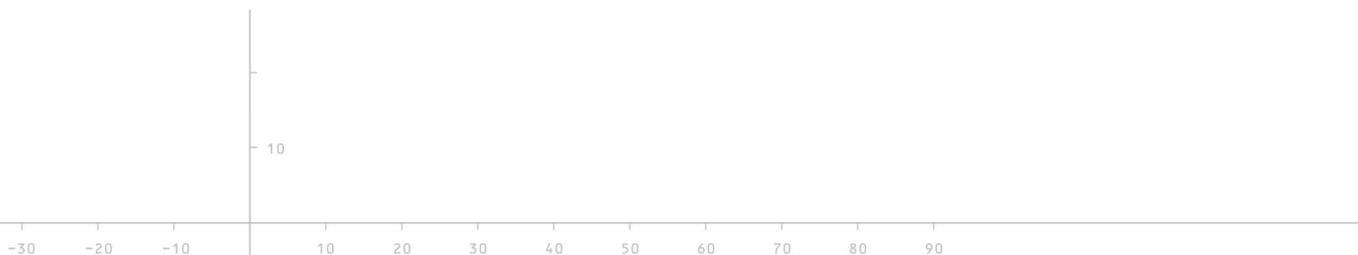




### 3.4 Operating Concept

Parameter configuration is distributed amongst several parameter menus. The respective parameter options are contained in these menus. The parameter options can be accessed as follows by press the Enter – key in one of the menus; press the FKT (Function) key to exit from the menu.



**Note: Not all the parameters can be set by means of manual input on the control unit.**

The menus are selected according to the operating concept illustrated below:

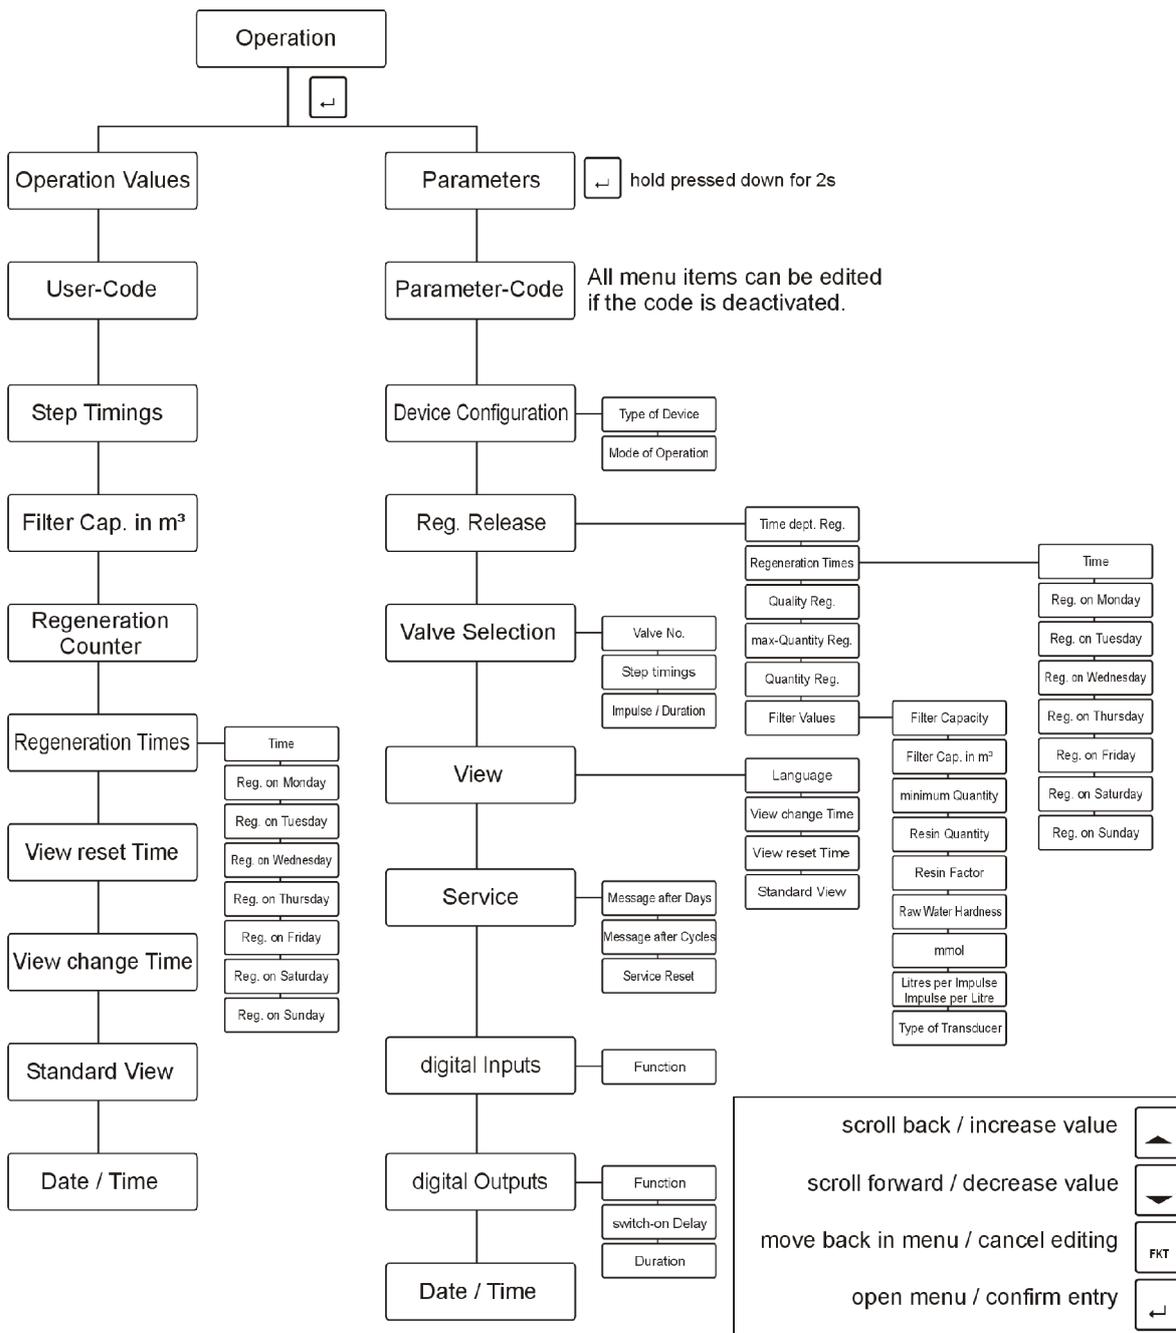

10

### 3.4.1 Editing Parameters

After having selected a parameter option whose value you want to change, it can be edited as follows:

- press the Enter – key → The last digit in the number flashes;
- press the Up – or Down – key to change the value;
- press the Enter – key to skip to the next digit.

When all the digits have been changed and the last editable digit confirmed with 'Enter', the values are saved. If you exit from editing by pressing the FKT key prior to completing editing of the last digit, the old value remains unchanged.

Use the FKT key at this point to exit from this parameter option and skip to the next one.



**Note:** If no parameter editing was started, press the FKT key to exit from this option and skip directly to the next parameter option without changing the parameter. Not all the parameters can be set by means of manual input on the control unit.

3

4

## 4 Starting Up

After switching the control unit on, certain setting adjustments must be carried out in order to adapt the filter control to your specific filter system.

Basic settings can be entered directly on the control unit. Input can be made quickly and easily using the parameterisation – software, which is supplied. The software is also available as download on our homepage <http://www.koralewski.de>.

### 4.1 Calling up Operation Values / Parameters

By actuating the Enter – key within the operation mode, the display of the device changes over to the selection 'Operation Values' respectively 'Parameters'. The respective menu item is selected using the Up- or Down-key ( see *chap. 3.4 Operating Concept* ), and called up actuating the Enter – key. If the parameter input lock is not activated ( default setting - see below ), the values to be altered may now be edited, otherwise a prompt appears, requesting the 4-digit PIN code.


#### 4.1.1 Parameter Input Lock

Using the parameterisation software 'Geräteverwaltung 2' ( device management GV\_2 ), which is included in the delivery and also available for download on our homepage, a separate parameter input lock can be set for both, the editing of Operation Values and Parameters. This ensures, that only authorised personnel will be able to alter these values. If the Parameter input Lock is activated, a prompt requesting the 4-digit PIN code appears while calling up the respective menu item ( Operation Values or Parameters ). After the respectively assigned PIN is correctly entered, the Operation Values, respectively the Parameters can be edited.



**Note:** If no password or an incorrect PIN is entered, the operating values and parameters will only be displayed, and can not be altered.

The parameter setting options are described below.





## 4.2 Device Configuration (Filter Configuration)

Within the Device Configuration, the number of filters used, as well as the operation mode of the FS-21 are set:

### 4.2.1 One Filter Mode

Type of Device  
**one Filter**

After selecting 'one Filter' mode, the FS-21 is operated with just one filter.

*selection:* **one Filter** or **two Filters**

### 4.2.2 Two Filter Mode

Type of Device  
**two Filters**

After selecting 'two Filter' mode, two filters are operated by the FS-21. A further option is available to define whether the two filters should be run in parallel operation or half – duplex transmission.

*selection:* **one Filter** or **two Filters**

### 4.2.3 Two Filter Mode with Half – Duplex Transmission or Parallel Operation

Mode of Operation  
**Half-duplex Transm**

In half-duplex transmission mode, only one filter is in 'OPERATION' at a time, the other filter is in standby. Following a regeneration request, the filter in operation is regenerated and the filter in standby is put into operation.

Mode of Operation  
**Parallel Operation**

When parallel operation is activated, both filters are in 'OPERATION' as long as no regeneration is taking place. Following a regeneration request one of the filters is regenerated, when the next request is received, the other filter is regenerated.

*selection:* **Half-duplex Transmission** or **Parallel Operation**

## 4.3 Regeneration Release

Use the menu 'Reg. Release' to set the type of release for regeneration as well as the required values for selection.

There are different possibilities to start regeneration. Types of release may be also combined.

### 4.3.1 Regeneration Release according to Time

Time dept. Reg.  
**Yes**

If the Filter shall be regenerated at a certain time, independent of the amount of water used or an external signal, set regeneration with respect to time only.

*selection:* **yes** or **no**





### 4.3.2 Setting the Regeneration Time

Regeneration Times  
Time  
12:00

Time and day(s) are entered here, at which regeneration is to be accomplished.

*Note:* Scroll through the different setting points of the sub-menu Regeneration Times with UP/DOWN. ( see also chap. 4.3.11.1 Filter capacity ).

Regeneration Times  
Reg. on Monday  
Yes

*setting option:* Time / selection weekdays: **yes** or **no**

Regeneration times  
Reg. on Tuesday  
No

Regeneration times  
Reg. on Wednesday  
Yes

### 4.3.3 External - / Quality dependent Regeneration Release

Quality Reg.  
Yes

If this type of release is selected, regeneration will be released by an external signal, which is connected e.g. to E2 (KI25). This external signal may come from a water analysis device ( residual hardness analyser ) or from a control room.

*selection:* **yes** or **no**

### 4.3.4 External - / Quality dependent Regeneration Release (delayed)

Time dept. Reg.  
Yes

If the filter shall be regenerated via an external signal, however at a certain time only, regeneration release will be set to time and externally.

*selection:* **yes** or **no**

Quality Reg.  
Yes

### 4.3.5 Regeneration Release according to Quantity

Quantity Reg.  
Yes

If the filter should only be regenerated according to the predetermined and appropriately configured filter capacity ( *ref. to chap. 4.3.11 Setting the Regeneration Quantities* ), the regeneration release is set to Quantity in the FS-21 configuration.

*selection:* **yes** or **no**

**Note:** If a new regeneration amount was entered, the new regeneration amount will be effective after the regeneration of both filter with the old amount.

### 4.3.6 Regeneration Release according to Quantity (delayed)

Time dept. Reg.  
Yes

If the filter should be regenerated according to a specific quantity of water ( *ref. to chap. 4.3.11 Setting the Regeneration Quantities* ), but also at a specific time, the regeneration release is set to Quantity and Time in the FS-21 configuration.

*selection:* **yes** or **no**

Quantity Reg.  
Yes

10



### 4.3.7 Regeneration Release according to Minimum Quantity

Quality Reg.  
Yes

Filter Values  
minimum Quantity  
10 m<sup>3</sup>

If the filter should be regenerated according to an external signal but also following a specific minimum quantity, the regeneration release is set to Quality in the FS-21 configuration and a value greater than 0 m<sup>3</sup> must be set for the minimum quantity.

selection 'Reg. Extern' **yes** or **no**  
setting range 'minimum Quantity' 0 ... x m<sup>3</sup>

*Note:* The minimum Quantity is an amount, which is related to the filter capacity ( *ref. to chap. 4.3.11* ). Within these limits, it can freely be adjusted by the device operator. It serves to avoid a premature regeneration release – e.g. quality dependent release ( *ref. to chap. 4.3.3 - External - / Quality dependent Regeneration Release* ), if the filter doesn't provide good water, immediately after the standby time. The pre-setting for the minimum quantity is done in the submenu 'Filter values' ( *see chap. 4.3.11* ).

### 4.3.8 Regeneration Release according to Minimum Quantity (delayed)

Time dept. Reg.  
Yes

Quality Reg.  
Yes

Filter Values  
minimum Quantity  
10 m<sup>3</sup>

If the filter should be regenerated according to an external signal but also following a specific minimum quantity and at a certain time, the regeneration release is set to Time, Quantity and Quality in the FS-21 configuration.

selection 'Time dept. Reg' / 'Quality ( external ) Reg.': **yes** or **no**  
setting range 'minimum Quantity': 0 ... x m<sup>3</sup> \*

\* *Note:* The maximum of adjustable minimum quantity 'x' depends on the configured filter capacity ( *see above and chap. 4.3.11.1* ).

### 4.3.9 Regeneration Release according to Maximum Quantity

Quality Reg.  
Yes

max-Quantity Reg.  
Yes

If regeneration of the filter is selected according to an external signal, it is possible to define its release through a maximum quantity. The filter is then regenerated on reaching a maximum quantity even if the external signal has not been received.

Release via the maximum quantity prevents a filter being 'run too long' if, for example, the external signal from a water analysis unit fails.

selection: **yes** or **no**

*Note:* The maximum quantity corresponds to the parameterised filter capacity water ( *ref. to chap. 4.3.11 Setting the Regeneration Quantities* ). If filter regeneration according to maximum quantity is selected,

- regeneration according to quantity ( *ref. to chap. 4.3.5 / 4.3.6* ) is deactivated.
- the value for the maximum quantity is to be entered in the 'filter capacity' field.

### 4.3.10 Regeneration Release according to Maximum Quantity (delayed)

Quality Reg.  
Yes

max-Quantity Reg.  
Yes

Time dept. Reg.  
Yes

If the filter should be regenerated according to an external signal but also following a specific maximum quantity and at a certain time, the regeneration release is set to Time, Maximum Quantity and Quality in the FS-21 configuration.

selection: **yes** or **no**

10



### 4.3.11 Setting the Regeneration Quantities

If **Filter capacity** is selected in the case of a quantity - related release, the regeneration quantity must be entered directly. If raw water hardness is selected as the quantity release factor, in °dH or mmol/l, the specific filter values must be entered and the FS-21 automatically determines the regeneration quantity from them.

*Note:* In the case of releases based purely on time, the set quantity values are not relevant.

#### 4.3.11.1 Filter capacity

Filter Values  
 Filter Capacity  
**Yes**

Filter Values  
 Filter Cap. in m³  
**010.0** m³

Filter Values  
 minimum Quantity  
**10** m³

The regeneration quantity, according to which a quantity - dependent regeneration should occur, must be entered directly.

If **Filter Capacity** is selected as a value, the quantity (filter capacity) to trigger a regeneration must be entered by the operator. The resin quantity, resin factor and raw water hardness are not taken into account in this case.

*setting range filter capacity (minimum quantity in dependence on this): 0 .... 3200 m³*

*Note:* Scroll through the different setting points of the sub-menu 'Filter Capacity' with UP/DOWN. ( see also: chap. 4.3.2 Setting the Regeneration Time ).

#### 4.3.11.2 Raw Water Hardness in °dH

Filter Values  
 Resin Quantity  
**10** l

Filter Values  
 Resin Factor  
**1.0**

Filter Values  
 Raw Water Hardness  
**1.00** °dH

Filter Values  
 mmol  
**0.178**

The specific filter values are entered (resin quantity, resin factor and raw water hardness in °dH) and the filter control unit automatically calculates the regeneration quantity after which the quantity-dependent regeneration should occur.

*Formula for the automatic calculation of the Filter capacity:*  
 Filter capacity [m³] = (Resin factor [°dH\*m³/L] \* Resin quantity [L]) [°dH]

*setting range Resin Quantity: 0 .... 3200 l, Resin Factor: 0,0 .... 999,9 °dH\*m³/L*

*Note:* The resin factor corresponds to the usable volume capacity NVK.

If **Raw water Hardness in °dH** is selected as a filter value, the values for resin quantity, resin factor and raw water hardness in °dH must also be entered. The quantity (filter capacity) for a regeneration release is then automatically calculated by the FS-21.

*setting range Raw Water Hardness: 0,00 .... 99,99 °dH, mmol: 0,000 .... 17,990*


#### 4.3.11.3 Type of Transducer and Impulse

Filter Values  
 Type of Transducer  
**Litre per Impulse**

Filter Values  
 Litre per Impulse  
**100**

There are two kinds of transducer available for selection, namely 'Litre per Impulse' and 'Impulse per Litre'. The number of impulses per litre or litres per impulse can be entered in the menu.

*setting range: 0 .... 9999 Litre per Impulse, resp. 0 .... 9999 Impulse per Litre*

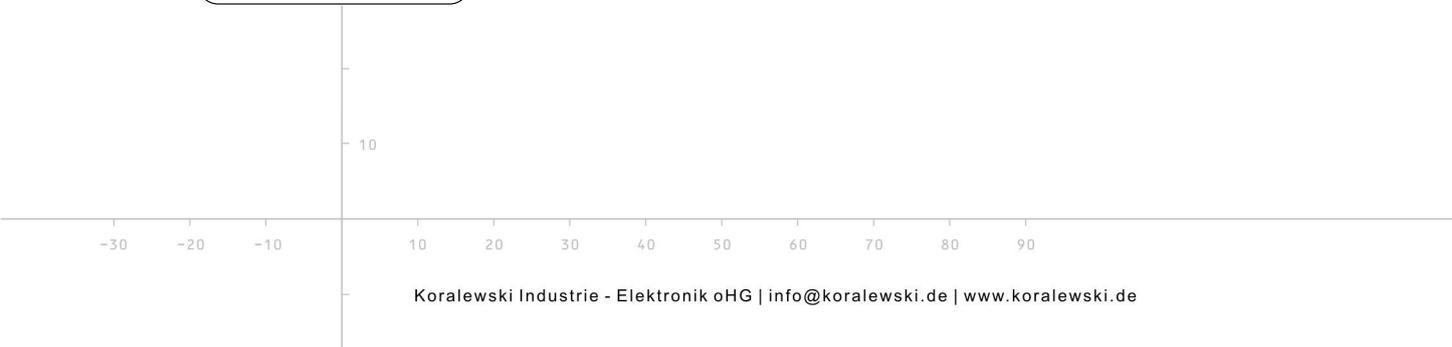



#### 4.4 Valve Selection

Valve No.  
PVP-4  
1

These parameter options are used to set the pilot distributor or central control valve used. The following valve types are available for selection:

No.	Manufacturer	Valve type	Name
1	Heyl	pneumatic pilot distributor	PVP-4
2	Heyl	electric pilot distributor	PVE
3	WWS	central control valve	410 / 420 / 541 / 435
4	WWS	central control valve	435
5	WWS	central control valve	415 / 426
6	WWS	central control valve	440 / 441
7	Techap	multiway reversing valve	MUVK 20-40
8	user defined	user defined	
9	user defined	user defined	

##### 4.4.1 User defined Valve

If the applicable valve type is not provided in the selection table, an user defined valve can be configured using the parameterisation – software and choosing number 8 or 9. Detailed settings, as the entries for manufacturer, type of valve, and designation, as well as the definition of the number of steps are available only by using the parameterisation – software. An in this manner configured valve is, as well as the predefined valves, selectable and, with the below described valve settings, configurable on device.

#### 4.5 Pulse Duration / Running Time

Impulse Duration  
5 s

If IMPULSE is selected as the release type, the duration of the impulse must be defined here in seconds. In the case of HALF-DUPLEX, the minimum running time must comply with the longest half - duplex time of the pilot distributor.

setting range: 0 .... 9999 s


#### 4.6 Step Timings

Step Timings  
Step Delay 01  
1800 s

After selecting a valve type or creating a user - defined valve, the step timings ( program step timings ) for the individual regeneration steps can be set. The number of steps is dependent on the valve selected.

setting range: 0 .... 9999 s

Note: Using the parameterisation – software an individual description can be entered for each step of the respective valve.

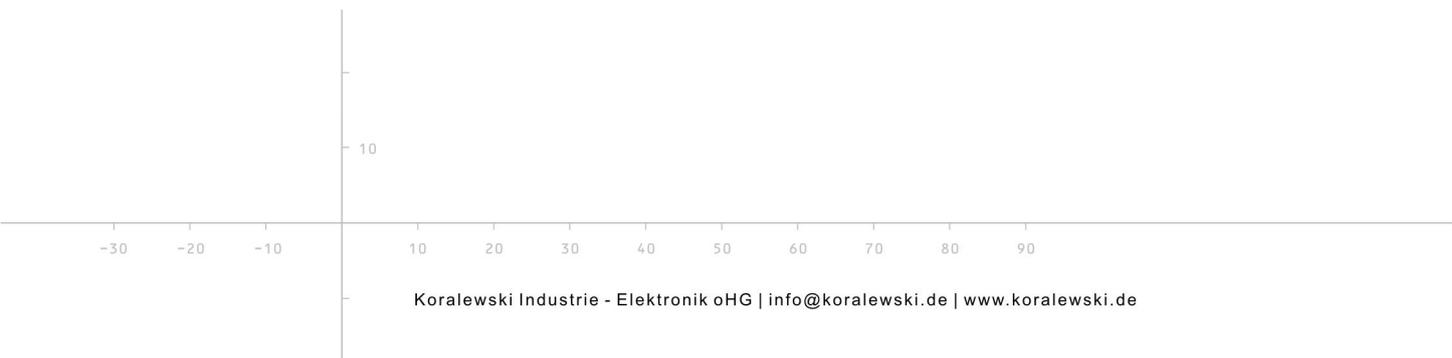




## 5 System and Display

This menu is used to set the display the format and the display parameters for the LCD-display as well as system settings.

### 5.1 Change Language



You can change between both languages available for the device.

*selection: 1 or 2*

### 5.2 View Change Time

If several display values are possible, e.g. remaining quantity and time-controlled release, this option can be used to define the time interval at which the display view is changed.

*setting range: 0 .... 100 s*

If the time is set to 0 seconds, the view will not automatically be changed and the standard view is displayed continuously.

### 5.3 View Reset Time

The Arrow keys are used to scroll through the individual parameter values in the display view. If a time greater than 0 s is defined for this setting, the system automatically reverts to the standard view after the time defined has elapsed.


*setting range: 0 .... 200 s*

If the time defined is 0 s, the display view selected using the Arrow keys remains until a new value is selected with the Arrow keys or the FS-21 is restarted.

### 5.4 Standard View


During operation it is possible to scroll through the operating values and regeneration values by using the 'Up' - key. One of 4 available value - overviews can be selected as 'Standard View'. The display switches back to this 'Standard View' automatically after the view reset time elapsed (if a value other than 0 s is set), after a regeneration is completed or by pushing the 'FKT' - key.

The following selection is available:




Active filter (0):

Displays the total capacity, consumption and the remaining quantity to the regeneration of the currently active filter.




Both filters (1):

Displays the remaining capacity to regenerate and the current consumption of both filters.



Date / Time (2):

Displays the set date, the day of the week and time.



Regeneration Overview (3):

Displays how many regenerations the respective filter has made.



## 6 Service

The **Service** menu contains settings and display views which are mainly relevant for the system manufacturer.

*Note:* Activating / deactivating of maintenance messages as well as editing of the message text can only be done by parameterisation – software. The settings of the running times for the service messages also is possible directly on the device.

### 6.1 Service Message

Message after Days  
90

If a value greater than 0 is set here, a service message appears after the set number of days.

*setting range: 0 .... 9999*

If the value 0 is set here, the Message After Days function is not active.

Message after Cycles  
15

If a value greater than 0 is set here, a service message appears after the set number of regeneration cycles.

*setting range: 0 .... 9999*

If the value 0 is set here, the Message After Cycles function is not active.

### 6.2 Service Reset

Service Reset  
Reset

The counter for service messages after days and cycles are reset.

6

7

## 7 Operation Value Settings

The Operating Value menu is provided so that the system operator can change operating values quickly and easily. The most important setting values can be changed here without having to scroll through all the menus.


The following operating values can be edited, depending on the filter configuration:

- Step timings
- Filter capacity / Raw water hardness
- Regeneration release times
- Settings for the display view
- Date / Time

### 7.1 Regeneration Counter

Regeneration Counter  
3

The counter displays the number of regenerations which have been completed since the last RESET.

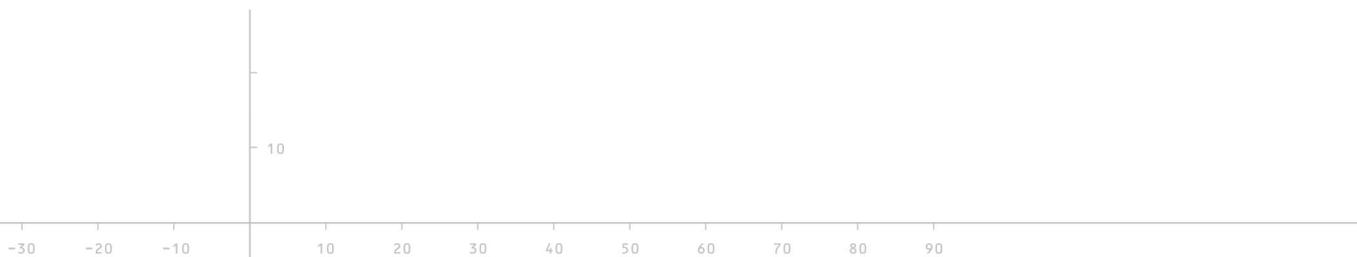



## 8 Inputs

Using the parameterisation - software it is possible to select whether the input signal should be triggered according to the closed-circuit or open-circuit principle.


### Closed-circuit principle:

If the contact connected to this input is closed, the signal is not evaluated. An evaluation occurs when the contact opens.

### Open-circuit principle:

If the contact connected to this input is open, the signal is not evaluated. An evaluation occurs when the contact closes.

Various functions can be assigned to the inputs.

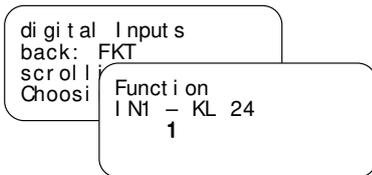

The following functions are available for selection:


No.	Function	Description
0	No function	No function is assigned to the input.
1	Start regeneration (unconditional)	If this signal is received on the relevant input, a regeneration is triggered immediately regardless of whether other release conditions are fulfilled. This function corresponds to a regeneration release initiated manually.
2	Start regeneration (external signal)	This function causes a regeneration to be started by means of an external signal (e.g. quality measuring device). Other regeneration conditions (e.g. quantity or time) are not taken into account.
9	Enable regeneration release	If an input has been assigned this function and the FS-21 is running in two filter operation with half-duplex mode, regeneration of the filter to be regenerated is only started when the regeneration release is issued via this input.
255	Water meter contact (E4)	If a water meter contact is required for the quantity - related release, this function must be assigned to input <b>E4</b> .

*Note:* Inputs which are not used should be set to 'No function'.





## 9 Outputs

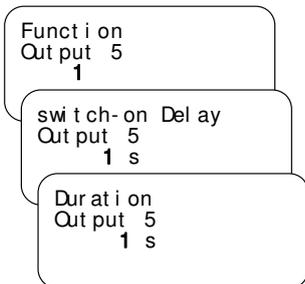

With regard to the outputs, using the parameterisation – software it is possible to select whether the relay should open or close when a signal / event is received (closed-circuit/open-circuit principles).

In addition, the outputs 5 and 6 can be assigned specific functions, and the delay and running time set. The setting range for the delay and running times is **0** to **9999** seconds.


The following functions are available for the relay outputs:

No.	Function	Description
0	No Function	No function is assigned to this relay.
1	Regeneration step 1	The relay is activated when the filter is in Step 1.
2	Regeneration step 2 <sup>1)</sup>	The relay is activated when the filter is in Step 2.
3	Regeneration step 3 <sup>1)</sup>	The relay is activated when the filter is in Step 3.
4	Regeneration step 4 <sup>1)</sup>	The relay is activated when the filter is in Step 4.
5	Regeneration step 5 <sup>1)</sup>	The relay is activated when the filter is in Step 5.
6	Regeneration step 6 <sup>1)</sup>	The relay is activated when the filter is in Step 6.
7	Regeneration step 7 <sup>1)</sup>	The relay is activated when the filter is in Step 7.
8	Regeneration step 8 <sup>1)</sup>	The relay is activated when the filter is in Step 8.
9	Regeneration step 9 <sup>1)</sup>	The relay is activated when the filter is in Step 9.
10	Regeneration step 10 <sup>1)</sup>	The relay is activated when the filter is in Step 10.
11	Operate FS-21	The relay is activated when the FS-21 is in operation.
23	Regeneration lock (input En) <sup>2)</sup>	The relay is activated when a regeneration is currently in progress. This serves to lock other FS-21 control units.
26	Alarm	If a relay is configured for alarms, it is activated when a fault message ( see chapter 12 ) occurs. The relay is switched after the delay time has expired and remains active until the ENTER key is pressed. If a further fault message is received while a fault message already acknowledged is still active, the relay is switched gain ( new value message ).
27	Recycle	The general recycle function activates the relay assigned to it when a filter is in operation but no water consumption occurs. In this case, the 'Switch - on delay' and 'Switch - on time' times run cyclically in an alternating sequence. The switch - on delay is repeatedly restarted through the water meter impulse.

<sup>1)</sup> The number of steps is depending on the type of selected valve.

*Note:* The runtime set for the relay for **Functions 1 to 9** is always fully completed in Automatic operation so that it is possible that the corresponding relay remains switched even when the step has ended (runtime greater than the step timing).

<sup>2)</sup> In name 'input En' the 'n' represents the number of the selected input.

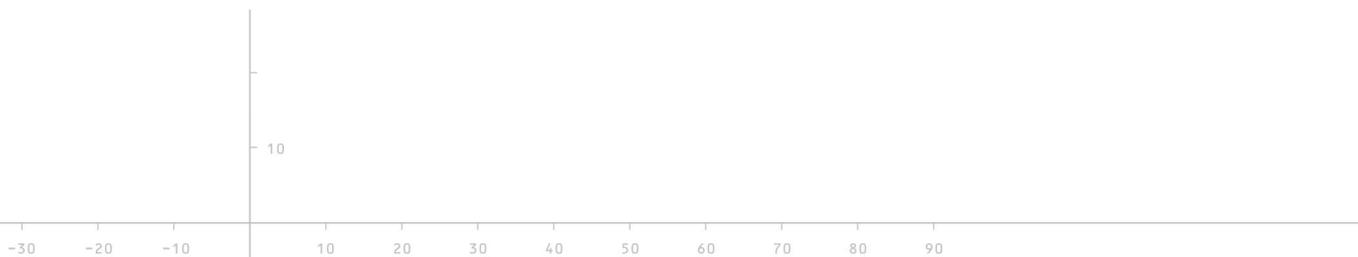



## 10 Setting the Time

Date / Time  
 Time 9:05 oD 12 s  
 Date 20.10.2014  
 Tuesday

The time and date are set here.

## 11 Manual Operating Options

### 11.1 Changing the Filter in Automatic Mode



If the FS-21 is in Automatic operating mode (yellow LED in the Hand key is OFF) and it is running with two filters in half-duplex mode, a filter can be changed after pressing the two Arrow keys simultaneously for 2 seconds. The filter which is ready in standby is put into operation and the filter previously in operation reverts to standby. The counters of the respective filter are retained.

### 11.2 Manual Operation



Activate Hand operating mode by pressing the Hand key. The yellow LED in the key lights up. If Hand operation is activated while a filter is actually regenerating, the regeneration step currently being performed is not automatically switched to the next step when completed. The ongoing regeneration time is incremented.



*Note:* If the FS-21 is in Hand operating mode, regeneration is no longer started automatically.

### 11.3 Regeneration Release in Hand Operation



If the FS-21 is in Hand operating mode (yellow LED in the Hand key is ON), regeneration of the filter currently in operation can be started by pressing the 'Down' key for approx 2 seconds.

### 11.4 Skip to Next Regeneration Step in Hand Operation

When the filter is regenerating, pressing the 'Down' key for approx 2 seconds causes the system to skip to the next step.

*Note:* Where appropriate please pay attention on the valves operating time.

## 12 Fault Messages

\*\*\*\* Fault! \*\*\*\*  
 Service Interval  
 Maintenance  
 Ring up Service

The following fault message could appear:

This message appears when the regeneration counter has reached the configured number of regenerations or the service interval is reached (Service after xxx days). This fault message can only be acknowledged when a reset is executed under 'Parameter/Service/service reset'.

If a fault occurs, the red LED in the Acknowledgement key flashes. After pressing the Acknowledgement key, the red LED lights up continuously. Each time a new alarm is received, the LED starts to flash again. The LED goes out when the cause of the fault is cleared.


10

11

12


## 13 Application and Configuration Examples

### 13.1 Connection of Two FS-21 in Interconnected Operation

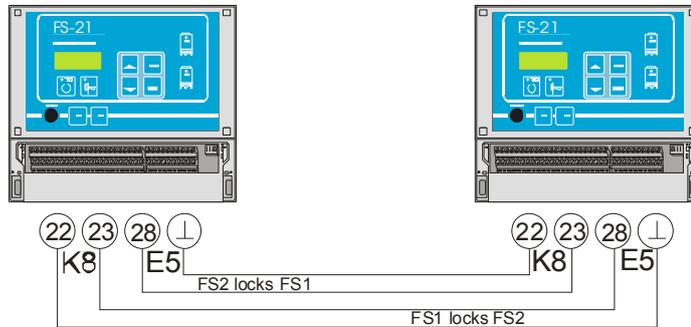

Connective operation is possible also between FS-21 and FS-201.

### 13.2 Connection of Several FS-21 in Interconnected Operation

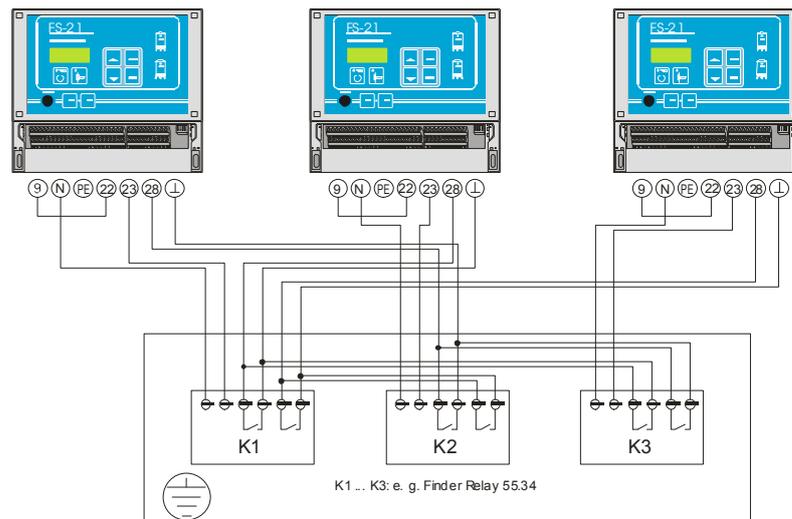




## 14 Technical Data



Only properly trained personnel may be deployed for assembly and starting up  
Connection in compliance with VDE 0160

<b>Operating Voltage</b>	230 V / 50 Hz (-10 / + 6 %)
<b>Fuse for 230 V Version</b>	4 A T (alternatively 4 A mT)
<b>Power Consumption</b>	approx. 8 VA (without external consumer)
<b>Option 24 V Version</b>	24 V AC, max. valve supply 20 VA, fuse 1 A T
<b>Data Retention following Power Failure</b>	Time: Min. 72 hours  Configuration, operation and parameter data permanently stored in the internal Flash memory
<b>Outputs</b>	two phase-assigned change-over contacts ( 230 V AC)  two phase-assigned normally open switches ( 230 V AC)  jointly fused with 4 A T (1 A T with 24 V Version)  two neutral change-over contacts  Relay contact: 230 V AC / 8A (AgNi)
<b>Inputs</b>	four inputs via optocoupler  Contact load 10 V DC, approx 8 mA
<b>Climatic Conditions: Ambient Temperature in operation transport and storage</b>	according to DIN EN 60204-1 ( 05-2010 )  -20 °C ... +55 °C -25 °C ... +55 °C
<b>Housing</b>	DIN plastic housing for wall installation – IP 54 Dim. W / H / D : 212 x 184 x 94 mm

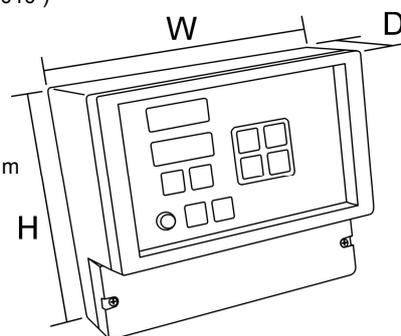

### 14.1 Ordering Information

Filter Control FS-21	Part Number
230 V – version:	<b>E1339</b>
230 V / 24 V – version:	<b>E1340</b>
<i>alternatively:</i>	
Filter Control FS-201	Part Number
230 V – version:	<b>E1330</b>
230 V / 24 V – version:	<b>E1332</b>




Note: FS-201 can be applied alternatively. FS-201 has an enhanced scope of functions as well as 8 relay outputs and 6 digital inputs.

10




15 Connection Examples

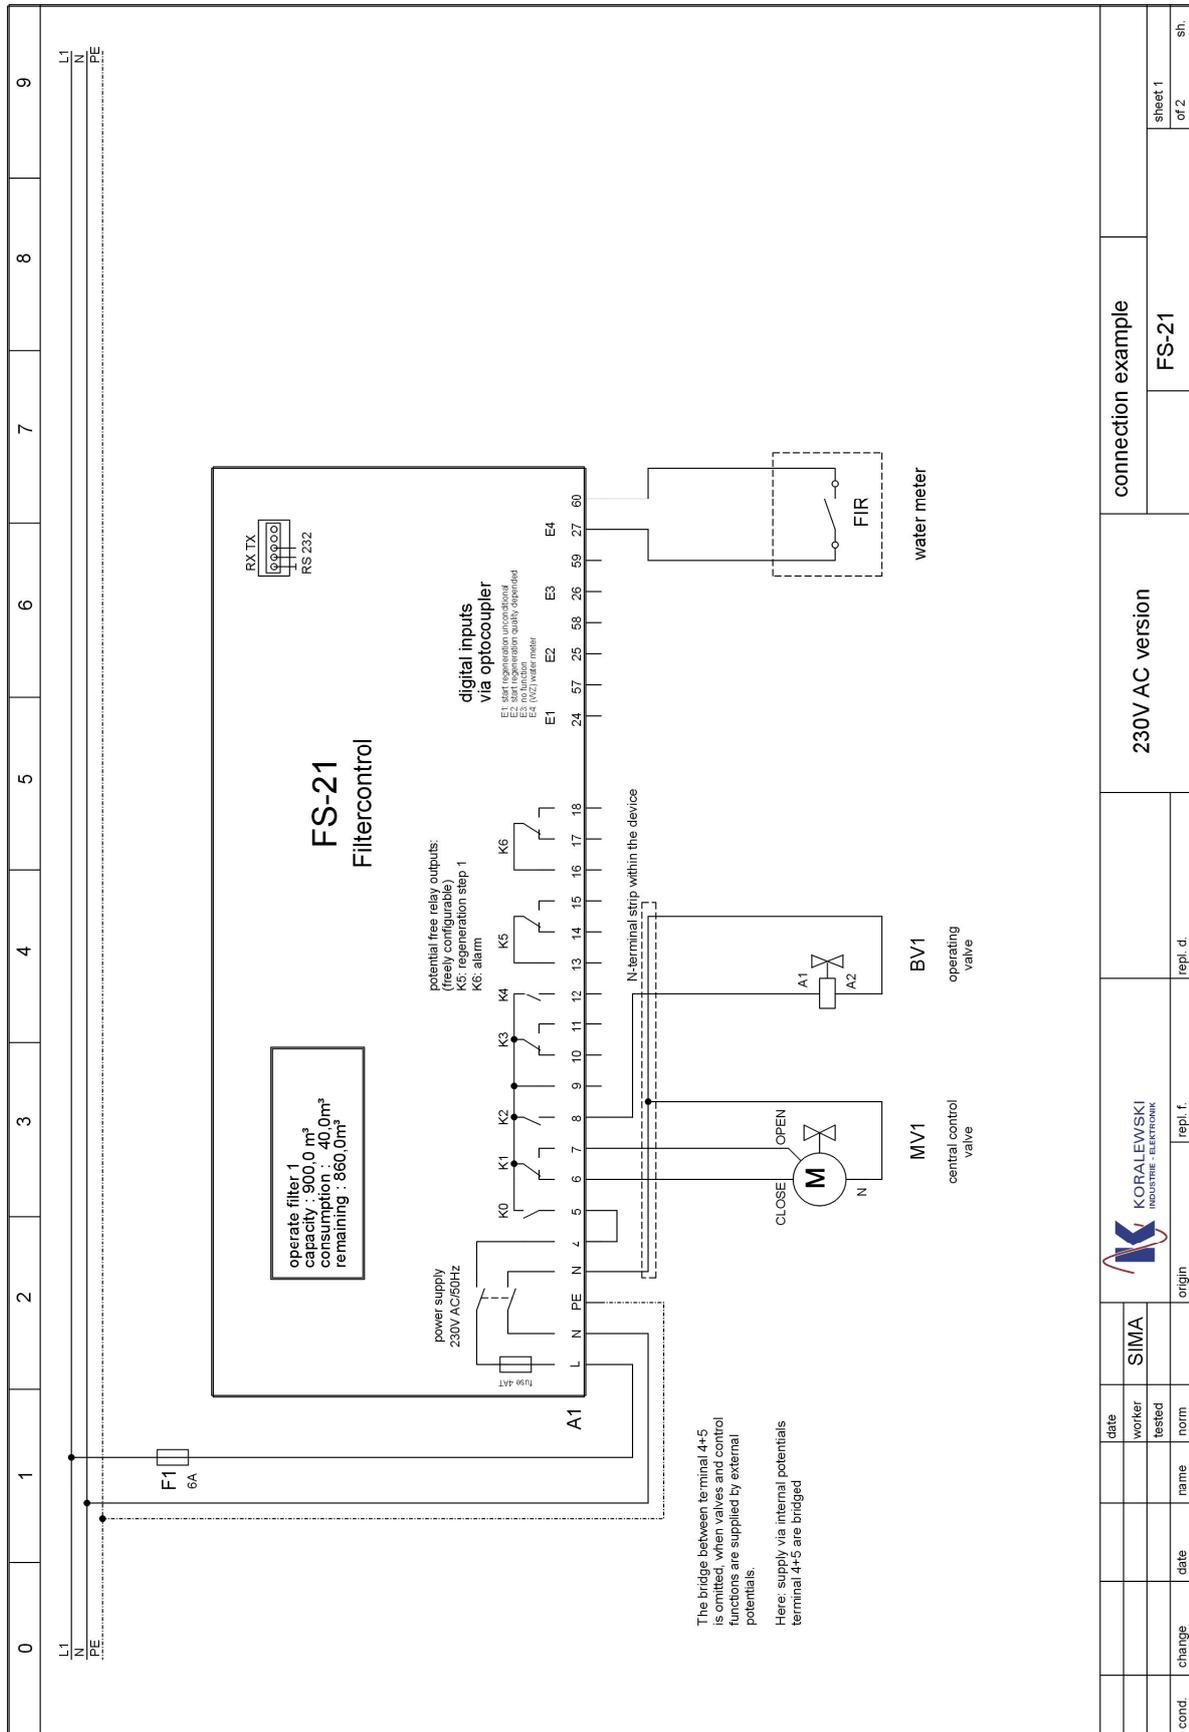

0 1 2 3 4 5 6 7 8 9

L1  
N  
PE

cond.	change	date	name	norm	tested	work	date	SIMA	origin	repl. f.	repl. d.	230V AC version	connection example	FS-21	sheet 1 of 2	sh.
-------	--------	------	------	------	--------	------	------	------	--------	----------	----------	-----------------	--------------------	-------	-----------------	-----

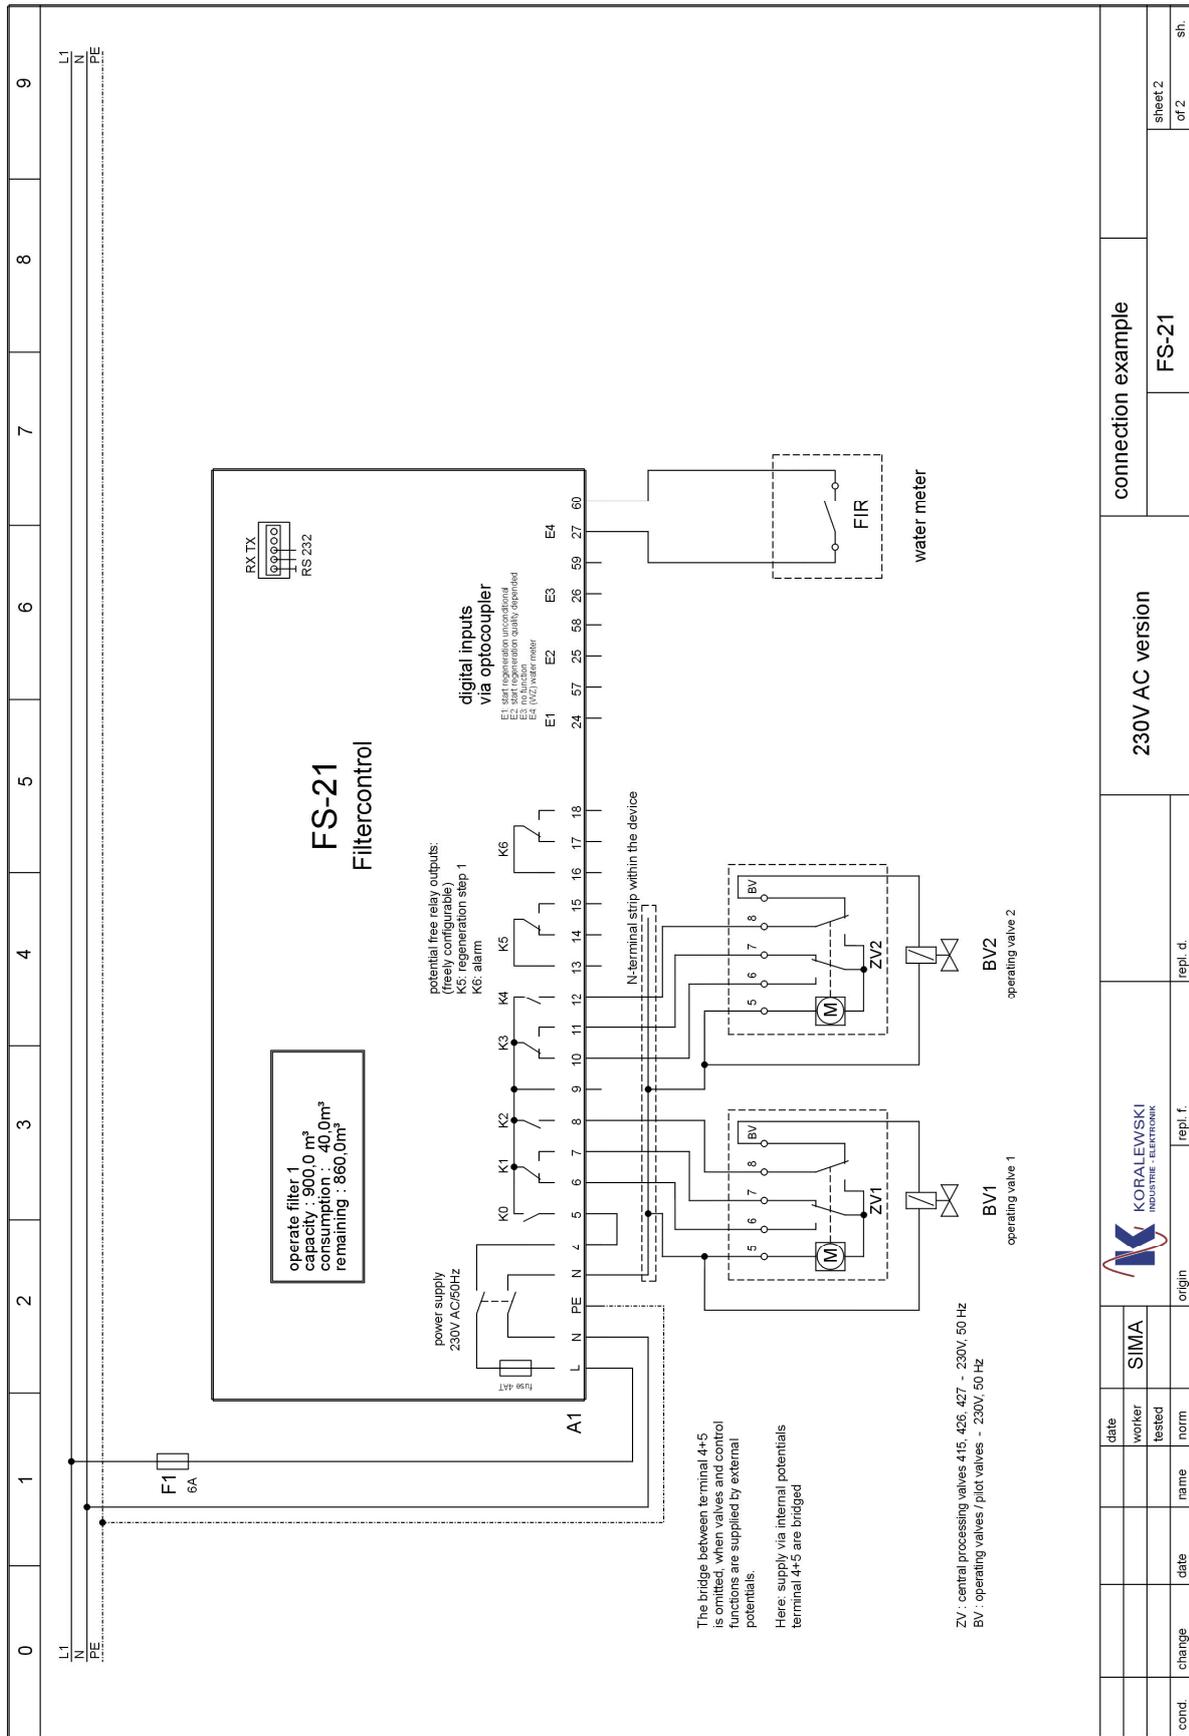

cond.	change	date	name	norm.	repl. f.	repl. d.	origin	 KORALEWSKI Industrie - Elektronik	230V AC version	connection example	FS-21	sheet 2
												of 2



## 16 Default Settings

Consignment: \_\_\_\_\_ Date: \_\_\_\_\_

### Configuration:

#### 1. Device Configuration

- 1.1. Number of Filters  1 Filter *or*  2 Filters  
 1.2. Operating Mode  Parallel - *or*  half - duplex Transmission

#### 2. Regeneration Release

- 2.1. Time dept. Regeneration   
 2.1.1 Regeneration Times at **12 : 00** o Clock  
 Weekday:  Mon  Tue  Wed  Thu  Fri  Sat  Sun  
 2.2. external Reg.   
 2.3. max. Quantity Reg.   
 2.4. Quantity dept. Reg.   
 2.5. Filter Values dept. on Filter Capacity  yes *or*  no  
 Filter Capacity **10.0** m³  
 Minimum Quantity **10** m³  
 Resin Quantity **10** l  
 Resin Factor **1.0**  
 Raw Water Hardness **1.00** °dH  
 mmol **0.178**  
**100** Impulses per Litre *or* Litres per Impulse ( Contact Valence )  
 Type of Transmitter  Impulses per Litre *or*  Litres per Impulse

#### 3. Valve Selection

- 3.1. Valve-No.  PVP-4  PVE  410  420  541  435  
 415  426  440  441  MUVK 20-40  
 3.2. Positions **4** ( Positions: Number of Step Timings + 1 )  
 3.3 Step Timings ( Step Timing x for Regeneration Step No. x in Seconds )  
 Step Time 01 **60** sec.; Step Time 02 **60** sec.; Step Time 03 **60** sec.;  
 Step Time 04 \_\_\_\_ sec.; Step Time 05 \_\_\_\_ sec.; Step Time 06 \_\_\_\_ sec.;  
 Step Time 07 \_\_\_\_ sec.; Step Time 08 \_\_\_\_ sec.; Step Time 09 \_\_\_\_ sec.;  
 Step Time 10 \_\_\_\_ sec.;  
 3.4 Impulse- / Running-Time **90** sec.





4. Display Settings	Setting	Description
4.1. Language	1	german
4.2. View change Time	15 sec.	
4.3. View reset Time	5 sec.	
4.4. Standard View	0	active Filter

5. Service	<input checked="" type="checkbox"/> yes <i>or</i> <input type="checkbox"/> no
5.1. Message after Days	after 180 Days
5.2. Message after Cycles	after 60 Cycles

6. Digital Inputs	Input	Function ( No. / Description )	closed-circ. <i>or</i> opened-circ.
	E1	1 start Regenerat. unconditionally	<input type="checkbox"/> <input checked="" type="checkbox"/>
	E2	2 start Regeneration externally	<input type="checkbox"/> <input checked="" type="checkbox"/>
	E3	0 no Function assigned	<input type="checkbox"/> <input checked="" type="checkbox"/>
	E4	255 Water Meter	<input type="checkbox"/> <input checked="" type="checkbox"/>

7. Digital Outputs	Output	Function	Sw.-on Delay	S.-off Delay	Close- / Open-circ
	A5	1 Regen. – Step 1	0 sec.	0 sec.	<input type="checkbox"/> <i>or</i> <input checked="" type="checkbox"/>
	A6	26 Alarm	0 sec.	0 sec.	<input type="checkbox"/> <i>or</i> <input checked="" type="checkbox"/>





## 17 Form for Configuration and Parameter Settings

Consignment: \_\_\_\_\_ Date: \_\_\_\_\_

### Configuration:

#### 1. Device Configuration

- 1.1. Number of Filters  1 Filter *or*  2 Filters
- 1.2. Operating Mode  Parallel - *or*  half - duplex Transmission

#### 2. Regeneration Release

- 2.1. Time dept. Regeneration
- 2.1.1 Regeneration Times at \_\_\_\_ : \_\_\_\_ o Clock  
Weekday:  Mon  Tue  Wed  Thu  Fri  Sat  Sun
- 2.2. external Reg.
- 2.3. max. Quantity Reg.
- 2.4. Quantity dept. Reg.
- 2.5. Filter Values dept. on Filter Capacity  yes *or*  no  
Filter Capacity \_\_\_\_\_ . \_\_\_\_\_ m<sup>3</sup>  
Minimum Quantity \_\_\_\_\_ m<sup>3</sup>  
Resin Quantity \_\_\_\_\_ l  
Resin Factor \_\_\_\_\_ . \_\_\_\_\_  
Raw Water Hardness \_\_\_\_\_ . \_\_\_\_\_ °dH  
mmol \_\_\_\_\_ . \_\_\_\_\_  
\_\_\_\_\_ Impulses per Litre *or* Litres per Impulse ( Contact Valence )  
Type of Transmitter  Impulses per Litre *or*  Litres per Impulse

#### 3. Valve Selection

- 3.1. Valve-No.  PVP-4  PVE  410  420  541  435  
 415  426  440  441  MUVK 20-40
- 3.2. Positions \_\_\_\_\_ ( Positions: Number of Step Timings + 1 )
- 3.3 Step Timings ( Step Timing x for Regeneration Step No. x in Seconds )  
\_\_\_\_\_ 01 \_\_\_\_ sec.; \_\_\_\_\_ 02 \_\_\_\_ sec.; \_\_\_\_\_ 03 \_\_\_\_ sec.;  
\_\_\_\_\_ 04 \_\_\_\_ sec.; \_\_\_\_\_ 05 \_\_\_\_ sec.; \_\_\_\_\_ 06 \_\_\_\_ sec.;  
\_\_\_\_\_ 07 \_\_\_\_ sec.; \_\_\_\_\_ 08 \_\_\_\_ sec.; \_\_\_\_\_ 09 \_\_\_\_ sec.;  
\_\_\_\_\_ 10 \_\_\_\_ sec.;
- 3.4 Impulse- / Running-Time \_\_\_\_\_ sec.





4. Display Settings	Setting	Description
4.1. Language	_____	_____
4.2. View change Time	_____ sec.	
4.3. View reset Time	_____ sec.	
4.4. Standard View	_____	_____

5. Service	<input type="checkbox"/> yes <i>or</i> <input type="checkbox"/> no
5.1. Message after Days	after _____ Days
5.2. Message after Cycles	after _____ Cycles

6. Digital Inputs	Input	Function ( No. / Description )	closed-circ. <i>or</i> opened-circ.	
	E1	_____	<input type="checkbox"/>	<input type="checkbox"/>
	E2	_____	<input type="checkbox"/>	<input type="checkbox"/>
	E3	_____	<input type="checkbox"/>	<input type="checkbox"/>
	E4	_____	<input type="checkbox"/>	<input type="checkbox"/>

7. Digital Outputs	Output	Function	Sw.-on Delay	S.-off Delay	Close- / Open-circ
	A5	_____	_____ sec.	_____ sec.	<input type="checkbox"/> <i>or</i> <input type="checkbox"/>
	A6	_____	_____ sec.	_____ sec.	<input type="checkbox"/> <i>or</i> <input type="checkbox"/>

