

Easy*Parse* for Boarding Passes

Total*Freedom*[™] Formatting Plug-In

Integration Guide

Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein: nor for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

This document contains propriety information that is protected by copyright. All rights reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

© 2011-2012 Honeywell International Inc. All rights reserved.

Web Address: www.honeywellaidc.com

Trademarks

Vuquest and Total*Freedom* are trademarks or registered trademarks of Metrologic Instruments, Inc. or Honeywell International Inc.

Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are the property of their respective owners.

Patents

For patent information, please refer to www.honeywellaidc.com/patents.



Table of Contents

Introduction	1
Overview	1
Getting Started	
EasyParse for Boarding Passes Software Installation.....	3
EasyParse for Boarding Passes Software Activation	4
To Enable EasyParse for Boarding Passes Software Plug-In	4
Data Transmission Configuration	
Configuration	5
Enter/Exit Programming Mode Bar Codes	6
Start/End Configuration Bar Codes	6
Data Field Options for Programming Mode	7
Formatting Options for Select Data Fields.....	22
Separators for Programming Mode	23
Configuration Utility.....	43
Inserting Delays between Fields.....	45
Version Identification.....	47
End User License Agreement	49
Customer Support.....	57
Technical Assistance.....	57
Product Service and Repair.....	58





Introduction

Overview

Honeywell's EasyParse for Boarding Passes software plug-in parses bar code data found on IATA Airline tickets for specific field information such as passenger name, date of journey, flight number etc. EasyParse for Boarding Passes may be purchased pre-installed on select Honeywell area-imaging products or purchased as a standalone upgrade.

The following products support the EasyParse for Boarding Passes software plug-in.

- Xenon 1900
- Xenon 1902
- Vuquest™ 3310g
- N5600

Note: Honeywell cannot be held responsible for Airline tickets that do not comply with the formatting standards set forth by IATA for Bar Coded Boarding Pass.



Getting Started

EasyParse for Boarding Passes Software Installation

Note: Honeywell products ordered with EasyParse for Boarding Passes do not require software installation or software activation. Skip to page 4 for instructions on how to enable the software plug-in.

Items required for EasyParse for Boarding Passes installation:

- A computer with access to the internet
- The imager's User's Guide
- The firmware upgrade cable specified in the imagers User's Guide
- EZConfig-Scanning software, downloadable at no additional cost from www.honeywellaidc.com

The following installation procedure is not applicable for imagers that do not support firmware updates through EZConfig-Scanning download feature. Consult the imager's User's Guide to verify the capabilities of the imager before proceeding.

To install the EasyParse for Boarding Passes software plug-in:

1. Download and save the EasyParse for Boarding Passes [◇] plug-in trial software available at www.honeywellaidc.com.
2. Consult the imager's User's Guide for information on the specific cable required for firmware updates.
3. Connect the cable to the imager and an available RS232 serial or USB port on the host system.
4. Start the EZConfig-Scanning software. Click on the *Help* file in the menu bar. Select *Help Topics* and follow the steps under *Connecting to a Device*.
5. In the Application Explorer, select Download. In the Main Workspace, click on the "..." button to browse for the EasyParse for Boarding Passes flash image file (*.moc.) Click on the Download to Device button.

[◇] *The free trial version of EasyParse for Boarding Passes has unlimited trials, however inserts "X" characters in the data stream. To prevent "X" characters from appearing in the transmitted data stream, a full EasyParse for Boarding Passes license must be purchased. Contact customer service for more information on how to purchase an EasyParse for Boarding Passes license. See page 57 for contact information.*

-
6. After the firmware has been downloaded to the imager, scan the Save Custom Defaults bar code in the User's Guide.
 7. To activate *EasyParse* for Boarding Passes software, scan the *Activate Plug-in* bar code followed by the *Reset* bar code:

Activate Plug-in



PLGFOE1;PLGFONEasyBCBPCConf.

Reset



RESET_.


EasyParse for Boarding Passes Software Activation

A license key is required to activate the full version of *EasyParse* for Boarding Passes. Contact a customer service representative for information on purchasing a licensing key. Regional contact information is on page 57.

To Enable EasyParse for Boarding Passes Software Plug-In


Scan the **Enable *EasyParse* for Boarding Passes** bar code to enable the *EasyParse* for Boarding Passes software plug-in.

* Enable *EasyParse* for Boarding Passes

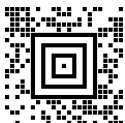

9902A0020#ENABLE#.

Disable *EasyParse* for Boarding Passes

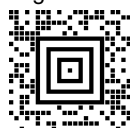

9902A0020#DISABLE#.

* *Factory Default.*

Data Transmission Configuration

Before starting the configuration process, identify the necessary data fields required for the application and the order with which the data must be transmitted to the electronic form or database.

The default format of parsing configuration is First Name [space] Last Name [tab] Departing City [tab] Arriving City [tab] Flight Number.

Configuration

To configure the imager for Programming Mode configuration:

1. Scan **Enter Programming Mode** bar code on page 6.
2. Scan the **Start Configuration** bar code on page 6.
3. Scan each required data field bar code in the order of the desired transmission sequence (pages 7 - 21), if necessary, desired formatting option (page 22) with desired separators for data fields (see pages 23 - 41.)
4. Scan the **End Configuration** bar code on page 6.
5. Scan **Exit Programming Mode** bar code on page 6.

Note: The bar codes must be scanned in this sequence. If scanned out of sequence the imager will razz and no action will be taken.

Example

John,13B:PHL-DTW,2/17

To configure the imager to transmit the data sequence above:

1. Scan the **Enter Programming Mode** bar code on page 6.
2. Scan the **Start Configuration** bar code on page 6.
3. Scan the **S1_Passengers Name** bar code followed by the **First Name** bar code, the **Comma** bar code, the **S1_Seat Number** bar code, the **Colon** bar code, the **S1_From City Airport Code** bar code the **Hyphen** bar code, the **S1_To City Airport Code** bar code, the **Comma** bar code, the **S1_Date of Journey** bar code and then the **MM/DD** bar code.
4. Scan the **End Configuration** bar code on page 6.
5. Scan the **Exit Programming Mode** bar code on page 6.

Figure 1. Example of Programming Mode Configuration


Formatting Option Notes

Date and Passenger Name Data Fields have formatting options. Date formatting available options are MM/DD, MMDD and MM-DD. Passenger Name current formatting options are First Name and Last Name. If formatting is required, scan the data field bar code **followed by** the desired format for the field (see page 22.)

A *Tab* or *Space* in the Passenger Name on a boarding pass will be replaced with a *forward slant* (/). The prefix of the *Tab* or *Space* is read as Last Name and the suffix is read as First Name. If there are two or more *Spaces*, the prefix of the first space is read as Last Name and suffix is read as First Name.

Enter/Exit Programming Mode Bar Codes

Enter Programming Mode

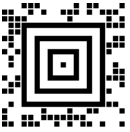

9902EntA0020.


Exit Programming Mode



99Exit.


Start/End Configuration Bar Codes

Start Configuration

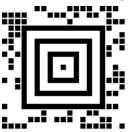

9902#START#.

End Configuration

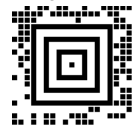

9902#END#.

Data Field Options for Programming Mode

The S1, S2, S3 or S4 prefixes in the Field Name represent segment identifiers for airline tickets that have multiple flight segments.

For detailed field descriptions, please refer to IATA Resolution 792.

<i>Segment 1 Bar Codes</i>		
Field Name	Menu Command	Programming Code
S1_Format Code	9902F00	
S1_Number of Legs Encoded	9902F01	
S1_Passenger Name	9902F02	
S1_Electronic Ticket Indicator	9902F03	
S1_Operating Carrier PNR Code	9902F04	

Field Name	Menu Command	Programming Code
S1_From City Airport Code	9902F05	
S1_To City Airport Code	9902F06	
S1_Operating Carrier Designator	9902F07	
S1_Flight Number	9902F08	
S1_Date of Flight (Julian Date)	9902F09	
S1_Compartment Code	9902F0A	
S1_Seat Number	9902F0B	

Field Name	Menu Command	Programming Code
S1_Check-in Sequence Number	9902F0C	
S1_Passenger Status	9902F0D	
S1_Beginning of Version Number	9902F0F	
S1_Version Number	9902F10	
S1_Passenger Description	9902F12	
S1_Source of Check-in	9902F13	
S1_Source of Boarding Pass Issuance	9902F14	

Field Name	Menu Command	Programming Code
S1_Date of Issue of Boarding Pass (Julian Date)	9902F15	
S1_Document Type	9902F16	
S1_Airline Designator of Boarding Pass Issuer	9902F17	
S1_Baggage Tag License Plate Number(s)	9902F18	
S1_Airline Numeric Code	9902F1A	
S1_Document Form/Serial Number	9902F1B	
S1_Selectee Indicator	9902F1C	

Field Name	Menu Command	Programming Code
S1_International Documentation Verification	9902F1D	
S1_Marketing Carrier Designator	9902F1E	
S1_Frequent Flyer Airline Designator	9902F1F	
S1_Frequent Flyer Number	9902F20	
S1_ID/AD Indicator	9902F21	
S1_Free Baggage Allowance	9902F22	
S1_For Individual Airline Use	9902F23	

Segment 2 Bar Codes






Field Name	Menu Command	Programming Code
S2_Operating Carrier PNR Code	9902F24	
S2_From City Airport Code	9902F25	
S2_To City Airport Code	9902F26	
S2_Operating Carrier Designator	9902F27	
S2_Flight Number	9902F28	
S2_Date of Flight (Julian Date)	9902F29	

Field Name	Menu Command	Programming Code
S2_Compartment Code	9902F2A	
S2_Seat Number	9902F2B	
S2_Check-in Sequence Number	9902F2C	
S2_Passenger Status	9902F2D	
S2_Airline Numeric Code	9902F30	
S2_Document Form/Serial Number	9902F31	
S2_Selectee Indicator	9902F32	

Field Name	Menu Command	Programming Code
S2_International Documentation Verification	9902F33	
S2_Marketing Carrier Designator	9902F34	
S2_Frequent Flyer Airline Designator	9902F35	
S2_Frequent Flyer Number	9902F36	
S2_ID/AD Indicator	9902F37	
S2_Free Baggage Allowance	9902F38	
S2_For Individual Airline Use	9902F39	

Segment 3 Bar Codes

Field Name	Menu Command	Programming Code
S3_Operating Carrier PNR Code	9902F3A	
S3_From City Airport Code	9902F3B	
S3_To City Airport Code	9902F3C	
S3_Operating Carrier Designator	9902F3D	
S3_Flight Number	9902F3E	
S3_Date of Flight (Julian Date)	9902F3F	

Field Name	Menu Command	Programming Code
S3_Compartment Code	9902F40	
S3_Seat Number	9902F41	
S3_Check-in Sequence Number	9902F42	
S3_Passenger Status	9902F43	
S3_Airline Numeric Code	9902F46	
S3_Document Form/Serial Number	9902F47	
S3_Selectee Indicator	9902F48	

Field Name	Menu Command	Programming Code
S3_International Documentation Verification	9902F49	
S3_Marketing Carrier Designator	9902F4A	
S3_Frequent Flyer Airline Designator	9902F4B	
S3_Frequent Flyer Number	9902F4C	
S3_ID/AD Indicator	9902F4D	
S3_Free Baggage Allowance	9902F4E	
S3_For Individual Airline Use	9902F4F	




Segment 4 Bar Codes

Field Name	Menu Command	Programming Code
S4_Operating Carrier PNR Code	9902F50	
S4_From City Airport Code	9902F51	
S4_To City Airport Code	9902F52	
S4_Operating Carrier Designator	9902F53	
S4_Flight Number	9902F54	
S4_Date of Flight (Julian Date)	9902F55	

Field Name	Menu Command	Programming Code
S4_Compartment Code	9902F56	
S4_Seat Number	9902F57	
S4_Check-in Sequence Number	9902F58	
S4_Passenger Status	9902F59	
S4_Airline Numeric Code	9902F5C	
S4_Document Form/Serial Number	9902F5D	
S4_Selectee Indicator	9902F5E	

Field Name	Menu Command	Programming Code
S4_International Documentation Verification	9902F5F	
S4_Marketing Carrier Designator	9902F60	
S4_Frequent Flyer Airline Designator	9902F61	
S4_Frequent Flyer Number	9902F62	
S4_ID/AD Indicator	9902F63	
S4_Free Baggage Allowance	9902F64	
S4_For Individual Airline Use	9902F65	

Security Data Bar Codes

Field Name	Menu Command	Programming Code
Beginning of Security Data	9902F66	
Type of Security Data	9902F67	
Length of Security Data	9902F68	
Security Data	9902F69	

Formatting Options for Select Data Fields

Passenger Name		
First Name	9902X10	
Last Name	9902X11	
Date of Flight / Date of Issue of Boarding Pass		
MM/DD	9902X00	
MMDD	9902X01	
MM-DD	9902X02	

Separators for Programming Mode

Field Name	Menu Command	Programming Code
Line Feed	9902S0A	
Vertical Tab	9092S0B	
Horizontal Tab	9902S09	
Carriage Return	9902S0D	
Space “ ”	9902S20	
Comma “,”	9902S2C	

Field Name	Menu Command	Programming Code
NULL	9902S00	
Start of Header	9902S01	
Start of Text	9902S02	
End of Text	9902S03	
End of Transmission	9902S04	
Enquiry	9902S05	
Acknowledge	9902S06	

Field Name	Menu Command	Programming Code
Bell	9902S07	
Backspace	9902S08	
Form Feed	9902S0C	
Shift Out	9902S0E	
Shift In	9902S0F	
Data Link Escape	9902S10	
Device Control 1	9902S11	

Field Name	Menu Command	Programming Code
Device Control 2	9902S12	
Device Control 3	9902S13	
Device Control 4	9902S14	
Negative ACK	9902S15	
Synchronous Idle	9902S16	
End of Text Block	9902S17	
Cancel	9902S18	


Field Name	Menu Command	Programming Code
End of Medium	9902S19	
Substitute	9902S1A	
Escape	9902S1B	
File Separator	9902S1C	
Group Separator	9902S1D	
Record Separator	9902S1E	
Unit Separator	9902S1F	

Field Name	Menu Command	Programming Code
Exclamation Point “!”	9902S21	
Quotation Mark “”	9902S22	
Cross Hatch “#”	9902S23	
Dollar Sign “\$”	9902S24	
Percent Sign “%”	9902S25	
Ampersand “&”	9902S26	
Closing Single Quote “'”	9902S27	

Field Name	Menu Command	Programming Code
Opening Parentheses “(“	9902S28	
Closing Parentheses “)”	9902S29	
Asterisk “*”	9902S2A	
Plus “+”	9902S2B	
Hyphen “-“	9902S2D	
Period “.”	9902S2E	
Forward Slant “/”	9902S2F	

Field Name	Menu Command	Programming Code
0	9902S30	
1	9902S31	
2	9902S32	
3	9902S33	
4	9902S34	
5	9902S35	
6	9902S36	








Field Name	Menu Command	Programming Code
7	9902S37	
8	9902S38	
9	9902S39	
Colon “:”	9902S3A	
Semi-Colon “;”	9902S3B	
Less Than Sign “<”	9902S3C	
Equals Sign “=”	9902S3D	

Field Name	Menu Command	Programming Code
Greater Than Sign ">"	9902S3E	
Question Mark "?"	9902S3F	
At Sign "@"	9902S40	
A	9902S41	
B	9902S42	
C	9902S43	
D	9902S44	

Field Name	Menu Command	Programming Code
E	9902S45	
F	9902S46	
G	9902S47	
H	9902S48	
I	9902S49	
J	9902S4A	
K	9902S4B	

Field Name	Menu Command	Programming Code
L	9902S4C	
M	9902S4D	
N	9902S4E	
O	9902S4F	
P	9902S50.	
Q	9902S51	
R	9902S52	

Field Name	Menu Command	Programming Code
S	9902S53	
T	9902S54	
U	9902S55	
V	9902S56	
W	9902S57	
X	9902S58	
Y	9902S59	


Field Name	Menu Command	Programming Code
Z	9902S5A	
Opening Square Bracket “[“	9902S5B	
Reverse Slant “\”	9902S5C	
Closing Square Bracket “]”	9902S5D	
Caret “^”	9902S5E	
Underscore “_”	9902S5F	
Opening Single Quote “`”	9902S60	

Field Name	Menu Command	Programming Code
a	9902S61	
b	9902S62	
c	9902S63	
d	9902S64	
e	9902S65	
f	9902S66	
g	9902S67	

Field Name	Menu Command	Programming Code
h	9902S68	
i	9902S69	
j	9902S6A	
k	9902S6B	
l	9902S6C	
m	9902S6D	
n	9902S6E	

Field Name	Menu Command	Programming Code
o	9902S6F	
p	9902S70	
q	9902S71	
r	9902S72	
s	9902S73	
t	9902S74	
u	9902S75	

Field Name	Menu Command	Programming Code
v	9902S76	
w	9902S77	
x	9902S78	
y	9902S79	
z	9902S7A	
Opening Curly Bracket “{”	9902S7B	
Vertical Line “ ”	9902S7C	

Field Name	Menu Command	Programming Code
Closing Curly Bracket “}”	9902S7D	
Tilde “~”	9902S7E	
DEL	9902S7F	



Configuration Utility

EasyParse for Boarding Passes can also be configured using Honeywell's EasyParse for Boarding Passes Configuration Utility. This utility can generate bar codes to configure the plug-in alone, delays alone and both plug-in and delays in a single bar code.

To configure using the EasyParse for Boarding Passes Configuration Utility:

1. Start the EasyParse for Boarding Passes Configuration Utility.
2. Select the desired Data Field or Separator from the list boxes. Click on the *Insert* button (>>) or double click on the item to add it to the Data Output Format list box.
3. The Separator Fields list box can be extended to show all supported ASCII characters by checking the Show All Separators box.
4. Formatting options are available for Passenger Name and Date data fields. Select either of these fields and the options are displayed in the Data Format list box. To select a Data Format, click on desired option. To deselect, double click on the option.
5. To move a selected field in the Data Output Format list box, click on the *Move Up* or *Move Down* buttons until the field has been moved to the desired location.
6. To remove a selected field in the Data Output Format list box, click on the *Remove* button (<<).
7. To configure a delay after a separator, select the Separator from the Separator dropdown list. Enter the delay amount in milliseconds. (The delay must be in multiples of 5, starting from 5ms up to and including 5000ms.)
8. The Data Output Format list box and Configure Delays section can be cleared by clicking on the *Clear All* button.
9. To create a bar code from the Data Output Format list box and/or delays, click on the *Generate Barcode* button. A second window will appear with the bar code displayed. To save the bar code, click on the *Save* button. The bar code will be saved as an html file. To print the bar code, click on the *Print* button.
10. The selected configuration that includes Data Output Format list box and delays can also be saved into a file. Click on *Save to File* button and select the location to save then click on the *Save* button. The configuration will be saved as an xml file.

-
11. To generate a bar code from a Saved to File configuration, select *Load from File* button. Select file, then click on the *Open* button. The saved configuration will populate in the Data Output Format list box and Configure Delays section. To generate a bar code, follow step number 9.
 12. To complete the configuration, scan the generated bar code.

Inserting Delays between Fields

Delays can be introduced in the data transmission using Data Formatter. The Data Formatting string can be sent as a serial command, built in a menu code, or created in EZConfig-Scanning. Follow input format needed as outlined in the imager's User's Guide available at www.honeywellaidc.com.

The EF command in the system data formatter will insert a delay between fields in the output.

To test the delay follow these steps:

1. Setup EasyParse for Boarding Passes to output data as S1_Format Code [Horizontal Tab] S1_Flight Number.
2. For a delay after S1_Format Code, send the following data format string to the scanner:

```
DFMBK30124999999F30900EF1000F100.
```

The breakdown of the command line is shown below:

DFMBK3	inform the scanner the following string is data format
0	primary data format
124	terminal interface to apply data format. 124 = USB keyboard wedge
99	symbology ID (99 is a wildcard for all symbologies.)
9999	length of bar code to apply data format (9999 is a wildcard for all lengths.)
F30900	sends out all data up to but not including the 09 [horizontal tab] character, followed by 00 [null]
EF1000	inserts a delay of 5000ms (1000 x 5ms)
F100	sends the remainder data from the current virtual pointer position
.	informs scanner to save data to non-volatile flash.

3. The output will be S1_Format Code, a delay of 5000ms, horizontal tab, then S1_Flight Number.

Note: The system data formatter is based on the position of the virtual pointer in the data buffer.

The EF delay command will only work with keyboard interfaces, i.e. USB keyboard or PS/2 keyboard. It will not work with any other interface.



Version Identification

Scan the bar code below to transmit what version of EasyParse for Boarding Passes software the imager is running.

Transmit EasyParse for Boarding Passes Version



Note: If the characters @\$EasyBCBPVersion\$#@. are transmitted when the bar code is scanned, then the unit is not equipped with the EasyParse for Boarding Passes software plug-in.



End User License Agreement

This License Agreement (“Agreement”) is a legal agreement between you and Honeywell International Inc. (“Licensor”) regarding the associated software (“Software”), which may include software owned by Honeywell and software licensed by Honeywell from its software suppliers (“Suppliers”).

The Agreement also applies to any updates, supplements, Internet-based services, and support services for this software, unless other terms accompany those items. If so, those terms apply.

By installing, activating, or using the Software, you agree to be bound by the terms and conditions of this Agreement. If you do not agree to be so bound, you may not install the Software or, if the Software is already installed, you must promptly remove it. The Software and any accompanying materials (including, without limitation, any images, photographs, animations, video, audio, music, text, and applets incorporated into the Software, the accompanying media, and printed materials) are owned by Licensor and its Suppliers and protected under U.S. and international copyright laws, and may be protected under additional intellectual property laws. The Software is licensed, not sold, and Licensor and its Suppliers retain all right, title, and interest therein other than those rights specifically granted to you under this Agreement. You accept responsibility for selection of the Software to achieve your intended results, and for installation, activation, use of, and results obtained from, the Software.

License

Licensor hereby grants you a non-exclusive License to use this Software, without right of sub-license, only in object or executable code form, and only in or with Licensor’s products (“Products”). You may not rent, lease, or lend the Software. You may permanently transfer rights under this Agreement only as part of a permanent sale or transfer of the Products, and only if the recipient accepts this Agreement. If the Software is an upgrade, any transfer must also include all prior versions of the Software. You agree that the Software and any Software-related materials provided under this Agreement are and shall at all times remain the sole and exclusive property of Licensor and its Suppliers. Unauthorized copying of the Software is expressly forbidden. The Software may be patent-pending and/or patented; please refer to documentation accompanying the product, including labels and user guides, for specifics. You may be held legally responsible for any infringement of copyright or other intellectual property rights caused by your failure to abide by this Agreement.

If the Software is identified by Licensor as a demonstration version, Licensee may use the Software on multiple Products or platforms. If the Software is provided by Licensor as other than a demonstration version, Licensee may use the Software only on or with a single Product. User’s guides and programming guides for the Software that are provided by Licensor in either hard or electronic copy may be copied and distributed.

The rights granted by this Agreement do not give you rights to implement Licensor patents or other Licensor intellectual property.

Open Source

If you use Open Source software in conjunction with the Software, you must ensure that your use does not: (i) create, or purport to create, obligations on Licensor or its Suppliers with respect to the Software; or (ii) grant, or purport to grant, to any third party any rights to Software that are not permitted by this Agreement; or (iii) grant, or purport to grant, to any third party any immunities with respect to Licensor's or its Suppliers' proprietary rights.

Any Open Source software listed under this Agreement is listed only for your convenience and solely for information purposes, and, if licensed, is licensed to you only under the terms set forth in the corresponding Open Source License, which you may find on the Internet at the designated URL, or in the header files of such software.

Restrictions

You shall not use, print, copy, or display the Software in whole or in part except as expressly permitted in writing. You shall not modify, translate, alter, create derivatives of, "reverse compile," decompile, merge with another program, or otherwise derive the source code for the Software, or defeat any "keys" or codes controlling authorized access or functionality, nor will you allow others to do the same.

Note on Java Support

The Software may contain support for programs written in Java. Java technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as online control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of Java technology could lead to directly to death, personal injury, or severe physical or environmental damage.

Indemnification

Licensee agrees to defend, indemnify, and hold harmless Licensor from all damages and third-party claims, causes of action, or damages arising from unauthorized use or disclosure of Software, or resulting from use of Software in combination with software, hardware, systems, or other items not provided by Licensor.

DISCLAIMERS AND LIMITATIONS OF LIABILITY: THE SOFTWARE IS NOT FAULT TOLERANT, AND IS PROVIDED AS IS AND WITH ALL FAULTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND EXCEPT AS OTHERWISE EXPRESSLY SET FORTH IN THIS AGREEMENT OR, WITH RESPECT TO THE OPEN SOURCE SOFTWARE LISTED FOLLOWING, EACH RESPECTIVE OPEN SOURCE LICENSE, LICENSOR, ITS SUPPLIERS AND LICENSORS, AND ANY OPEN SOURCE CONTRIBUTORS (1) DISCLAIM ANY AND ALL PROMISES AND REPRESENTATIONS WITH RESPECT TO THE SOFTWARE, INCLUDING ITS CONDITION, ITS CONFORMITY TO ANY REPRESENTATION OR DESCRIPTION, AND THE EXISTENCE OF ANY LATENT OR PATENT DEFECTS, (2) DISCLAIM ALL WARRANTIES, WRITTEN OR ORAL, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND, (3) SHALL HAVE NO LIABILITY FOR ANY DIRECT, INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL LICENSOR OR ITS SUPPLIERS BE LIABLE FOR ANY AMOUNT IN EXCESS OF (1) THE INITIAL LICENSE FEE THAT LICENSOR RECEIVED FROM YOU FOR THE PRODUCTS, IN THE CASE OF LICENSOR, OR (2) U.S. TWO HUNDRED AND FIFTY DOLLARS (U.S. \$250.00), IN THE CASE OF LICENSOR'S SUPPLIERS.. ALL RISK AS TO QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU.

General

This Agreement is the complete agreement and understanding of the parties with respect to the Software and supersedes all prior oral, written, or other representations and agreements. You acknowledge that the Software is of U.S. origin, and agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end-user, end-use, and country destination restrictions issued by the U.S. and other governments. If this product is acquired under the terms of a U.S. Government contract, use, duplication, and disclosure are subject to the terms of this license and the restrictions contained in the Rights in Technical Data and Computer Software clause at 252.227-7013 (DOD contracts); and subdivisions (a) through (d) of 52.227-19 as applicable. This Agreement shall be governed by the laws of the State of New York, without regard to its conflicts of law provisions.

Distributors and Resellers

In addition to the License rights granted in this License Agreement, Distributors and Resellers of Licensor's Products shall have the right to install and sublicense the Software to End Users solely for the purpose of using the Software on Licensor's products for the End User's own business. Distributors and Resellers of Licensor's Products shall have the right to advertise or otherwise market the Software for use on Licensor's products. User's guides and programming guides for the Software that are provided by Licensor in either hard or electronic copy may be copied and distributed. Distributors and Resellers of Licensor's Products shall provide this License Agreement with each sublicense to an End User of the Software. Distributors and Resellers of Licensor's Products shall promptly discontinue distribution of the Software to any End User which does not comply with the obligations in this License Agreement and shall notify Licensor and cooperate with Licensor in investigating instances of violation thereof.

Copyright, Attribution, and Open Source

Remote Mastermind™ software is copyright protected and the property of Honeywell Scanning and Mobility ("HSM").

The Software, including but not limited to Remote Mastermind, OPOS, and JPOS, may contain one or more of the following open source software components; references to specific versions are for convenience only, please refer to the URL and header file information for current versions:

1. The following open source software is subject to the Apache License, Version 2.0:

Commons-collections-3.2.jar
Commons-fileupload-1.1.1.jar
Commons-io-1.3.jar
Commons-logging-1.1.jar
log4j-1.2.9.jar
quartz-all-1.6.1-RC1.jar

You may obtain a copy of the Apache License Version 2.0 at:

<http://www.apache.org/licenses/LICENSE-2.0>.

You may obtain a copy of the software at: <http://commons.apache.org/>.

2. This following open source software was developed by the Apache Software Foundation (<http://www.apache.org/>), and is subject to the Apache License, Version 1.1:

Xerces Java Parser 1.4.4 Release (Xerces-J-bin.1.4.4.zip)

You may obtain a copy of the Apache License Version 1.1 at:

<http://www.apache.org/licenses/LICENSE>.

You may obtain a copy of the software at:

<http://xerces.apache.org/xerces-j/>.

-
3. The following open source software is subject to the “Academic Free License (AFL) Version 2.1 from the Open Source Initiative”, and the “BSD License from the Open Source Initiative”, 2005-2006:

Dojo.js and DojoFileStorageProvider.jar

You may obtain a copy of the Academic Free License at:

<http://www.opensource.org/licenses/academic.php>, and of the BSD License at: <http://www.opensource.org/licenses/bsd-license.php>.

You may obtain a copy of the software at: <http://Dojotoolkit.org>.

4. The following open source software is subject to the Common Public License - v 1.0:

jcl2.3.0-RC3.zip

You may obtain a copy of the Common Public License at:

<http://www.eclipse.org/legal/cpl-v10.html>

You may obtain a copy of the software at:

<http://sourceforge.net/projects/jposloader/>

Any provisions of the Honeywell End User License Agreement which differ from the Common Public License are offered by Honeywell alone and not by any other party.

Source code for the jcl2.3.0-RC3 software is available from

[Honeywell](#).

5. The following open source software from Adobe labs is subject to the BSD License from the Open Source Initiative:

TTCComboBox.h

TTCComboBox.cpp

You may obtain a copy of the BSD License at:

<http://www.opensource.org/licenses/bsd-license.php>

You may obtain a copy of the software at:

http://www.codeproject.com/KB/combobox/Neat_Tooltip_for_Combobox.aspx

6. The following open source software is subject to the BSD License from the Open Source Initiative (2006):

Spry_1_6_1_022408

You may obtain a copy of the BSD License at:

<http://www.opensource.org/licenses/bsd-license.php>.

You may obtain a copy of the software at:

<http://labs.adobe.com/technologies/spry/home.html>.

7. The following open source software is subject to the GNU Lesser General Public License (LGPL), Version 3 – 2007:

swing-layout-1.0.3.jar

You may obtain a copy of the LGPL at:

<http://www.gnu.org/copyleft/lesser.html>.

You may obtain a copy of the swing-layout-1.0.3.jar library at:

<https://swing-layout.dev.java.net/>.

-
8. The following open source software is subject to the GNU LGPL v 2.1:
rxtxcomm.jar, rtxSerial.dll, rtxParallel.dll
You may obtain a copy of the GNU LGPL v 2.1 at:
<http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.
You may obtain a copy of the software at: <http://rxtx.org>.
9. The following open source software (Copyright (C) 1995-2005 Jean-loup Gailly and Mark Adler) is subject to the Zlib license:
Zlib 1.2.3 (zlib1.dll)
You may obtain a copy of the License at:
http://www.zlib.net/zlib_license.html.
You may obtain a copy of the software at: <http://www.zlib.net/>.
10. The following open source software is subject to the GNU General Public License Version 2, June 1991:
jsmooth-0.9.9-7-setup.exe
You may obtain a copy of the License at:
<http://jsmooth.sourceforge.net/license.php>.
You may obtain a copy of the software at:
<http://jsmooth.sourceforge.net/>.
11. Software that includes OPOS may include the open source components TTComboBox.h and TTComboBox.cppone, which are subject to the following license and terms:
- © 2010 Honeywell International Inc.
All rights reserved.
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 - * Redistributions in binary form must reproduce the above copyright notice, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution.
 - * Neither the name of Honeywell International Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.





Customer Support

Technical Assistance

If you need assistance installing or troubleshooting your device, please contact us by using one of the methods below:

Knowledge Base: www.hsmknowledgebase.com

Our Knowledge Base provides thousands of immediate solutions. If the Knowledge Base cannot help, our Technical Support Portal (see below) provides an easy way to report your problem or ask your question.

Technical Support Portal: www.hsmsupportportal.com

The Technical Support Portal not only allows you to report your problem, but it also provides immediate solutions to your technical issues by searching our Knowledge Base. With the Portal, you can submit and track your questions online and send and receive attachments.

Web form: www.hsmcontactsupport.com

You can contact our technical support team directly by filling out our online support form. Enter your contact details and the description of the question/problem.

Telephone: www.honeywellaidc.com/locations

For our latest contact information, please check our website at the link above.

Product Service and Repair

Honeywell International Inc. provides service for all its products through service centers throughout the world. To obtain warranty or non-warranty service, contact the appropriate location below to obtain a Return Material Authorization number (RMA #) before returning the product.

North America

Telephone: (800) 782-4263
E-mail: hsmnaservice@honeywell.com

Latin America

Telephone: (803) 835-8000
Telephone: (800) 782-4263
Fax: (239) 263-9689
E-mail: laservice@honeywell.com

Brazil

Telephone: +55 (11) 5185-8222
Fax: +55 (11) 5185-8225
E-mail: brservice@honeywell.com

Mexico

Telephone: 01-800-HONEYWELL (01-800-466-3993)
Fax: +52 (55) 5531-3672
E-mail: mxservice@honeywell.com

Europe, Middle East, and Africa

Telephone: +31 (0) 40 2901 633
Fax: +31 (0) 40 2901 631
E-mail: euroservice@honeywell.com

Hong Kong

Telephone: +852-29536436
Fax: +852-2511-3557
E-mail: apservice@honeywell.com

Singapore

Telephone: +65-6842-7155
Fax: +65-6842-7166
E-mail: apservice@honeywell.com

China

Telephone: +86 800 828 2803
Fax: +86-512-6762-2560
E-mail: apservice@honeywell.com

Japan

Telephone: +81-3-6730-7344
Fax: +81-3-6730-7222
E-mail: apservice@honeywell.com

Online Product Service and Repair Assistance

You can also access product service and repair assistance online at www.honeywellaidc.com.

Honeywell Scanning & Mobility

9680 Old Bailes Road

For Mill, SC 29707

www.honeywellaidc.com

